

CONTENTS

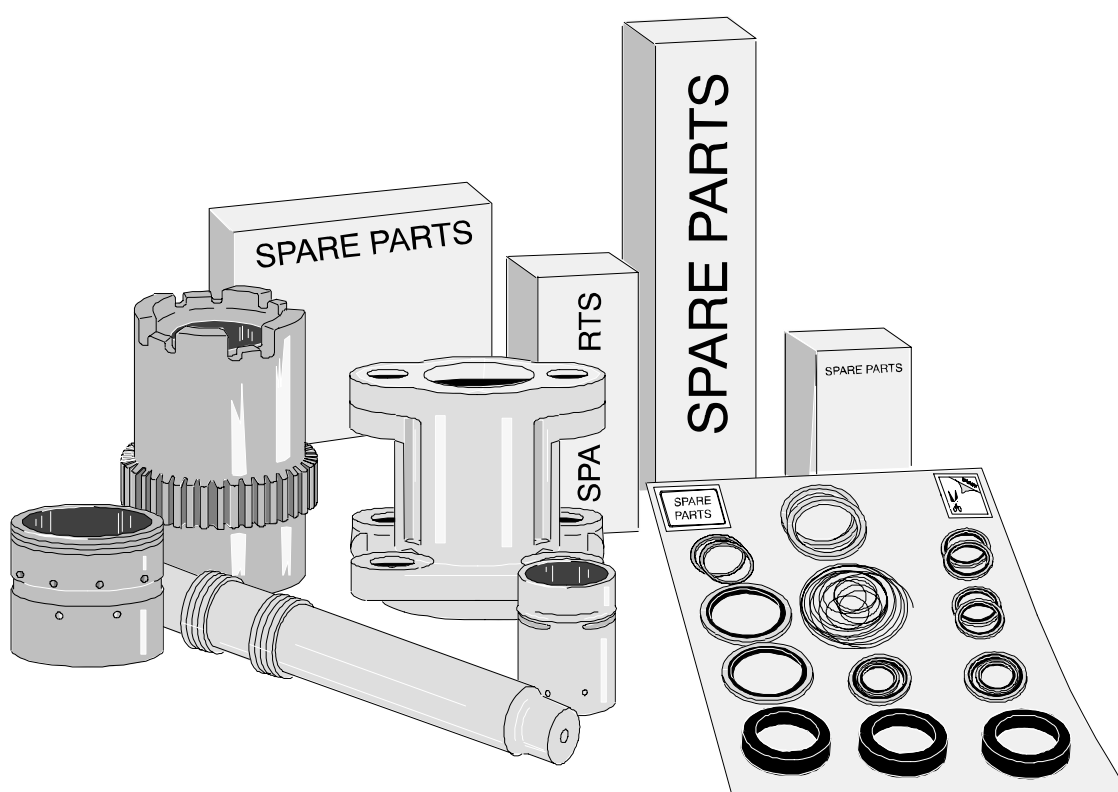 


TABLE OF CONTENTS

Sandvik DC122R

SERIAL NUMBER:43024

1.CONTENTS

* TABLE OF CONTENTS.....	
* gensp1 HOW TO READ A SPARE PART SHEET.....	

2.IDENTIFICATION CARD

* UNIT IDENTIFICATION CARD.....	
---------------------------------	--

3.SERVICE PARTS & DRILLING TOOLS

* SMC8C SERVICE PARTS.....	2
* 552 083 39 FILTER KIT, -KITS FOR SANDVIK DC120 RIGS - SUMMARY.....	6

4.DIAGRAMS

* 550 904 84 SCHEMATIC, HYDRAULIC.....	2
* 550 904 85 SCHEMATIC, HYDRAULIC.....	6
* 550 904 97 NSS SCHEMATIC, AIR CIRCUIT.....	14
* 550 904 95 NSS SCHEMATIC, AIR CIRCUIT, CARRIER.....	16
** BG0 022 7186 HOISING SET.....	18
* 551 611 01 HOSE SET.....	20
* d57 510 -20en0313 HYDRAULIC HOSES, SLEEVES, FITTINGS AND ADAPTERS.....	

5.ELECTRIC SYSTEM

* BG0 024 5302 A.1 20 ELECTRICAL DRAWINGS; READING AND SYMBOLS.....	
* b75 400 4en0506 ELECTRIC CABLES.....	
* 552 047 56 ELECTRICAL ASSEMBLY.....	1
** 550 891 54 WIRING HARNESS ASSEMBLY, BATTERY CABLES.....	4
** 552 047 57 SWITCHGEAR ASSEMBLY, MAIN, MP (MAIN POWER) BOX.....	8
*** 550 889 89 NSS CABLE ASSEMBLY, FCC BOX.....	14
**** 550 149 94 CABLE ASSEMBLY, 2-POLE FEMALE / 5.0M - PUR 2X1.5.....	17
*** 552 047 58 NSS CABLE ASSEMBLY.....	20
**** 550 218 71 CABLE ASSEMBLY, 8M - PUR 2X1.5.....	21
**** 550 218 72 CABLE ASSEMBLY, DT06 2S / 2.0M - PUR 2X1.5.....	22
** 550 218 26 JUNCTION BOX ASSEMBLY, BOX 80X80.....	23
** 105 618 51 NSS 24V OUTLET ASSY.....	24
** 550 896 66 ELECTRIC LAY-OUT DRAWING, FCC BOX OF SANDVIK DC121R/122R.....	26
** 550 896 86 CONTROL BOX ASSEMBLY.....	30
*** 550 896 88 CABLE ASSEMBLY, SANDVIK DC122R RCC BOX CABLING.....	33
* BG0 039 6881 REMOTE CONTROL SYSTEM, RADIO, SANDVIK DC12XR, ION COMPATIBLE.....	36
** BG0 039 6886 RECEIVER, RADIO, WITH CAN BUS, ION COMPATIBLE.....	37
*** 551 874 29 WIRING HARNESS ASSEMBLY, RADIO RECEIVER 727.....	40
** BG0 039 6890 TRANSMITTER, SANDVIK DC121R/122R, FSS 727, ION COMPATIBLE.....	41
* 552 113 91A ELECTRICAL DIAGRAM.....	

6.ROCK DRILL & SLU

* 551 707 87 ROCK DRILL, HEX 7/8" OMM32 AIR FLUSHING.....	4
---	---

** 551 706 47 COVER, FRONT, D65.....	7
** 550 214 21 MOTOR ASSEMBLY, HYDRAULIC, OMM32.....	8
*** 550 214 20 MOTOR, HYDRAULIC, OMM32.....	9
** 152 376 88 ACCUMULATOR, 50 BAR.....	10
** 152 377 08 ACCUMULATOR, 4 BAR.....	11
* 550 259 07 TOOL, SPECIAL, HEX1 AND HFX1 ROCK DRILL.....	14

7.FEED

* 551 851 55 FEED, CHAIN.....	2
** 550 206 73 RETAINER, FOR ROCKDRILL.....	5
** 550 219 01 CONNECTION PARTS, FEES ASSEMBLY.....	8
*** 550 231 98 CONNECTION PARTS, RIGHT SIDE.....	9
*** 550 232 01 CONNECTION PARTS, LEFT SIDE.....	10
** 550 922 94 SAFETY WIRE ASSEMBLY.....	12
*** 551 687 83 SWITCH, LIMIT, SAFETY, EMERGENCY STOP PULL-WIRE SWITCH.....	13
** 887 143 09 HYDR.MOTOR WITH BRAKE.....	16
** 550 723 66 CENTRALIZER.....	17
** 851 393 79 CYLINDER, AIR.....	18
** BG0 041 5000 PLATE, BULKHEAD, -.....	19
** BG0 041 7535 NSS SPROCKET ASSEMBLY.....	20
** BG0 041 5004 NSS BRACKET, CYLINDER.....	21
** BG0 041 5003 NSS WEAR PIECE.....	22
** BG0 041 5002 NSS CARRIAGE.....	23
** BG0 041 8420 NSS VALVE ASSEMBLY.....	24
*** 550 018 00 VALVE, OVERCENTER, DOUBLE.....	25

8.BOOM

* 550 238 45 BOOM.....	2
** 550 236 78 BOOM.....	5
** 550 236 94 CYLINDER, D63 D40 LMIN465 S200.....	8
** 550 229 44 CYLINDER, D63 D40 LMIN870 S605.....	10
** 550 236 99 CYLINDER, D63 D40 LMIN665 S400.....	12
** 550 236 91 CYLINDER, D63 D40 LMIN445 S180.....	14
** 313 191 28 VALVE ASSY.....	15
** 517 880 37 VALVE, CHECK, PILOT OPERATED, JIC-6.....	16
** 144 668 04 HYDR.CYLINDER 55/32.....	18
* BG0 038 2846 NSS MOUNTING.....	20
** BG0 038 3050 CYLINDER ASSEMBLY.....	21

9.CONTROL PANEL

* 550 906 29 NSS CONTROL BOX ASSEMBLY.....	2
** 550 906 26 PANEL, CONTROL, DRILLING.....	3
*** 550 362 53 PANEL, CONTROL, THC120E.....	6
** 895 380 29 VALVE, DIRECTIONAL.....	7
** BG0 037 7666 PANEL, INSTRUMENT, ASSEMBLY, DC121R/DC122R.....	10

10.CARRIER

* BG0 058 4946 NSS CARRIER.....	2
** BG0 058 4949 NSS CARRIER.....	6
*** 551 807 01 NSS COOLER ASSEMBLY.....	12

*** 550 187 60 NSS HYDRAULIC TANK ASSEMBLY, OIL / FUEL RECEIVER.....	14
**** BG0 025 4555 TANK, HYDRAULIC.....	16
***** 550 265 81 FILTER, RETURN, 10ABS,R1,R1.....	17
**** 551 746 81 VALVE, PRESSURE RELIEF.....	18
**** 550 363 94 VALVE, PRESSURE RELIEF.....	19
**** BG0 022 4136 HOSING SET.....	20
*** 550 964 70 VALVE, OVER CENTER.....	21
*** 550 246 20 NSS MANIFOLD BLOCK.....	22
*** 550 261 31 JACK.....	23
*** 550 261 33 JACK.....	24
*** 550 839 89 GEAR ASSEMBLY.....	25
**** 550 831 01 GEAR, DRIVE.....	28
**** NSS MOTOR, HYDRAULIC, OMSS100, 151F0536.....	29
*** 551 505 26 NSS MANIFOLD BLOCK.....	30
*** 550 960 75 NSS VALVE ASSEMBLY.....	31
**** 550 938 95 VALVE, SHUTTLE.....	32
*** 550 221 97 NSS VALVE, DIRECTIONAL.....	33
**** 886 389 59 VALVE, DIRECTIONAL.....	34
*** 550 904 86 NSS COVERS ASSEMBLY.....	36
*** 550 204 58 FILTER ELEMENT, AIR.....	37
*** BG0 036 9528 NSS TANK ASSEMBLY.....	40
**** 034 675 91 OIL SEPARATOR.....	42
***** 036 030 78 VALVE, DISCHARGE.....	44
***** 552 169 67 VALVE, AIR.....	45
*** 321 561 11 NSS GAUGE ASSEMBLY, INCLINATION.....	46
*** 550 281 49 NSS FILLING PIPE, OIL.....	47
*** 550 295 48 NSS MANIFOLD BLOCK.....	48
*** 551 794 41 MOUNTING, HOSE SUPPORT.....	49
*** 550 958 45 ASSEMBLY, PRESSURE REDUCING VALVE, BRAKE.....	50
**** 550 895 00 VALVE ASSEMBLY.....	51
*** BG0 039 1133 NSS MOUNTING.....	52
**** BG0 039 1072 ADAPTER ASSEMBLY, -.....	53
** 550 864 02 NSS VALVE ASSEMBLY, DRIVING, WINCH, JACKS.....	56
*** 550 798 06 VALVE, PROPORTIONAL, DIRECTIONAL, DRIVING VALVE.....	58
** 550 864 01 NSS VALVE ASSEMBLY, BOOM VALVE.....	60
*** 550 798 04 VALVE, PROPORTIONAL, DIRECTIONAL, BOOM VALVE.....	62
** BG0 039 0945 VALVE, AIR, SUCTION SHUT DOWN.....	63
* BG0 024 5965 MOUNTING, -.....	66
* 550 921 60 SIGNS AND DECALS ASSEMBLY.....	68

11.ENGINE

* BG0 058 4951 NSS ENGINE ASSEMBLY.....	2
** 550 353 01 PUMP, TRIPLE.....	6
** 884 948 39 FILTER, FUEL.....	7
** 550 215 43 CYLINDER, AIR, D32 D12 S40, SPRING IS IN PISTON SIDE.....	8
* BG0 024 7110 MOUNTING.....	9
** 551 880 29 PIPE, EXHAUST, CMD120, CMD121, CMD122 TURBO, EXTERNAL.....	10

12.COMPRESSOR

* 550 168 99 COMPRESSOR.....	2
** 550 254 56 COMPRESSOR UNIT.....	3

** 033 887 08 VALVE, INLET.....	6
* 550 249 60 SYSTEM, AIR FLUSHING.....	7
** 886 271 09 VALVE, DIRECTIONAL.....	8
* 552 149 88 LUBRICATION UNIT, AIR, DC120.....	9
** 552 083 99 SPRAYER UNIT, OIL.....	10

13.DUST COLLECTOR

* 550 159 69 COLLECTOR, DUST.....	1
** 550 260 54 COLLECTOR, DUST.....	4
** 550 260 46 COLLECTOR, DUST.....	6
*** 550 053 92 CYLINDER, AIR.....	7
*** 858 570 99 MOTOR, PISTON.....	10
** 552 047 59 VALVE, AIR, 2/2-WAY PULSE-SOLENOID VALVE ,R1",8BAR,24V.....	11
* 550 222 24 VALVE.....	12
** 550 087 57 VALVE, DIRECTIONAL.....	13

14.OPTIONAL EQUIPMENT

* 550 265 91 GRINDER ASSEMBLY, SANDVIK ILH.....	2
** 550 329 11 GRINDER ASSEMBLY.....	3
** BG0 039 0778 HYDRAULIC CIRCUIT, -.....	4
** 552 227 84 STOP, EMERGENCY, ASSEMBLY.....	5
** 550 861 01 ELECTRICAL ASSEMBLY, EMG STOP BUTTON ASM + GLAND.....	6
* BG0 031 8256 INCLINOMETER, -.....	7
** 166 413 38 ANGLE MEASURE, SPIRIT LEVEL.....	8
* BG0 058 2540 TRACKS.....	9

15.SERVICE & PARTS INFORMATION

* HOW TO USE INDEX LIST.....	
* INDEX LIST.....	
* FEEDBACK.....	
* SANDVIK ROCK TOOLS FOR SURFACE DRILLING.....	
* SERVICE LIFE OF SANDVIK ROCK TOOLS.....	

1. Spare part sheet

 
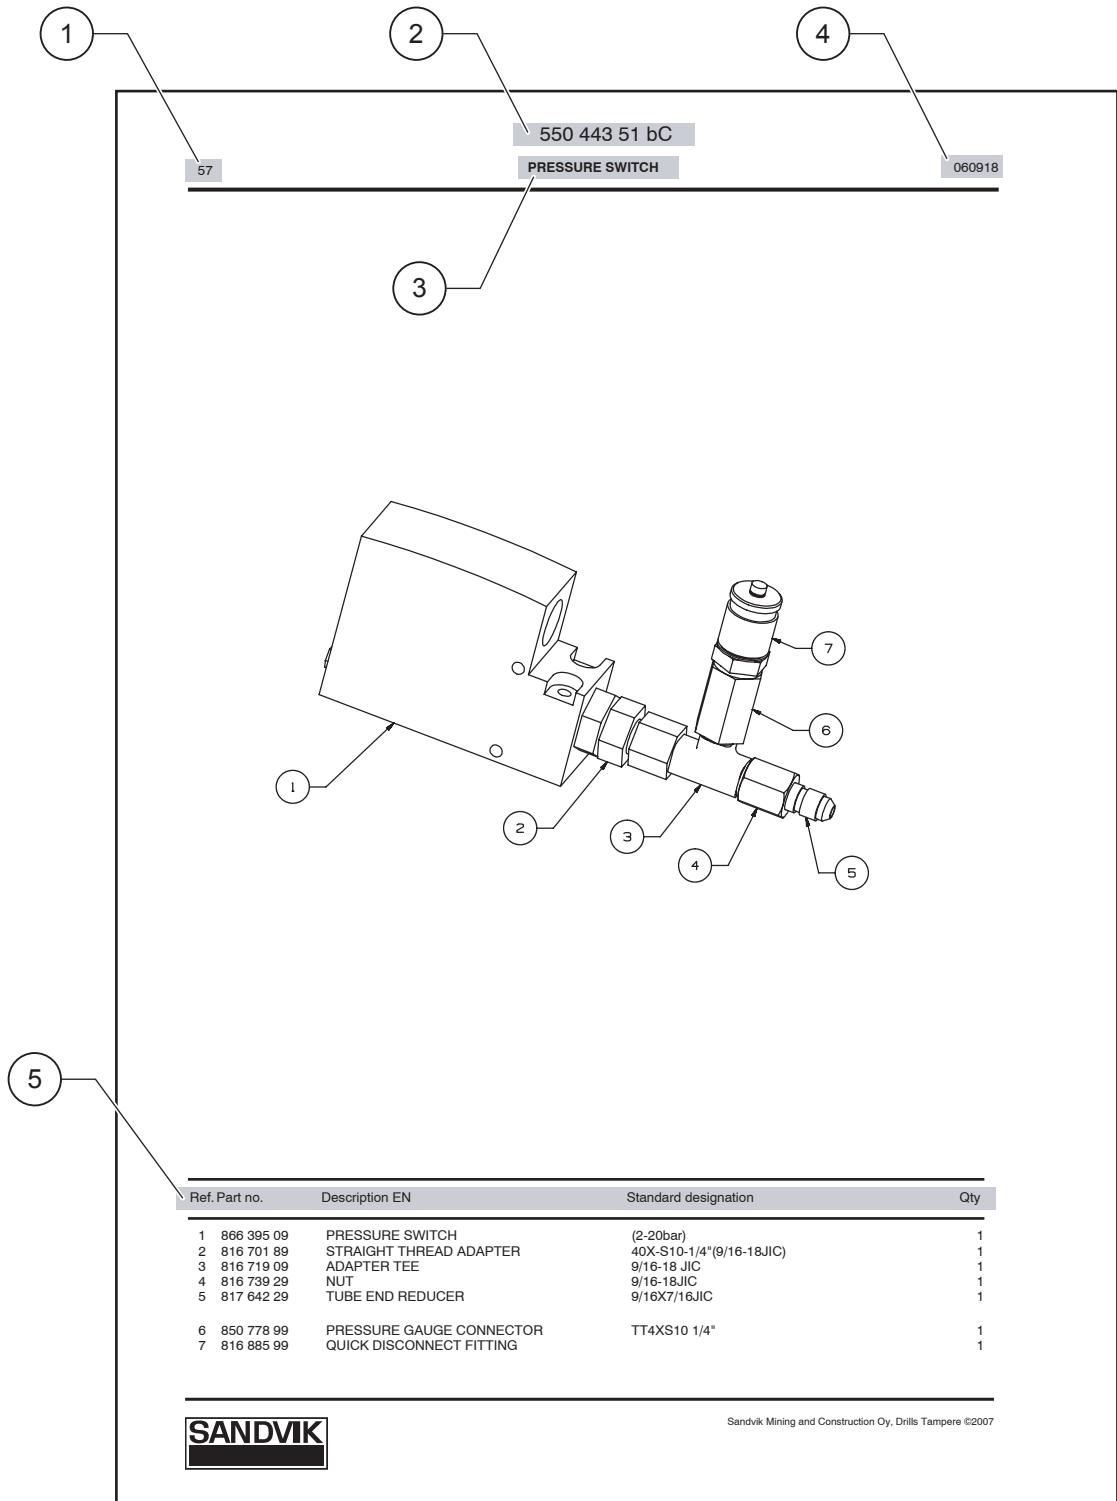 


Figure 1. Spare part sheet

1. Page number
2. Assembly code/revision
3. Assembly name
4. Date
5. Information

2. Parts list revisions

The parts list revisions are determined as follows:

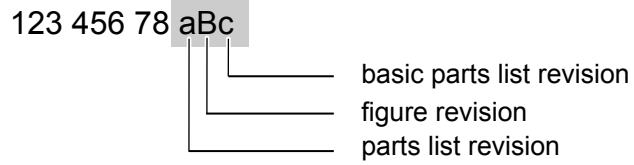

The revision of the parts list and basic parts list is always a lower case letter. The revision of the figure is always an upper case letter. The first version of a parts list, figure, or basic parts list has no revision. All assemblies do not have basic parts lists. Every time there are changes in the parts list, figure, or basic parts list they get a new revision. The revisions are given in alphabetical order.

3. Parts that need to be ordered separately and parts included in the assembly

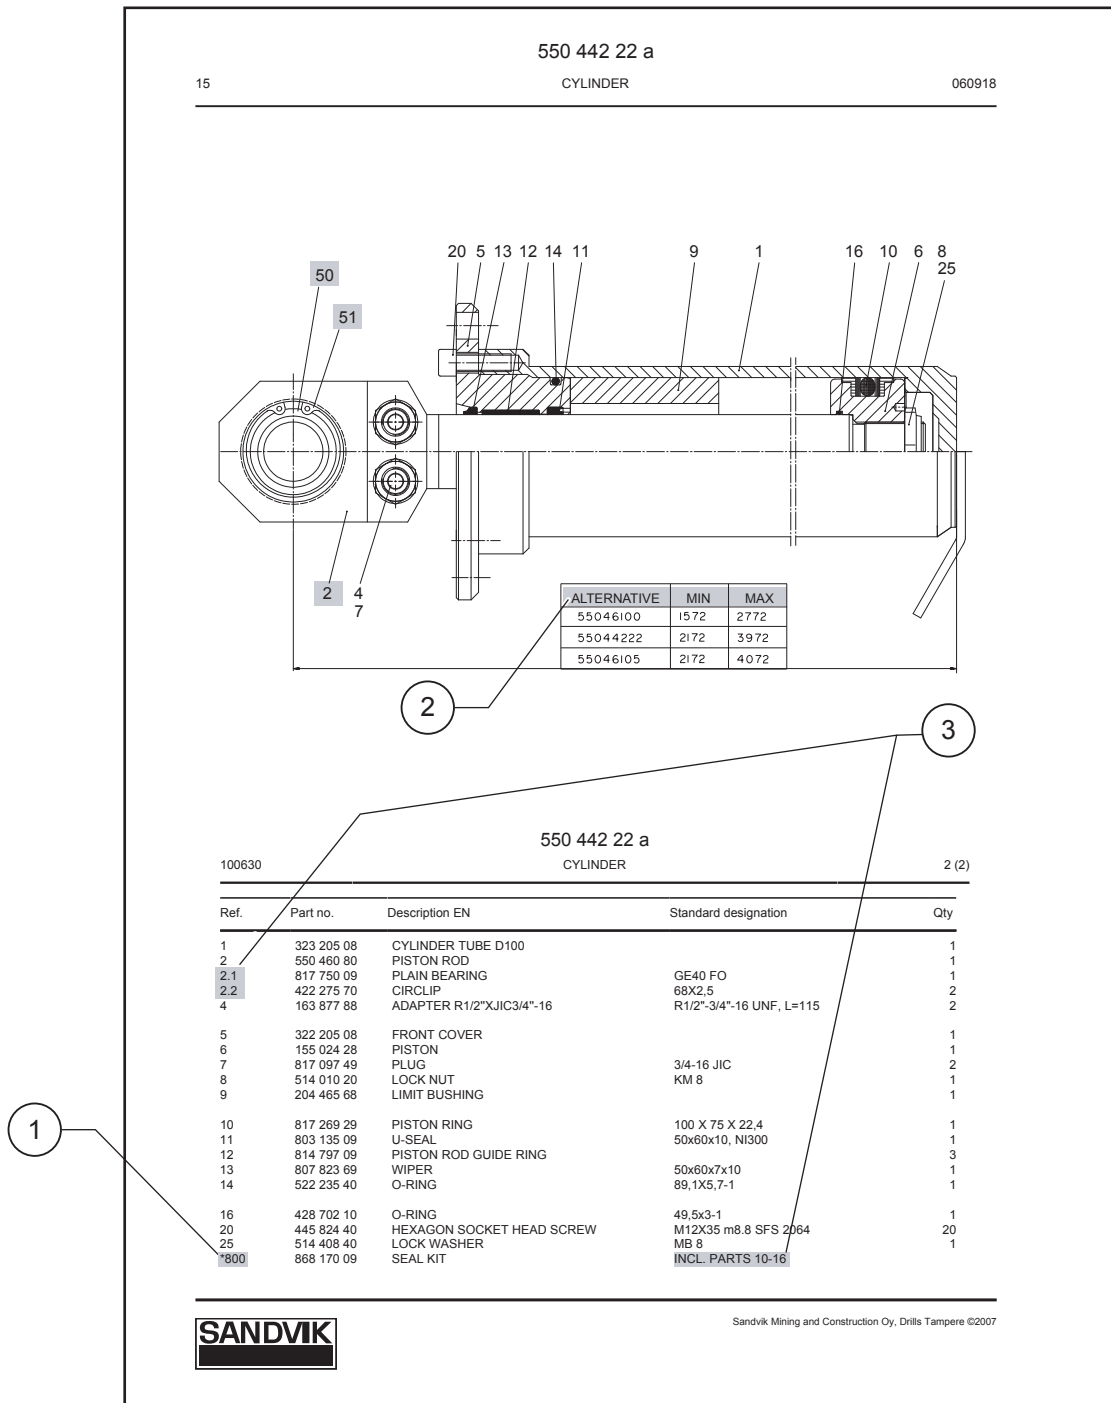 


Figure 2. Parts that need to be ordered separately

1. Parts that need to be ordered separately
2. Alternative assemblies for the figure
3. Parts included in the assembly

HOW TO READ A SPARE PART SHEET

4 (4)

There is an asterisk in front of the reference number for parts that need to be ordered separately (figure 2). Parts that need to be ordered separately are not included in the order when it has been ordered using the assembly code.

Parts that need to be ordered separately are included in the assembly if they are included in another part that is in the assembly. If there are parts included in a part that is included in the assembly the list reads "INCL. PARTS". In the example above (figure 2) parts number 50 and 51, plain bearing and circlip, are included in the piston rod (part no 2).

There are alternative assemblies for the example assembly 550 442 22 a (figure 2). The maximum and minimum lengths of the cylinder are shown in the alternative table (figure 3).

ALTERNATIVE	MIN	MAX
55046100	1572	2772
55044222	2172	3972
55046105	2172	4072

Figure 3. Alternative table

4. NSS assemblies

550 768 40 NSS				
120830	TURBINE SHAFT ASSEMBLY / GEAR T20000			2 (2)
Ref.	Part no.	Description EN	Standard designation	Qty
1	560 080 00	TURBINE SHAFT ASSEMBLY	INCL. PARTS 2	1
2	046 987 04	CIRCLIP		1
3	046 914 20	BEARING		1
4	046 957 96	SNAP RING		1
5	046 996 33	THRUST WASHER		1
6	047 009 05	CIRCLIP		1
7	560 010 42	PISTON RING		1
8	560 092 66	SUPPORT		1
9	046 910 93	SCREW		6
10	046 967 52	PISTON RING		1
11	887 828 19	BAFFLE	INCL. PARTS 12	1
12	046 993 67	SEAL		1
13	884 148 19	SEAL RING		1
14	046 982 42	CIRCLIP		1

Figure 4. NSS assembly

The NSS assemblies are not sold as assemblies but only as separate components. For example, assembly 550 768 40 NSS (figure 4) cannot be ordered as an assembly, but the parts included in it can be ordered separately.

5. Glossary

Ref.	Reference number
Part. no.	Part number
Qty	Quantity/length
NSS	Not sold as assemblies
*	Needs to be ordered separately