



TATA MOTORS

LP/LPT 1109 TC, TCIC, EX (EURO-I & EURO-II)

PARTS LIST

Catalogue No.8854 416403 1 • Edition No.SPT - 151 • May 2007

Tata Motors Limited

Mumbai • Jamshedpur • Pune • Lucknow • Thane

CONTENTS**PAGE NO.**

PRELIMINARY REMARKS	IV-VI
INSTRUCTIONS	VII
INTRODUCTION	VIII
ENGINE, CHASSIS AND BODY GROUP INDEX	IX-XI
ENGINE / CHASSIS / BODY SPARE PARTS	2-335
PART NUMBER INDEX	From 339 onwards

PRELIMINARY REMARKS

This List comprises of parts for Engine,Gear Box,Chassis,.Front Axle,Rear Axle etc.and Body of LP/LPT 1109 Turbo Euro-I, LP/LPT 1109 Turbo E-II and LP/LPT 1109 Turbo EX Vehicles.

Chassis Type	Sale Designation	Wheel Base	Chassis Designation	Appertaining Engine Type	VC No.
416 221	LP 1109/36	3625 mm	Full Forward Control Chassis with Cowl Bus Version, 310 mm Dia Clutch, G-40 Gear Box, RA-1009 Banjo Rear Axle, Variable Strg, 12 Volt	497x128TC EURO-I	21533136000R
416 225	LP 1109/36	3625 mm	Full Forward Control Chassis without Face, Bus Version, 310 mm Dia Clutch,G-40 Gear Box,RA-1009 Banjo Rear Axle, Variable Strg,12 Volt	497x128TC EURO-II	21538236000R
416 241	LP 1109/42	4225 mm	Full Forward Control Chassis with Cowl, Bus Version, 310 mm Dia Clutch,G-40 Gear Box,RA-1009 Banjo Rear Axle, Variable Strg,12 Volt	497x128TC EURO-I	21533142000R
416 242	LP 1109/42	4225 mm	Full Forward Control Chassis without Face, Bus Version, 310 mm Dia Clutch,G-40 Gear Box,RA-1009 Banjo Rear Axle, Variable Strg,12 Volt	497x128TC EURO-I	21533242000R
416 243	LP 1109/42	4225 mm	Full Forward Control Chassis with Cowl, Bus Version, 310 mm Dia Clutch,G-40 Gear Box,RA-1009 Banjo Rear Axle, Variable Strg,12 Volt	497x128TC EURO-II	21537142000R
416 244	LP 1109/42	4225 mm	Full Forward Control Chassis without Face, Bus Version, 310 mm Dia Clutch,G-40 Gear Box,RA-1009 Banjo Rear Axle, Variable Strg,12 Volt	497x128TC EURO-II	21537242000R 21538242000R
416 301	LPT 1109/36	3625 mm	Full Forward Control Chassis with Tilt Cab and Load Body, Truck Version,310 mm Dia Clutch,G-40 Gear Box,RA-1009 Banjo Rear Axle,Variable Strg.,12 Volt	497x128TC EURO-I	21533636000R 21533736000R

PRELIMINARY REMARKS

Chassis Type	Sale Designation	Wheel Base	Chassis Designation	Appertaining Engine Type	VC No.
416 302	LPT 1109/36	3625 mm	Full Forward Control Chassis with Tilt Cab and without Load Body, Truck Version, 310 mm Dia Clutch, G-40 Gear Box, RA-1009 Banjo Rear Axle, Variable Strg., 12 Volt	497x128TC EURO-I	21531636000R 21533436000R
416 306	LPT 1109/42	4225 mm	Full Forward Control Chassis with Tilt Cab and without Load Body, Truck Version, 310 mm Dia Clutch, G-40 Gear Box, RA-1009 Banjo Rear Axle, Variable Strg., 12 Volt	497x128TC EURO-I	21533442000R
416 307	LPT 1109/42	4225 mm	Full Forward Control Chassis with Cowl and without Load Body, Truck Version, 310 mm Dia Clutch, G-40 Gear Box, RA-1009 Banjo Rear Axle, Variable Strg., 12 Volt	497x128TC EURO-I	21533342000R
416 308	LPT 1109/42	4225 mm	Full Forward Control Chassis with Tilt Cab and with Load Body, Truck Version, 310 mm Dia Clutch, G-40 Gear Box, RA-1009 Banjo Rear Axle, Variable Strg., 12 Volt	497x128TC EURO-I	21533642000R
416 321	LPT 1109/36	3625 mm	Full Forward Control Chassis with Tilt Cab and without Load Body, Truck Version, 310 mm Dia Clutch, G-40 Gear Box, RA-1009 Banjo Rear Axle, Variable Strg., 12 Volt	497x128TC EURO-II	21537436000R
416 322	LPT 1109/36	3625 mm	Full Forward Control Chassis with Cowl and without Load Body, Truck Version, 310 mm Dia Clutch, G-40 Gear Box, RA-1009 Banjo Rear Axle, Variable Strg., 12 Volt	497x128TC EURO-II	21537336000R
416 323	LPT 1109/36	3625 mm	Full Forward Control Chassis with Tilt Cab and with Load Body, Truck Version, 310 mm Dia Clutch, G-40 Gear Box, RA-1009 Banjo Rear Axle, Variable Strg., 12 Volt	497x128TC EURO-II	21537636000R 21537736000R
416 341	LPT 1109/42	4225 mm	Full Forward Control Chassis with Tilt Cab and without Load Body, Truck Version, 310 mm Dia Clutch, G-40 Gear Box, RA-1009 Banjo Rear Axle, Variable Strg/Power Strg., 12 Volt	497x128TC EURO-II	21537442000R 21537942000R

PRELIMINARY REMARKS

Chassis Type	Sale Designation	Wheel Base	Chassis Designation	Appertaining Engine Type	VC No.
416 343	LPT 1109/42	4225 mm	Full Forward Control Chassis with Tilt Cab and with Load Body, Truck Version, 310 mm Dia Clutch, G-40 Gear Box, RA-1009 Banjo Rear Axle, Variable Strg., 12 Volt	497x128TC EURO-II	21537642000R
416 403	LPT 1109/36 EX	3625 mm	Full Forward Control Chassis with Tilt Cab and with Load Body, Truck Version, 310 mm Dia Clutch, G-40 Gear Box, RA-1009 Banjo Rear Axle, Variable Strg., 12 Volt	497x128 TCIC EURO-II	21538436000R 21538736000R
416 404	LPT 1109/36 EX	3625 mm	Full Forward Control Chassis with Cowl and without Load Body, Truck Version, 310 mm Dia Clutch, G-40 Gear Box, RA-1009 Banjo Rear Axle, Variable Strg., 12 Volt	497x128 TCIC EURO-II	21538336000R
416 405	LPT 1109/36 EX	3625 mm	Full Forward Control Chassis with Tilt Cab and without Load Body, Truck Version, 310 mm Dia Clutch, G-40 Gear Box, RA-1009 Banjo Rear Axle, Variable Strg., 12 Volt	497x128 TCIC EURO-II	21538836000R
416 423	LPT 1109/42 EX	4225 mm	Full Forward Control Chassis with Cowl and without Load Body, Truck Version, 310 mm Dia Clutch, G-40 Gear Box, RA-1009 Banjo Rear Axle, Variable Strg., 12 Volt	497x128 TCIC EURO-II	21538342000R
416 424	LPT 1109/42 EX	4225 mm	Full Forward Control Chassis with Tilt Cab and with Load Body, Truck Version, 310 mm Dia Clutch, G-40 Gear Box, RA-1009 Banjo Rear Axle, Variable Strg., 12 Volt	497x128 TCIC EURO-II	21538442000R 21538742000R
416 425	LPT 1109/42 EX	4225 mm	Full Forward Control Chassis with Tilt Cab and without Load Body, Truck Version, 310 mm Dia Clutch, G-40 Gear Box, RA-1009 Banjo Rear Axle, Variable Strg./Power Strg, 12 Volt	497x128 TCIC EURO-II	21538542000R 21538842000R
416 441	LPT 1109/42 EX	4225 mm	Full Forward Control Chassis with Tilt Cab and with High Deck Load Body, Truck Version, 310 mm Dia Clutch, G-40 Gear Box, RA-1009 Banjo Rear Axle, Variable Strg., 12 Volt	497x128 TCIC EURO-II	21538742000R

INSTRUCTIONS

1. The designation "Left and Right" as well as "Front" and "Rear" refer to driving direction.
2. The indication "First","Second" (e.g. cross member of frame) are counted from the Radiator side.
3. The designation "AR" in column "Quantity" stands for "As Required".
4. The illustrations of parts of the table are only for easy reference and they may not be exact replica of the part.
5. The parts fitted on the vehicle are subject to modification without prior notice.
6. This is a publication of the Parts Head Quarters of the TATA MOTORS LIMITED.

Any Correspondence relating to this Parts List be made to:

Technical Cell,
TATA Motors Limited
Teen Hath Naka,
Gyan Sadhana College Service Road,
Thane-400 604
INDIA

INTRODUCTION

WHEN ORDERING SPARE PARTS PLEASE INDICATE

Chassis Type and Chassis Number

Engine Type and Engine Number

Part No. : See column "PART NUMBER"

Precise Description : See column "DESCRIPTION"

When ordering spare parts for aggregates please indicate the unit number :

Gear Box Unit No. : —

Rear Axle Unit No. : —

Steering Unit No. : —

ENGINE GROUP INDEX

GROUP	TABLE	DESCRIPTION	PAGE	GROUP	TABLE	DESCRIPTION	PAGE
01	01.1	Engine	3				
	01.2	Half Block and Long Block	5				
	01.3	Engine Gasket Kit	7				
	01.4	Cylinder Block	13				
	01.5	Cylinder Head & Cover	21				
03	03.1	Moving Parts	25				
05	05.1	Engine Timing	33				
07	07.1	Fuel Injection Equipment (BS I)	39				
	07.2	Fuel Injection Equipment (BS II)	43				
	07.3	Injector	47				
	07.4	Water Seperator	49				
09	09.1	Fuel Filter	51				
	09.2	Air Filter & Mounting	53				
13	13.1	Air Compressor	57				
	13.2	Air Compressor Inlet Piping	61				
14	14.1	Exhaust Manifold	63				
	14.2	Intercooler And Air Suction Pipes	67				
15	15.1	Starter Motor And Alternator	69				
18	18.1	Engine Lubrication	73				
	18.2	Oil Cooler	79				
20	20.1	Water Pump	83				
24	24.1	Engine Suspension	93				
25	25.1	Clutch	95				

CHASSIS GROUP INDEX

GROUP	TABLE	DESCRIPTION	PAGE	GROUP	TABLE	DESCRIPTION	PAGE
26	26.1	Gear Box Housing And Cover	99		42.6	Dual Brake Valve	215
	26.2	Gear Shafts & Gears	109		42.7	Front Brake Chamber	217
	26.3	Gear Shifting Arrangement	119		42.8	Rear Brake Actuator	219
	26.4	Power Take Off	123		42.9	Front & Rear Slack Adjuster	221
	26.5	Pneumatic Shifting Cylinder	127		42.10	Drying And Distribution Unit	223
29	29.1	Clutch & Brake Controls	129		42.11	Automatic Load Sensing Valve	227
30	30.1	Accelerator Control	135		42.12	Quick Release Valve	229
31	31.1	Frame	139		42.13	Graduated Hand Brake Valve	231
32	32.1	Front Spring And Suspension	149	46	46.1	Steering Wheel & Linkages	233
	32.2	Front Shock Absorber	151		46.2	Steering Gear Box (Variable Ratio) And Components	237
	32.3	Rear Spring And Suspension (Truck)	153		46.3	Power Steering Components	243
	32.4	Rear Spring And Suspension (Bus)	155		46.4	Power Steering Pipe Lines	245
	32.5	Rear Shock Absorber (Bus)	157	47	47.1	Fuel System	247
	32.6	Anti-Roll Bar (Bus)	159	49	49.1	Exhaust System	251
33	33.1	Front Axle	161	50	50.1	Radiator	257
35	35.1	Rear Axle	171	54	54.1	Light & Signal System	271
40	40.1	Wheel Disc	181		54.2	Instruments	277
	40.2	Spare Wheel Carrier	183		54.3	Instrument Cluster	279
41	41.1	Propeller Shaft	185	60	60.1	Cab / Cowl	281
42	42.1	Front Wheel Brake	191	67	67.1	Windshield Glass	285
	42.2	Rear Wheel Brake	195	68	68.1	Dashboard	287
	42.3	Brake Aggregates	199	72	72.1	Door	293
	42.4	Air Dryer with Tyre Inflator	207		72.2	Door Lock	297
	42.5	System Protection Valve	213				

CHASSIS GROUP INDEX

GROUP	TABLE	DESCRIPTION	PAGE	GROUP	TABLE	DESCRIPTION	PAGE
	72.3	Winding Regulator And Glass	301				
75	75.1	Centre Flap	303				
81	81.1	Internal & External Fitments	305				
82	82.1	Wiper Motor And Linkages	311				
83	83.1	Ventilation	315				
88	88.1	Bumper	317				
89	89.1	Cab Mounting (Front)	319				
	89.2	Cab Mounting (Rear)	321				
	89.3	Cowl Mounting	325				
	89.4	Mudguard And Mudflap	327				
91	91.1	Seat & Seat Belts	331				
70	70.1	Load Body	333				
	70.2	Load Body (High Deck)	335				

TABLE 01.1

ENGINE

GROUP 01

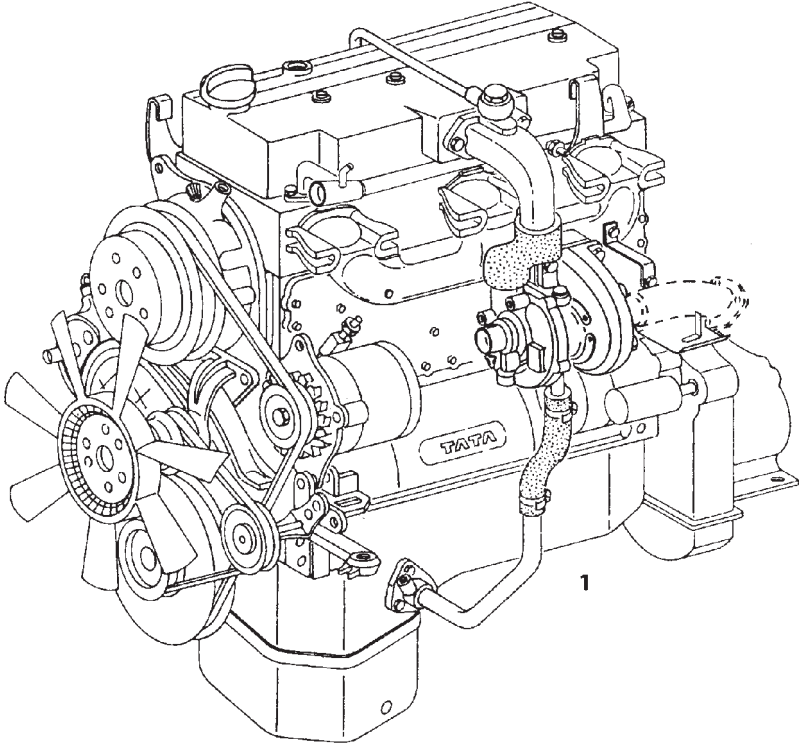


TABLE 01.1

ENGINE

GROUP 01

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		ENGINE												
1	2527 0100 03 25	Assy. Engine Complete (497 TCIC) with 310 Dia Clutch BS-II						1	1					
1	2527 0100 03 33	Assy. Engine Complete (497 TCIC) with 310 Dia Clutch BS-II							1					Suitable for P/Strg
1	2527 0100 02 79	Assy. Engine Complete with 310 Dia Clutch BS-II			1		1							
1	2527 0100 02 77	Assy. Engine Complete with 310 Dia Clutch BS-II									1		1	
1	2527 0100 02 78	Assy. Engine Complete with 310 Dia Clutch BS-II											1	Suitable for P/Strg
1	2527 0100 02 33	Assy. Engine Complete with 310 Dia Clutch BS-I								1		1		
1	2527 0100 02 42	Assy. Engine Complete with 310 Dia Clutch BS-I								1				Suitable for P/Strg
1	2527 0100 02 52	Assy. Engine Complete with 310 Dia Clutch BS-I		1		1								

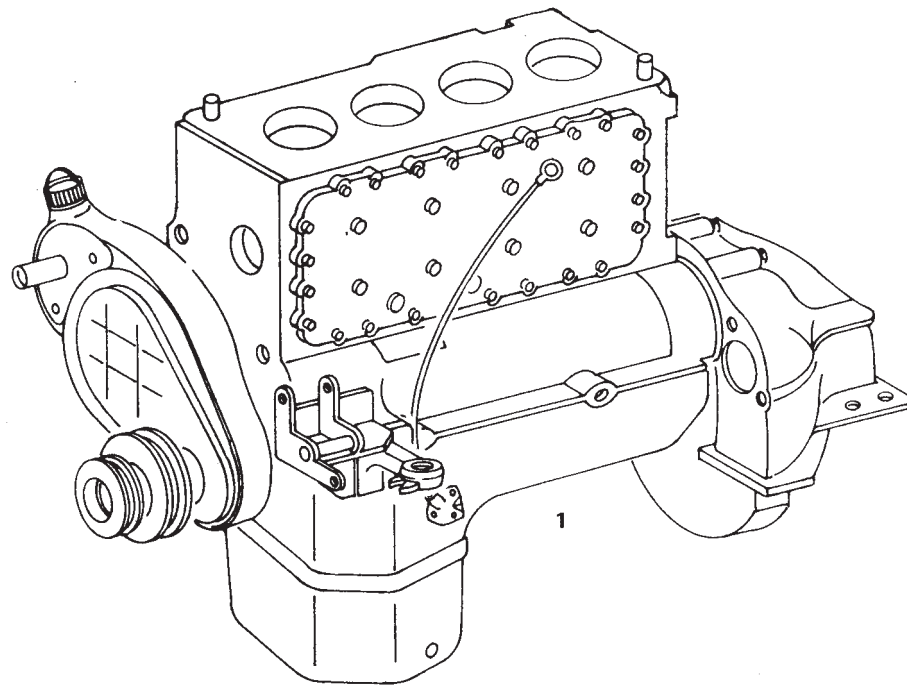


TABLE 01.2

HALF BLOCK AND LONG BLOCK

GROUP 01

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		HALF BLOCK AND LONG BLOCK												
		HALF BLOCK												
1	2527 0199 01 62	Assy. Half Block						1	1					
1	2527 0199 01 46	Assy. Half Block			1		1				1		1	
1	2527 0199 01 33	Assy. Half Block		1		1				1		1		
		LONG BLOCK												
—	2527 0199 01 60	Assy. Long Block						1	1					
—	2527 0199 01 48	Assy. Long Block			1		1				1		1	
—	2527 0199 01 34	Assy. Long Block		1		1				1		1		

TABLE 01.3

ENGINE GASKET KIT

GROUP 01

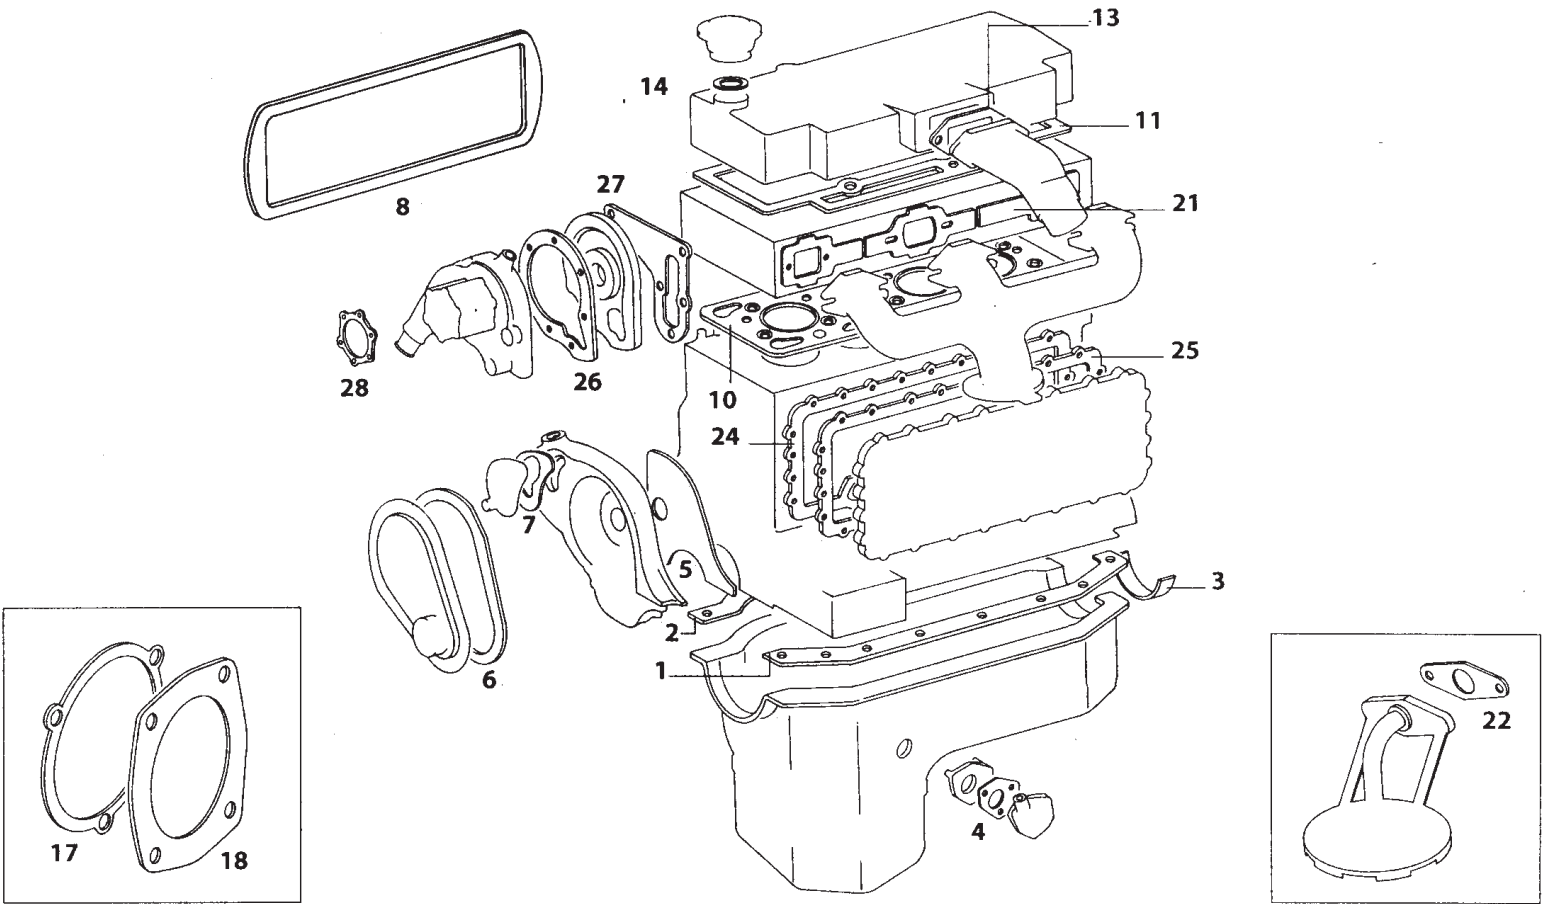


TABLE 01.3
ENGINE GASKET KIT
GROUP 01

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
—	2527 0199 01 01	ENGINE GASKET KIT												
—		Gasket Kit (Engine Overhaul) Consisting of :	1											
1		Assy Gasket Oil Sump	1											
4		Gasket (Flange)	2											
5		Gasket (Timing Gear HSG to Cyl. Block)	1											
6		Gasket for TGH Cover	1											
7		Gasket Top Cover	1											
8		Gasket PRC Cover	1											
—		Gasket for Nozzle Holder	4											
10		Cylinder Head Gasket	1											
11		Gasket Cyl. Head Cover	1											
—		Gasket	1											
13		Gasket (Intake Elbow)	1											
14		Rubber Ring (Breather)	1											
—		Gasket Ring (For Cyl. Head)	5											
17		Gasket Cylinder Sleeve Cyl. Block	1											
18		Gasket (A/C Cyl. Head)	1											
21		Gasket Exh. Manifold	1											
22		Gasket (Strainer Hsg.)	1											
—		Gasket (Oil Filler)	1											

TABLE 01.3

ENGINE GASKET KIT

GROUP 01

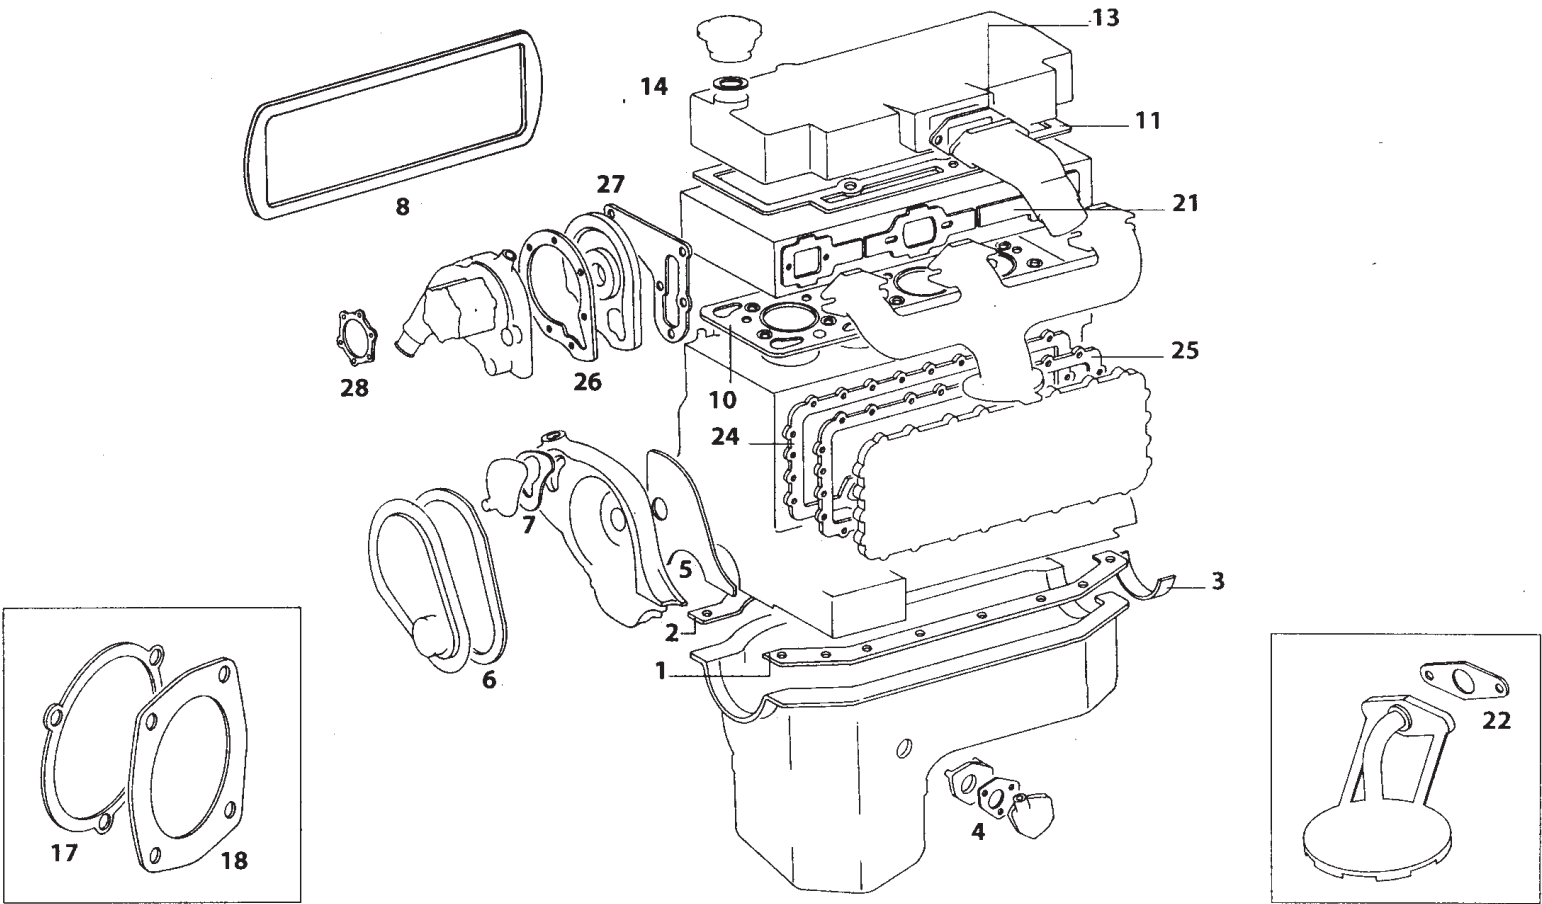


TABLE 01.3
ENGINE GASKET KIT
GROUP 01

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
24		Gasket (Assy. Cooler on Cyl. Blk.)	2											
25		Gasket (Cooler)	1											
26		Gasket (Water Pump)	1											
27		Gasket	1											
28		Gasket	2											
—		Washer 10x13.5 AL	1											
—		Washer 14x18 AL	16											
—		Washer 16x20 CU	2											
—		Washer 18x22 AL	1											
—		Washer 22x27 AL	1											
—		Washer 10x13.5 CU	4											
—		Washer 14x18 CU	1											
—		Washer 18x22 CU	2											
—		Washer 20x24 CU	1											
—		Washer 24x29 CU	1											
—		Sealing Washer A 8x12	4											
—		Sealing Washer 8x11.5 CU	12											
—		Washer 26x32 AL	1											
—	2527 0199 01 02	Decarbonising Gasket Kit Consisting of :	1											
11		Gasket (Cyl. Head Cover)	1											

TABLE 01.3

ENGINE GASKET KIT

GROUP 01

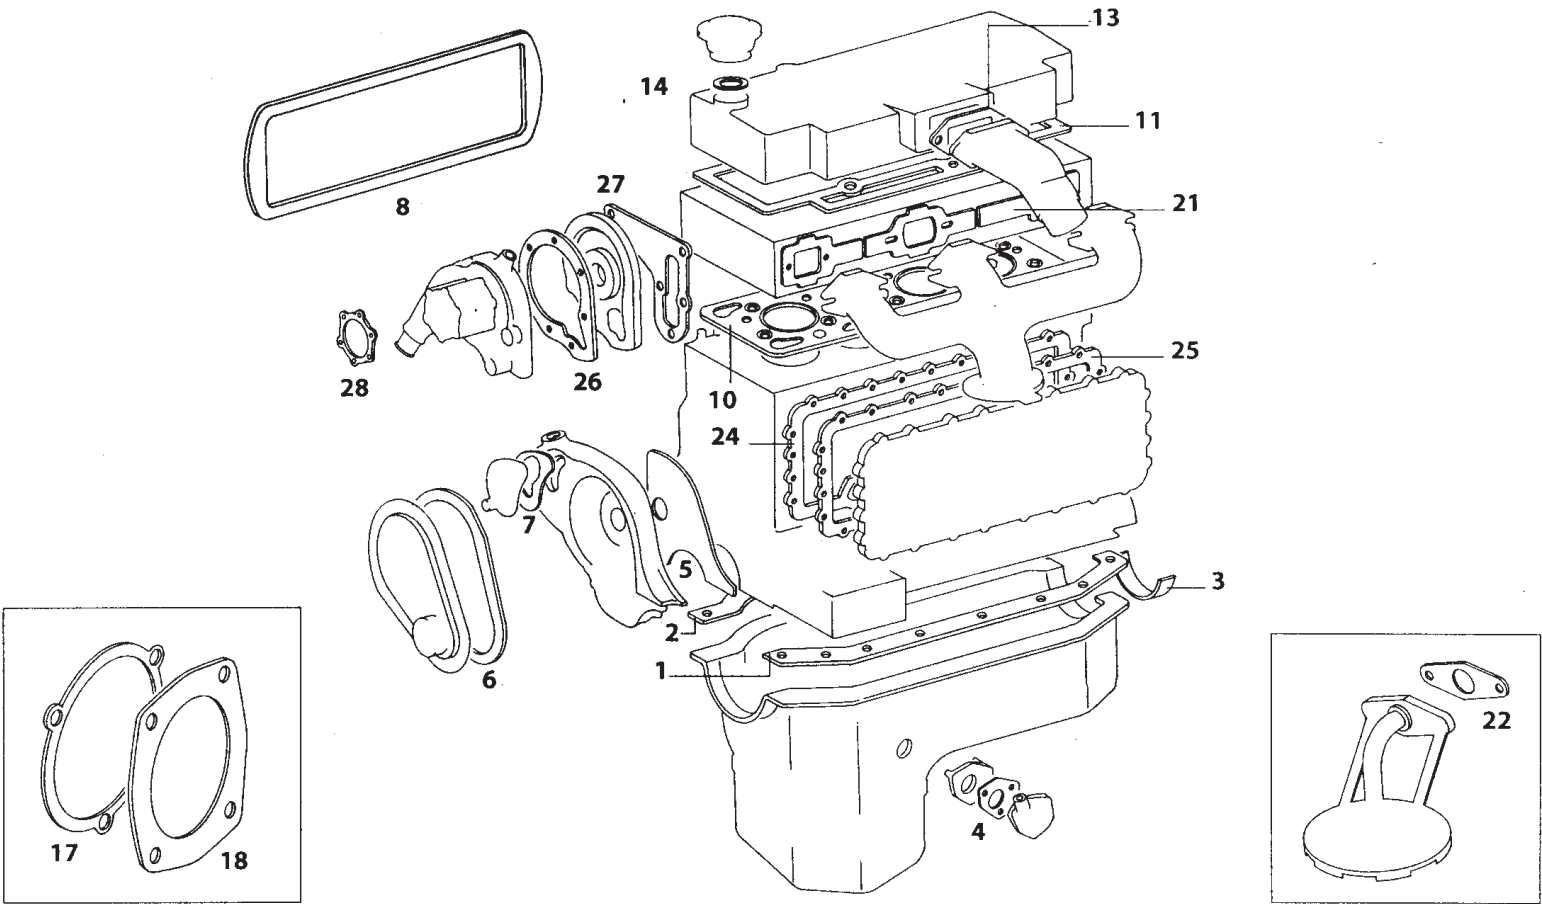


TABLE 01.3

ENGINE GASKET KIT

GROUP 01

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
10		Gasket (Cylinder Head)	1											
—		Gasket (for Nozzle Holder)	4											
21		Gasket (Exh. Manifold)	1											
—		Gasket (Exh. Pipe)	1											

TABLE 01.4

CYLINDER BLOCK

GROUP 01

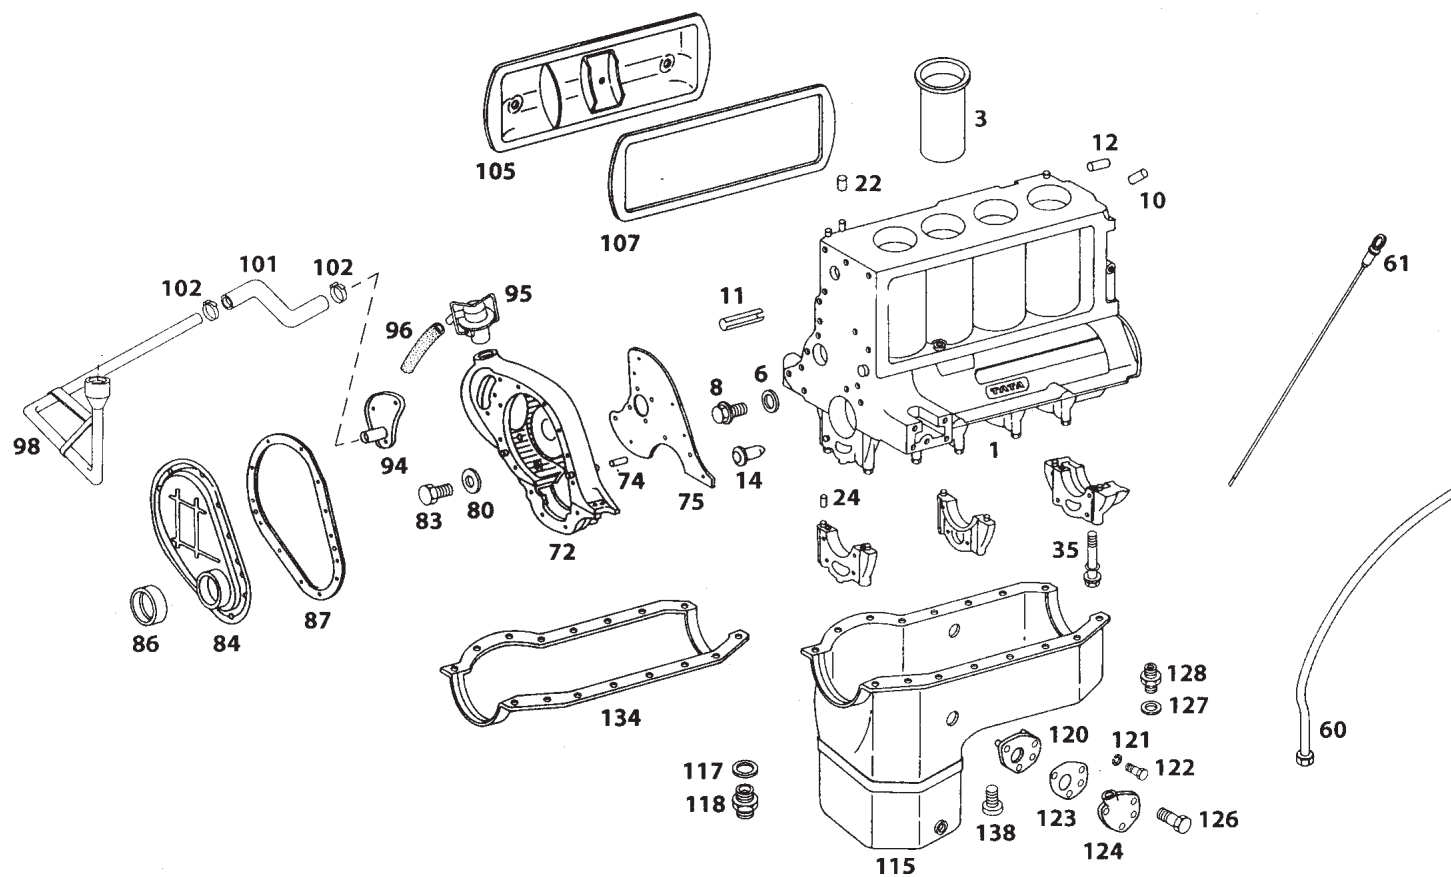


TABLE 01.4
CYLINDER BLOCK
GROUP 01

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		CYLINDER BLOCK												
1	2527 0110 01 73	Assy.Cylinder Block with Liner			1		1	1	1		1		1	From Oct'06
1	2527 0110 01 45	Assy.Cylinder Block with Liner			1		1	1	1		1		1	Upto Sep'06
1	2527 0110 01 27	Assy.Cylinder Block with Liner		1		1				1		1		
3	2527 0110 37 27	Cylinder Liner			4		4	4	4		4		4	105mm Collar Dia;for Cyl.Block Part No.2527 0110 01 73
3	2525 0110 37 02	Cylinder Liner	4											For Cyl.Block Part No. 2527 0110 01 45 & 2527 0110 01 27
—	352 011 03 35	Screw Plug	1											
6	1622 071028 2	Washer 18x22 CU	1											
8	2523 0110 72 01	Sealing Plug	1											
10	312 188 11 35	Sleeve	1											
11	321 992 00 25	Clamping Sleeve	1											
12	1305 091030 4	Cyl. Pin 12 H 8x30	2											
14	1608 100160 3	Sealing Plug AM 16X15(Oil Gallery)	2											
22	312 991 02 60	Cyl. Pin (Cyl. Head To Cyl. Block)	2											
24	1305 050816 6	Cyl. Pin 8 M 6x16	10											
35	352 011 01 71	Bolt for Main Bearing Cap	10											
—	186 991 00 55	Locating Pin	1											
60	2527 0117 01 19	Assy.Tube Dipstick (w/o Nut and Ferrule)	1											

TABLE 01.4

CYLINDER BLOCK

GROUP 01

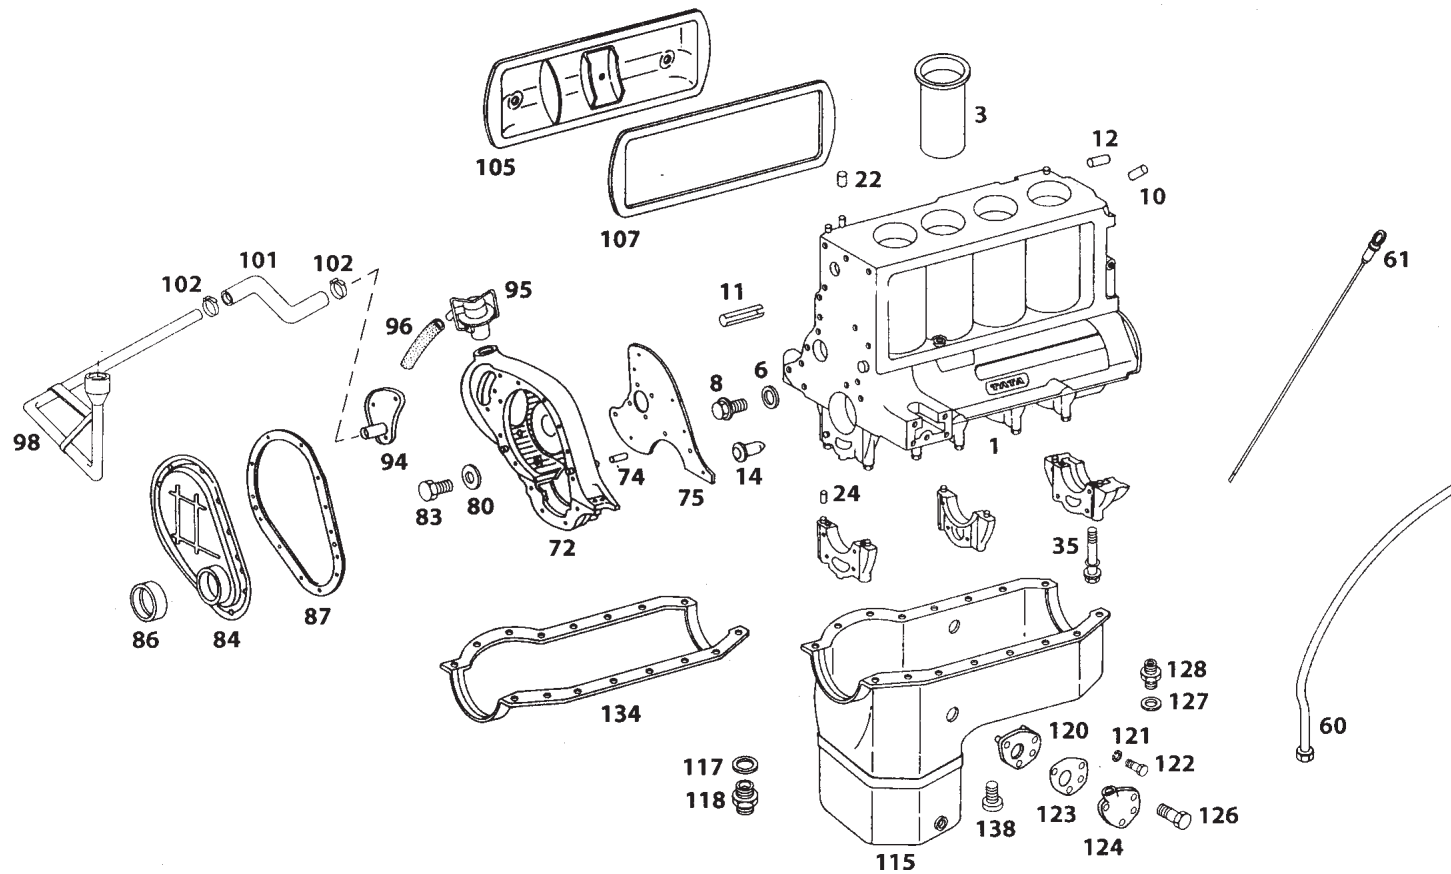


TABLE 01.4
CYLINDER BLOCK
GROUP 01

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
61	2527 0117 01 16	Assy. Oil Dipstick	1											
—	1705 050010 1	O-Ring 6.00x1.80	1											
—	2527 0117 82 09	Support (For Dipstick)								1	1	1	1	
—	2527 0117 01 71	Assy Bracket Dipstick Mounting						1	1					
—	2527 0117 42 05	Clamp For Dipstick Mtg.						1	1					
—	312 995 24 20	Clamp		1	1	1	1			1	1	1	1	
72	312 010 03 33	Assy. Timing Gear Housing with Cover		1		1				1		1		
72	2527 0114 01 17	Assy. Timing Gear Housing with Cover			1		1	1	1		1		1	
—	2525 0114 37 02	Bottom Cover (TGH)	1											
74	1305 050816 6	Cyl. Pin 8 M 6x16	2											
75	2525 0114 53 02	Gasket (Timing Gear Hsg To Cyl. Block)	1											
80	312 994 03 10	Locking Plate	3											
83	1132 399804 5	Hex Screw M 10x25	3											
84	2527 0114 37 06	Assy. Cover Front (Timing Gear Housing)						1	1					
84	2527 0114 37 03	Cover Front Timing Gear Hsg.with Oil Hole (AL)			1		1				1		1	
84	352 015 02 01	Cover Front (TGH)		1		1				1		1		
—	1163 249601 1	Stud BM 8X20	2											
—	2527 0114 01 29	Assy Pipe (Front Oil Filler)			1		1				1		1	
86	2534 0310 78 01	Seal (Crankshaft Front)	1											
87	352 015 05 20	Gasket (Timing Gear Housing Cover)		1		1				1		1		

TABLE 01.4

CYLINDER BLOCK

GROUP 01

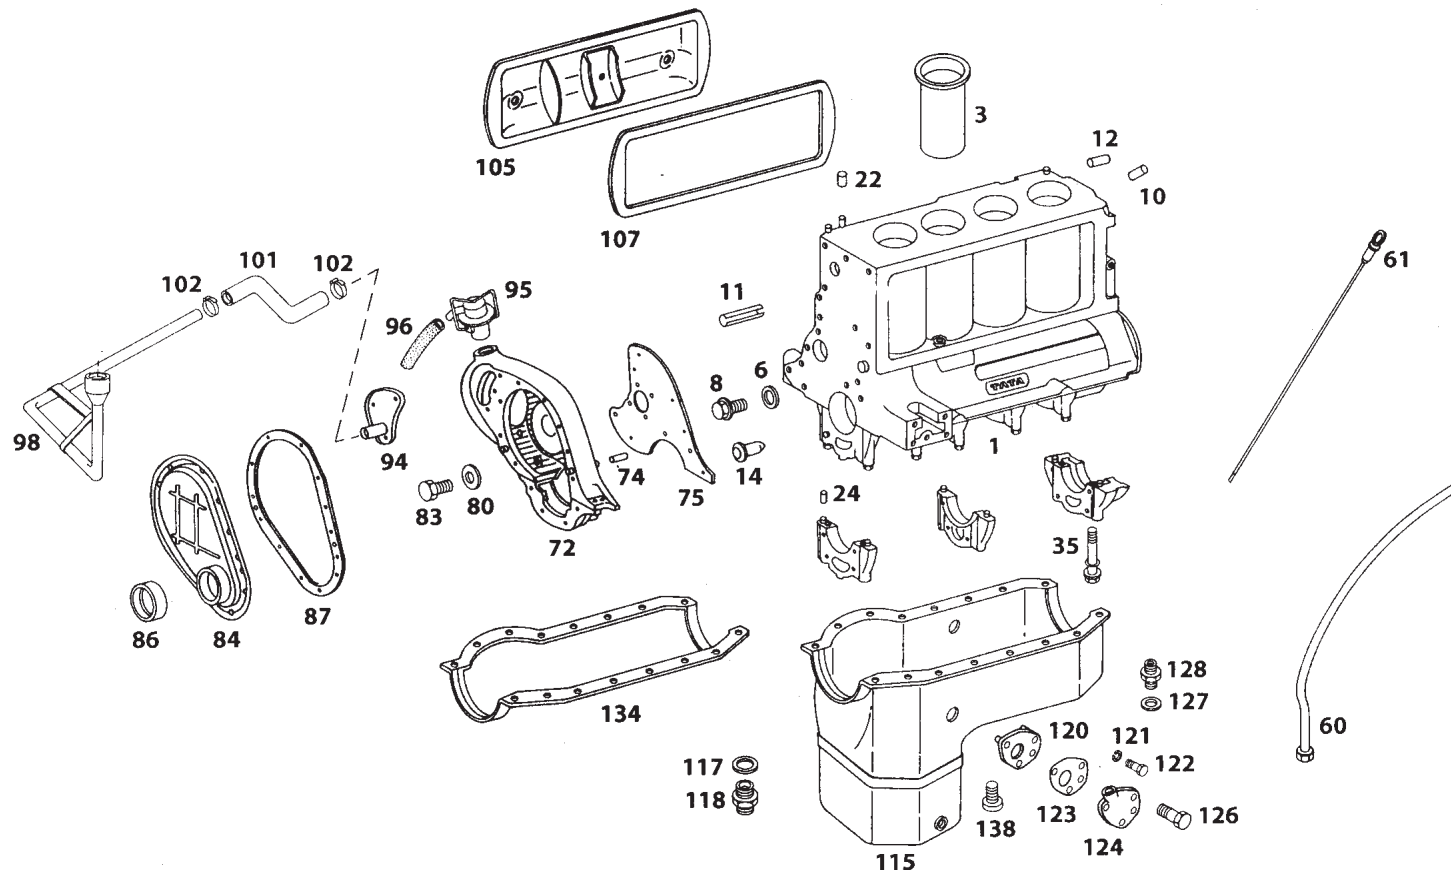


TABLE 01.4
CYLINDER BLOCK
GROUP 01

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
87	2527 0114 53 05	Gasket (TGH Cover)			1		1	1	1		1		1	
94	2523 0117 01 55	Assy. Top Cover with Pointer		1		1				1		1		
95	2523 0117 01 22	Assy. Breather	1											
96	2527 0117 58 08	Hose	1											
—	1427 020250 1	Hose Clip 25	1											
—	2523 0114 01 19	Assy. Combi Screw (for Top Cover)		3		3				3		3		
98	2527 0117 01 15	Assy. Oil Filler Pipe with Bracket								1	1	1	1	
98	2527 0117 01 40	Assy. Oil Filler Pipe with Bracket		1	1	1	1							
101	2523 0117 58 09	Tube Oil Filler (325 mm)		1		1				1		1		
101	2529 0117 58 01	Tube Oil Filler			1		1				1		1	
102	1428 050035 7	Hose Clamp 35		2	2	2	2			2	2	2	2	
—	312 995 24 20	Clamp		1	1	1	1			1	1	1	1	
105	2527 0114 01 02	Assy. Push Rod Chamber Cover	1											
107	2527 0114 53 03	Gasket (Push Rod Chamber Cover)	1											
115	2527 0113 01 25	Assy Oil Sump	1											
117	1622 071028 2	Sealing Washer 18x22	1											
118	2534 0113 01 11	Assy. Magnetic Drain Plug	1											
120	2523 0113 37 02	Retaining Flange (On Oil Sump)	1											
121	1252 069801 7	Spring Washer B 6	1											
122	1132 399806 1	Hex. Screw M 6x12	1											

TABLE 01.4

CYLINDER BLOCK

GROUP 01

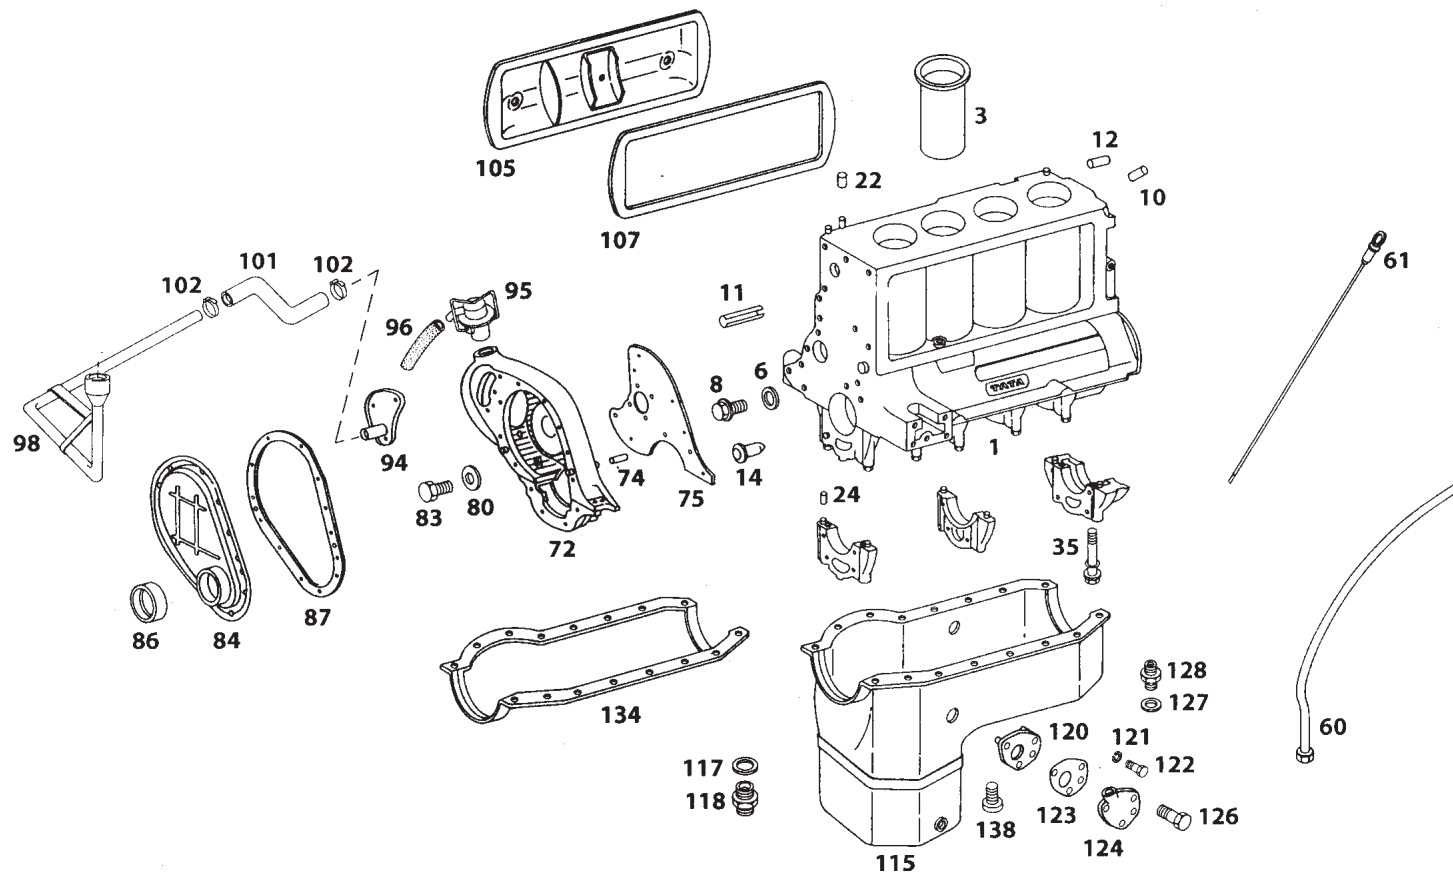


TABLE 01.4

CYLINDER BLOCK

GROUP 01

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
123	352 018 03 80	Gasket	1											
124	2527 0113 01 19	Assy. Flange (Oil Sump)		1		1				1		1		
124	2523 0113 37 03	Flange Oil Sump Dipstick			1		1	1	1		1		1	
126	1132 419603 1	Hex. Screw 8x22	3											
127	1252 069802 5	Spring Washer B 8	3											
128	2523 0117 85 01	Double Socket	1											
134	2527 0113 01 41	Set Oil Sump Gaskets	1											
138	2523 0113 01 14	Assy. Combi Screw	12											

TABLE 01.5

CYLINDER HEAD AND COVER

GROUP 01

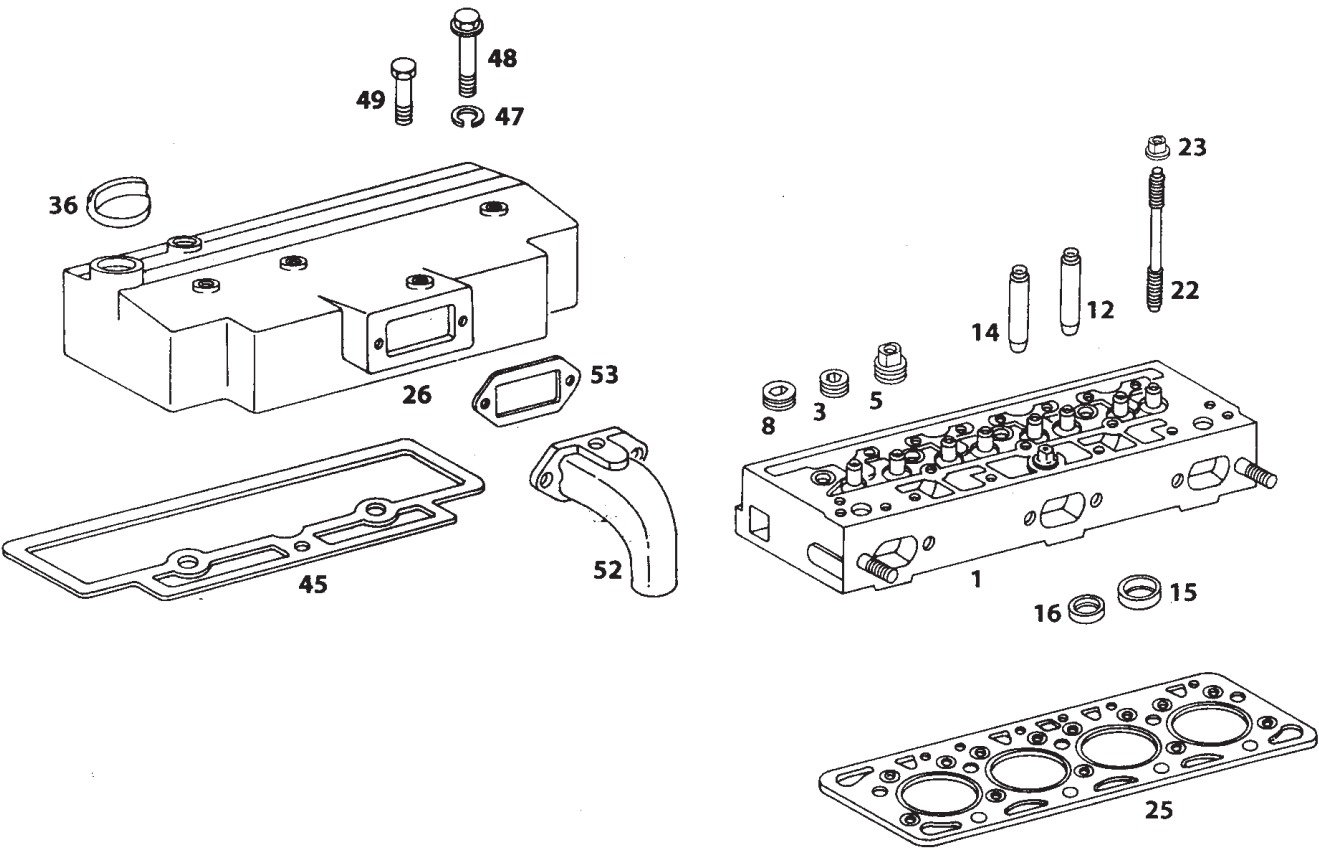


TABLE 01.5
CYLINDER HEAD AND COVER
GROUP 01

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		CYLINDER HEAD AND COVER												
1	2527 0115 01 69	Assy. Cylinder Head with Valves	1											
1	2527 0115 01 68	Assy. Cylinder Head without Valves	1											
3	1608 180300 9	Plug MC 30x1.5	3											
5	312 016 00 61	Sealing Plug	1											
8	1608 180240 1	Plug MC 24x1.5	2											
12	2534 0515 34 02	Valve Guide Inlet (STD 15.00 mm Dia)	4											
—	2534 0515 99 09	Valve Guide Seal Inlet	4											
14	2534 0515 34 15	Valve Guide Exhaust (STD 15.00 mm Dia)	4											
—	2534 0515 99 10	Valve Guide Seal Exhaust	4											
—	2527 0115 01 39	Set Valve Seat Ring Consisting of :	1											
15		Valve Seat Ring Inlet (STD)	4											
16		Valve Seat Ring Exhaust (STD)	4											
22	322 990 05 05	Stud Bolt (Cylinder Block)	17											
23	315 038 00 72	Hex Nut (Cylinder Block)	17											
25	2527 0115 53 10	Gasket, Cylinder Head (MLS)	1											For Selection
25	2534 0115 53 01	Gasket, Cylinder Head (Non retorque)	1											For Selection
26	2534 0115 01 84	Assy. Cylinder Head Cover	1											
36	2790 0115 99 05	Cap (For Cyl.Head Cover)			1		1	1	1		1		1	
36	2534 0115 01 17	Assy Oil Cap (With Breathing Provision)		1		1				1		1	1	

TABLE 01.5

CYLINDER HEAD AND COVER

GROUP 01

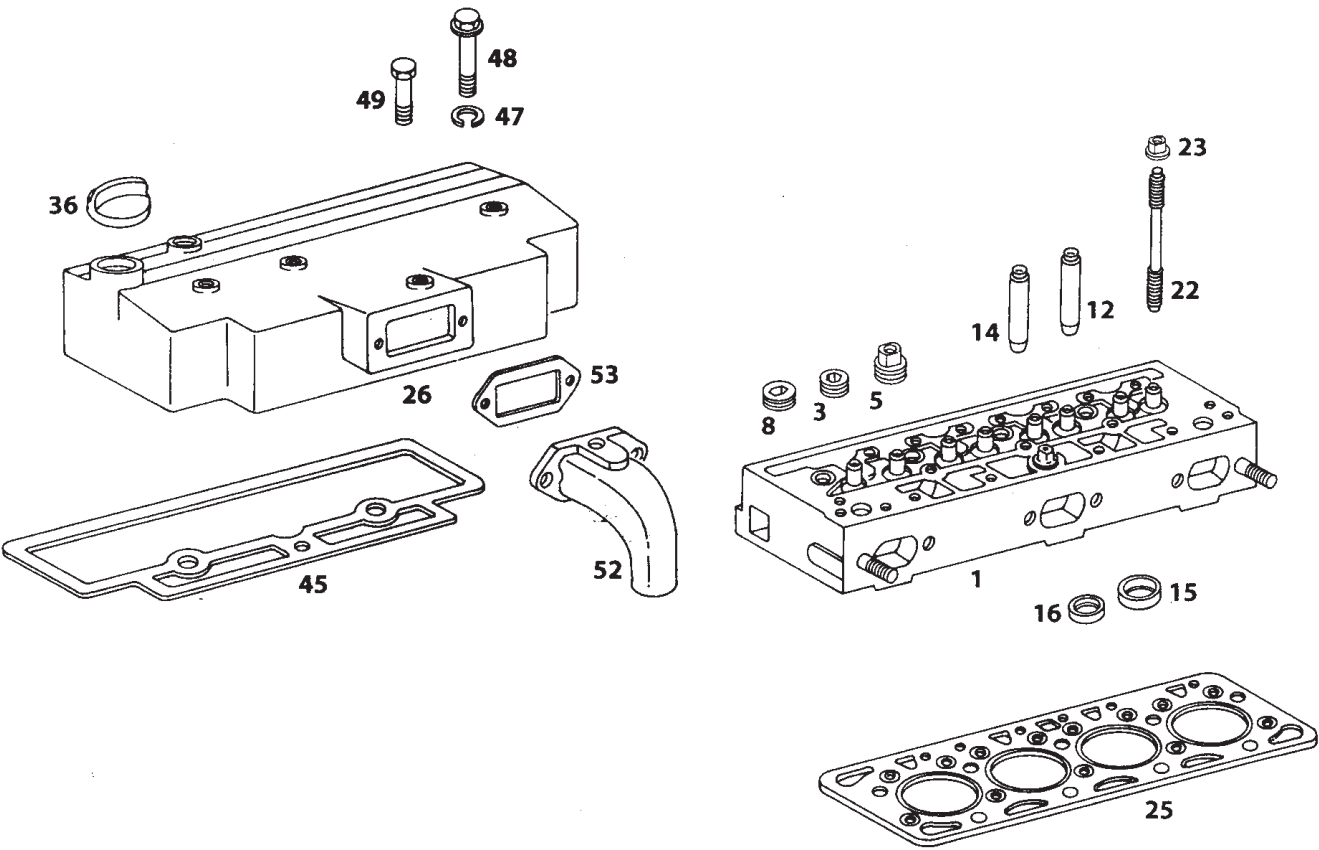


TABLE 01.5

CYLINDER HEAD AND COVER

GROUP 01

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
—	2547 0115 53 25	Gasket (For Cap)	1											
45	2527 0115 53 02	Gasket, Cylinder Head Cover	1											
47	1622 071012 6	Washer 8x14 Cu	4											
48	322 990 00 19	Stretch Bolt	3											
49	1106 409608 9	Hex Bolt M 8x125	1											
52	2527 0115 38 36	Air Intake Elbow						1	1					
52	2527 0115 38 25	Air Intake Elbow		1	1	1	1			1	1	1	1	
53	2533 0115 53 02	Gasket (Air Intake Elbow)	1											
—	2527 0115 99 04	Straight Reducer (Air Intake Elbow)			1		1	1	1		1		1	
—	2525 0115 99 04	Straight Reducer (Air Intake Elbow)		1		1				1		1		

TABLE 03.1

MOVING PARTS

GROUP 03

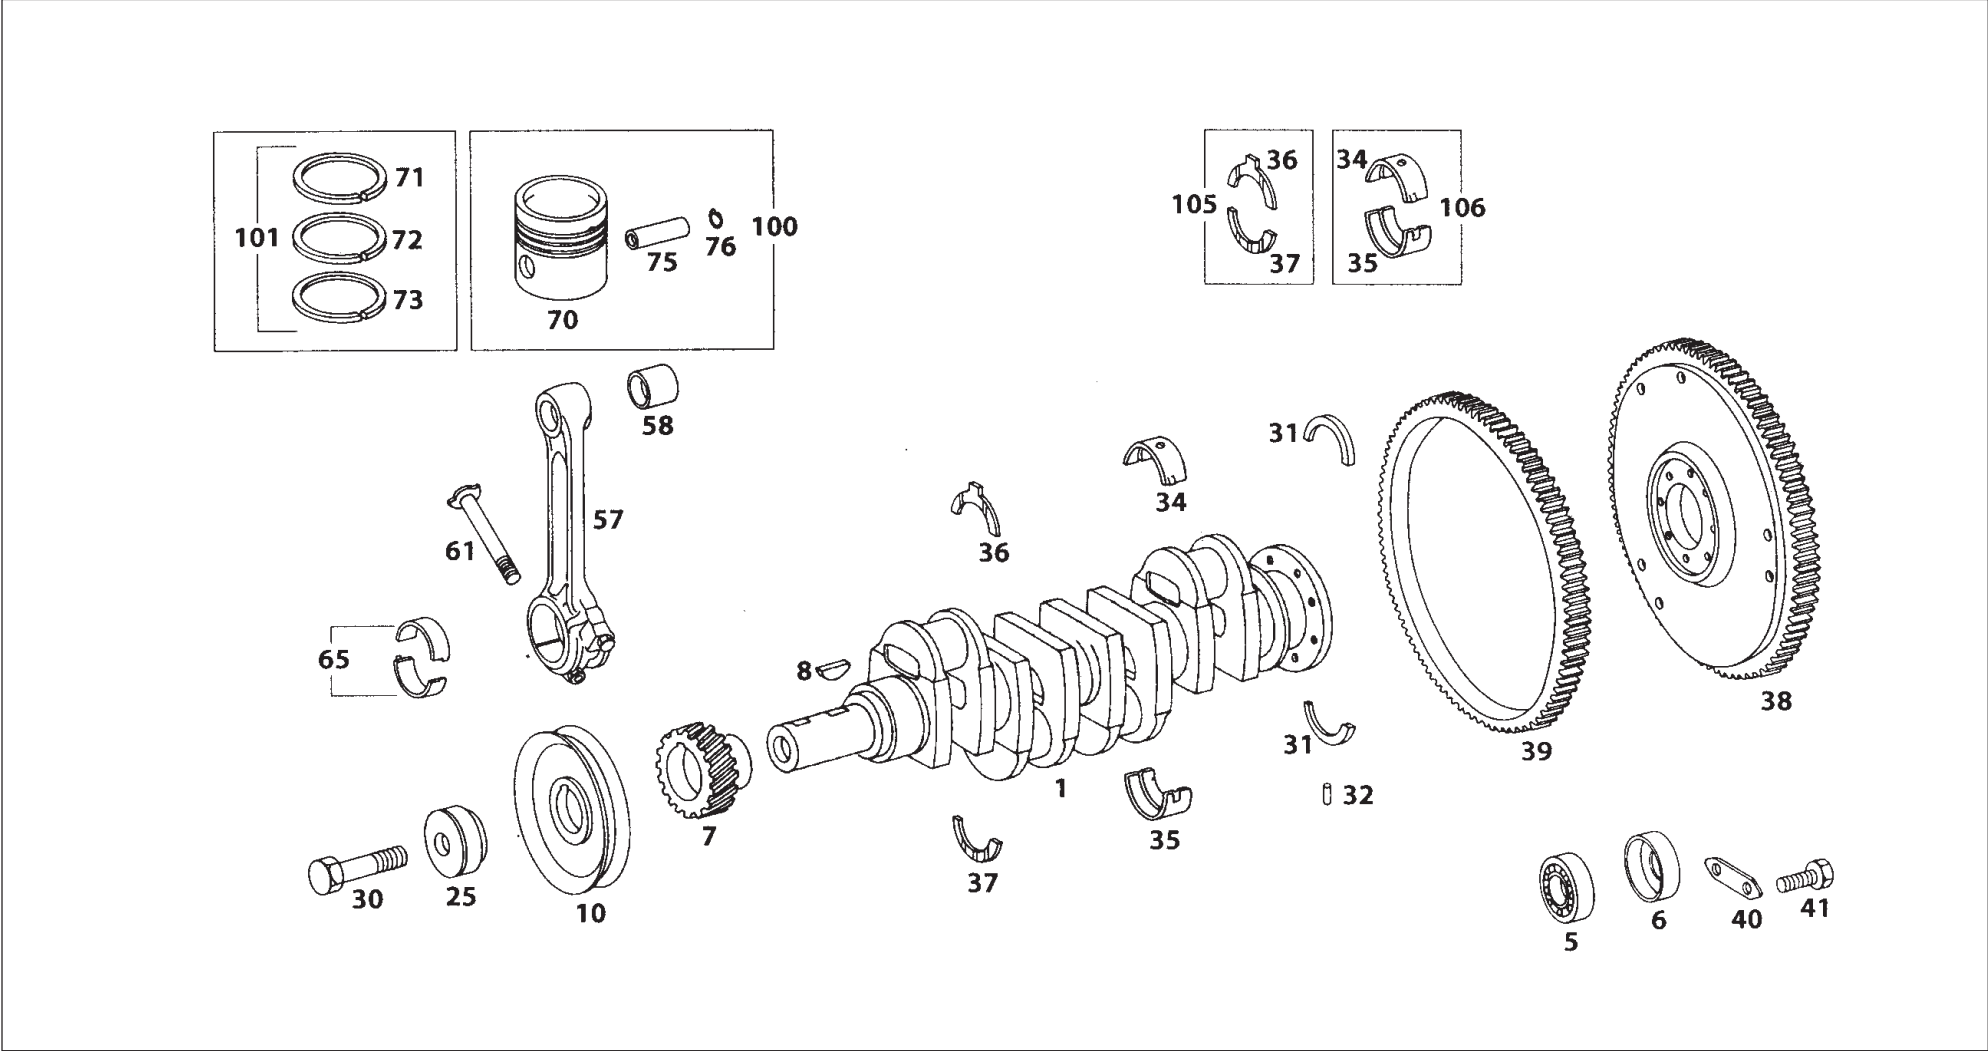


TABLE 03.1

MOVING PARTS

GROUP 03

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		MOVING PARTS												
		CRANKSHAFT												
1	2527 0310 79 33	Crankshaft (Integral)	1											
5	2534 0310 31 02	Ball Bearing	1											
6	312 031 05 33	Locking Ring Crankshaft	1											
7	352 052 00 03	Crankshaft Gear	1											
8	1365 051009 1	Key 8x13	2											
10	2527 0313 01 04	Assy. Pulley with Cover (Crankshaft)	1											For Mech.Steering
10	2527 0313 70 06	Pulley (Crankshaft)	1											For Power Steering
—	2525 0313 82 01	Oil Slinger	1											
—	2527 0313 86 03	Spacer (Suitable For Oil Slinger)	1											
25	2523 0313 86 03	Thrust Spacer	1											
30	2523 0313 32 02	Vibration Damper Lock	1											
—	8854 0308 25 25	Kit, Crankshaft Sealing Ring Half,Consists Off:	1											
31		Sealing Ring Half	2											
32		Locating Pin	2											
		FLYWHEEL												
38	2527 0311 01 25	Assy Flywheel with Ring Gear			1		1	1	1		1		1	
38	2527 0311 01 18	Assy. Flywheel with Ring Gear		1		1				1		1		
39	352 032 11 05	Ring Gear	1											

TABLE 03.1

MOVING PARTS

GROUP 03

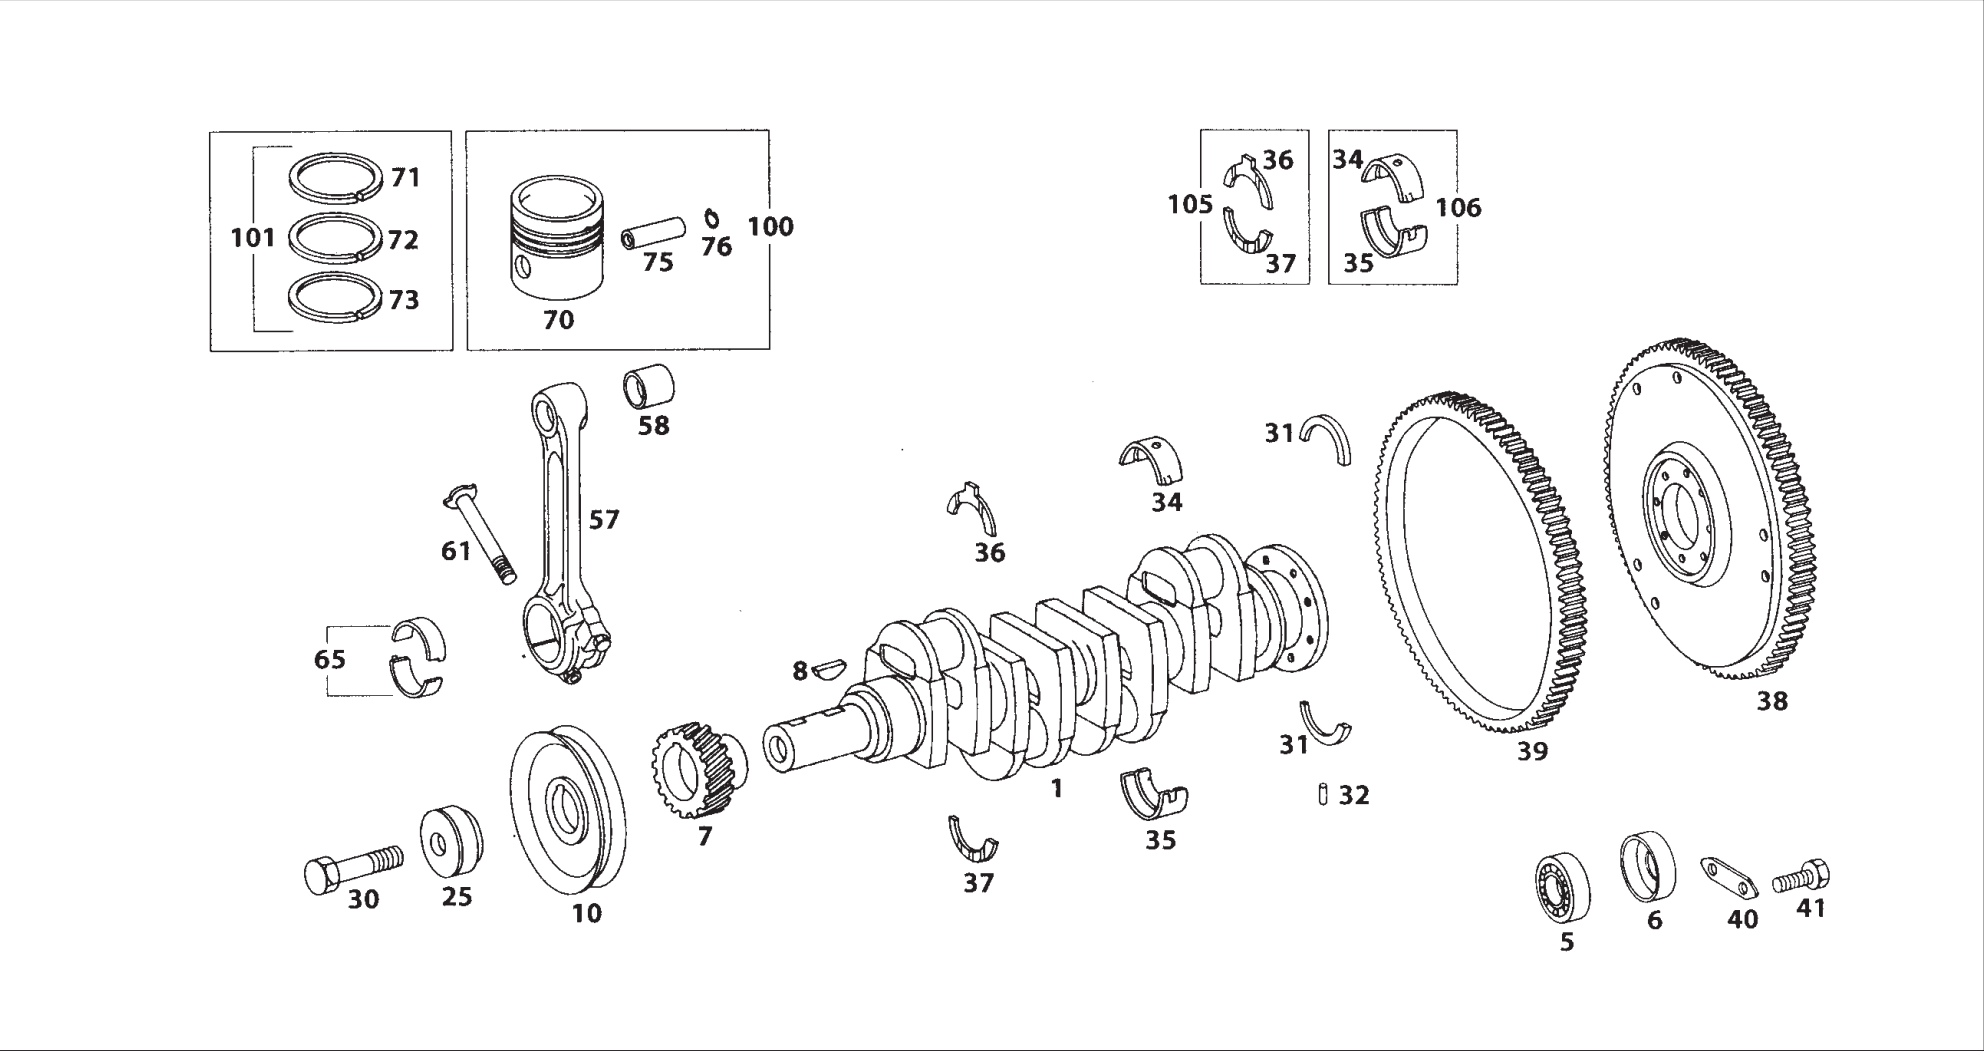


TABLE 03.1

MOVING PARTS

GROUP 03

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
40	312 994 02 32	Locking Plate (Flywheel to Crankshaft)		4		4				4		4		
41	312 990 03 01	Hex Head Bolt (Flywheel to Crankshaft)		8		8				8		8		
		CONNECTING ROD												
57	2525 0315 01 07	Assy. Con Rod (without Bearing Shells)	4											
61	2525 0315 32 04	Connecting Rod Bolt (Fully Threaded)	8											
—	8854 0352 25 34	Con. Rod Bush Set STD Consisting of :	1											
58		Con. Rod Bush STD	4											
		CONNECTING ROD BEARING SET												
65	8854 0343 25 34	Connecting Rod Bearing Set STD,Consisting of :	1											
		Con. Rod Bearing Half STD	8											
65	8854 0345 25 34	Connecting Rod Bearing Set R/S I,Consisting of :	1											
		Con. Rod Bearing Half R/S I	8											
65	8854 0346 25 34	Connecting Rod Bearing Set R/S II,Consisting of :	1											
		Con. Rod Bearing Half R/S II	8											
65	8854 0347 25 34	Connecting Rod Bearing Set R/S III,Consisting of :	1											
		Con. Rod Bearing Half R/S III	8											
65	8854 0348 25 34	Connecting Rod Bearing Set R/S IV,Consisting of :	1											
		Con. Rod Bearing Half R/S IV	8											

TABLE 03.1

MOVING PARTS

GROUP 03

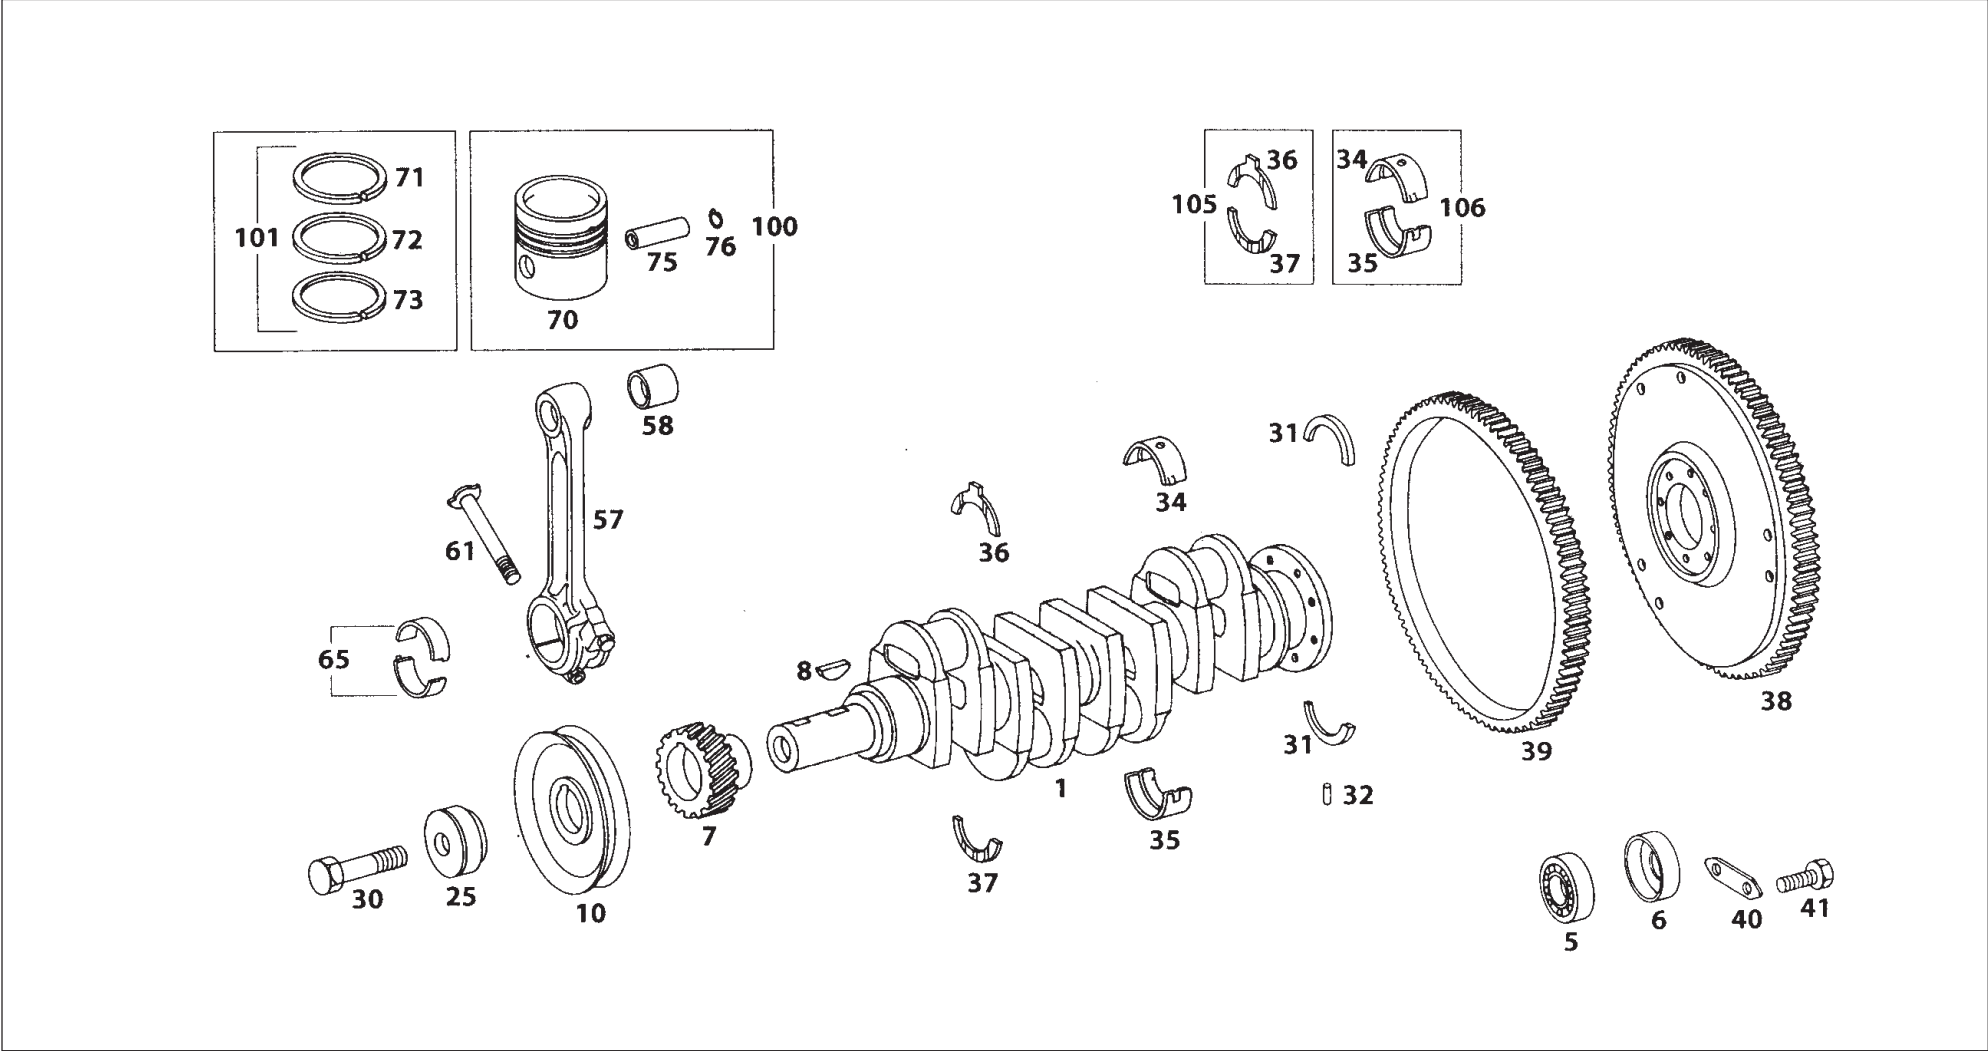


TABLE 03.1
MOVING PARTS
GROUP 03

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		MAIN BEARING & THRUST WASHER SET												
106	8854 0340 25 27	Main Bearing Set STD,Consisting of :	1											For Selection
34		Main Bearing Half Upper STD	5											
35		Main Bearing Half Lower STD	5											
106	8854 0342 25 27	Main Bearing Set RS I consisting of :	1											For Selection
34		Main Bearing Half Upper RS I	5											
35		Main Bearing Half Lower RS I	5											
106	8854 0343 25 27	Main BearingSet RS II consisting of :	1											For Selection
34		Main Bearing Half Upper RS II	5											
35		Main Bearing Half Lower RS II	5											
106	8854 0344 25 27	Main Bearing Set RS III consisting of :	1											For Selection
34		Main Bearing Half Upper RS III	5											
35		Main Bearing Half Lower RS III	5											
106	8854 0345 25 27	Main Bearing Set RS IV consisting of :	1											For Selection
34		Main Bearing Half Upper RS IV	5											
35		Main Bearing Half Lower RS IV	5											
105	8854 0376 25 25	Set of Thrust Washer STD Consisting of :	1											For Selection
37		Thrust Washer Lower Half	2											
36		Thrust Washer Upper Half	2											

TABLE 03.1

MOVING PARTS

GROUP 03

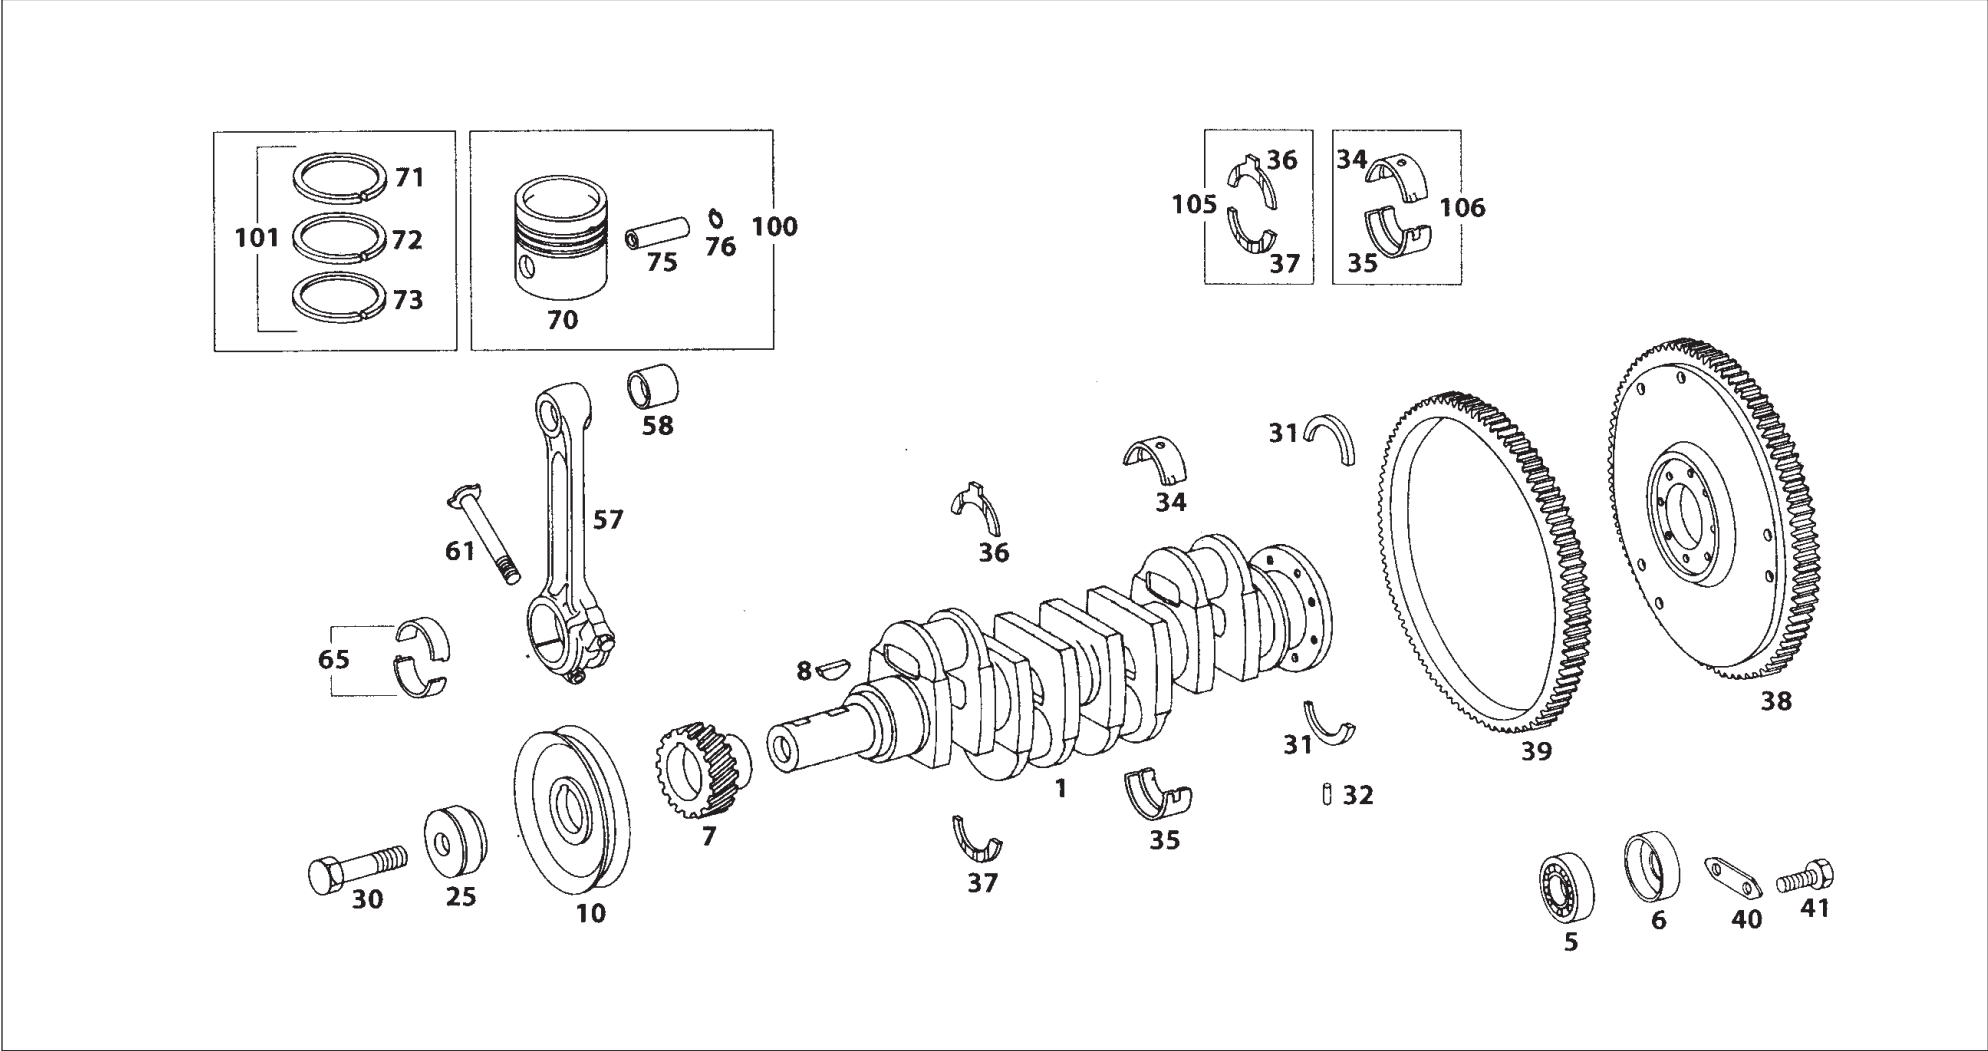


TABLE 03.1
MOVING PARTS
GROUP 03

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
105	8854 0377 25 25	Set of Thrust Washer RS I Consisting of :	1											For Selection
37		Thrust Washer Lower Half RS I	2											
36		Thrust Washer Upper Half RS I	2											
105	8854 0378 25 25	Set of Thrust Washer RS II Consisting of :	1											For Selection
37		Thrust Washer Lower Half RS II	2											
36		Thrust Washer Upper Half RS II	2											
		PISTON AND PISTON RING SET												
100	8854 0350 25 27	Set of Bare Piston (STD) w/o Rings	1											
		(Non Slipper) Consisting of :												
70		Piston	4											
75		Pin	4											
76		Circlip	8											
100	8854 0353 25 27	Set of Bare Piston (STD) w/o Rings	1											
		(Slipper) BS I & II Consisting of :												
70		Piston	4											
75		Pin	4											
76		Circlip	8											
101	8854 0374 25 34	Set of Piston Rings (STD) BS I & II Consists of:	1											
71		Compression Ring Gr - I	4											
72		Internally Stepped Ring Gr - II	4											
73		Oil Ring Gr - II	4											

TABLE 05.1

ENGINE TIMING

GROUP 05

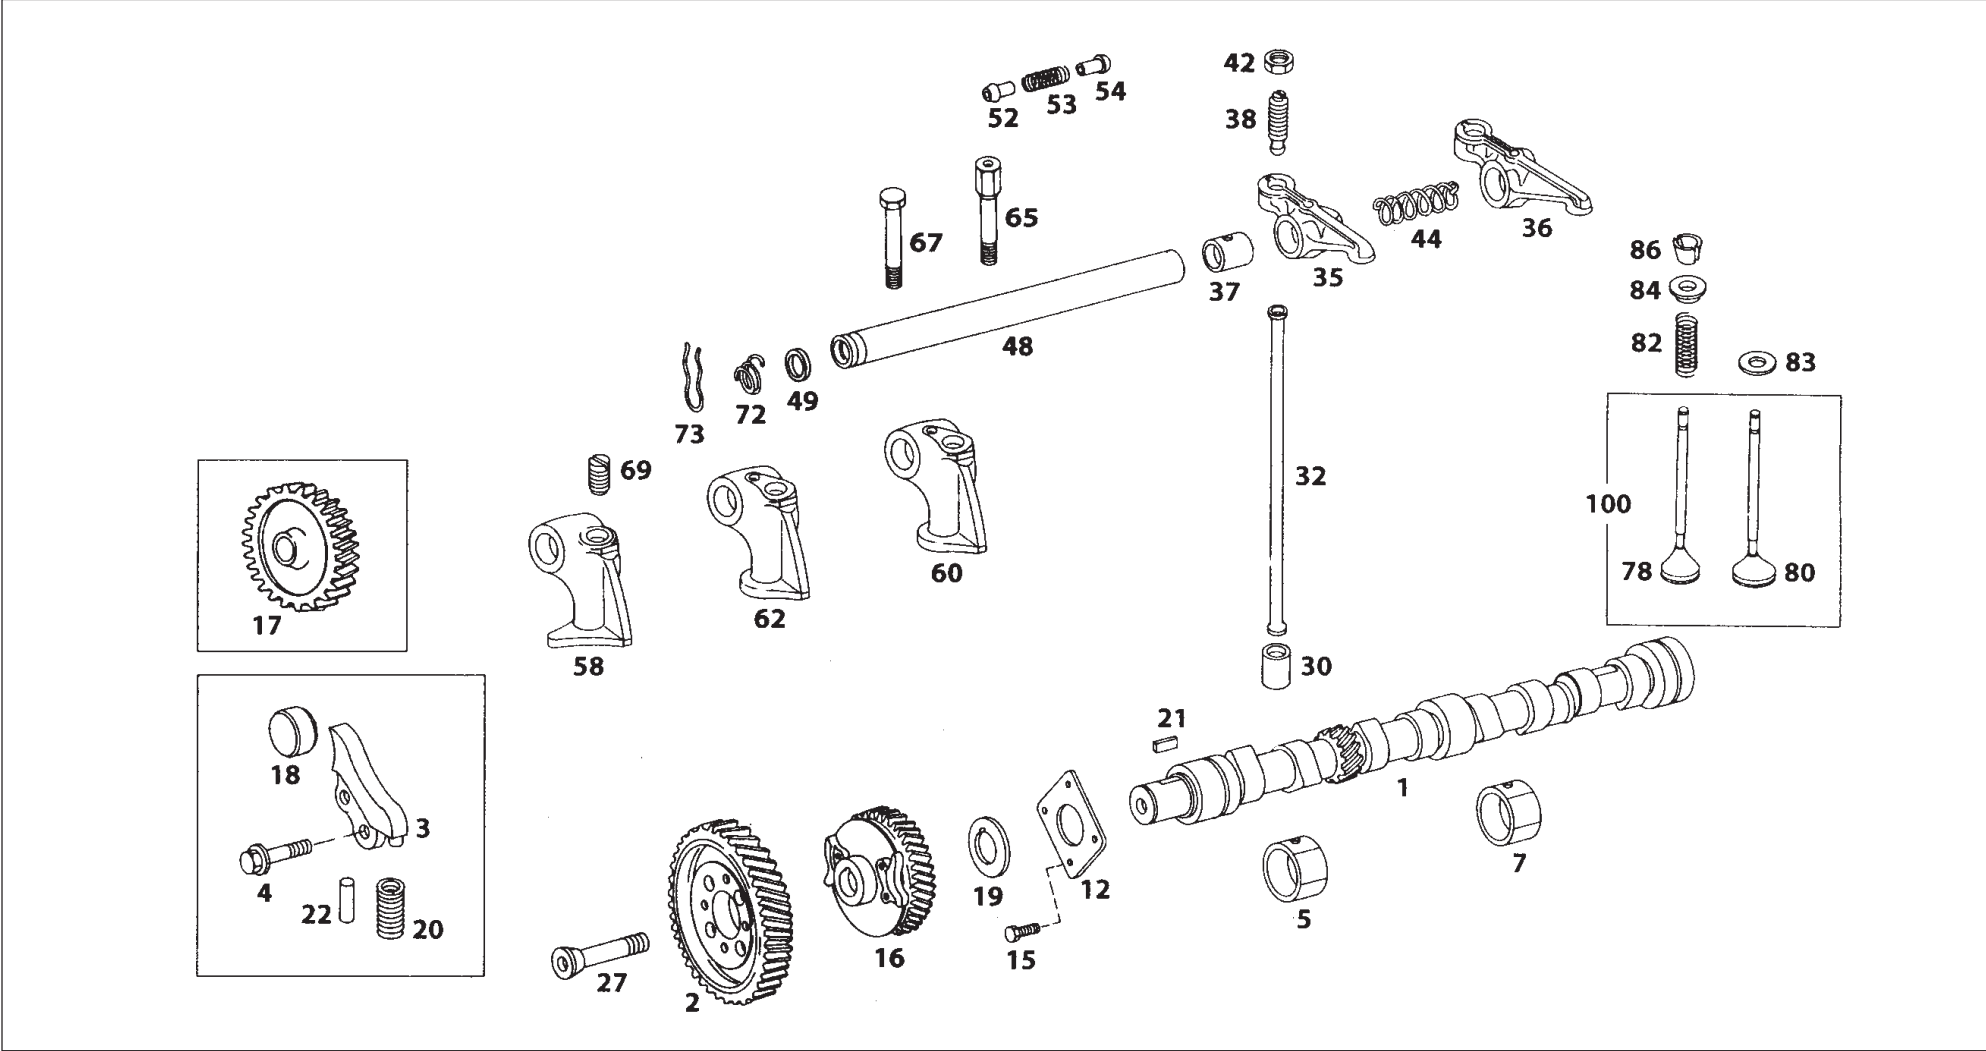


TABLE 05.1
ENGINE TIMING
GROUP 05

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		ENGINE TIMING												
1	2527 0510 01 08	Assy. Camshaft with Pin STD	1											
—	2534 0510 67 01	Cyl. Pin (Cam Shaft)	1											
2	2527 0511 54 03	Camshaft Gear			1		1	1	1		1		1	
2	352 052 02 01	Camshaft Gear		1		1				1		1		
3	352 075 10 25	Timer Segment		4		4				4		4		
4	2523 0711 80 01	Collar Screw		8		8				8		8		
12	352 052 07 62	Thrust Washer	1											
15	312 990 00 04	Hex. Screw	4											
16	352 070 16 45	Assy. Injection Timer		1		1				1		1		
17	352 077 03 14	Drive Gear (Injection Pump)		1		1				1		1		
17	2527 0713 54 01	Drive Gear (Injection Pump)			1		1	1	1		1		1	
18	352 075 00 35	Timer Flyweight		2		2				2		2		
19	352 051 00 62	Butting Ring	1											
20	352 993 07 01	Spring		2		2				2		2		
21	2523 0510 59 01	Parallel Key	1											
22	352 075 03 74	Pin		1		1				1		1		
27	352 075 00 71	Pin (Inj. Timer Mtg.)	1											
30	2534 0513 99 02	Valve Tappet Inlet and Exhaust (STD)	8											
32	352 054 02 05	Push Rod	8											

TABLE 05.1

ENGINE TIMING

GROUP 05

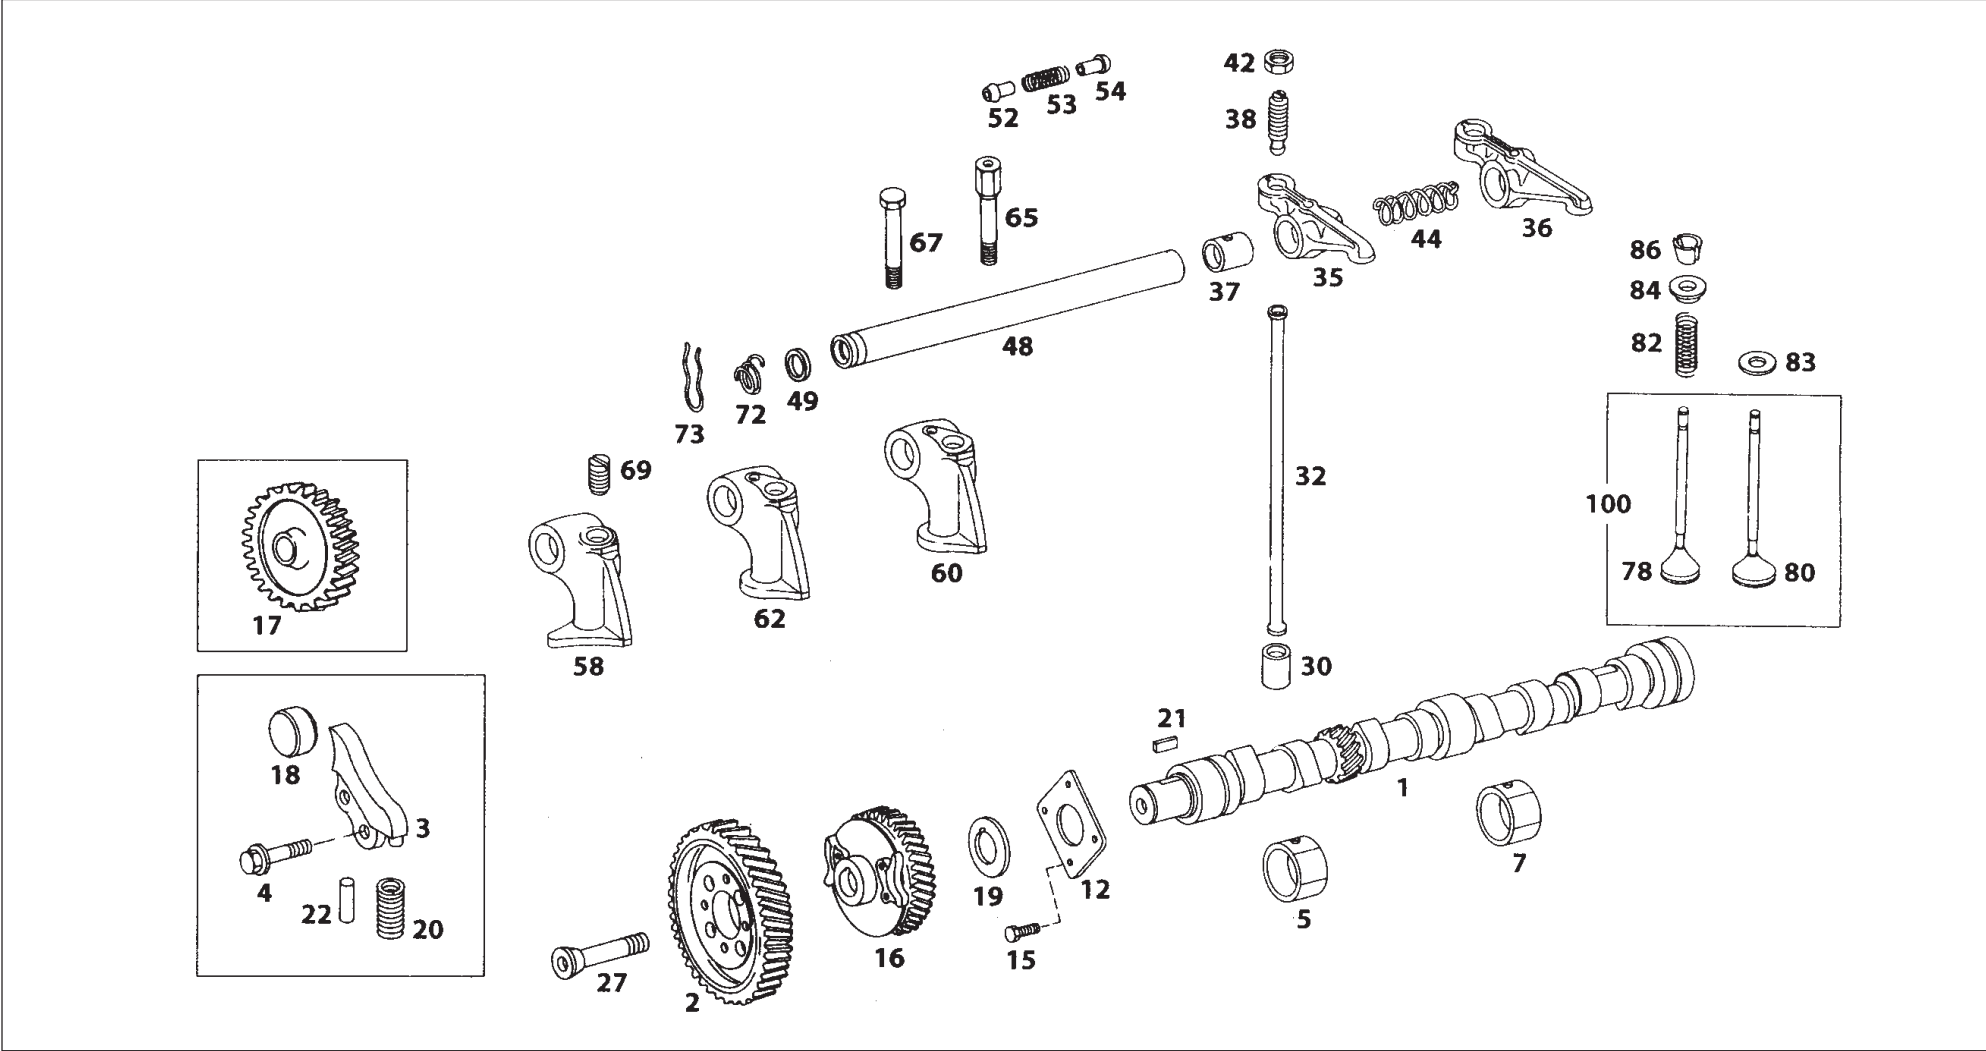


TABLE 05.1
ENGINE TIMING
GROUP 05

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
35	352 050 10 33	Assy. Rocker Arm Left with Bush	4											
36	352 050 06 34	Assy. Rocker Arm Right with Bush	4											
37	312 055 00 50	Bush	8											
38	2523 0514 67 01	Ball End Tappet Adjuster	8											
42	312 990 02 51	Hex Nut	8											
44	312 993 07 01	Spring Long	3											
—	2527 0514 01 01	Assy Rocker Arm Shaft With Arms	1											
48	2527 0514 79 02	Rocker Arm Shaft	1											
49	1707 100140 7	Sealing Cap 14	2											
52	312 055 06 53	Connecting Nipple Inside	1											
53	312 993 47 01	Spring Connecting Nipple	1											
54	312 055 05 53	Connecting Nipple Outside	1											
58	352 055 06 10	Rocker Arm Support No. 1	1											
60	352 055 04 10	Rocker Arm Support No. 2, 5, 6	1											
62	352 055 05 10	Rocker Arm Support No. 3 & 4	2											
65	312 055 01 71	Bolt (Rocker Arm)	3											
67	1106 401263 2	Hex Bolt M 12x75	1											
69	1143 320610 1	Grub Screw EM 6x10	1											
72	312 993 00 05	Spring Short	2											
73	312 993 00 25	Spring Clip	2											

TABLE 05.1

ENGINE TIMING

GROUP 05

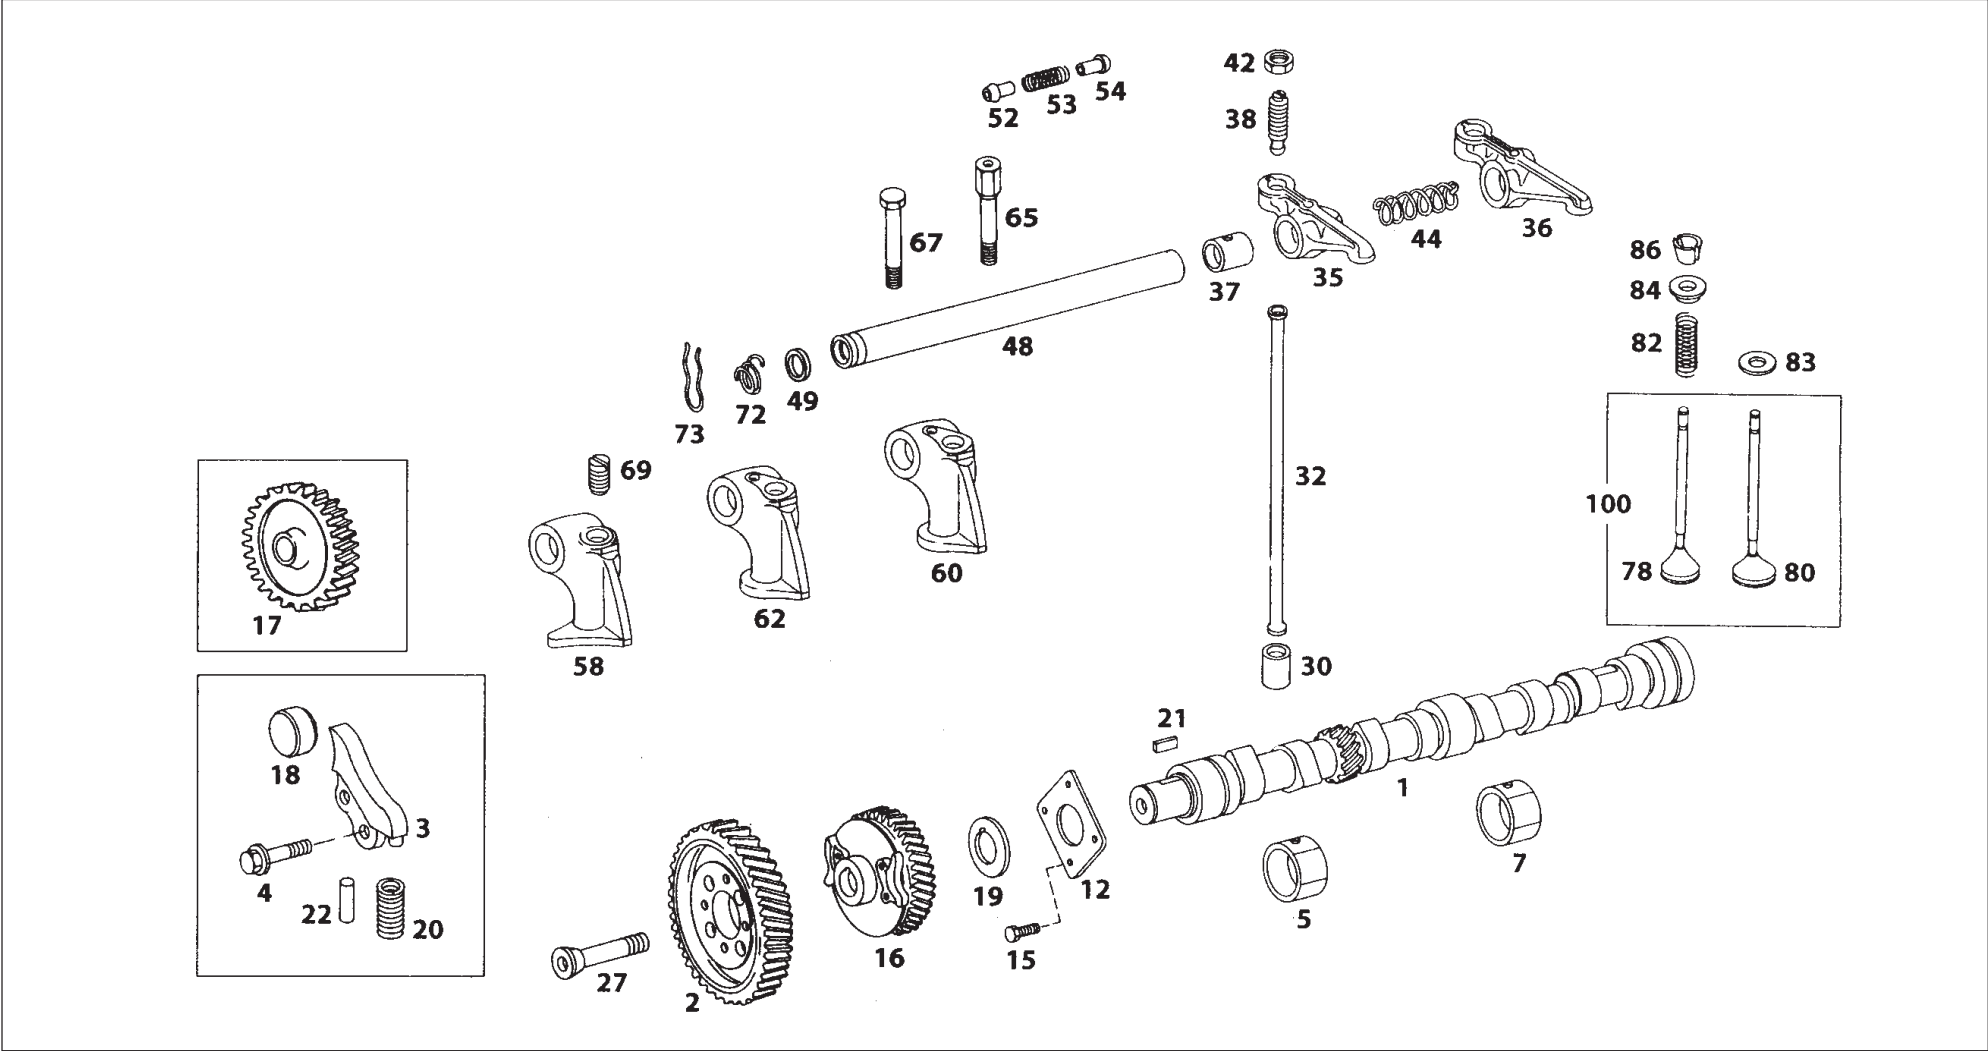


TABLE 05.1
ENGINE TIMING
GROUP 05

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
82	322 053 04 20	Valve Spring	8											
83	352 990 20 40	Valve Spring Washer	8											
84	2525 0515 51 02	Lock Retainer (Valve Spring)	8											
86	312 053 01 27	Lock Half (Valve Spring)	16											
100	2534 0599 01 03	Valve Set Consisting of :	1											
78		Inlet Valve	4											
80		Exhaust Valve	4											
—		8854 0503 25 34	Set of Camshaft Bearing STD Consisting of :	1										
5	Camshaft Bearing No. 1		1											
7	Camshaft Bearing No. 2, 3		2											
—	8854 0502 25 25	Timer Kit Consists of :		1		1				1		1		
3		Timer Segment		4		4				4		4		
18		Flyweight		2		2				2		2		
20		Spring		2		2				2		2		
22		Pin		1		1				1		1		

TABLE 07.1

FUEL INJECTION EQUIPMENT (BS I)

GROUP 07

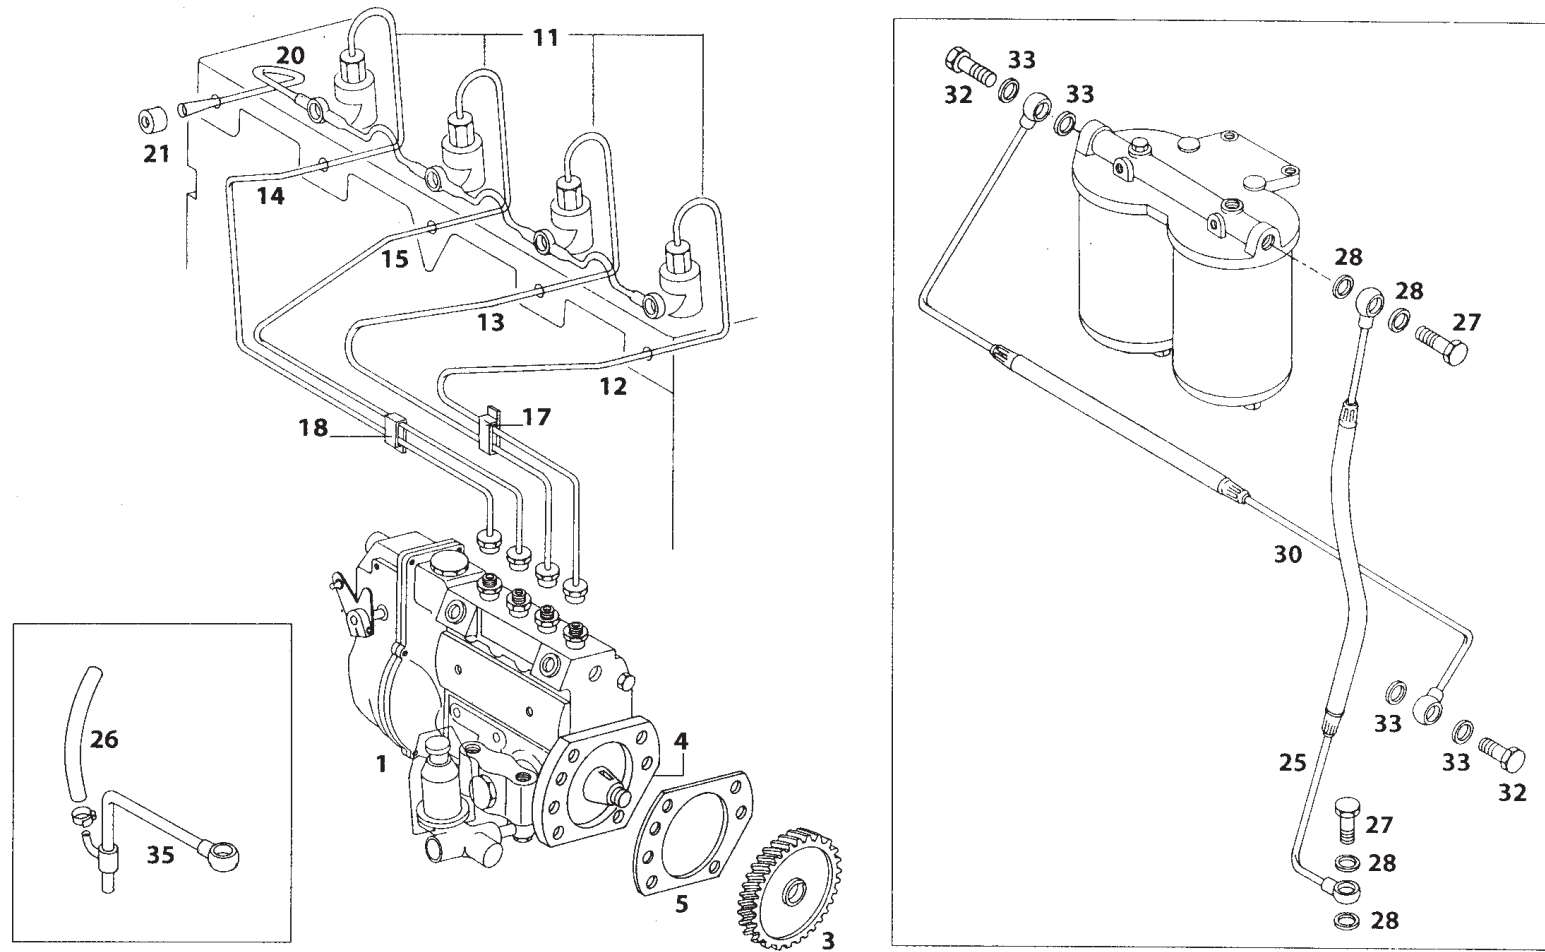


TABLE 07.1
FUEL INJECTION EQUIPMENT (BS I)
GROUP 07

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		FUEL INJECTION EQUIPMENT (BS I)												
1	F 002 A0Z 178	Assy. FIP (In-Line)		1		1				1		1		Tata Part No.2527 0710 01 59
—	9 440 030 030	Feed Pump		1		1				1		1		
3	2523 0710 54 01	Injection Pump Gear		1		1				1		1		
4	2525 0712 37 01	Support Injection Pump		1		1				1		1		
5	2527 0712 53 04	Gasket (Support)		1		1				1		1		
		PRESSURE AND LEAKAGE LINE												
11	2527 0714 01 49	Set of Fuel Pressure Lines Consisting of :		1		1				1		1		
12		Assy. Fuel Pressure Line Bent Cyl. No. 1		1		1				1		1		
13		Assy. Fuel Pressure Line Bent Cyl. No. 2		1		1				1		1		
14		Assy. Fuel Pressure Line Bent Cyl. No. 3		1		1				1		1		
15		Assy. Fuel Pressure Line Bent Cyl. No. 4		1		1				1		1		
17	2527 0714 82 01	Clamp Upper		2		2				2		2		
—	2527 0714 75 01	Rubber Grommet		2		2				2		2		
18	2527 0714 01 02	Assy. Clamp Lower		2		2				2		2		
20	2527 0714 01 35	Assy. Fuel Leakage Line		2		2				2		2		
21	312 997 08 40	Gasket Ring		1		1				1		1		
—	2527 0913 01 92	Assy. Air Line(Air Intake Elbow to LDA)		1		1				1		1		
25	2527 0912 01 36	Assy. Fuel Line (Feed Pump to Filter)		1		1				1		1	Optional	
25	2527 0912 01 14	Assy. Fuel Line (Feed Pump to Filter)		1		1				1		1	Optional	

TABLE 07.1

FUEL INJECTION EQUIPMENT (BS I)

GROUP 07

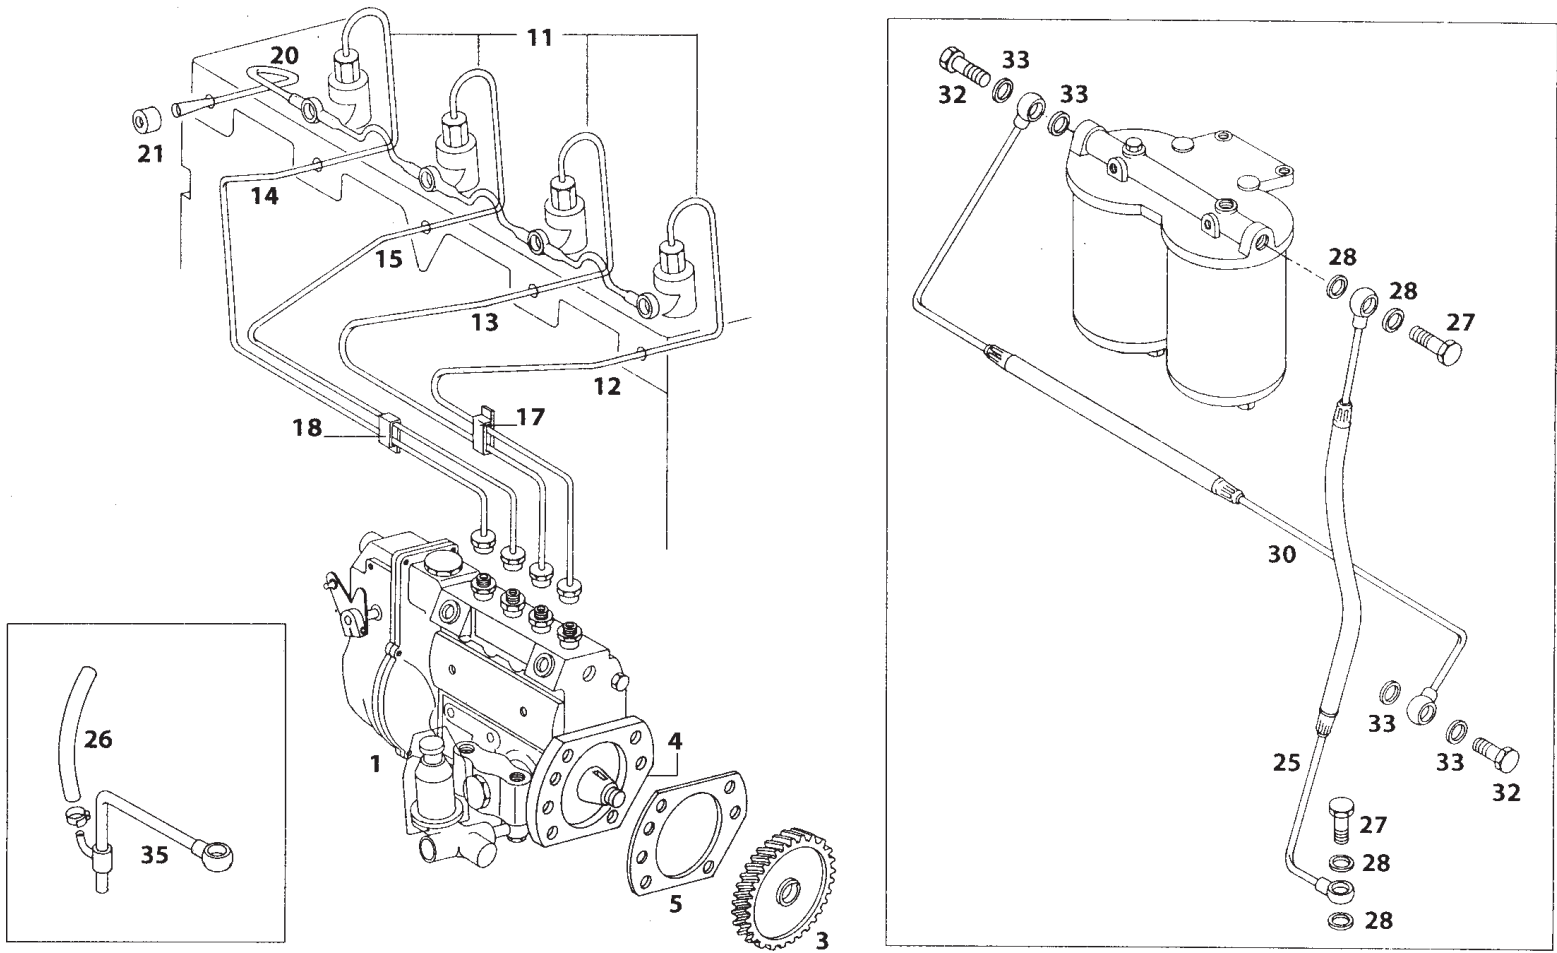


TABLE 07.1
FUEL INJECTION EQUIPMENT (BS I)
GROUP 07

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
26	2527 0912 58 05	Hose (340 Long)		1		1				1		1		
27	1653 199904 9	Pipe Union Bolt 10		2		2				2		2		
28	1622 051021 6	Sealing Washer 14x18 AL		4		4				4		4		
30	2527 0912 01 33	Assy. Fuel Lines (Filter Outlet to FIP)		1		1				1		1		
—	2527 0911 80 01	Air Vent Screw (On Fuel Filter Banjo)		1		1				1		1		
32	2527 0911 32 01	Pipe Union Bolt (Fuel Filter End)		2		2				2		2		
33	1622 051006 2	Washer 6x10 AL		4		4				4		4		
35	2527 0912 01 24	Assy. Overflow Line (Combined)		1		1				1		1		
—	2523 0911 01 03	Assy. Overflow Valve		1		1				1		1		
—	2641 1520 01 12	Assy. Solenoid (FIP Shut off)		1		1				1		1		
—	2641 1520 01 13	Assy. Cam (Solenoid FIP)		1		1				1		1		



TABLE 07.2
FUEL INJECTION EQUIPMENT (BS II)
GROUP 07

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		FUEL INJECTION EQUIPMENT (BS II)												
1	0 460 424 364	Assy.Fuel Injection Pump (Rotary)						1	1					Tata Part No.2527 0710 02 51
1	0 460 424 232	Assy.Fuel Injection Pump (Rotary)			1		1				1		1	Tata Part No.2527 0710 01 73
2	2527 0712 01 03	Assy. Bracket (FIP Mounting on Cyl. Cr. Case)			1		1	1	1		1		1	
3	2527 0713 54 02	Injection Pump Gear			1		1	1	1		1		1	
4	2525 0712 37 02	Support (FIP - BS-II)			1		1	1	1		1		1	
—	2527 0712 53 01	Gasket (Support)			1		1	1	1		1		1	
—	2527 0712 53 02	Gasket (FIP to Support)			1		1	1	1		1		1	
11	2527 0714 01 57	Set of Fuel Pressure Lines consisting of :			1		1	1	1		1		1	
12		Assy. Fuel Pressure Line Bent Cylinder No. 1			1		1	1	1		1		1	
13		Assy. Fuel Pressure Line Bent Cylinder No. 2			1		1	1	1		1		1	
14		Assy. Fuel Pressure Line Bent Cylinder No. 3			1		1	1	1		1		1	
15		Assy. Fuel Pressure Line Bent Cylinder No. 4			1		1	1	1		1		1	
18	2527 0714 75 01	Rubber Grommet			4		4	4	4		4		4	
19	2527 0714 01 02	Assy. Clamp Lower			4		4	4	4		4		4	
—	2527 0714 82 01	Pipe Clamp Upper			4		4	4	4		4		4	
25	2527 0714 01 35	Assy Fuel Leakage Line			1		1	1	1		1		1	
26	312 997 08 40	Gasket Ring			1		1	1	1		1		1	
27	2527 0913 02 74	Assy. Air Line (Air Intake Elbow to LDA)			1		1	1	1		1		1	
—	2527 0913 69 38	Tube (LDA Air Intake Elbow to FIP)			1		1	1	1		1		1	

TABLE 07.2

FUEL INJECTION EQUIPMENT (BS II)

GROUP 07

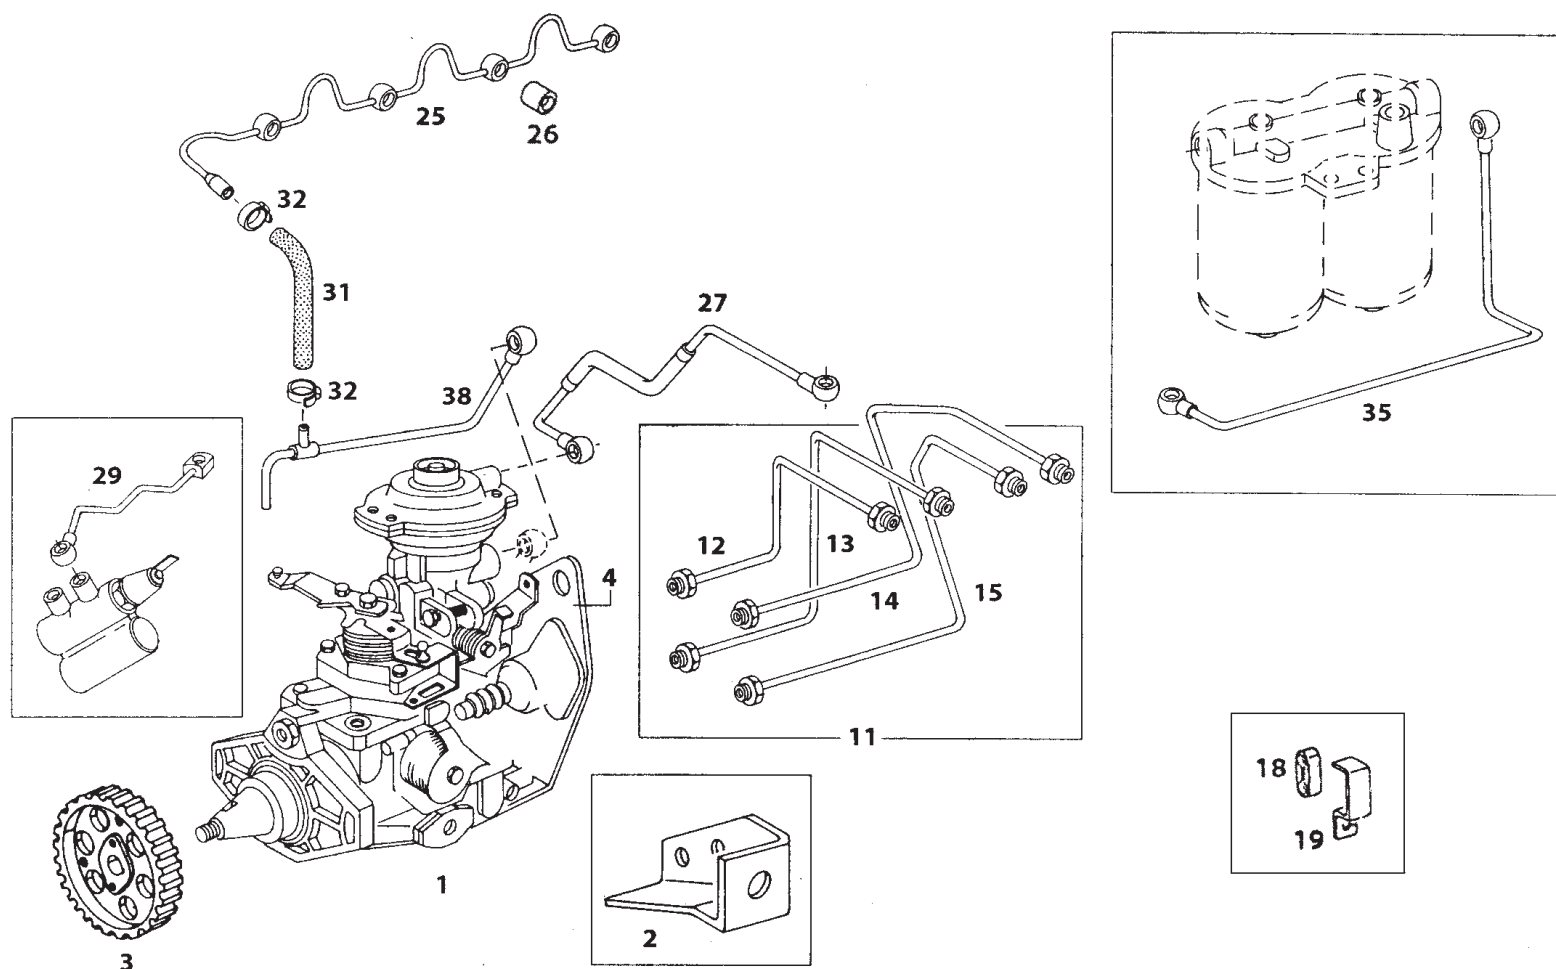


TABLE 07.2
FUEL INJECTION EQUIPMENT (BS II)
GROUP 07

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
29	2547 0710 01 14	Assy. Boost Line (FIP Side)			1		1	1	1		1		1	
—	2547 0714 42 01	Clamp (Injector Overflow Tube)			2		2	2	2		2		2	
31	2527 0912 58 04	Hose (For Assy Overflow Line)			1		1	1	1		1		1	
32	1427 020110 6	Hose Clip 11			2		2	2	2		2		2	
35	2527 0912 01 71	Assy Fuel Line (Filter to FIP)			1		1	1	1		1		1	
—	2527 0911 32 01	Pipe Union Bolt			1		1	1	1		1		1	
—	1622 051021 6	Sealing Washer 14X18			2		2	2	2		2		2	
38	2527 0912 01 57	Assy. Overflow Line (Combined)			1		1	1	1		1		1	
—	2527 0911 80 01	Air Vent Screw (On Fuel Filttyer Banjo)			1		1	1	1		1		1	
—	1622 051006 2	Sealing Washer 6X10 Al			2		2	2	2		2		2	

TABLE 07.3

INJECTOR

GROUP 07

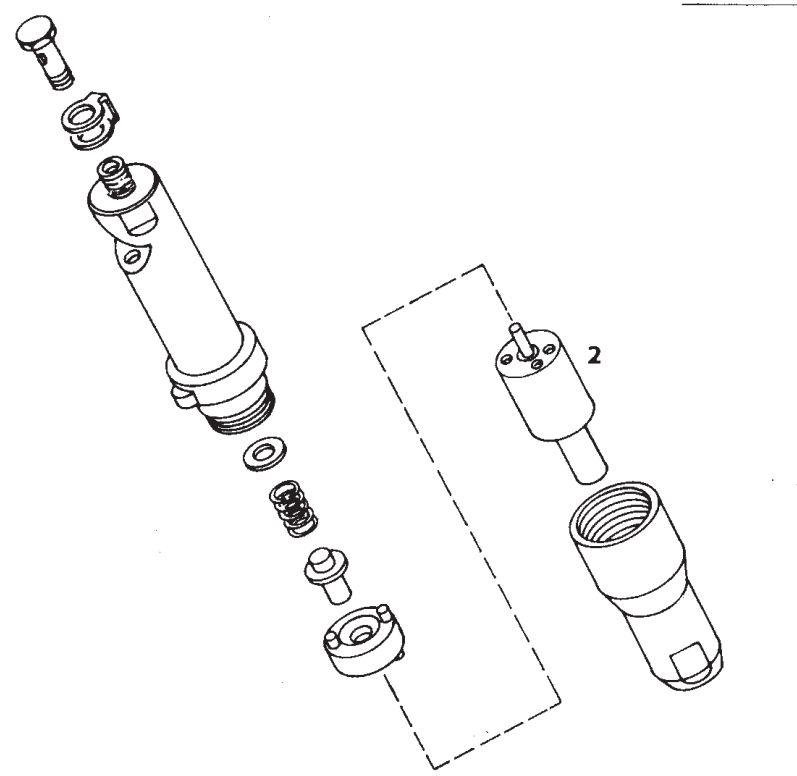


TABLE 07.3

INJECTOR

GROUP 07

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
1	F 002 C8Z 205	INJECTOR Assy. Injector		4		4				4		4		Tata Part No. 2527 0116 01 16
1	F 002 C8Z 852	Assy. Injector			4		4	4	4		4		4	Tata Part No. 2527 0116 01 17
2	F 002 C40 504	Nozzle		4		4				4		4		
2	F 002 C40 531	Nozzle			4		4	4	4		4		4	

TABLE 07.4

WATER SEPARATOR

GROUP 07

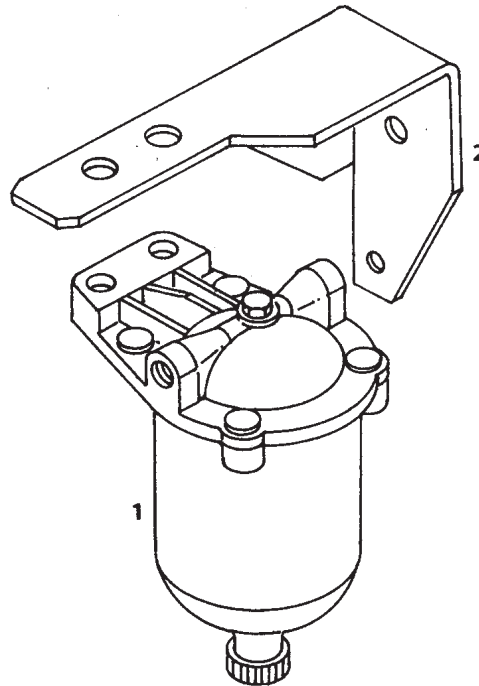


TABLE 07.4
WATER SEPARATOR
GROUP 07

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
1	F 002 H20 134	WATER SEPARATOR Assy. Water Separator with Hand Primer			1		1	1	1		1		1	Tata Part No. 2525 0912 02 06
—	F 002 H20 387	Water Separator Bowl			1		1	1	1		1		1	
—	F 002 H20 392	Cover with Built-in Hand Primer			1		1	1	1		1		1	
2	2153 4760 01 09	Assy.Bracket (for Water Separator)			1		1	1	1		1		1	

TABLE 09.1

FUEL FILTER

GROUP 09

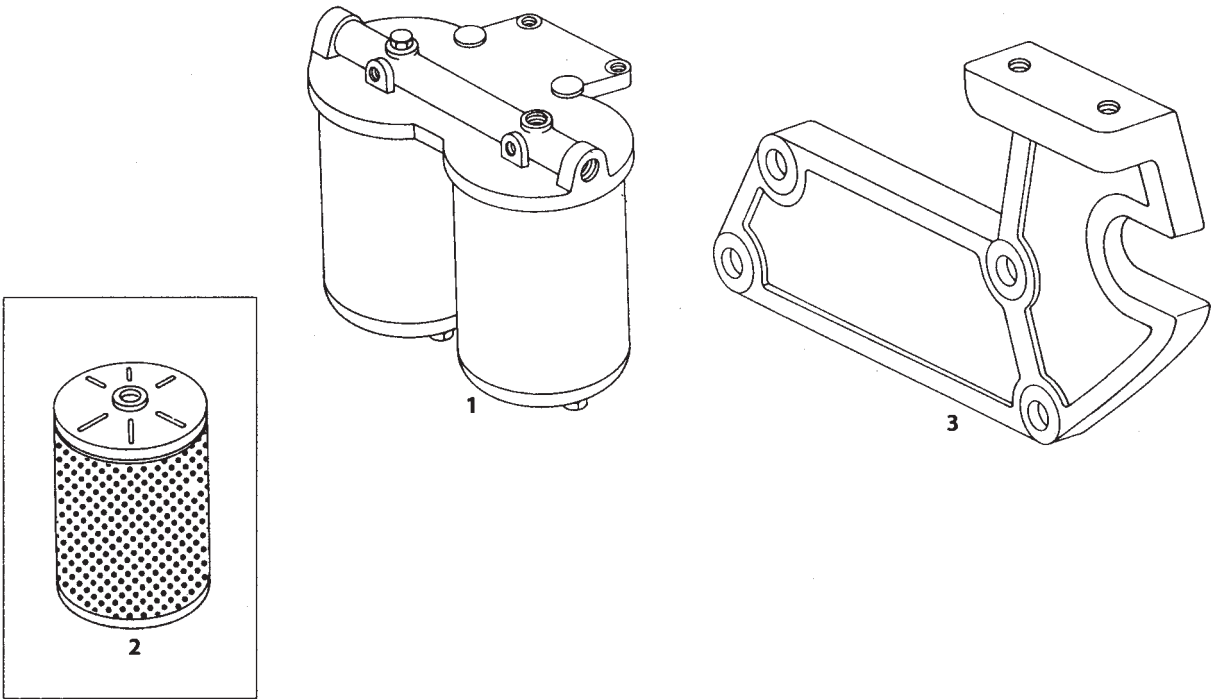


TABLE 09.1

FUEL FILTER

GROUP 09

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		FUEL FILTER												
1	F 002 H20 136	Assy. Fuel Filter (Spin on)			1		1	1	1		1		1	Tata Part No. 2525 0912 02 05
1	9 450 030 118	Assy. Fuel Filter		1		1				1		1		Tata Part No. 2547 0911 01 06
2	F 002 H20 306	Fine Filter Assy.			2		2	2	2		2		2	
2	9 451 037 407	Fine Filter Assy.(Coil Type)		1		1				1		1		For Selection
2	9 451 037 405	Fine Filter Assy.(Star Type)		1		1				1		1		For Selection
3	2527 0911 37 04	Bracket Fuel Filter Mtg.	1											

TABLE 09.2

AIR FILTER AND MOUNTING

GROUP 09

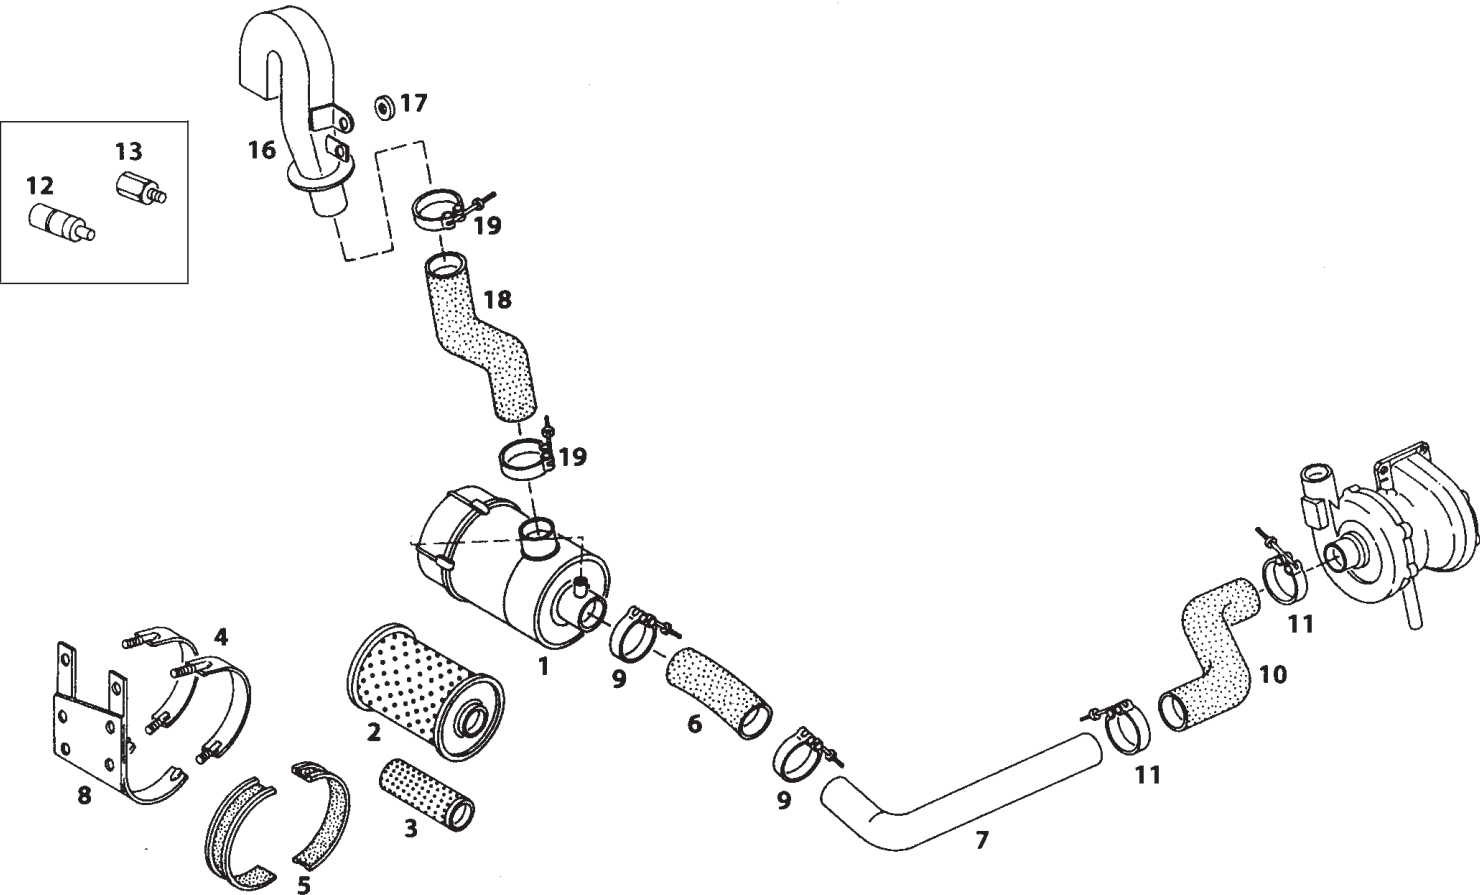


TABLE 09.2
AIR FILTER AND MOUNTING
GROUP 09

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		AIR FILTER AND MOUNTING												
1	2527 0913 02 91	Assy Air Filter			1		1	1	1		1		1	
1	2527 0913 02 46	Assy Air Filter		1		1				1		1		Optional
1	2527 0913 02 36	Assy Air Filter		1		1				1		1		Optional
2	2527 0913 03 04	Assy Filter Element			1		1	1	1		1		1	
2	2527 0913 02 48	Air Filter Element		1		1				1		1		For 2527 0913 02 46
2	2527 0913 02 56	Air Filter Element		1		1				1		1		For 2527 0913 02 36
3	2527 0913 03 03	Assy Safety Cartridge			1		1	1	1		1		1	
3	2527 0913 02 49	Safety Cartridge		1		1				1		1		For 2527 0913 02 46
3	2527 0913 02 55	Safety Cartridge		1		1				1		1		For 2527 0913 02 36
4	2527 0913 02 40	Assy. Strap	2											
5	2534 0913 99 02	Rubber Strap	2											
6	2527 0913 58 58	Hose (Air Filter to TC)	1											
7	2527 0913 02 72	Assy. Pipe (Air Filter to TC)	1											
8	2527 0913 33 21	Bracket (Air Filter Mtg.)	1											
—	2527 0913 33 20	Support	1											
9	1428 059929 9	Hose Clamp TB 80	2											
—	2527 0913 02 81	Assy. Clamp (for Intake Pipe)	1											
10	2527 0913 58 59	Hose Intake-(Pipe to TC-KKK)	1											For KKK Turbocharger
10	2534 0913 58 35	Hose Intake-(Pipe to TC-THL)	1											For THL Turbocharger

TABLE 09.2

AIR FILTER AND MOUNTING

GROUP 09

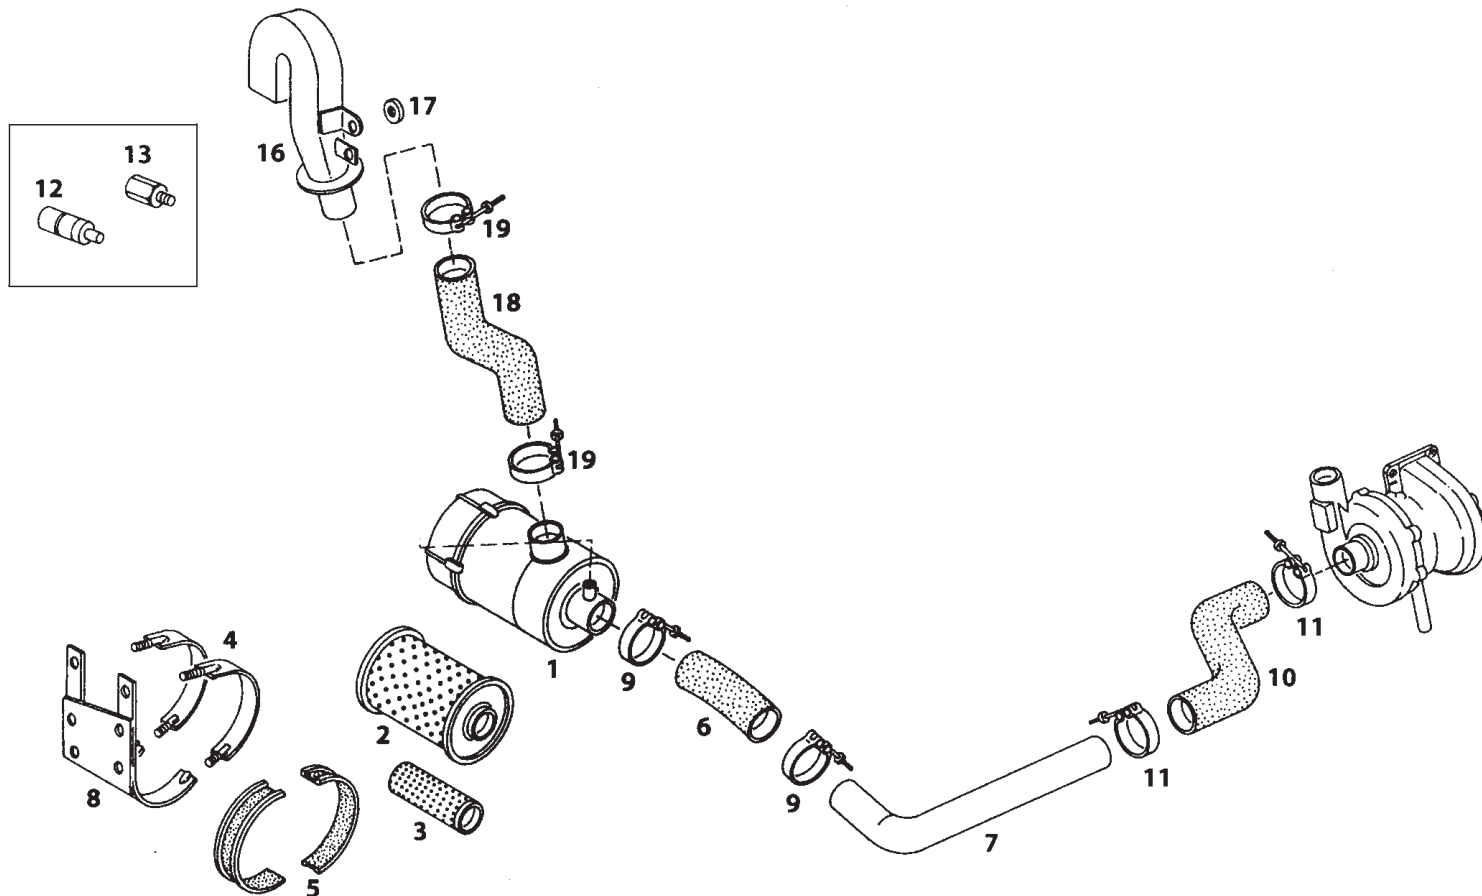


TABLE 09.2
AIR FILTER AND MOUNTING
GROUP 09

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
11	1428 059830 6	Hose Clamp TB 42	2											For KKK Turbocharger For THL Turbocharger
11	1428 059836 5	Hose Clamp TB 58	2											
—	2527 0913 02 03	Assy. Adaptor	1											
12	2547 0913 99 18	Assy. Service Indicator	1											
13	2786 0913 99 21	Adaptor for Service Indicator	1											
16	2527 0913 02 93	Air Inlet Duct			1		1	1	1		1		1	
16	2527 0913 02 73	Air Inlet Duct		1		1				1		1		
17	2527 0913 63 01	Rubber Buffer	4											
18	2527 0913 02 92	Hose (Air Inlet Duct to Air Filter)			1		1	1	1		1		1	
18	2527 0913 58 57	Hose (Air Inlet Duct to Air Filter)		1		1				1		1		
—	2527 0913 02 94	Assy Bracket (Top) for Air Inlet Duct			1		1	1	1		1		1	
—	2527 0913 02 95	Assy Bracket (Bottom) for Air Inlet Duct			1		1	1	1		1		1	
—	1428 059843 8	Hose Clamp TB 94			1		1	1	1		1		1	
—	1428 059844 6	Hose Clamp TB 106			1		1	1	1		1		1	
19	1428 059929 9	Hose Clamp TB 80		2		2				2		2		

TABLE 13.1

AIR COMPRESSOR

GROUP 13

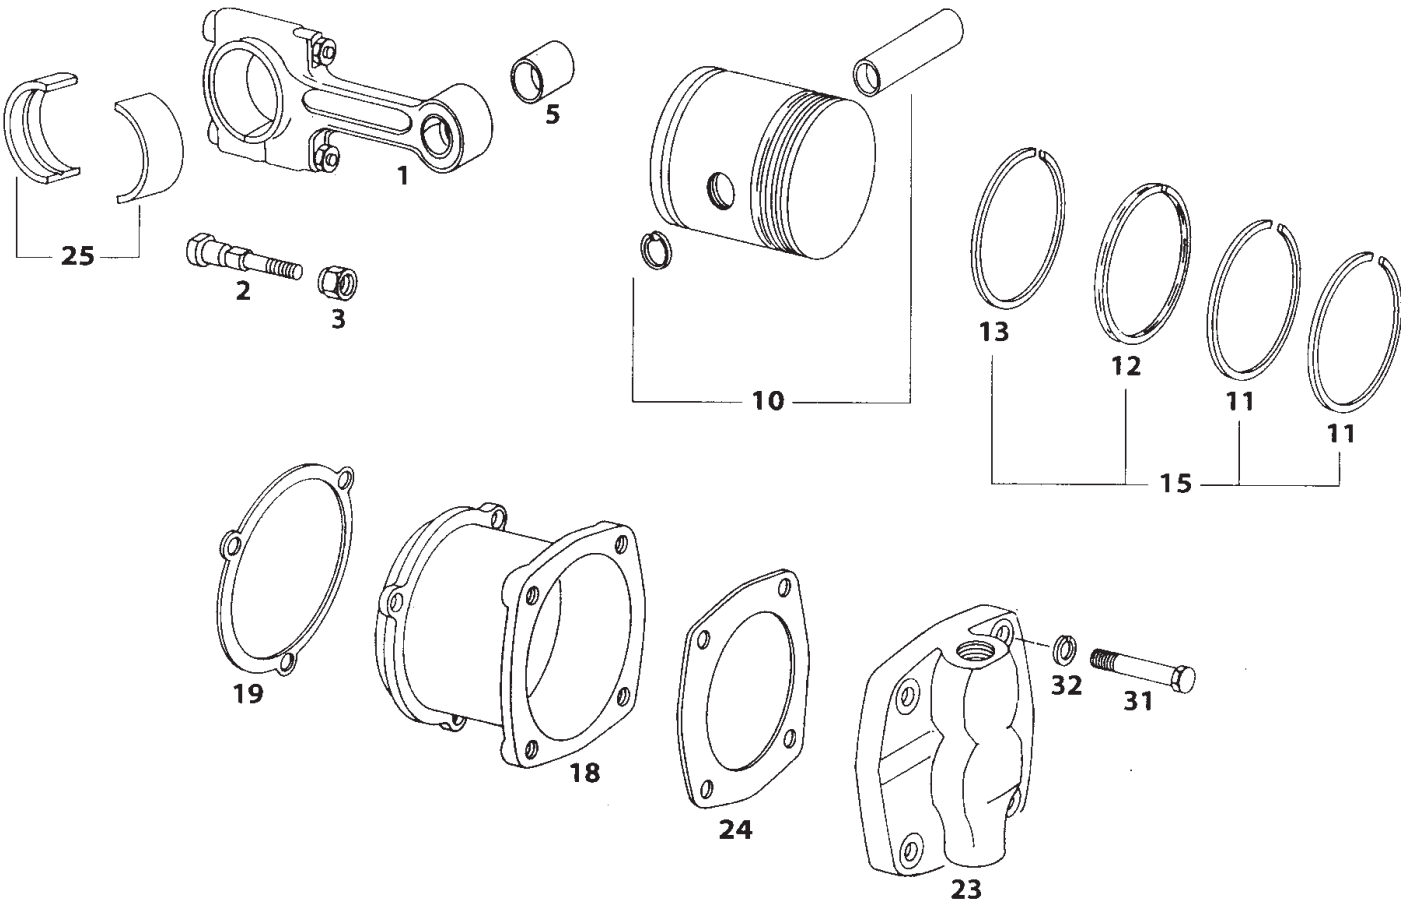


TABLE 13.1
AIR COMPRESSOR
GROUP 13

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		AIR COMPRESSOR												
1	321 130 04 16	Assy. Connecting Rod	1											
2	321 131 01 71	Guide Screw	2											
3	312 990 02 51	Hex Nut	2											
5	8854 1310 25 34	Bush (Connecting Rod)	1											
18	352 131 16 02	Cylinder Sleeve STD	1											
19	2527 1310 53 12	Gasket, Cylinder Sleeve to Cyl. Block	1											
23	2527 1310 01 09	Assy. Cylinder Head Air Compressor (SCL)	1											
24	2523 1310 53 02	Gasket (Cyl Head to Cyl Sleeve)	1											
31	1132 419605 8	Screw M 8x30	4											
32	1252 069802 5	Spring Washer B 8	4											
10	2525 1314 01 21	Piston w/o Rings STD consisting of :	1											
—		Bare Piston	1											
—		Piston Pin	1											
—		Circlip	2											
15	2525 1314 01 01	Piston Ring Set (STD) Consisting of :	1											
11		Minute Ring (Gr. I & II)	2											
12		‘N’ Ring (Gr. III)	1											
13		‘D’ Ring (Gr. IV)	1											

TABLE 13.1

AIR COMPRESSOR

GROUP 13

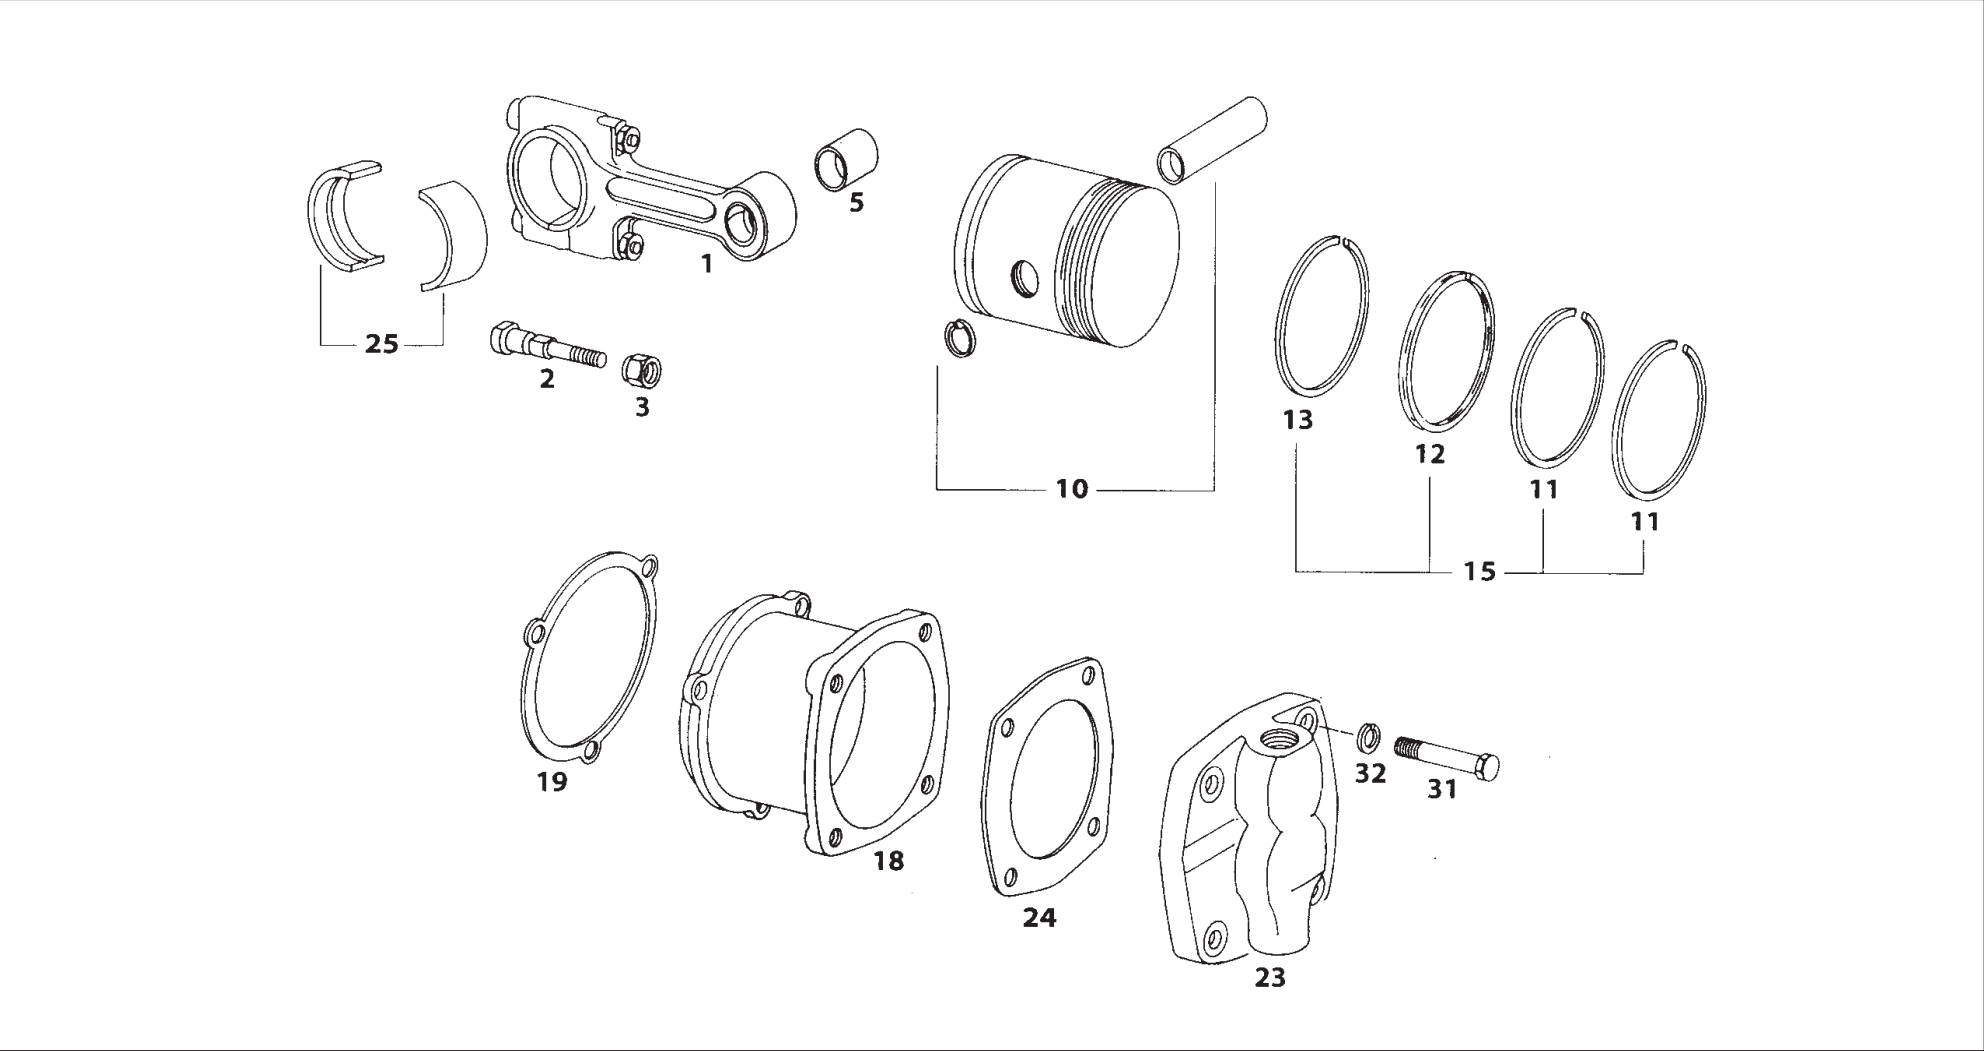


TABLE 13.1

AIR COMPRESSOR

GROUP 13

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
25	8854 1306 25 34	Set, A/C Con Rod Bearing Consisting of :	1											
—		Bearing Half, Upper	1											
—		Bearing Half, Lower	1											

TABLE 13.2

AIR COMPRESSOR INLET PIPING

GROUP 13

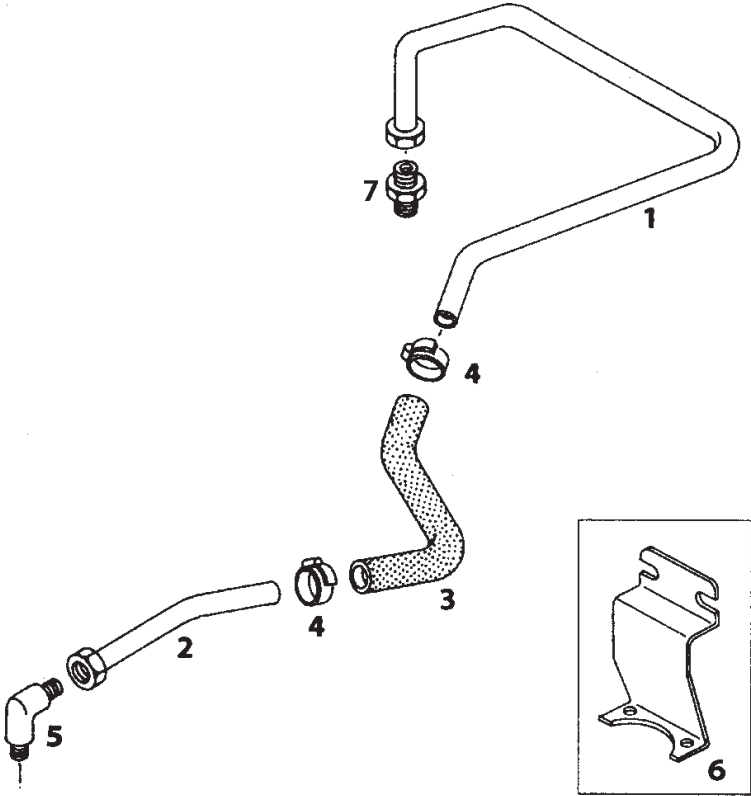


TABLE 13.2
AIR COMPRESSOR INLET PIPING
GROUP 13

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		AIR COMPRESSOR INLET PIPING												
1	2527 1313 01 05	Assy. Pipe	1											For Pune Prodn.Vehicle
2	2527 1313 01 06	Assy. Pipe	1											For Pune Prodn.Vehicle
3	312 997 61 82	Rubber Hose	1											For Pune Prodn.Vehicle
4	2547 1513 42 02	Hose Clamp (23 dia)	2											For Pune Prodn.Vehicle
5	1650 080220 4	Elbow K15 M 22x1.5	1											
6	2527 1313 42 02	Bracket	1											For Pune Prodn.Vehicle
—	2153 4290 01 11	Assy Tube	1											For Jsr Prodn.Vehicle
—	1642 080150 9	Coupling Body L 15	1											

TABLE 14.1

EXHAUST MANIFOLD

GROUP 14

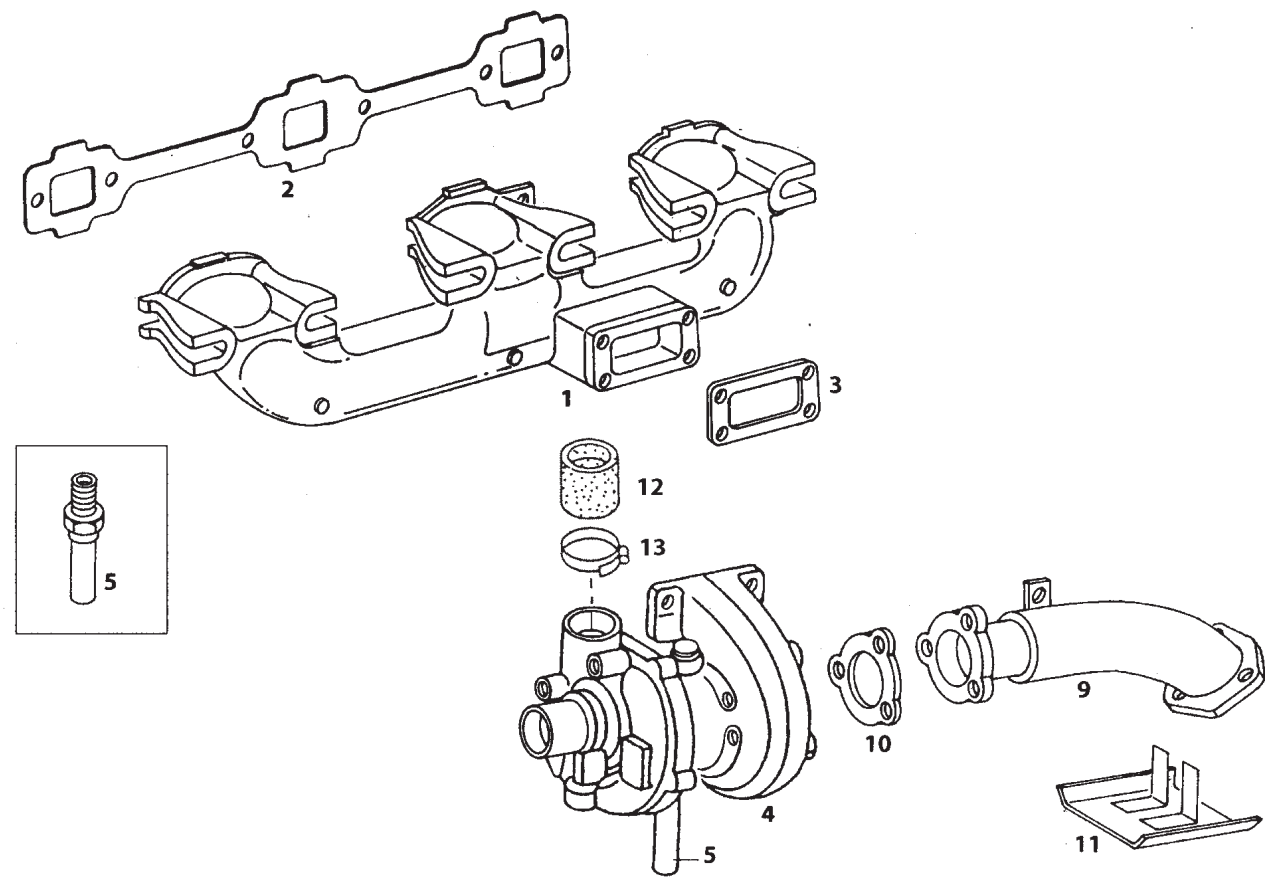


TABLE 14.1
EXHAUST MANIFOLD
GROUP 14

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		EXHAUST MANIFOLD												
1	2527 1411 37 13	Exhaust Manifold	1											
2	2524 1411 53 04	Gasket Exhaust Manifold	1											
3	2527 1411 53 06	Gasket (TC to Exhaust Manifold)	1											
4	2527 1451 01 07	Assy. Turbocharger K16		1	1	1	1			1	1	1	1	
4	2527 1451 01 11	Assy. Turbocharger K16						1	1					TEL Make
4	2527 1451 01 24	Assy. Turbocharger						1	1					THL Make
4	2527 1451 01 27	Assy. Turbocharger						1	1					Honeywell Make
5	2527 1817 72 01	Adaptor (TC to Oil Sump)	1											
9	2527 1411 01 04	Assy. Intermediate Pipe (TC to Exhaust Pipe)- For M/S TEL/H Well Make TC	1											Optional
9	2527 1411 37 17	Assy. Intermediate Pipe (TC to Exhaust Pipe)- For M/S TEL/H Well Make TC	1											Optional
—	2527 1411 01 19	Assy Bracket (Support For Int. Pipe)	1											
9	2527 1411 01 27	Assy. Intermediate Pipe (TC to Exhaust Pipe)-For M/s THL Make TC						1	1					Optional
9	2527 1411 01 26	Assy. Intermediate Pipe (TC to Exhaust Pipe)-For M/s THL Make TC						1	1					Optional
10	2527 1411 53 03	Gasket (Int. Pipe to TC)	1											For TEL/H Well Make Turbocharger
10	2527 1411 53 13	Gasket (Int. Pipe to TC)						1	1					For THL Make Turbocharger
11	2527 1413 01 09	Assy. Heat Shield	1											For TEL/H Well Make Turbocharger
11	2527 1413 01 10	Assy. Heat Shield						1	1					For THL Make Turbocharger

TABLE 14.1

EXHAUST MANIFOLD

GROUP 14

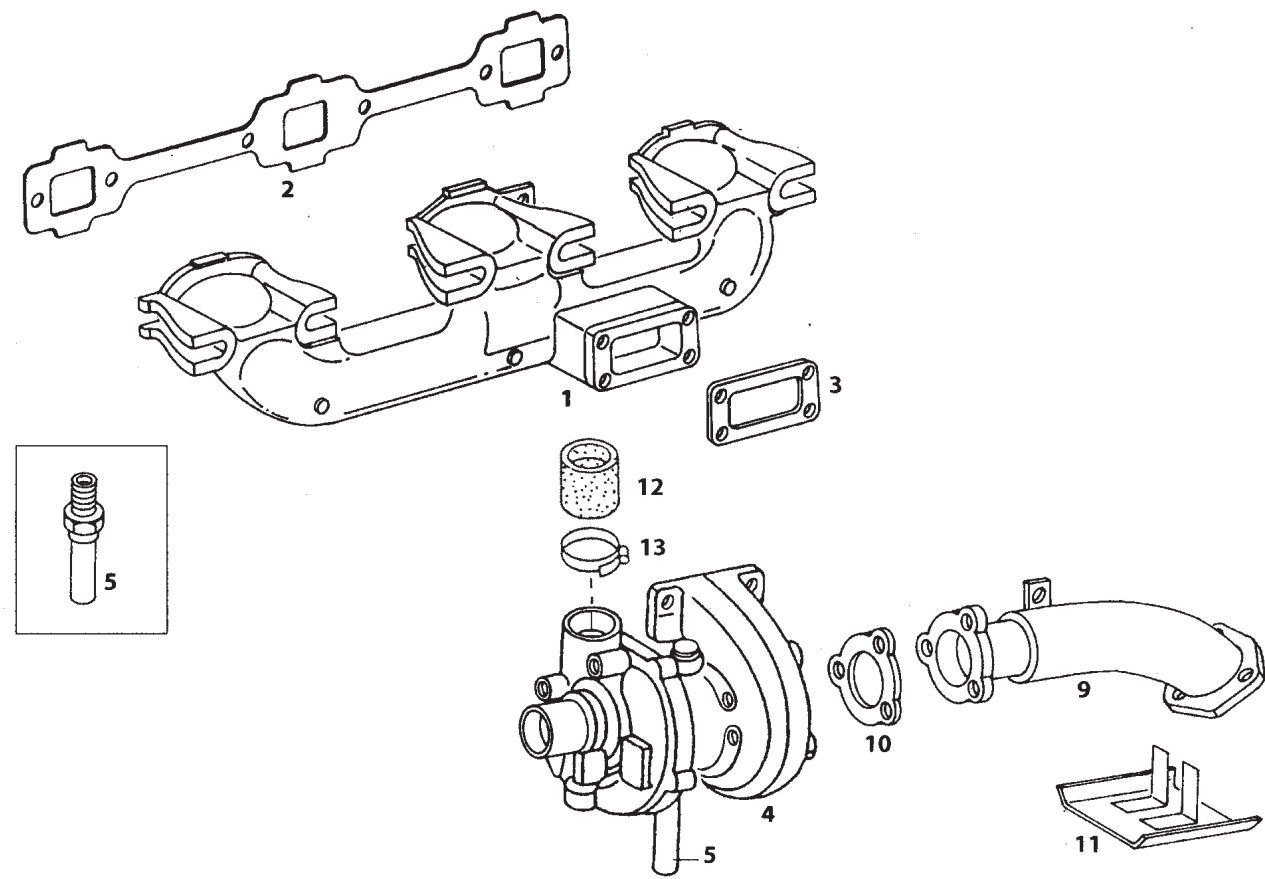


TABLE 14.1
EXHAUST MANIFOLD
GROUP 14

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
12	2534 0913 58 27	Hose (72 lg)		1	1	1	1			1	1	1	1	
13	1428 050070 5	Hose Clamp 70		2	2	2	2			2	2	2	2	
—	2534 1499 01 02	Repair Kit for Turbocharger HX-25 (Holset)	1											
		Consisting of :												
		Journal Bearing	2											
		Thrust Bearing	1											
		Split Seal Ring	1											
		Split Seal Ring (Compressor)	1											
		'O' Ring (Bearing Housing)	1											
		'O' Ring (Compressor)	1											
		Lock Nut (Compressor Wheel)	1											
		Retaining Ring	2											

TABLE 14.2

INTERCOOLER AND AIR SUCTION PIPES

GROUP 14

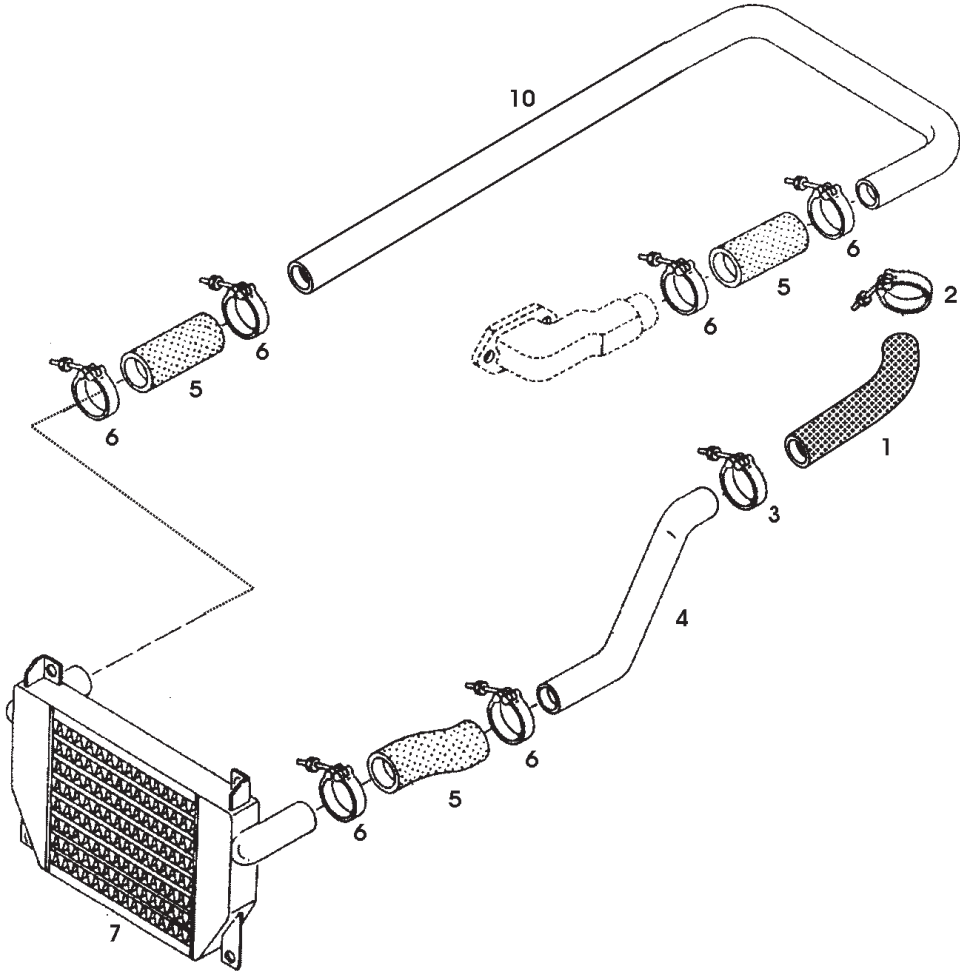


TABLE 14.2
INTERCOOLER AND AIR SUCTION PIPES
GROUP 14

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		INTERCOOLER AND AIR SUCTION PIPES												
1	2527 1460 58 13	Reducer Hose (TC Outlet To IC Pipe Intake)						1	1					
2	1428 059824 1	Hose Clamp TB-46 (Hose To Turbocharger)						1	1					
3	1428 059831 4	Hose Clamp TB 64 (Hose To Pipe)						1	1					
4	2527 1460 01 41	Assy Pipe (TC to IC)						1	1					
5	2527 1460 58 08	Hump Hose						3	3					
6	1428 059836 5	Hose Clamp TB 58						6	6					
7	2527 1460 01 40	Assy. Intercooler						1	1					
10	2527 1460 01 43	Assy Pipe (IC to Air Intake Elbow)						1	1					
—	2527 1460 01 14	Assy Support (For Pipe IC To Air Intake)						1	1					
—	2527 1460 33 02	Support (For Fill Pipe & IC Pipe)						1	1					
—	2527 1460 33 05	Support (For Pipe TC To IC)						1	1					

TABLE 15.1

STARTER MOTOR AND ALTERNATOR

GROUP 15

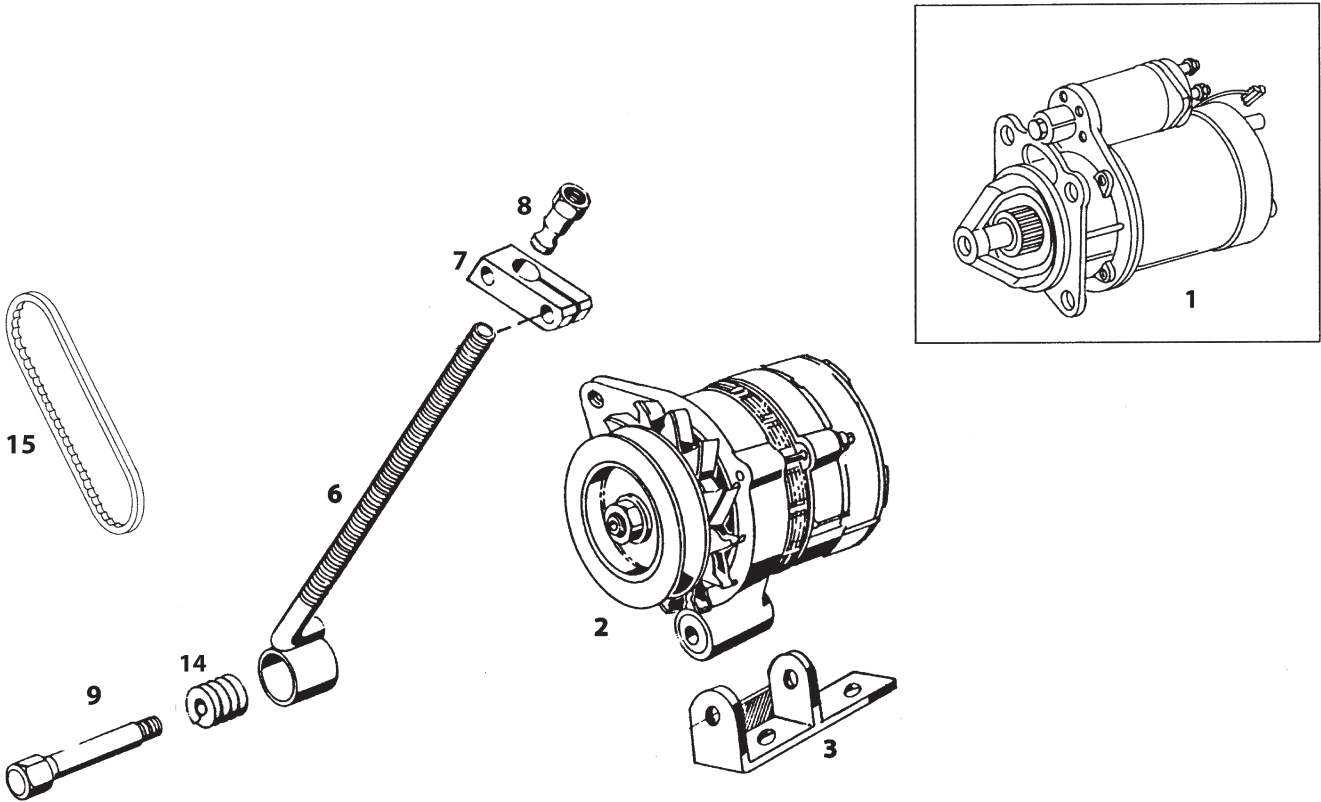


TABLE 15.1
STARTER MOTOR AND ALTERNATOR
GROUP 15

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		STARTER MOTOR AND ALTERNATOR												
1	2651 1510 01 30	Starter Motor -12V	1											
—	2527 1510 86 01	Spacer	1											
—	312 546 10 20	Earth Strap	1											
2	2651 1510 01 22	Alternator 12V,35 Amps						1	1	1	1	1	1	For Mechanical Steering
2	2573 1510 01 08	Alternator 12V,65A(Twin Groove Pulley) Lucas								1			1	For Power Steering
2	2632 1540 01 02	Alternator 12V,35 Amps (Twin Groove Pulley) MICO							1					For Power Steering
2	2632 1510 01 03	Alternator 12V, 65 Amps-(Single Groove Pulley)		1	1	1	1							For Mechanical Steering
2	2640 1540 01 06	Alternator-14V 65 Amps (Single Groove Pulley) MICO		1	1	1	1							For Mechanical Steering
2	2640 1540 01 07	Alternator 14V,65 AMPS,(Twin Groove Pulley) MICO								1			1	For Power Steering
3	2524 1514 01 09	Assy Bracket Alternator Mounting						1	1	1	1	1	1	
3	2527 1514 01 17	Assy Bracket Alternator Mounting		1	1	1	1			1*			1*	*For Power Steering
6	2527 1514 01 19	Assy Clamp Rod Complete						1	1	1	1	1	1	
6	2527 1514 01 21	Assy Clamp Rod Complete		1	1	1	1			1*			1	*For Power Steering
7	2540 1540 42 01	Clamping Piece						1	1	1	1	1	1	
7	2533 1514 42 04	Clamping Piece		1	1	1	1			1*			1*	*For Power Steering
8	2524 1514 65 01	Clamping Nut	1											
—	2524 1514 32 01	Hex Bolt (For Alternator Mtg)	1											
9	312 155 01 74	Bolt [For Fixing Alternator]	1											
—	312 994 13 01	Locking Plate	1											

TABLE 15.1

STARTER MOTOR AND ALTERNATOR

GROUP 15

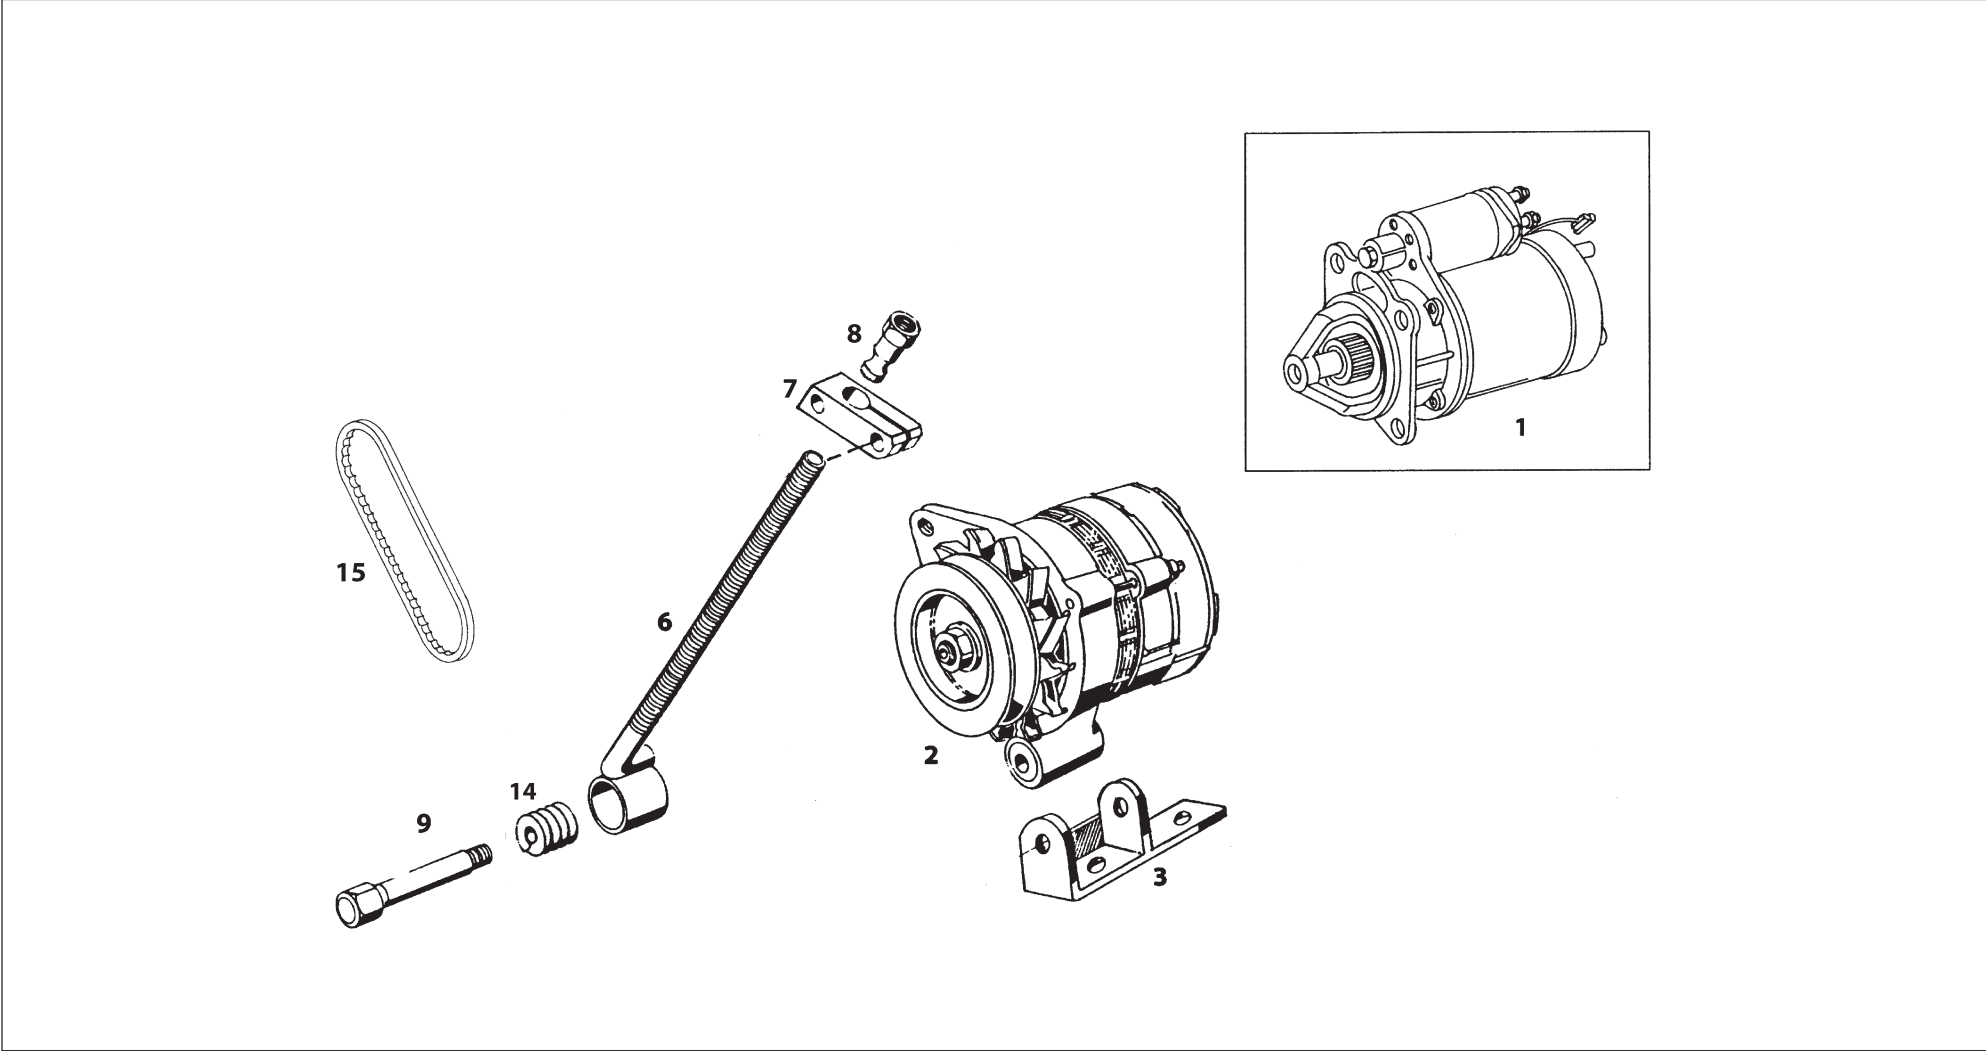


TABLE 15.1

STARTER MOTOR AND ALTERNATOR

GROUP 15

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
14	312 993 28 01	Spring Alternator	1											For Mechanical Steering *For Power Steering
15	2525 2015 63 06	V Belt Cogged 1325 Long								1	1	1	1	
15	2525 2015 63 05	Cogged V Belt 1280 Long		1	1	1	1	1	1*	1*			1*	

TABLE 18.1

ENGINE LUBRICATION

GROUP 18

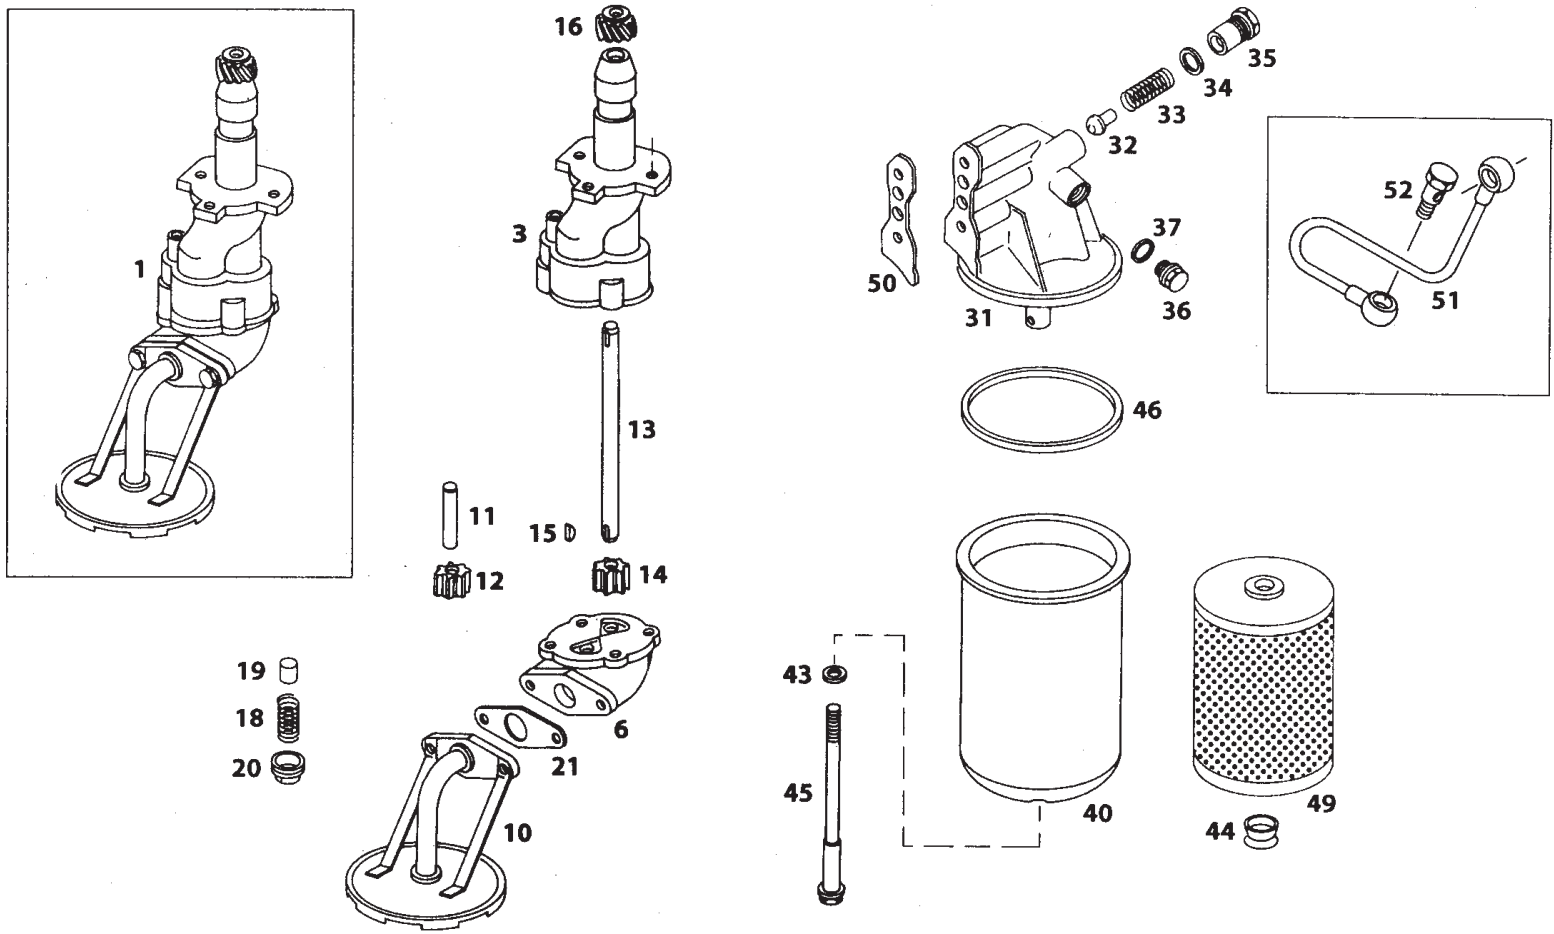


TABLE 18.1
ENGINE LUBRICATION
GROUP 18

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		ENGINE LUBRICATION												
		OIL PUMP												
1	2527 1810 01 10	Assy. Oil Pump Complete	1											Not Serviced
3	352 181 04 01	Oil Pump Housing	1											
6		Assy. Oil Pump Cover	1											
10	2523 1815 01 06	Assy. Strainer Oil Pump	1											
11	2523 1810 79 01	Shaft (Driven Gear)	1											
12	2523 1810 54 09	Gear (Driven)	1											
13	2527 1810 79 01	Drive Shaft (Oil Pump)	1											
14	2523 1810 54 10	Gear (Driveshaft)	1											
15	1365 050505 5	Woodruff Key 3x6.5	2											
16	312 181 03 08	Drive Gear (Oil Pump)	1											
—	352 184 03 29	Valve Housing Oil Pressure Relief Valve	1											
18	326 993 04 01	Spring (Pressure Relief Valve)	1											
19	321 181 00 42	Plunger (Pressure Relief Valve)	1											
20	2527 1810 72 01	Plug (Relief Valve Plunger)	1											
21	312 186 00 80	Gasket Strainer Housing	1											
—	8854 1801 25 23	Kit, Oil Pump Gear Consisting of :	1											
12		Gear (Driven)	1											
14		Gear (Drive Shaft)	1											

TABLE 18.1

ENGINE LUBRICATION

GROUP 18

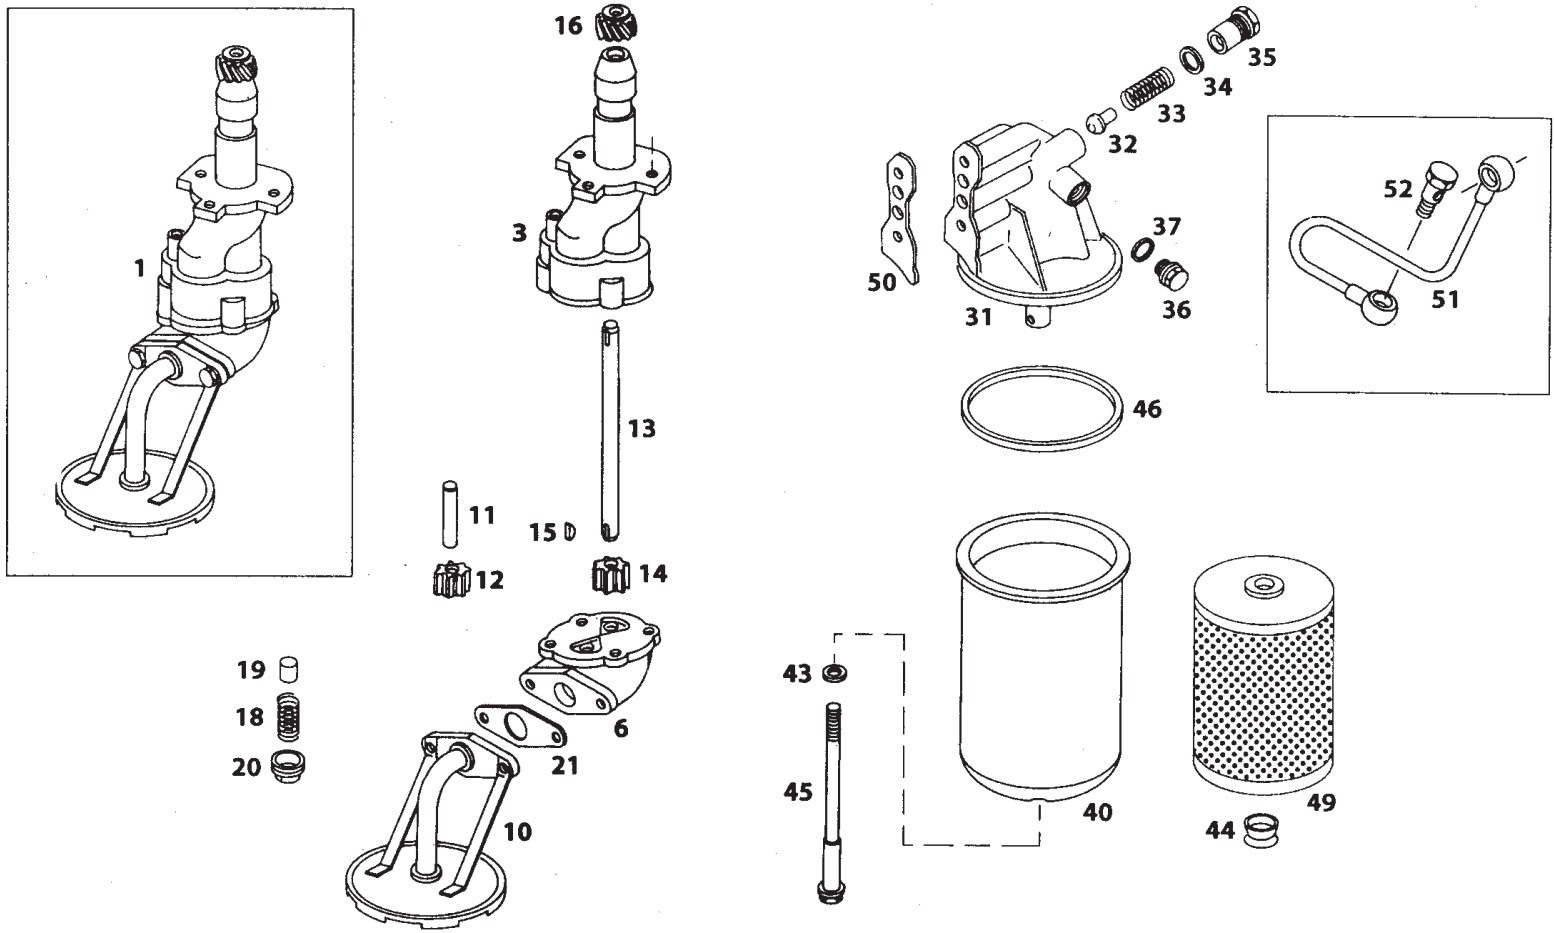


TABLE 18.1
ENGINE LUBRICATION
GROUP 18

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		OIL FILTER												
—	2527 1813 01 27	Assy. Oil Filter Complete (Spin-On)			1		1	1	1		1		1	Not Serviced
—	2534 1813 01 35	Assy. Oil Filter Complete		1		1				1		1		
31		Assy Oil Filter Head (Spin-On)			1		1	1	1		1		1	
31	2534 1813 01 18	Assy. Oil Filter Head		1		1				1		1		
32	352 184 00 32	Plunger		1		1				1		1		
33	2520 1813 87 01	Spring Pressure Relief Valve		1		1				1		1		
34	1622 071038 0	Sealing Washer 24x29 Cu		1		1				1		1		
35	2534 1813 72 01	Screw Plug		1		1				1		1		
36	314 990 03 63	Sealing Plug	1											
37	1622 051043 7	Sealing Washer 26x32 AL	1											
—	314 184 01 17	Socket		1		1				1		1		
40	2534 1813 01 17	Assy. Oil Filter Bowl Complete		1		1				1		1		
43	2520 1813 77 01	Sealing Ring		1		1				1		1		
44	314 180 02 60	Assy. Sealing Ring (For Oil Filter Element)		2		2				2		2		
45	352 184 01 71	Centre Pin		1		1				1		1		
46	2534 1813 77 04	Seal		1		1				1		1		
49	2527 1813 01 32	Lube Oil Filter(Spin-On)			1		1	1	1		1		1	
49	2527 1813 01 05	Assy. Filter Cartridge		1		1				1		1		
50	2534 1813 53 01	Gasket (Oil Filter To Cyl Block)			1		1	1	1		1		1	

TABLE 18.1

ENGINE LUBRICATION

GROUP 18

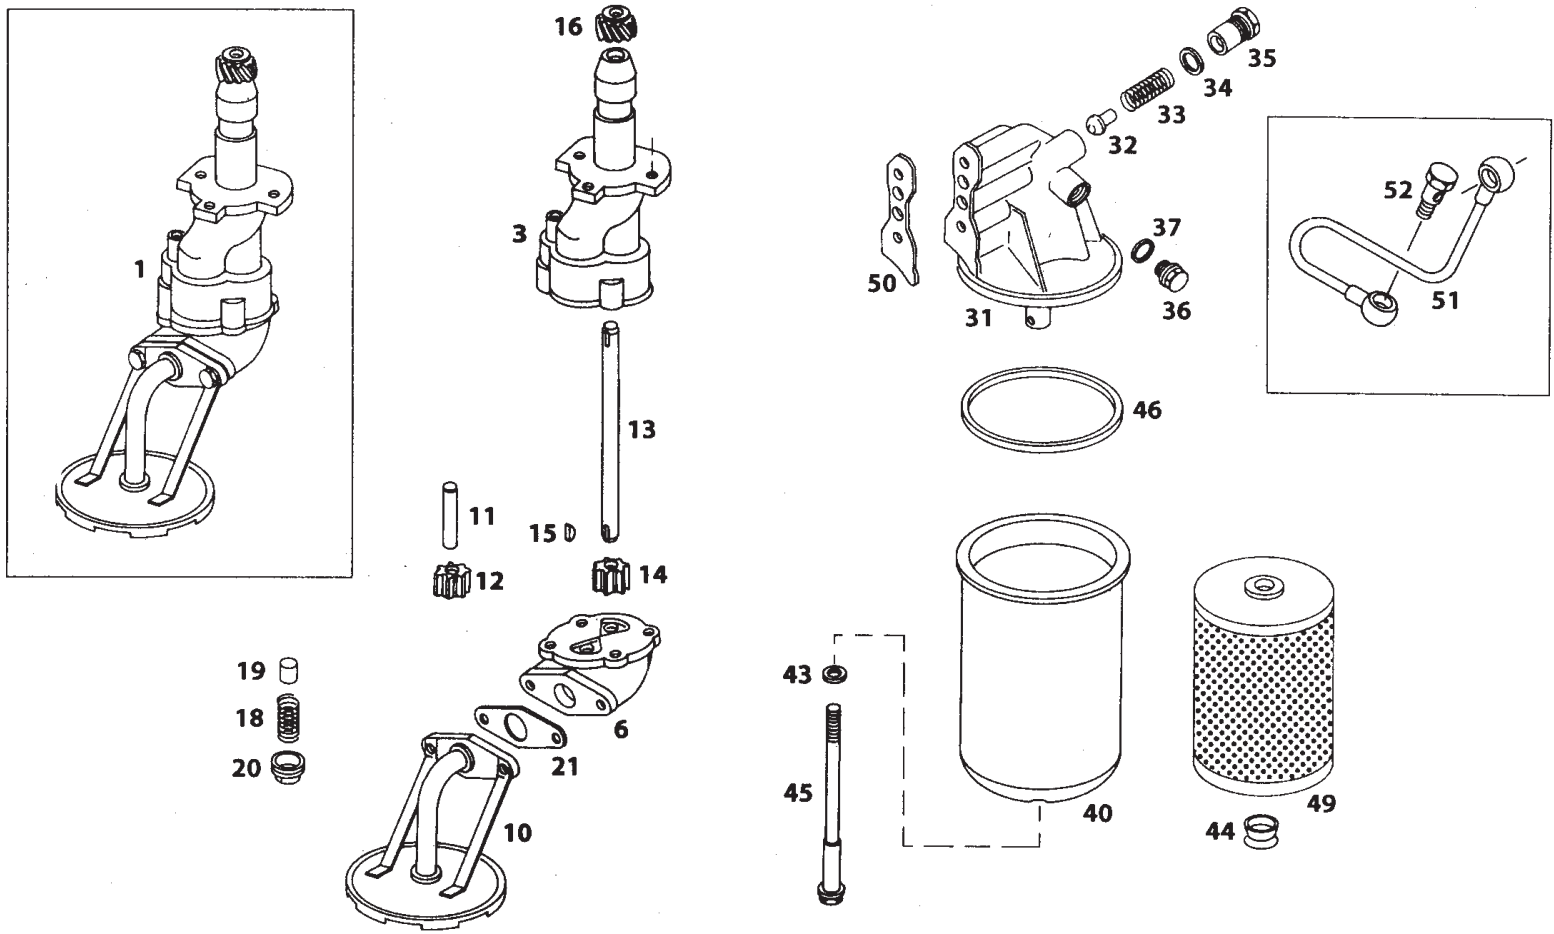


TABLE 18.1
ENGINE LUBRICATION
GROUP 18

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
50	314 184 01 79	Gasket (Assy. Oil Filter to Cyl. Crankcase)		1		1				1		1		
51	2534 1813 01 20	Assy. Oil Line (Oil Filter to FIP)		1		1				1		1		
52	352 990 01 63	Hollow Screw (Assy. Oil Line to Oil Filter)		1		1				1		1		

TABLE 18.2

OIL COOLER

GROUP 18

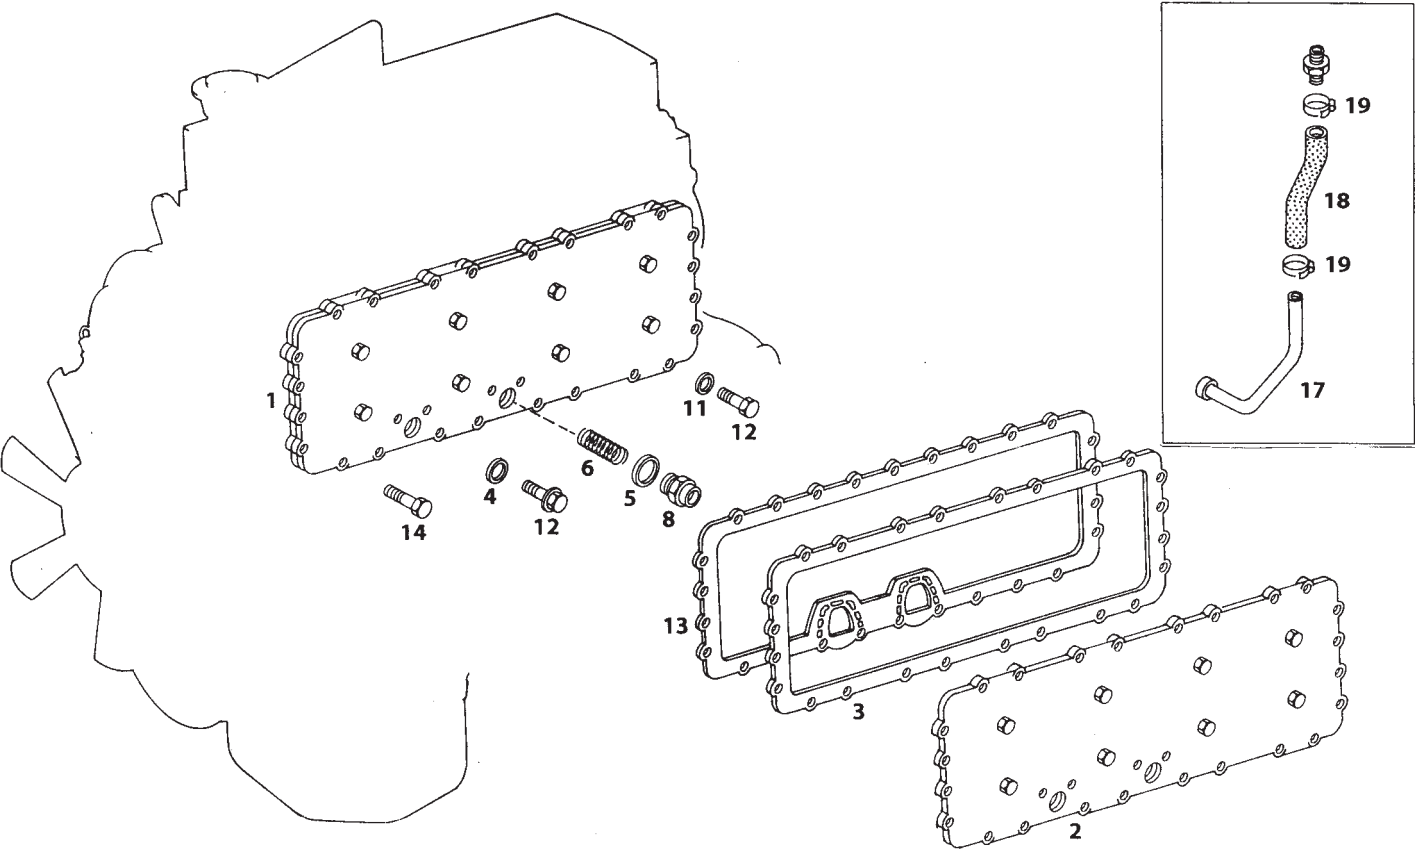


TABLE 18.2
OIL COOLER
GROUP 18

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		OIL COOLER												
1	2527 1817 01 04	Assy. Oil Cooler	1											
2	2521 1817 37 03	Oil Cooler Cover	1											
3	2521 1817 53 01	Gasket	1											
4	312 188 15 79	Gasket Washer (Oil Cooler Cover)	4											
5	1622 071034 7	Sealing Washer 22X27 IS 3175 Cu	1											
6	312 993 26 01	Pressure Spring (Pressure Relief Valve)	1											
8	2525 1817 72 01	Screw Plug	1											
11	1622 061010 5	Sealing Washer A 8x12	8											
12	1132 419602 3	Hex. Screw M 8x20	8											
13	2521 1817 53 02	Gasket (Cyl. Block)	1											
14	1106 409610 1	Hex. Bolt M 8x38	27											
—	2534 1817 01 28	Assy Flange (TC Outlet To Oil Sump)			1		1	1	1		1		1	For THL/H Well Make Turbocharger
17	2527 1817 01 05	Assy. Oil Line (TC to Oil Cooler)	1											For TEL Make Turbocharger
—	2527 1817 01 16	Assy Oil Line (Oil Cooler to TC)			1		1	1	1		1		1	For THL Turbocharger
18	2527 1817 58 03	Hose (TC Outlet to Oil Sump)	1											For TEL Make Turbocharger
18	2527 1817 58 08	Hose (TC Outlet to Oil Sump)			1		1	1	1		1		1	For THL/H Well Make Turbocharger
19	2547 2012 42 14	Hose Clamp (32 DIA.)	2											
—	2534 1817 53 05	Gasket (TC Outlet)			1		1	1	1		1		1	For THL Turbocharger
—	2527 1817 58 16	Hose (TC Outlet To Cyl Crankcase)			1		1	1	1		1		1	For H Well Make Turbocharger

TABLE 18.2

OIL COOLER

GROUP 18

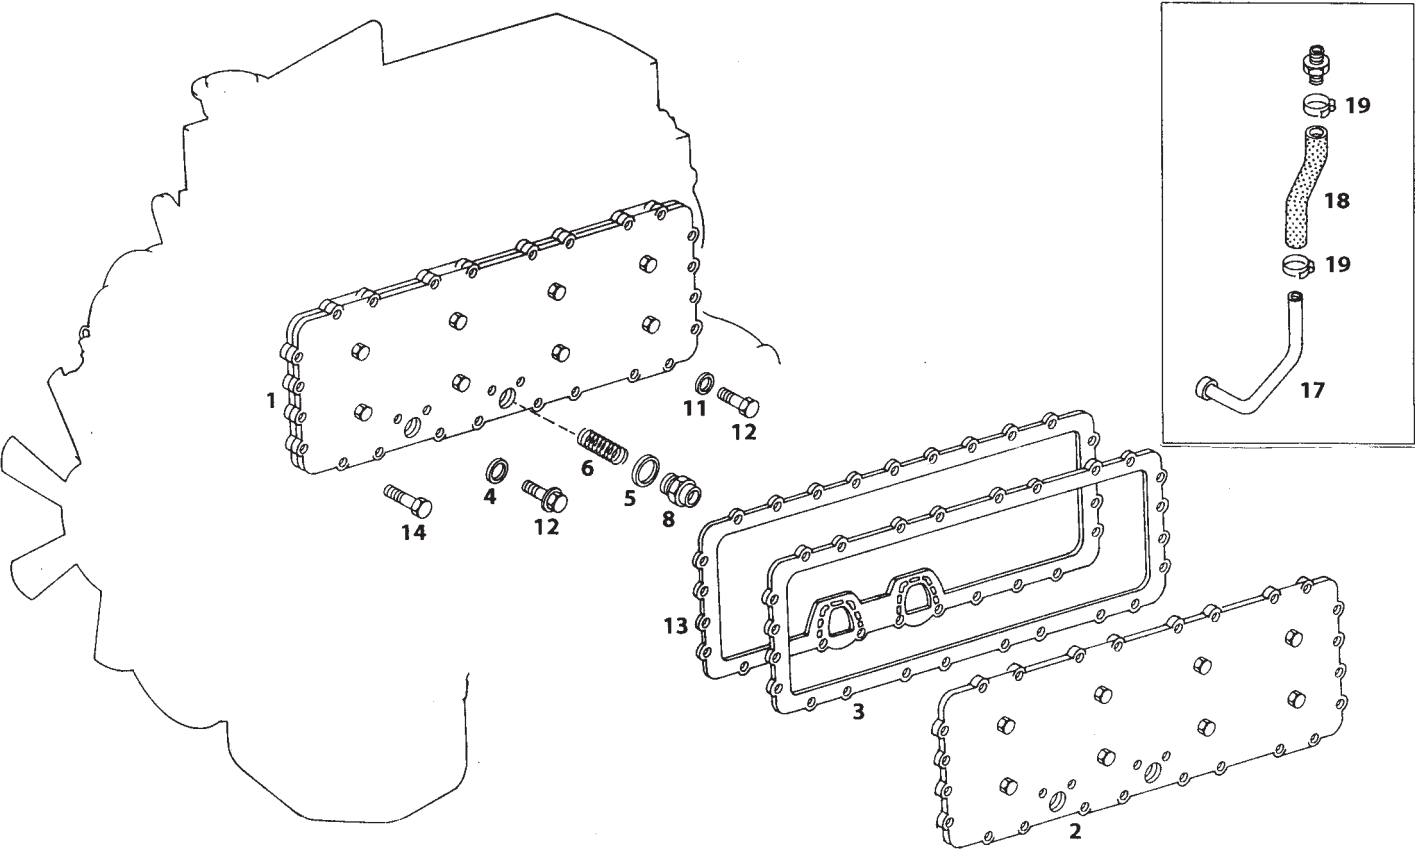


TABLE 18.2
OIL COOLER
GROUP 18

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	2527 1817 58 17	Hose (TC Outlet To Cyl Crankcase)			1		1	1	1		1		1	For TEL Make Turbocharger
—	2527 1817 58 18	Hose (TC Outlet To Cyl Crankcase)			1		1	1	1		1		1	For THL Turbocharger
—	2527 1817 99 03	Pipe Union Bolt (Turbo Oil Supply Line)			1		1	1	1		1		1	For THL Turbocharger
—	2534 1817 99 06	Pipe Union Bolt (M10x125x25)			1		1	1	1		1		1	For THL Turbocharger
—	2654 5450 99 13	Low Oil Pressure Switch			1		1	1	1		1		1	

TABLE 20.1

WATER PUMP

GROUP 20

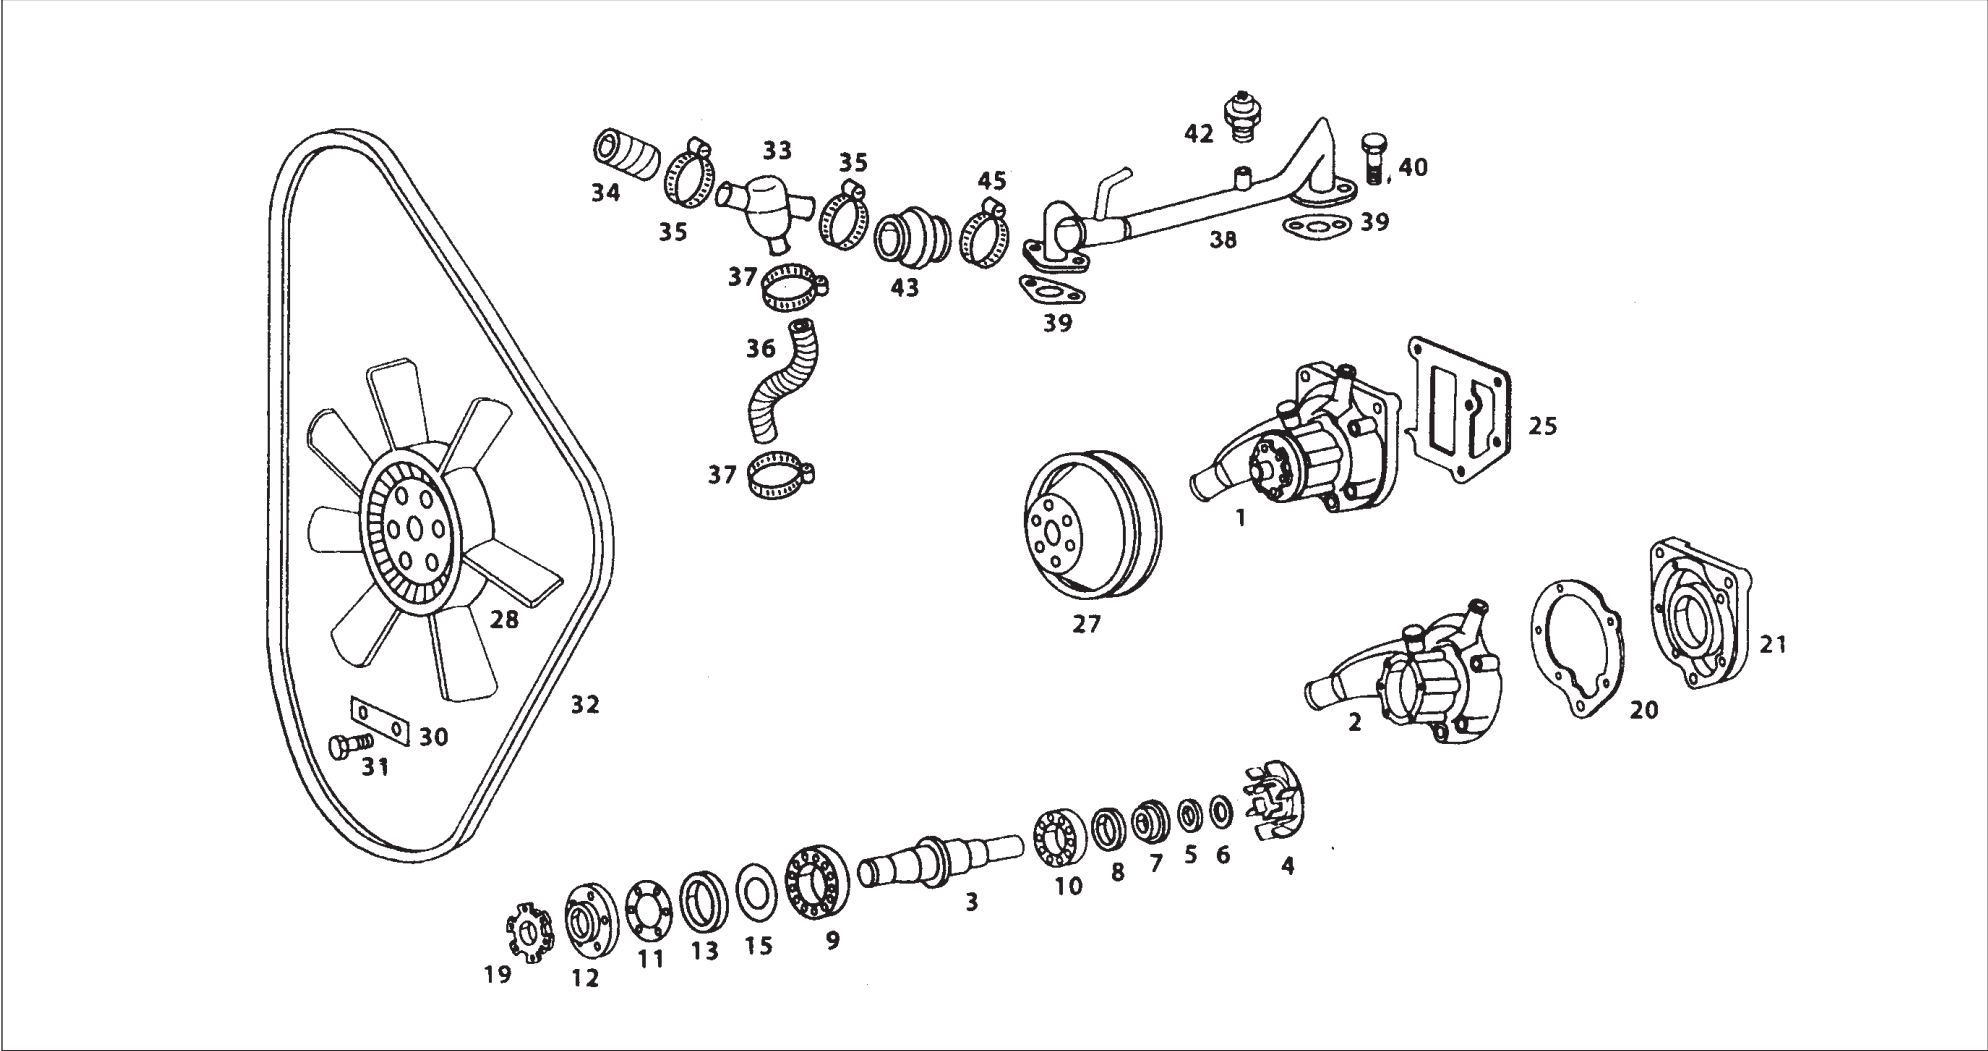


TABLE 20.1
WATER PUMP
GROUP 20

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		WATER PUMP												
1	2525 2010 01 25	Assy. Water Pump						1	1					For Mechanical Steering
1	2525 2010 01 21	Assy. Water Pump		1	1	1	1			1	1	1	1	For Mechanical Steering
1	2525 2010 01 16	Assy. Water Pump-Pstg.								1			1	For Power Steering
1	2525 2010 01 24	Assy Water Pump-Pstg (Plastic Impeller)							1					For Power Steering
2	2525 2010 37 04	Water Pump Housing		1	1	1	1			1	1	1	1	
2		Water Pump Housing						1	1					Not Serviced
12	2525 2010 51 02	Cover	1											
21		Back Cover (Plastic Impeller)						1	1					Not Serviced
21		Back Cover		1	1	1	1			1	1	1	1	Not Serviced
21	2525 2010 37 01	Back Cover Water Pump (P/STG)								1			1	For Power Steering
21		Back Cover (Plastic Impeller (P/Strg)							1					Not Serviced
27	2527 2014 70 13	Pulley (Single Groove)						1	1					For Mechanical Steering
27	2527 2014 70 04	Pulley (Single Groove)		1	1	1	1			1	1	1	1	For Mechanical Steering
27	352 200 02 05	Assy Pulley-Triple Groove (Water Pump)								1			1	For Power Steering
27	2525 2014 70 11	Pulley (Water Pump) -(160 Dia) Triple Groove							1					For Power Steering
28	2523 2014 01 04	Assy Fan	1											
—	2527 2014 38 05	Spacer (For Fan)	1											
30	312 994 03 30	Lock Plate	3											
31		Bolt M 8x25	6											Not Serviced

TABLE 20.1

WATER PUMP

GROUP 20

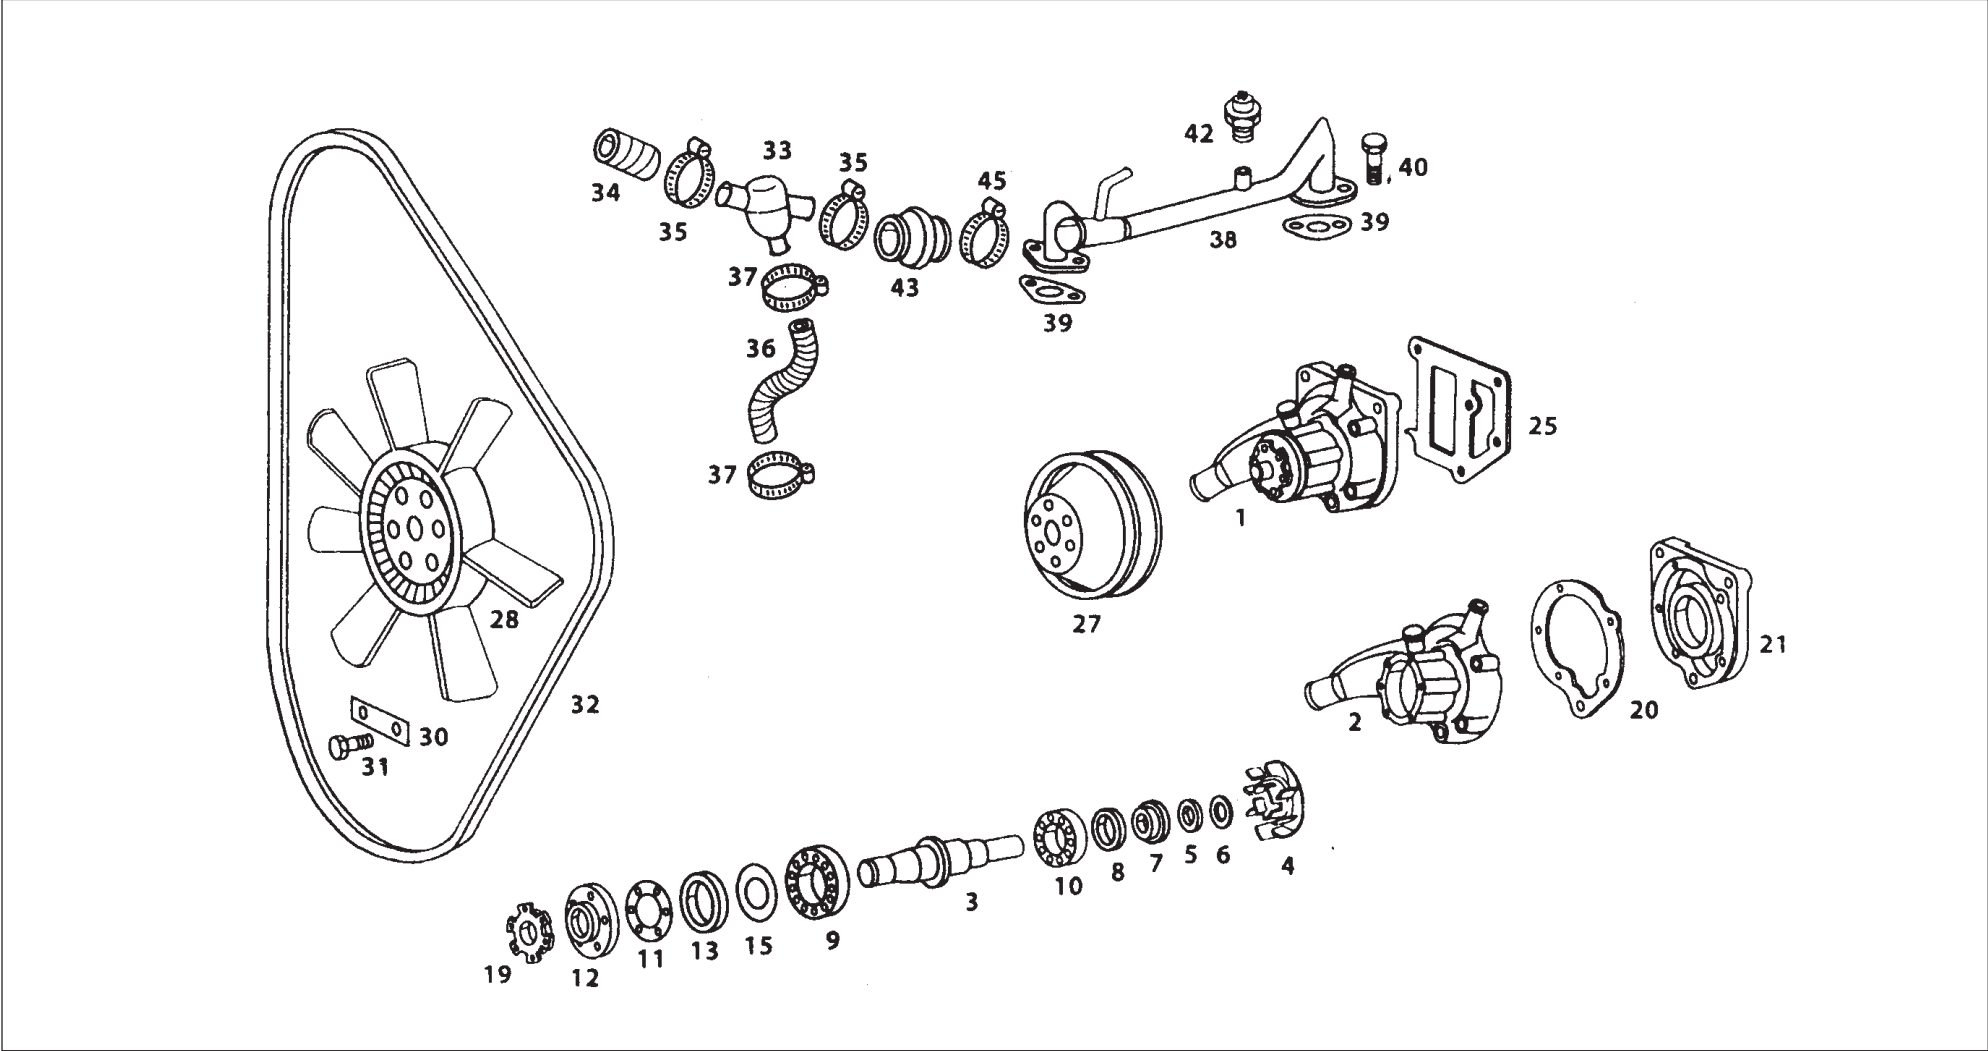


TABLE 20.1
WATER PUMP
GROUP 20

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
32	2525 2015 63 06	V Belt Cogged 1325 Long								1	1	1	1	For Mechanical Steering
32	2525 2015 63 05	Cogged V Belt 1280 Long		1	1	1	1	1	1*	1*			1*	*For Power Steering
33	2527 2012 01 14	Assy. Thermostat 87 Deg.						1	1					Upto April 07
33	2527 2012 01 71	Assy. Thermostat 87 Deg. (For No Loss Tank Fitment)						1	1					From Chassis No. 416 441DSZ 718478 (April 07)
33	2527 2012 01 40	Assy. Thermostat		1	1	1	1			1	1	1	1	
34	2534 5010 58 24	Hose (Thermostat To Radiator)		1	1	1	1			1	1	1	1	For Tata Toyo Radiator
34	2534 5010 58 15	Hose (Thermostat To Radiator)		1	1	1	1			1	1	1	1	For Banco Radiator
34	2527 5010 58 84	Hose (Thermostat To Radiator)						1	1					
35	2527 5010 42 08	Hose Clamp 34 Dia	2											
36	2527 5010 58 83	Rubber Hose (Water Pump to Thermostat)						1	1					
36	2534 2012 58 06	Rubber Hose (Water Pump to Thermostat)		1	1	1	1			1	1	1	1	
37	2547 5010 42 22	Hose Clamp (50 Dia)		2	2	2	2			2	2	2	2	
38	2527 2012 01 67	Assy. Upper Cooling Water Line						1	1					Upto April 07
38	2527 2012 01 69	Assy. Upper Cooling Water Line (For No Loss Tank Fltment)						1	1					From Chassis No. 416 441DSZ 718478 (April 07)
38	2527 2012 01 31	Assy. Upper Cooling Water Line		1		1				1		1		
38	2527 2012 01 34	Assy. Upper Cooling Water Line			1		1				1		1	
39	2527 2012 53 01	Gasket (Upper Cooling Water Line)	2											
40	1134 229603 5	Screw M 8x20	4											

TABLE 20.1

WATER PUMP

GROUP 20

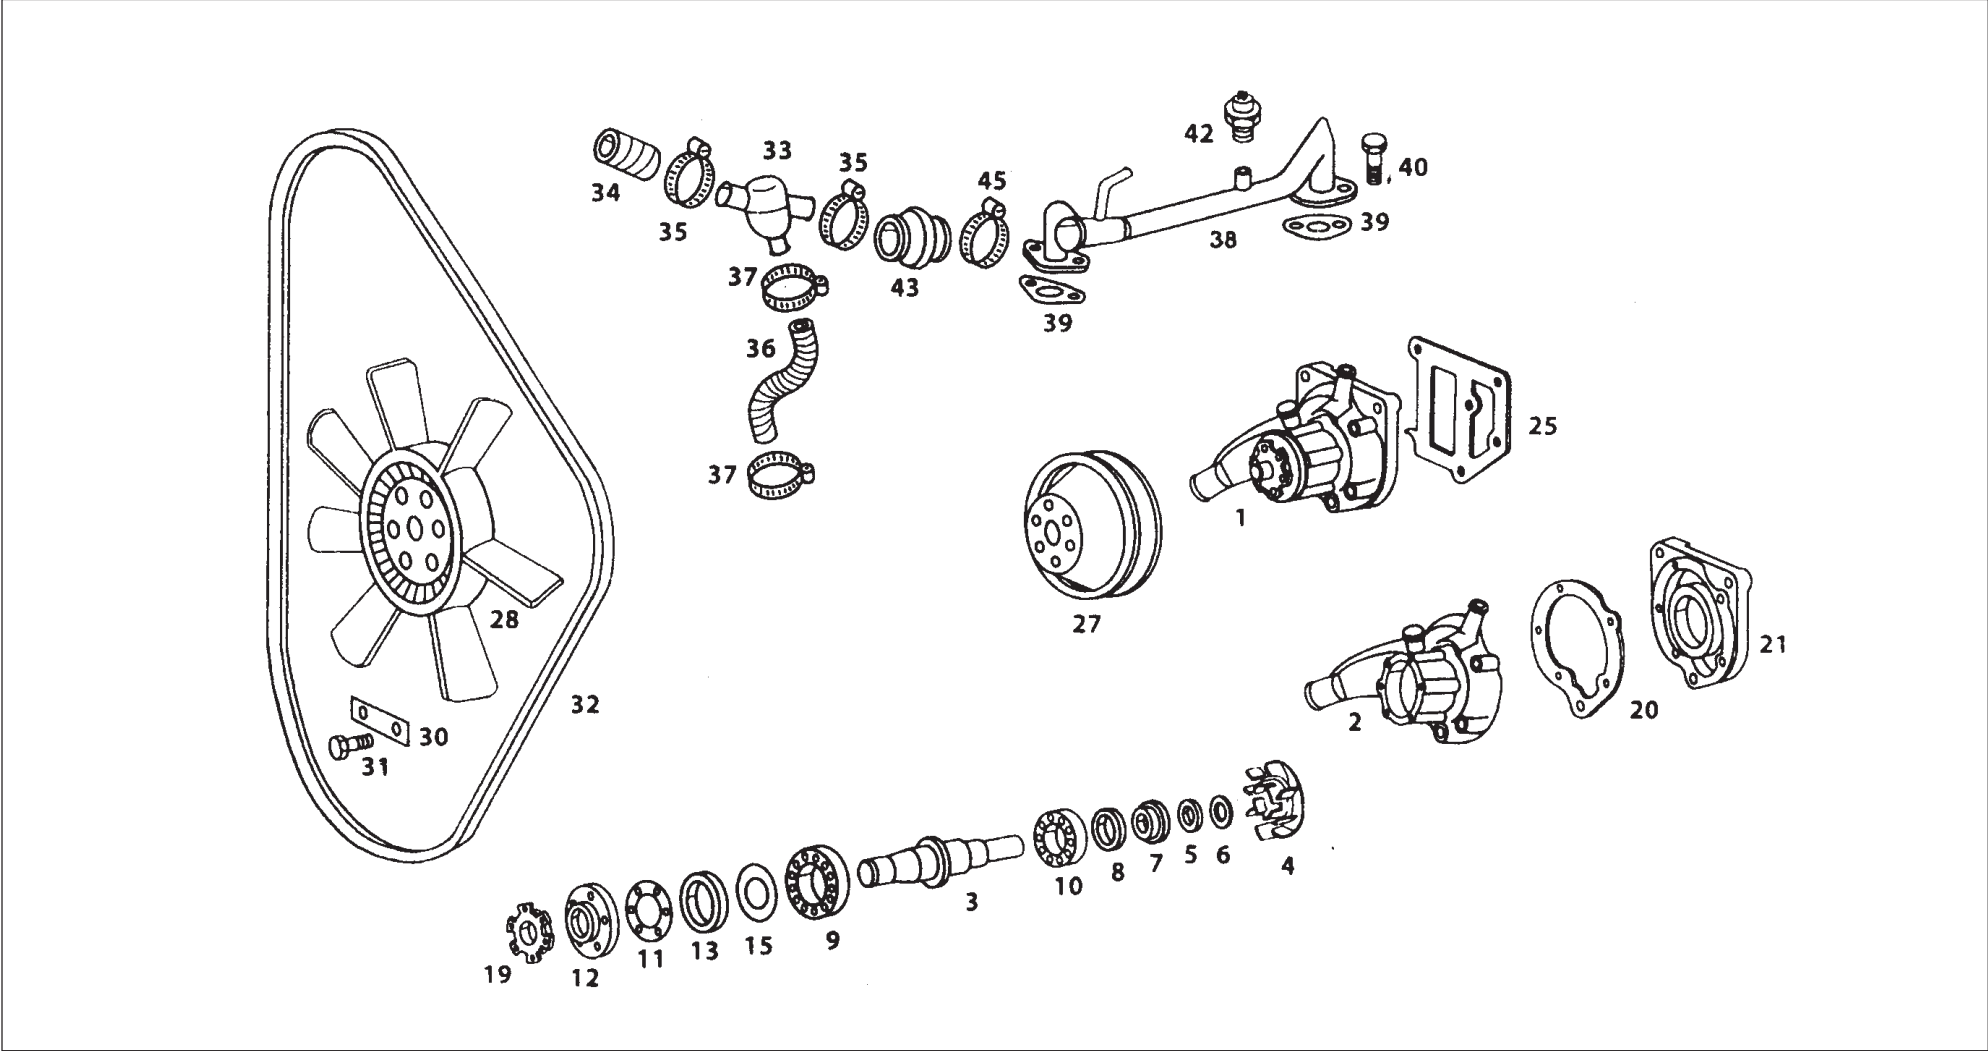


TABLE 20.1

WATER PUMP

GROUP 20

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
42	2632 5420 99 03	Temp. Transducer	1											For 2525 2010 01 24 Water Pump
—	2641 5450 99 08	Temp Switch			1		1	1	1		1		1	
43	2534 5000 58 01	Rubber Bellow (Cooling Water Line to Thermostat)		1	1	1	1			1	1	1	1	
43	2527 5010 58 82	Hose (Cooling Water Line to Thermostat)						1	1					
45	2527 5010 42 08	Hose Clamp 34 Dia	1											
—	2525 2099 01 07	Repair Kit Water Pump (Major) Consisting Off :							1					
6		Sealing Member							1					
5		Slide Ring							1					
7		Axial Slide Ring							1					
13		Oil Seal							1					
—		Ext.Circlip 28X2H							1					
9		Taper Roller Brg 20-2DB-47X15.25							1					
8		Rubber Sealing Ring							1					
4		Assy Impeller With Insert							1					
10		Taper Roller Bearing							1					
25		Gasket(Water Pump)							1					
—		Gasket (Water Pump)							1					
3		Water Pump Shaft							1					
15		Shim							1					
20		Gasket (Water Pump)							1					

TABLE 20.1

WATER PUMP

GROUP 20

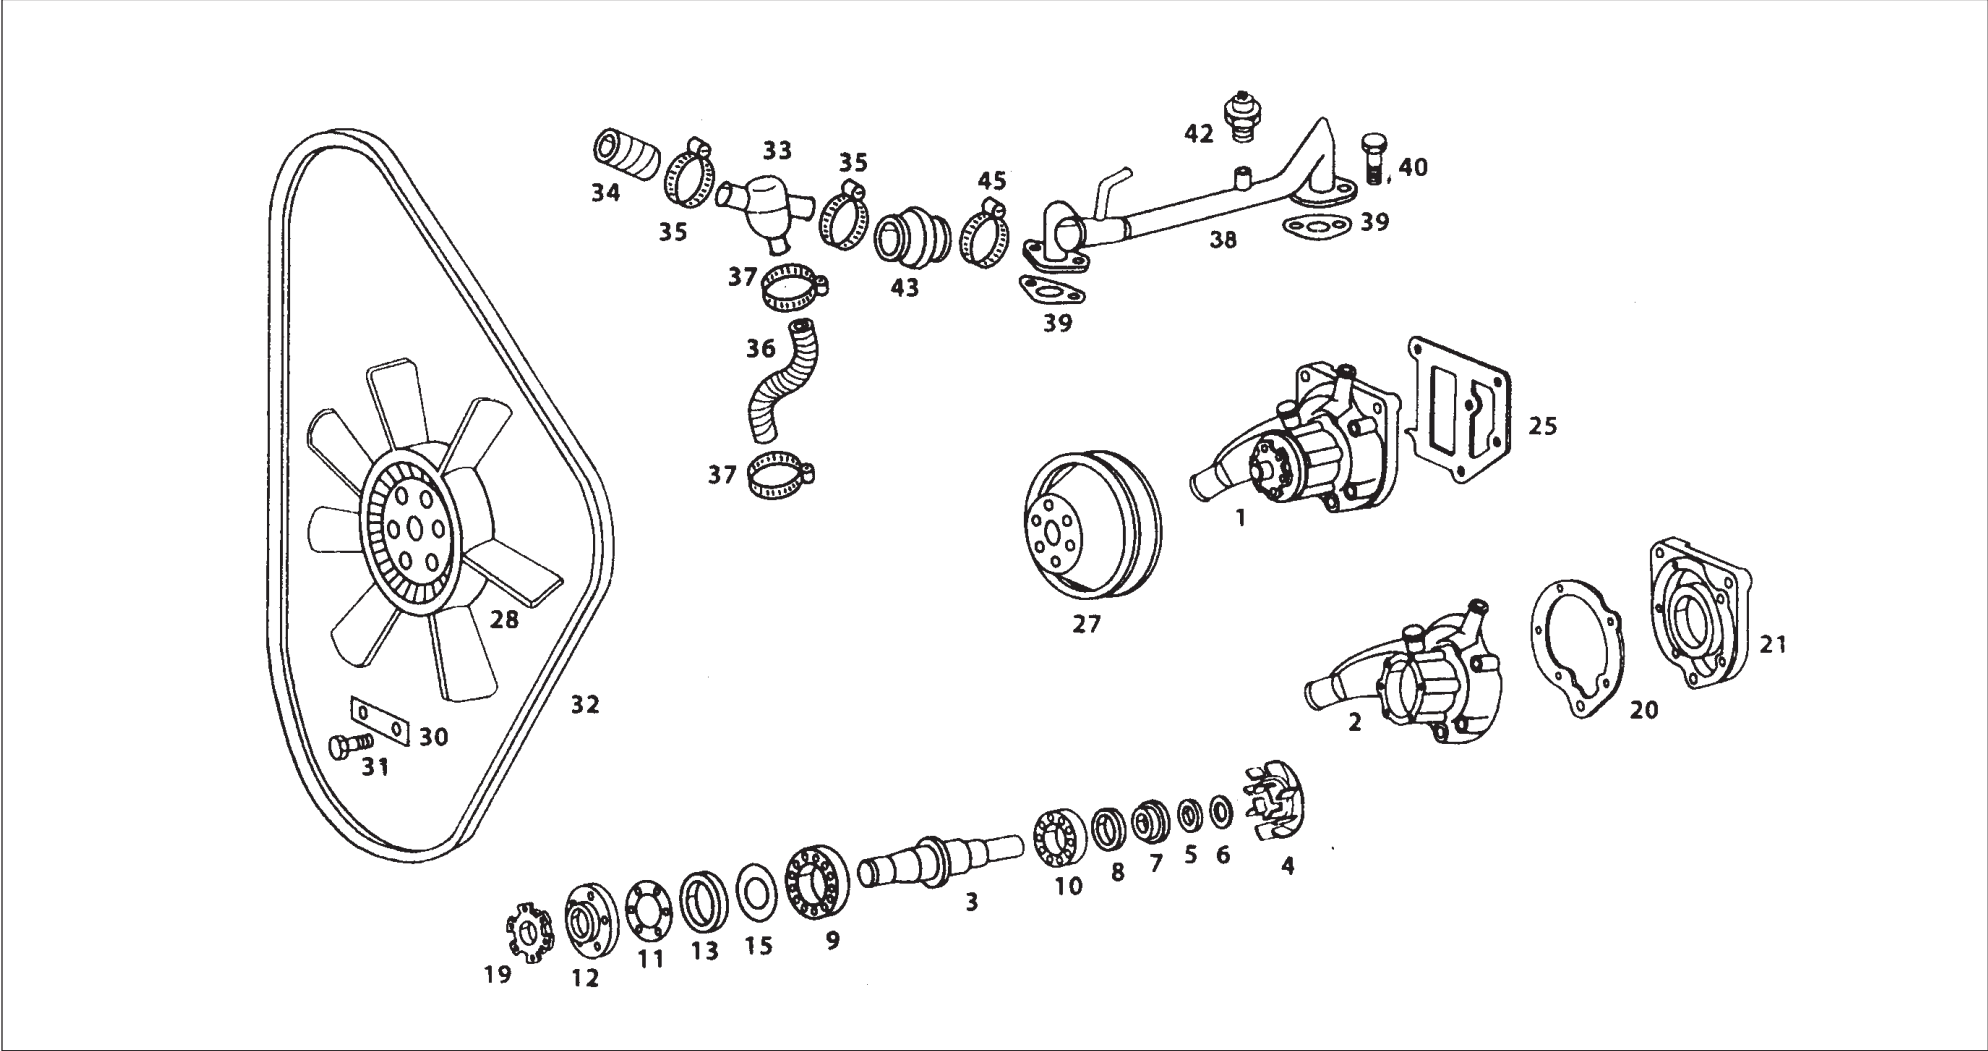


TABLE 20.1

WATER PUMP

GROUP 20

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
19	2525 2010 01 19	Hub							1					For 2525 2010 01 25/01 21/01 16 Water Pump
—		Repair Kit Water Pump (Major) Consisting Off :	1											
6		Sealing Member	1											
5		Slide Ring	1											
—		Sliding Ring Seal	1											
7		Axial Slide Ring	1											
8		Rubber Sealing Ring	1											
9		Tr. Roller Bearing 20 -2 DB 047x15.25-30204	1											
10		Tr. Roller Bearing CK IS 123/K15245/3 SK	1											
3		Shaft Water Pump	1											
13		Oil Seal	1											
20		Gasket	1											
15		Shim	1											
25		Gasket Water Pump	1											
4		Impeller Water Pump	1											
—	2525 2010 01 18	Repair Kit Water Pump (Minor) Consisting Off :	1											For 2525 2010 01 25/01 21/01 16 Water Pump
6		Sealing Member	1											
5		Slide Ring	1											

TABLE 20.1

WATER PUMP

GROUP 20

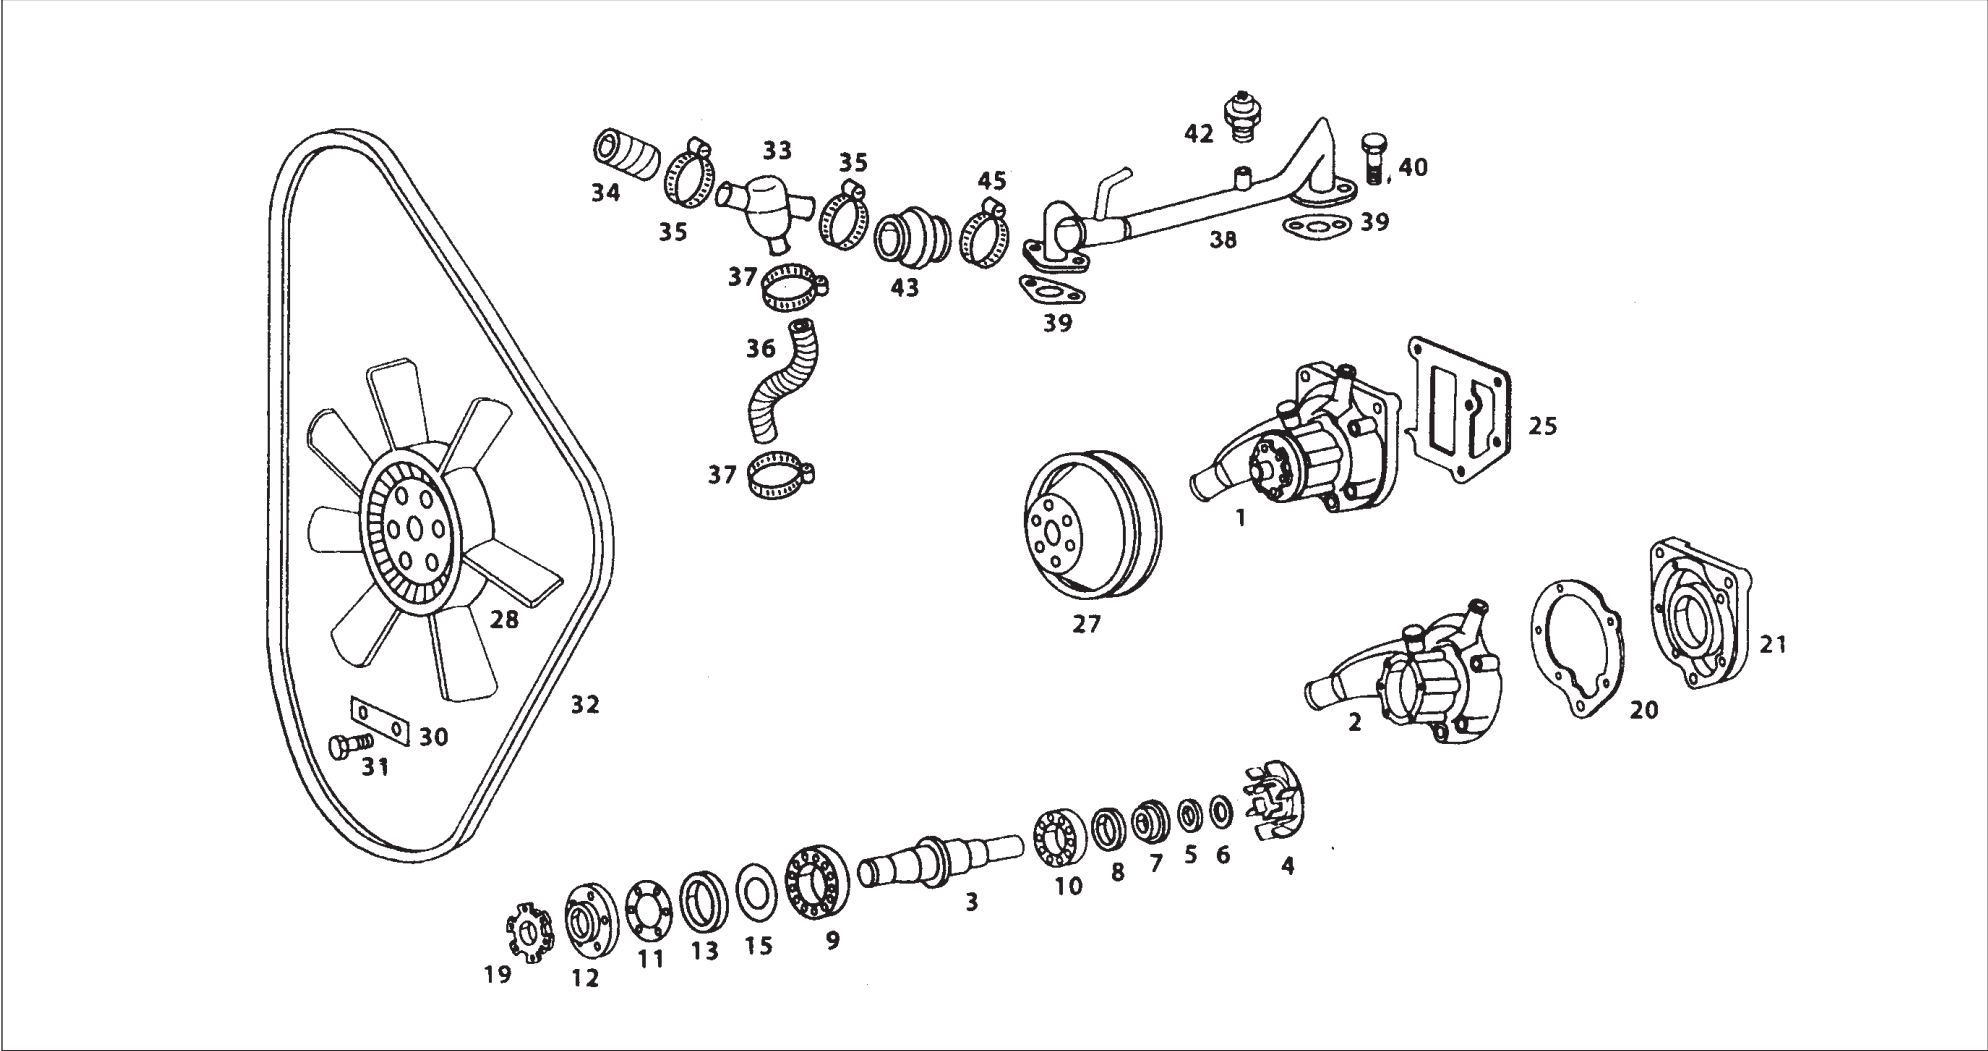


TABLE 20.1

WATER PUMP

GROUP 20

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—		Sliding Ring Seal	1											
7		Axial Slide Ring	1											
8		Rubber Sealing Ring	1											
13		Oil Seal	1											
20		Gasket	1											
15		Shim	1											
25		Gasket Water Pump	1											

TABLE 24.1

ENGINE SUSPENSION

GROUP 24

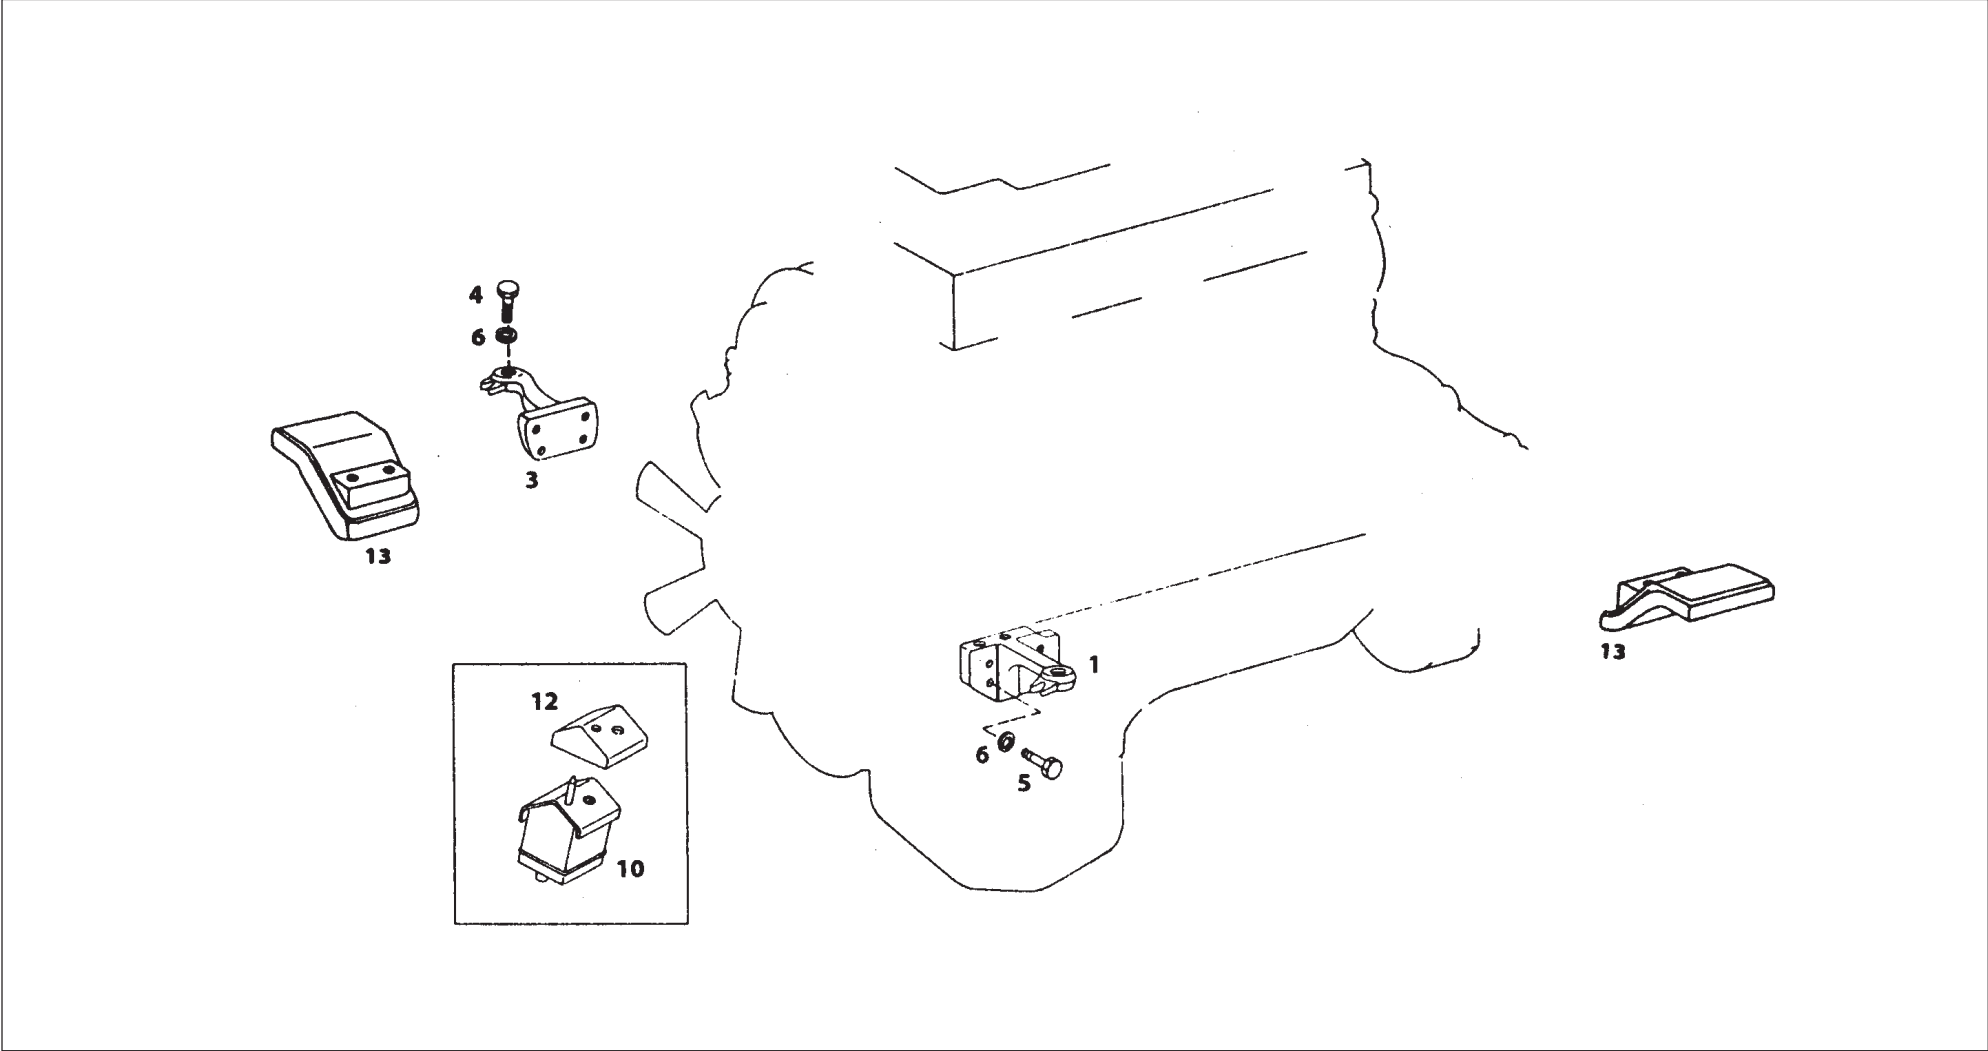


TABLE 24.1
ENGINE SUSPENSION
GROUP 24

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		ENGINE SUSPENSION												
1	2527 2212 51 07	Engine Mounting Arm Left	1											
3	2527 2212 51 08	Engine Mounting Arm Right	1											
4	1106 419905 8	Hex Bolt M 12X1.5X40 (RH Side)	4											
5	1106 419911 2	Hex Bolt M 12X1.5X52 (LH Side)	4											
6	1252 069601 4	Spring Washer B12	8											
10	2641 2410 01 09	Assy. Engine Mounting Front (RH)	1											
10	2641 2410 01 10	Assy. Engine Mounting Front (LH)	1											
12	2641 2410 82 11	Cover Engine Mtg. Front RH	2											
—	2651 2410 92 01	Tab Washer	2											
13	2575 2420 01 01	Assy. Rubber Support Rear RH	1											
13	2575 2420 01 02	Assy. Rubber Support Rear LH	1											
—	352 242 04 09	Torque Support Rear	2											
—	2576 2420 82 01	Locking Plate	4											
—	1106 391440 3	Bolt M 14x1.5x40	4											
—	2610 2410 92 01	Washer	4											

TABLE 25.1

CLUTCH

GROUP 25

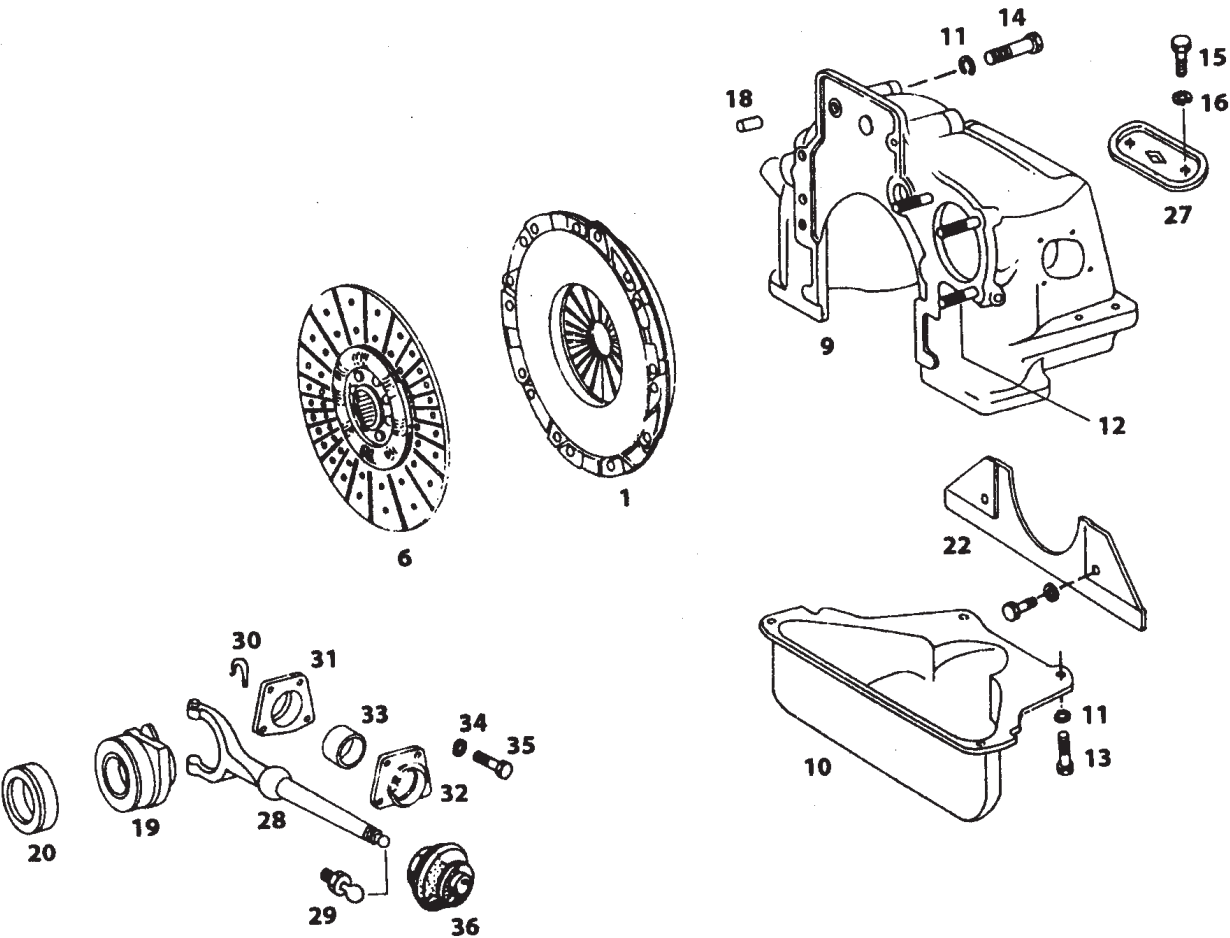


TABLE 25.1
CLUTCH
GROUP 25

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		CLUTCH												
1	2574 2540 01 04	Assy. 310 Dia. Clutch Pressure Plate	1											
6	2724 2520 01 01	Assy. 310 Dia. Clutch Disc	1											
9	2527 2510 37 16	Clutch Housing	1											
10	2527 2510 82 05	Clutch Housing Lower Part	1											
11	1252 069601 4	Spring Washer B 12	6											
12	1163 140830 5	Stud AM 10x30	3											
13	1132 399610 7	Hex. Screw M 12x35	4											
14	1106 381272 4	Hex. Bolt M 12x140	2											
15	1132 399806 1	Hex. Screw M 6x12	4											
16	1252 069801 7	Spring Washer B 6	4											
18	2523 2510 67 01	Pin	1											
19	2641 2560 01 03	Assy. Clutch Release Bearing with Sleeve	1											
20	2575 2560 31 06	Clutch Release Bearing	1											
22	2523 2510 82 03	Protective Cover (Cl.Housing Frt)	1											
27	042 251 00 04 J	Clutch Cover Housing Upper	1											
—	312 421 10 68	Cover	1											
28	2641 2560 51 01	Clutch Release Fork	1											
29	302 991 00 15	Ball Pin	1											
30	312 254 10 13	Locking Wire	2											

TABLE 25.1

CLUTCH

GROUP 25

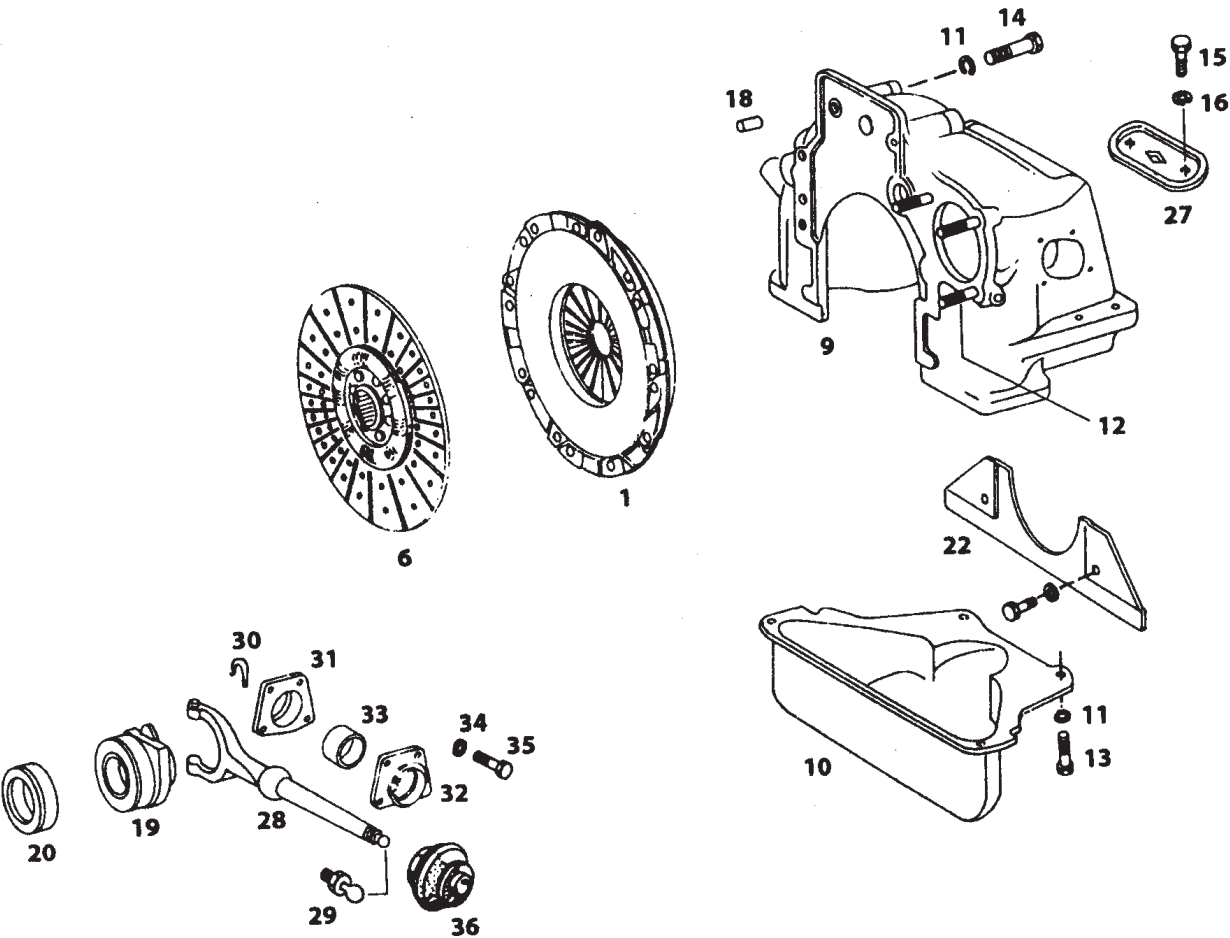


TABLE 25.1
CLUTCH
GROUP 25

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
31	352 254 00 40	Bracket Inside	1											
32	352 250 02 43	Assy. Bracket Outside	1											
33	2575 2560 01 09	Assy. Outer Race	1											
34	1252 069802 5	Spring Washer B 8 (Bracket to Cl.Hsg)	4											
35	1132 399602 6	Hex. Screw M 8x22 (Bracket to Cl.Hsg)	4											
36	352 254 00 97	Rubber bellow	1											
—	2755 2510 82 01	Cover (Clutch Housing Slide)	1											

TABLE 26.1

GEAR BOX HOUSING AND COVER

GROUP 26

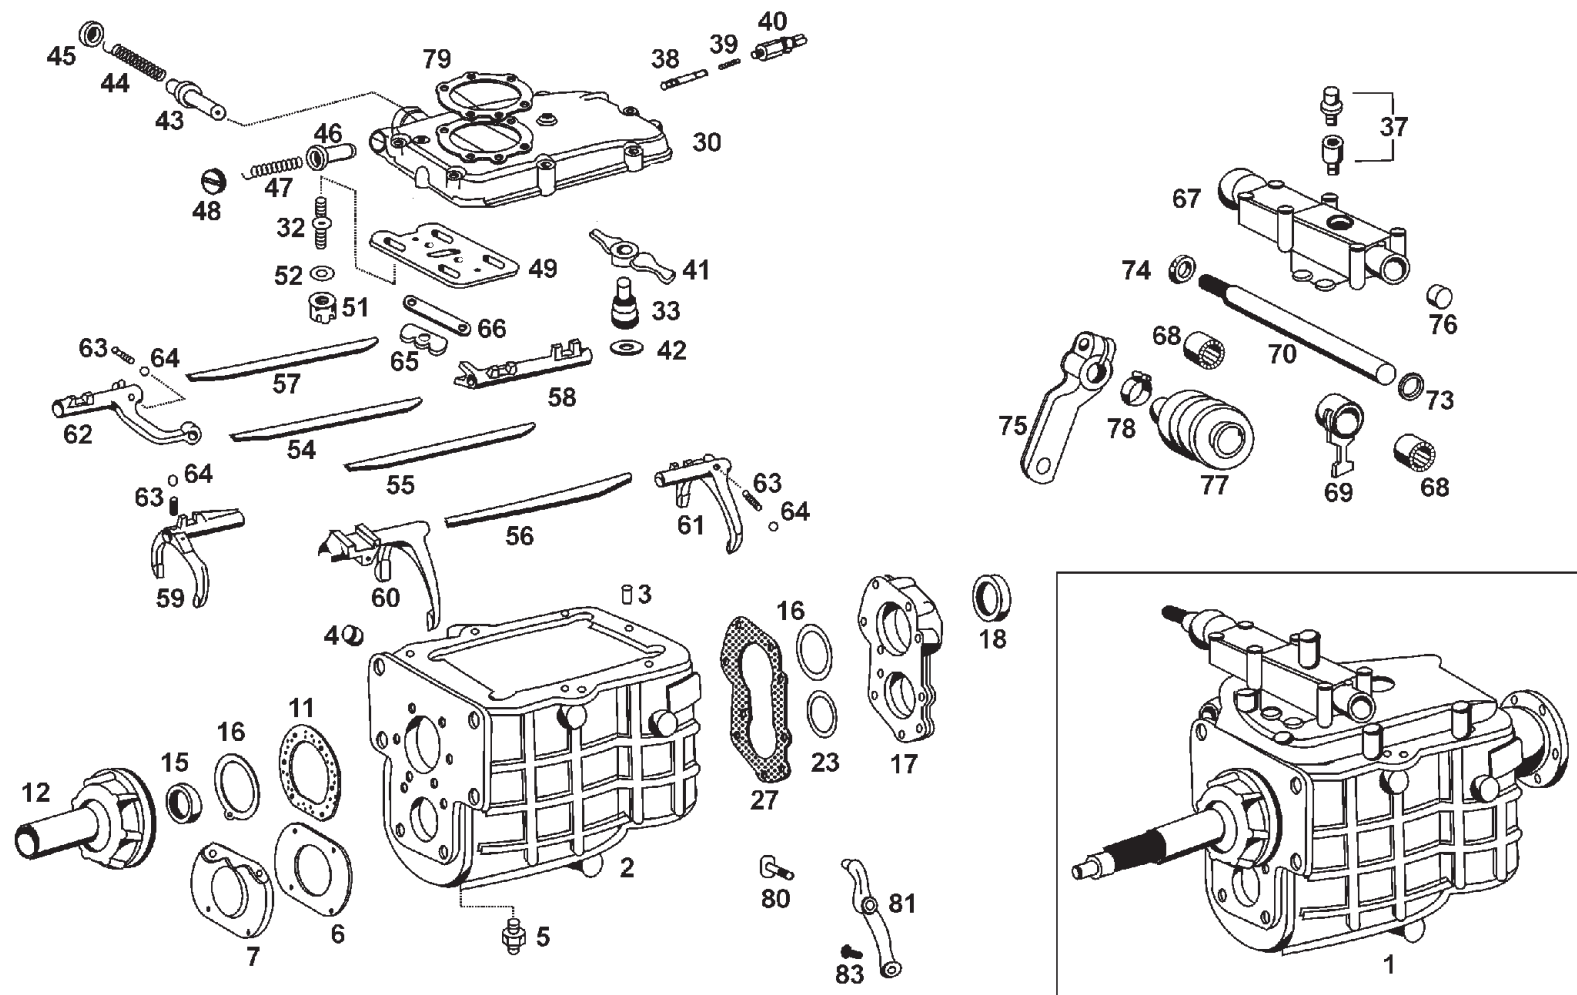


TABLE 26.1
GEAR BOX HOUSING AND COVER
GROUP 26

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		GEAR BOX HOUSING AND COVER												
1	2505 2604 01 29	Assy. GBS-40 5/7.51 Gear Box		1	1	1	1			1	1	1	1	PTO Provision
1	2505 2604 01 87	Assy. GBS-40 5/7.51-6 BCF Gear Box Complete						1	1					
2	2505 2610 37 23	Gear Box Housing	1											
3	1305 090920 9	Cylindrical Pin 10 H 8x20	2											
4	000 997 00 06 J	Screw Plug Oil Filling	1											
5	2663 3510 72 07	Magnetic Drain Plug	1											
6	2505 3014 53 01	Gasket	1											
7	2505 3014 47 01	Housing Cover Front, Lower	1											
11	2505 2625 53 01	Gasket (Frt.Cover Top to Hsg.)	1											
12	2505 2625 37 01	Gear Box Housing Cover (Front Top-NUP Brg)	1											
—	2505 2625 82 01	Oil Slinger (GB Hsg. Front Cover)	1											
15	2507 2625 78 02	Oil Seal	1											
16	2505 3013 86 01	Butting Ring 2.90 mm Thick	1											For Selection
16	2505 2625 86 01	Butting Ring 2.95 mm Thick	1											For Selection
16	2505 3013 86 02	Butting Ring 3.00 mm Thick	1											For Selection
16	2505 2625 86 02	Butting Ring 3.05 mm Thick	1											For Selection
16	2505 3013 86 03	Butting Ring 3.10 mm Thick	1											For Selection
16	2505 2625 86 03	Butting Ring 3.15 mm Thick	1											For Selection
16	2505 3013 86 04	Butting Ring 3.20 mm Thick	1											For Selection

TABLE 26.1

GEAR BOX HOUSING AND COVER

GROUP 26

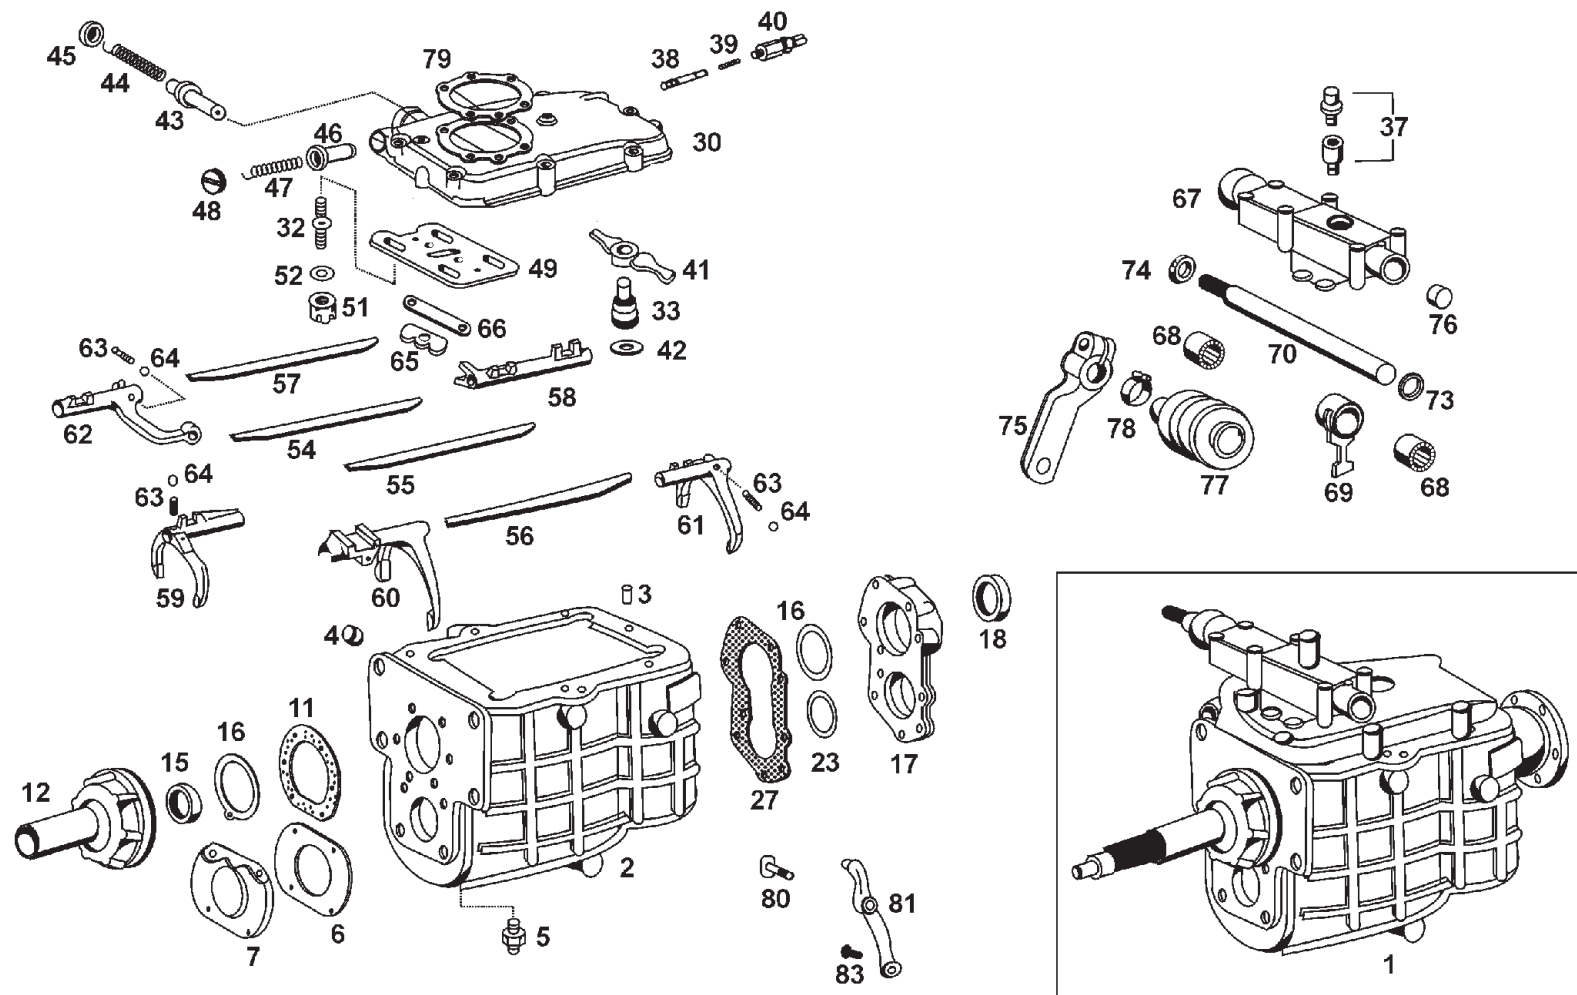


TABLE 26.1
GEAR BOX HOUSING AND COVER
GROUP 26

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
16	2505 2625 86 04	Butting Ring 3.25 mm Thick	1											For Selection
16	2505 3013 86 05	Butting Ring 3.30 mm Thick	1											For Selection
16	2505 2625 86 05	Butting Ring 3.35 mm Thick	1											For Selection
16	2505 3013 86 06	Butting Ring 3.40 mm Thick	1											For Selection
16	2505 2625 86 06	Butting Ring 3.45 mm Thick	1											For Selection
16	2505 3013 86 07	Butting Ring 3.50 mm Thick	1											For Selection
16	2505 3013 86 08	Butting Ring 3.60 mm Thick	1											For Selection
16	2505 2625 86 09	Butting Ring 3.65 mm Thick	1											For Selection
—	2505 2620 37 05	Gear Case Cover Rear		1	1	1	1			1	1	1	1	For 2505 2604 01 29 Gear Box
17	337 261 01 20	Gear Case Cover Rear (PTO Opening)						1	1	1				For 2505 2604 01 87 Gear Box
18	2505 2620 78 03	Oil Seal (Main Shaft)	1											
—	321 261 03 33	Cover For PTO Application						1	1					For 2505 2604 01 87 Gear Box
—	2506 2620 78 04	Oil Seal	1											
—	321 261 00 31	Adapter	1											
23	312 283 17 52	Shim 0.05 mm Thick	AR											For Selection
23	312 283 10 52	Shim 0.1 mm Thick	AR											For Selection
23	312 283 11 52	Shim 0.2 mm Thick	AR											For Selection
23	312 283 12 52	Shim 0.4 mm Thick	AR											For Selection
23	312 283 21 52	Shim 0.8 mm Thick	AR											For Selection
27	352 261 07 80	Gasket (Gear Case Cover Rear)						1	1	1				For 2505 2604 01 87 Gear Box

TABLE 26.1

GEAR BOX HOUSING AND COVER

GROUP 26

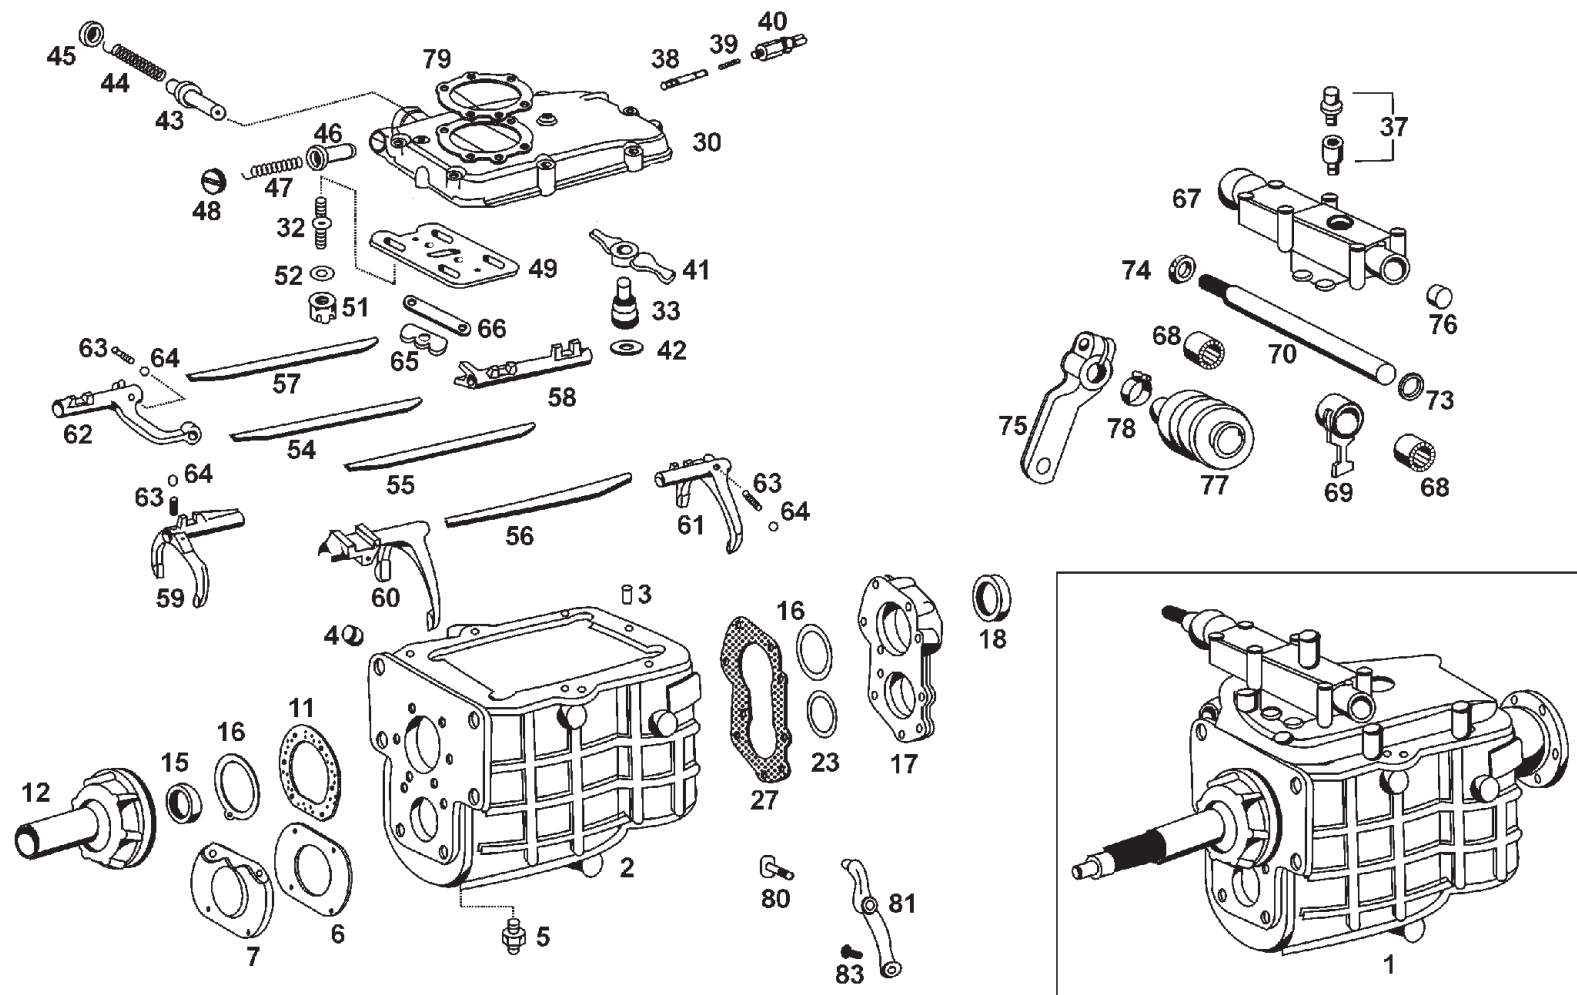


TABLE 26.1
GEAR BOX HOUSING AND COVER
GROUP 26

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
30	2505 2671 37 52	Gear Case Cover Top (Lower Half)	1											
—	2505 2671 02 59	Assy.Bracket	1											
32	2505 3012 88 01	Stud	4											
33	2505 2671 67 01	Pin Swing Lever	1											
37	2668 3515 01 02	Pressure Relief Valve	1											
38	2505 3011 67 01	Thrust Pin (Reverse Indicator Switch)	1											
39	312 993 42 01	Pressure Spring (Reverse Indicator Switch)	1											
40	2654 5450 01 34	Reverse Indicator Switch	1											
41	2505 2670 51 05	Swing Lever Shifter Fork (1st Speed)	1											
—	1595 352013 1	Needle Roller Bearing 2X13.8	29											
42	2505 3012 92 01	Washer	1											
43	2505 2671 34 09	Pressure Piece for Check Plate	1											
44	2505 2671 87 02	Pressure Spring for Pressure Piece	1											
45	321 997 01 03	Slotted Plug	1											
46	2505 2671 34 10	Interlocking Pin	1											
47	2505 2671 87 03	Pressure Spring	1											
—	321 993 06 01	Pressure Spring for Interlocking Pin	1											
48	1608 250240 1	Sealing Plug M 24x1.5	1											
49	321 260 08 46	Assy. Check Plate	1											
—	2505 2671 34 07	Stopper Piece Check Plate	4											

TABLE 26.1

GEAR BOX HOUSING AND COVER

GROUP 26

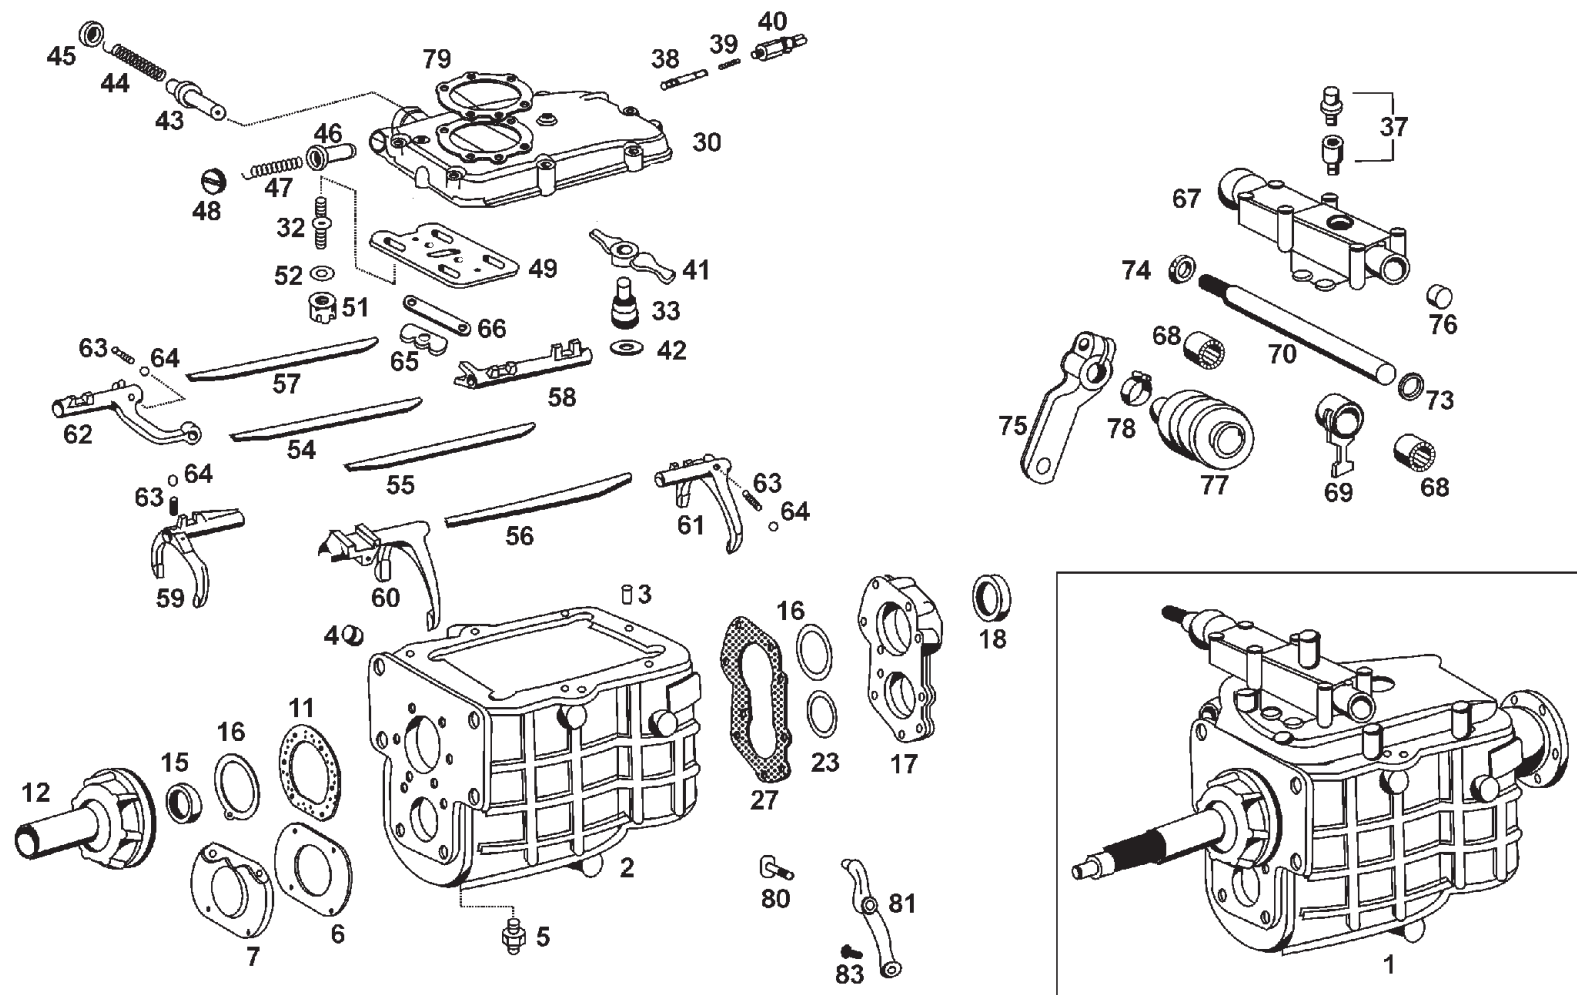


TABLE 26.1
GEAR BOX HOUSING AND COVER
GROUP 26

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
—	2505 2671 34 03	Support Piece Check Plate	4											
51	1210 120080 7	Slotted Nut M 8 TS 17412	4											
52	2505 3020 61 01	Spring Washer	4											
54	321 265 08 05	Selector Shaft for First Speed	1											
55	321 265 18 05	Selector Shaft (2/3)	1											
56	321 265 19 05	Selector Shaft (4/5)	1											
57	322 265 03 05	Selector Shaft (For Reverse Gear)	1											
58	322 265 01 23	Gear Shift Dog (For First Gear)	1											
59	321 265 12 02	Selector Fork (2/3)	1											
60	2505 2651 51 02	Selector Fork (4/5)	1											
61	321 265 13 01	Selector Fork (For 1st Speed Gear)	1											
62	2505 2651 51 01	Selector Fork (For Reverse Gear)	1											
63	312 993 10 01	Pressure Spring	4											
64	1595 010110 2	Steel Ball 11 mm dia.	4											
65	312 265 10 36	Clamp (Selector Shaft to Gear Box Housing)	4											
66	312 994 03 32	Locking Plate (Selector Shaft to Gear Box Housing)	2											
67	2505 2671 37 56	Cover Top (Upper Half)	1											
68	2507 2671 31 05	Needle Bearing	2											
69	2505 2670 51 04	Shifter Finger	1											
70	2505 2670 79 08	Selector & Shifter Shaft	1											

TABLE 26.1

GEAR BOX HOUSING AND COVER

GROUP 26

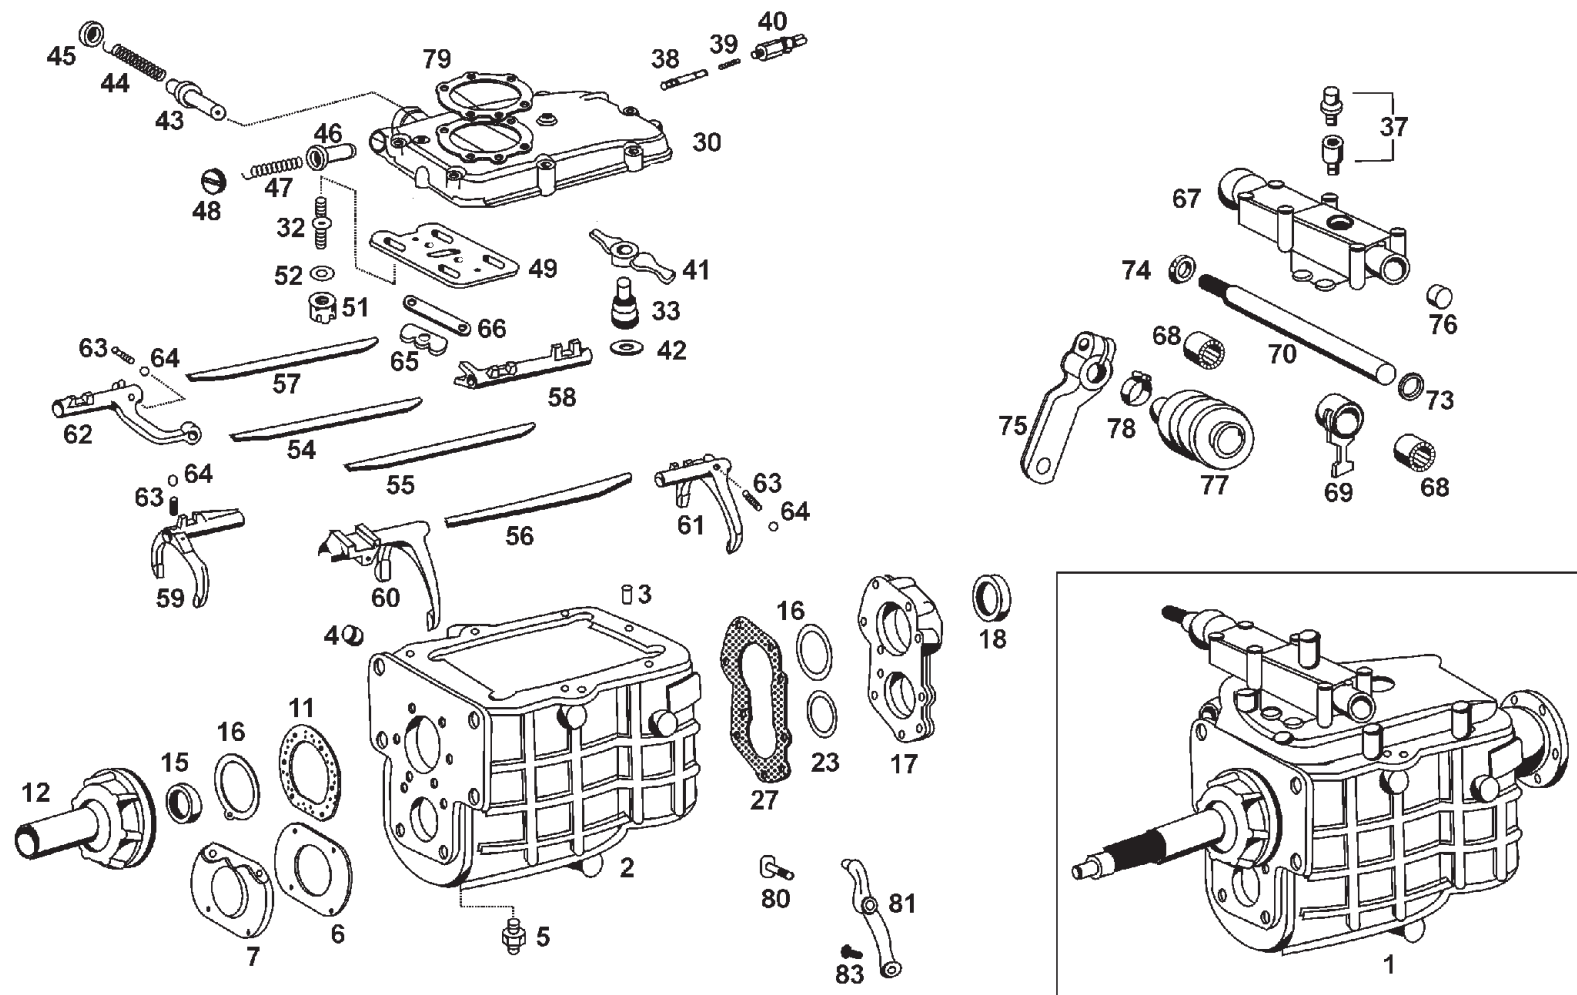


TABLE 26.1
GEAR BOX HOUSING AND COVER
GROUP 26

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
—	1312 051240 9	Dowel Sleeve Heavy 10X40	1											
—	1312 051040 6	Dowel Sleeve Heavy 6X40	1											
73	1706 160251 8	Oil Seal	1											
74	2507 2671 78 03	Scraper Ring	1											
75	2505 2670 60 09	Shifting Lever	1											
76	2505 2671 82 22	Cap	1											
77	2505 2671 77 01	Bellow	1											
78	1427 020250 1	Hose Clip 25	1											
79	2506 2671 53 01	Gasket (Between Upper & Lower Half)	1											
80	2505 3010 67 01	Pivot Pin	1											
81	321 265 02 08	Intermediate Lever (Rev. Gear)	1											
83	2505 2651 59 01	Sliding Key	1											
—	2505 2600 01 01	Gear Box Gasket Kit Consisting of :	1											
6		Gasket Front Cover Lower	1											
11		Gasket Front Cover Upper	1											
27		Gasket Rear Cover	1											
—		Gasket Top Cover	1											

TABLE 26.2

GEAR SHAFT AND GEAR

GROUP 26

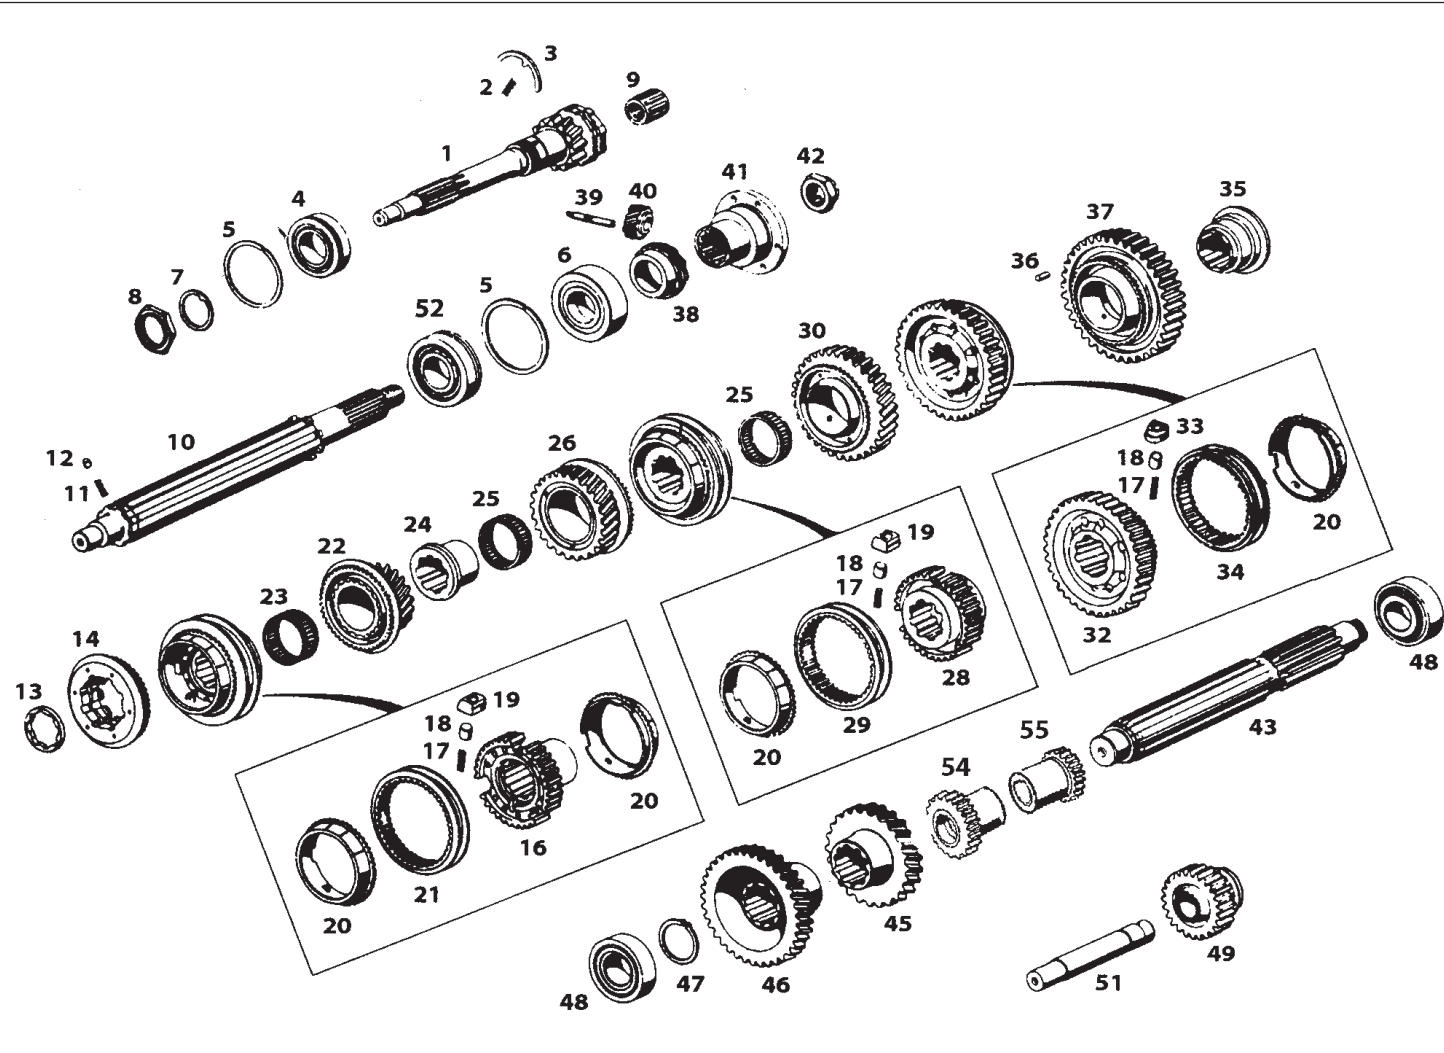


TABLE 26.2

GEAR SHAFT AND GEAR

GROUP 26

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		GEAR SHAFT AND GEAR												
1	2505 2625 79 18	Drive Shaft	1											
2	321 993 12 01	Compression Spring	1											
3	321 262 00 73	Clamping Plate	1											
4	2505 2620 31 29	Cylindrical Roller Bearing (45X100X25)	1											
5	2505 2620 43 02	Snap Ring 2.68 mm Thick	2											For Selection
5	2505 2620 43 03	Snap Ring 2.73 mm Thick	2											For Selection
5	2505 2620 43 04	Snap Ring 2.78 mm Thick	2											For Selection
5	2505 2620 43 05	Snap Ring 2.83 mm Thick	2											For Selection
5	2505 2620 43 06	Snap Ring 2.88 mm Thick	2											For Selection
5	2505 2620 43 07	Snap Ring 2.93 mm Thick	2											For Selection
7	2507 2625 86 01	Spacer on Drive Shaft	1											
—	2505 2625 82 01	Oil Slinger (Front Side)	1											
8	312 262 11 72	Lock Nut LH Thread	1											
9	2505 2625 31 18	Roller Cage (Longer) 28X48X30.8	1											
—	2690 2620 86 01	Circlip (Layshaft)	1											
10	2505 2620 79 03	Main Shaft (Longer Pilot Bearing)	1											
6	2505 2620 31 06	Four Point Ball Bearing	1											
52	000 981 12 01	Cylindrical Roller Bearing	1											
11	312 993 17 01	Pressure Spring	1											

TABLE 26.2

GEAR SHAFT AND GEAR

GROUP 26

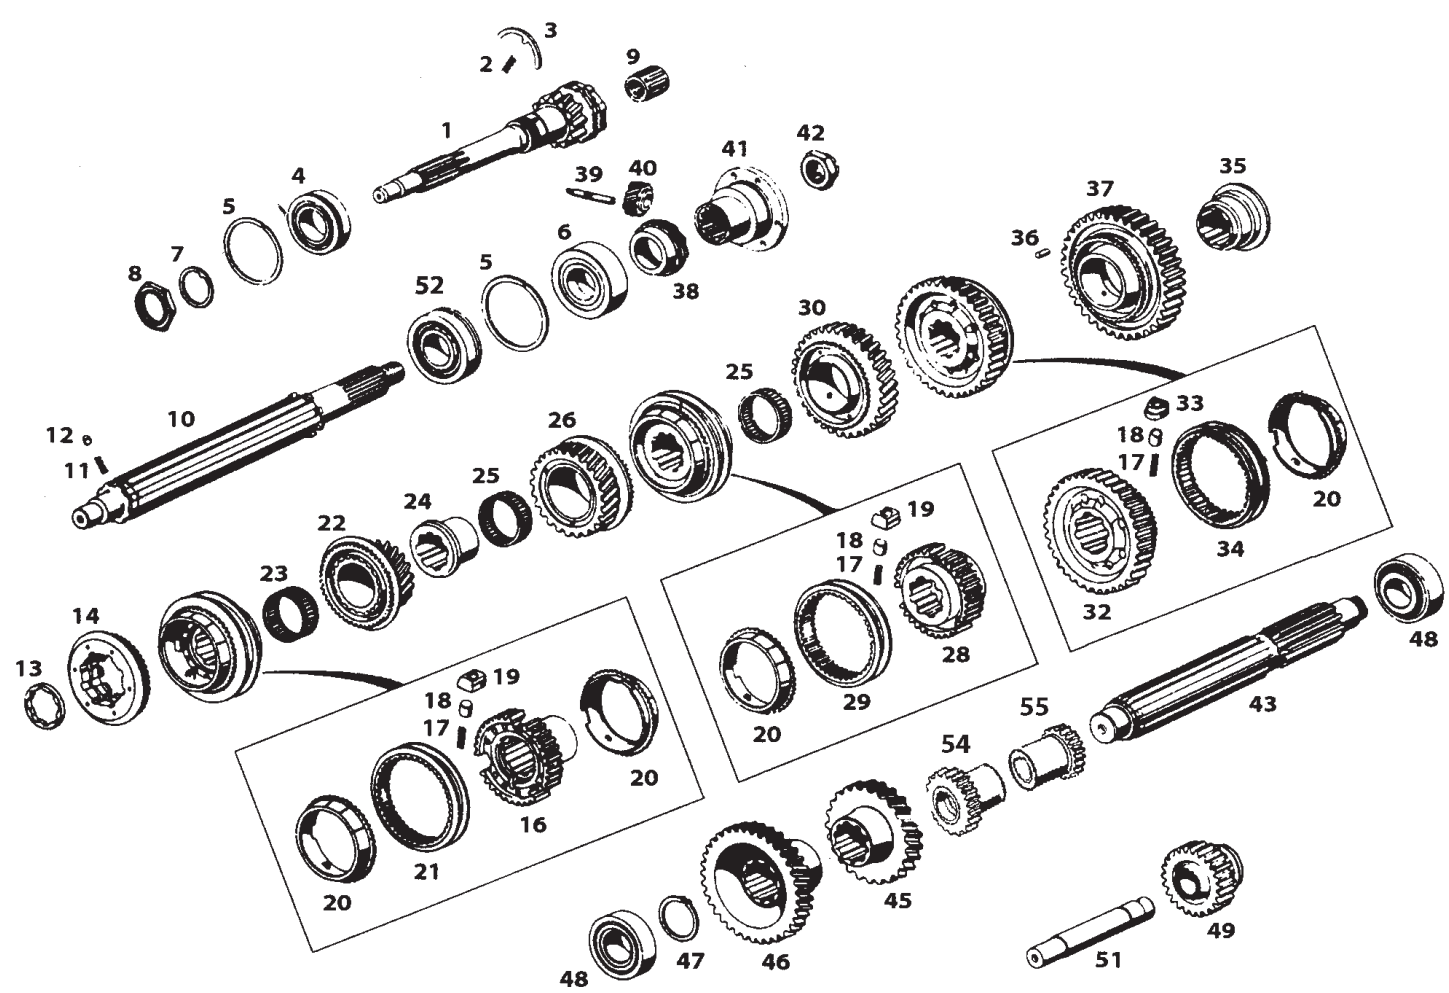


TABLE 26.2

GEAR SHAFT AND GEAR

GROUP 26

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
12	321 262 03 74	Pin on Main Shaft	1											
13	2505 2620 86 08	Butting Ring 6.95 mm Thick	1											For Selection
13	321 262 20 62	Butting Ring 7.00 mm Thick	1											For Selection
13	2505 2620 86 09	Butting Ring 7.05 mm Thick	1											For Selection
13	2505 2620 86 10	Butting Ring 7.15 mm Thick	1											For Selection
13	2505 2620 86 11	Butting Ring 7.25 mm Thick	1											For Selection
13	321 262 17 62	Butting Ring 7.30 mm Thick	1											For Selection
13	2505 2620 86 12	Butting Ring 7.35 mm Thick	1											For Selection
13	321 262 04 62	Butting Ring 7.40 mm Thick	1											For Selection
13	321 262 28 62	Butting Ring 7.45 mm Thick	1											For Selection
13	321 262 05 62	Butting Ring 7.50 mm Thick	1											For Selection
13	321 262 29 62	Butting Ring 7.55 mm Thick	1											For Selection
13	321 262 06 62	Butting Ring 7.60 mm Thick	1											For Selection
13	321 262 30 62	Butting Ring 7.65 mm Thick	1											For Selection
13	321 262 07 62	Butting Ring 7.70 mm Thick	1											For Selection
13	2505 2620 86 13	Butting Ring 7.75 mm Thick	1											For Selection
13	321 262 25 62	Butting Ring 7.80 mm Thick	1											For Selection
13	2505 2620 86 14	Butting Ring 7.85 mm Thick	1											For Selection
13	321 262 26 62	Butting Ring 7.90 mm Thick	1											For Selection
13	2505 2620 86 15	Butting Ring 7.95 mm Thick	1											For Selection

TABLE 26.2

GEAR SHAFT AND GEAR

GROUP 26

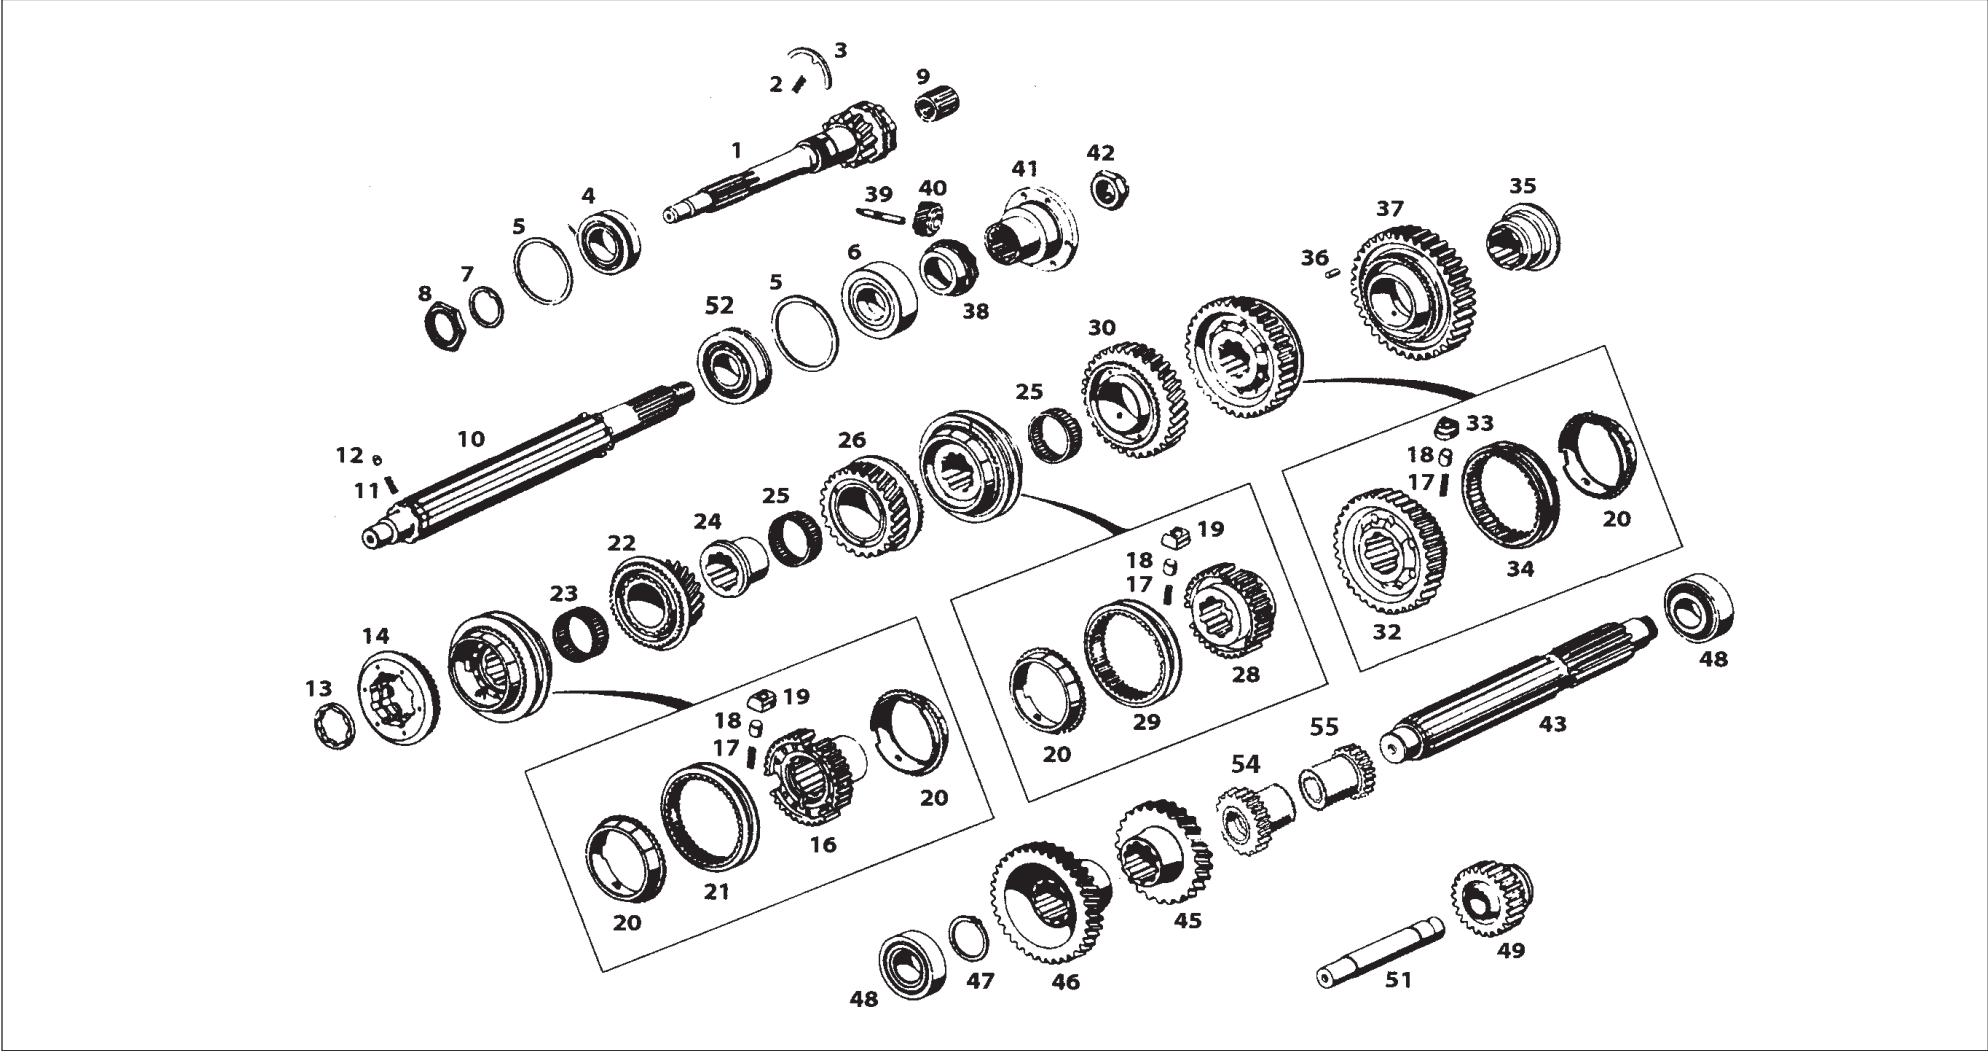


TABLE 26.2
GEAR SHAFT AND GEAR
GROUP 26

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
13	321 262 27 62	Butting Ring 8.00 mm Thick	1											For Selection
14	340 262 01 34	Synchronising Ring	1											
16	2505 3015 54 03	Synchronising Sleeve 4th & 5th	1											
20	2505 2620 38 02	Synchronising Cone	2											
21	321 262 08 23	Shifting Sleeve	1											
22	2505 3015 01 05	Assy. Helical Gear 4th Speed						1	1					For 2505 2604 01 87 Gear Box
22	2505 2620 01 35	Assy. Helical Gear 4th Speed		1	1	1	1			1	1	1	1	For 2505 2604 01 29 Gear Box
23	2505 2620 31 23	Double Row Needle Cage	1											For Selection
24	322 262 40 50	Collar Bushing 44.5 mm Long (For Third Speed Gear)	1											
24	322 262 41 50	Collar Bushing 44.6 mm Long (For Third Speed Gear)	1											For Selection
25	2505 2620 31 24	Roller Cage (Double Row)	1											For 2505 2604 01 87 Gear Box For 2505 2604 01 29 Gear Box
26	322 260 06 44	Assy. Helical Gear 3rd Speed						1	1					
26	2505 2620 01 18	Assy. Helical Gear 3rd Speed		1	1	1	1			1	1	1	1	
28	322 262 04 35	Synchronising Sleeve 2/3	1											
20	2505 2620 38 02	Synchronising Cone	2											
29	321 262 08 23	Shifting Sleeve	1											For 2505 2604 01 87 Gear Box For 2505 2604 01 29 Gear Box
25	2505 2620 31 24	Roller Cage (Double Row)	1											
30	322 262 01 12	Helical Gear 2nd Speed	1											
32	322 263 03 33	Reverse Gear on Main Shaft	1											
20	2505 2620 38 02	Synchronising Cone	1											

TABLE 26.2

GEAR SHAFT AND GEAR

GROUP 26

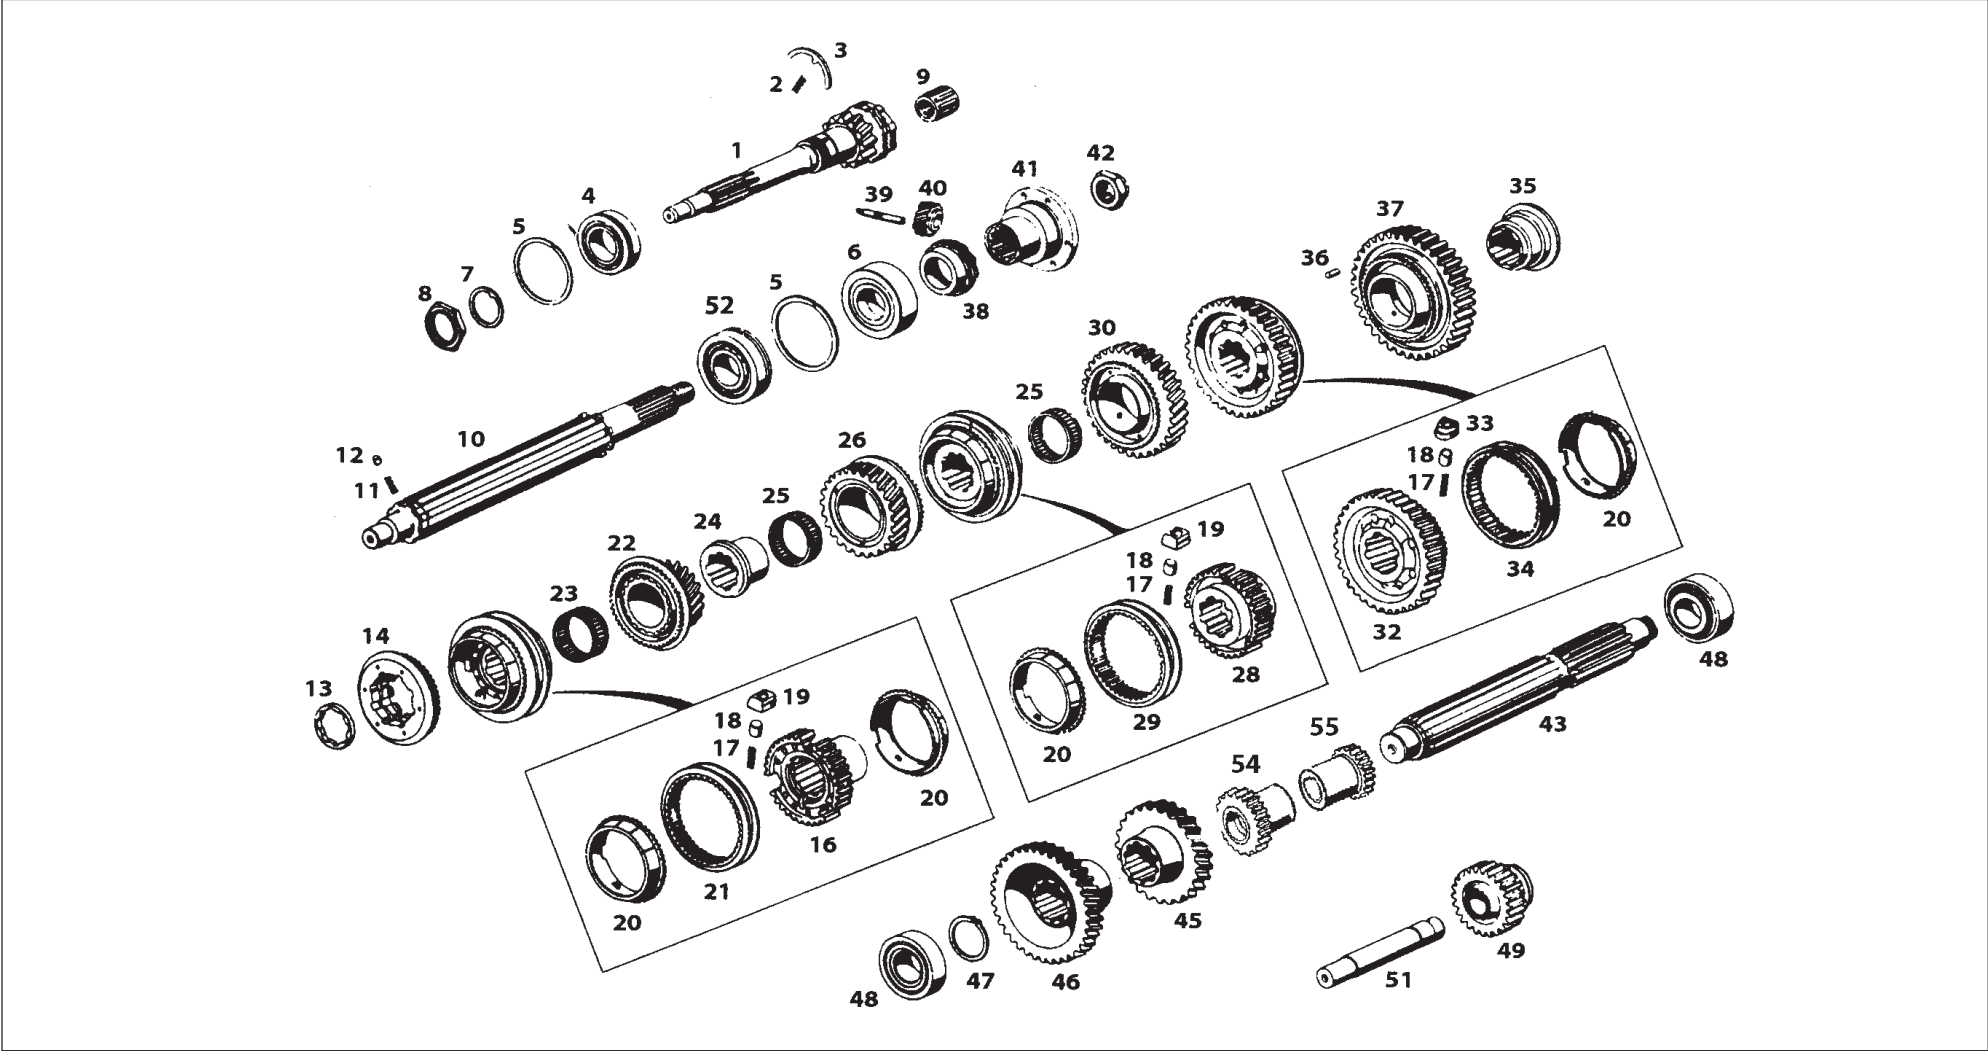


TABLE 26.2
GEAR SHAFT AND GEAR
GROUP 26

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
34	321 262 07 23	Shifter Sleeve 1st Speed	1											
35	2505 3015 34 01	Collar Bushing 47.2 mm Long	1											For Selection
35	2505 3015 34 02	Collar Bushing 47.3 mm Long	1											For Selection
35	2505 3015 34 03	Collar Bushing 47.4 mm Long	1											For Selection
35	2505 3015 34 04	Collar Bushing 47.5 mm Long	1											For Selection
35	2505 3015 34 05	Collar Bushing 47.6 mm Long	1											For Selection
35	2505 3015 34 06	Collar Bushing 47.7 mm Long	1											For Selection
35	2505 3015 34 07	Collar Bushing 47.8 mm Long	1											For Selection
35	2505 3015 34 08	Collar Bushing 47.9 mm Long	1											For Selection
37	2505 3015 54 01	Gear Wheel 1st Speed	1											
36	2505 2620 30 01	Cylindrical Roller	115											
38	2505 2620 01 76	Gear Speedometer Drive	1											
39	2505 2620 79 02	Shaft (Speedo Drive)	1											
40	2505 2620 01 58	Speedo Gear (Nylon)	1											
—	153 264 00 55	Plug Speedometer Drive	1											
41	322 262 00 45	Coupling Flange (120 O D)	1											
42	322 262 00 72	Hex. Collar Nut	1											
43	2505 3014 79 01	Counter Shaft (for PTO Provision)						1	1	1				For 2505 2604 01 87 Gear Box
43	2505 2630 79 01	Counter Shaft (w/o PTO Provision)		1	1	1	1			1	1	1	1	For 2505 2604 01 29 Gear Box
54	2505 2630 54 12	2nd Gear Counter Shaft	1											

TABLE 26.2

GEAR SHAFT AND GEAR

GROUP 26

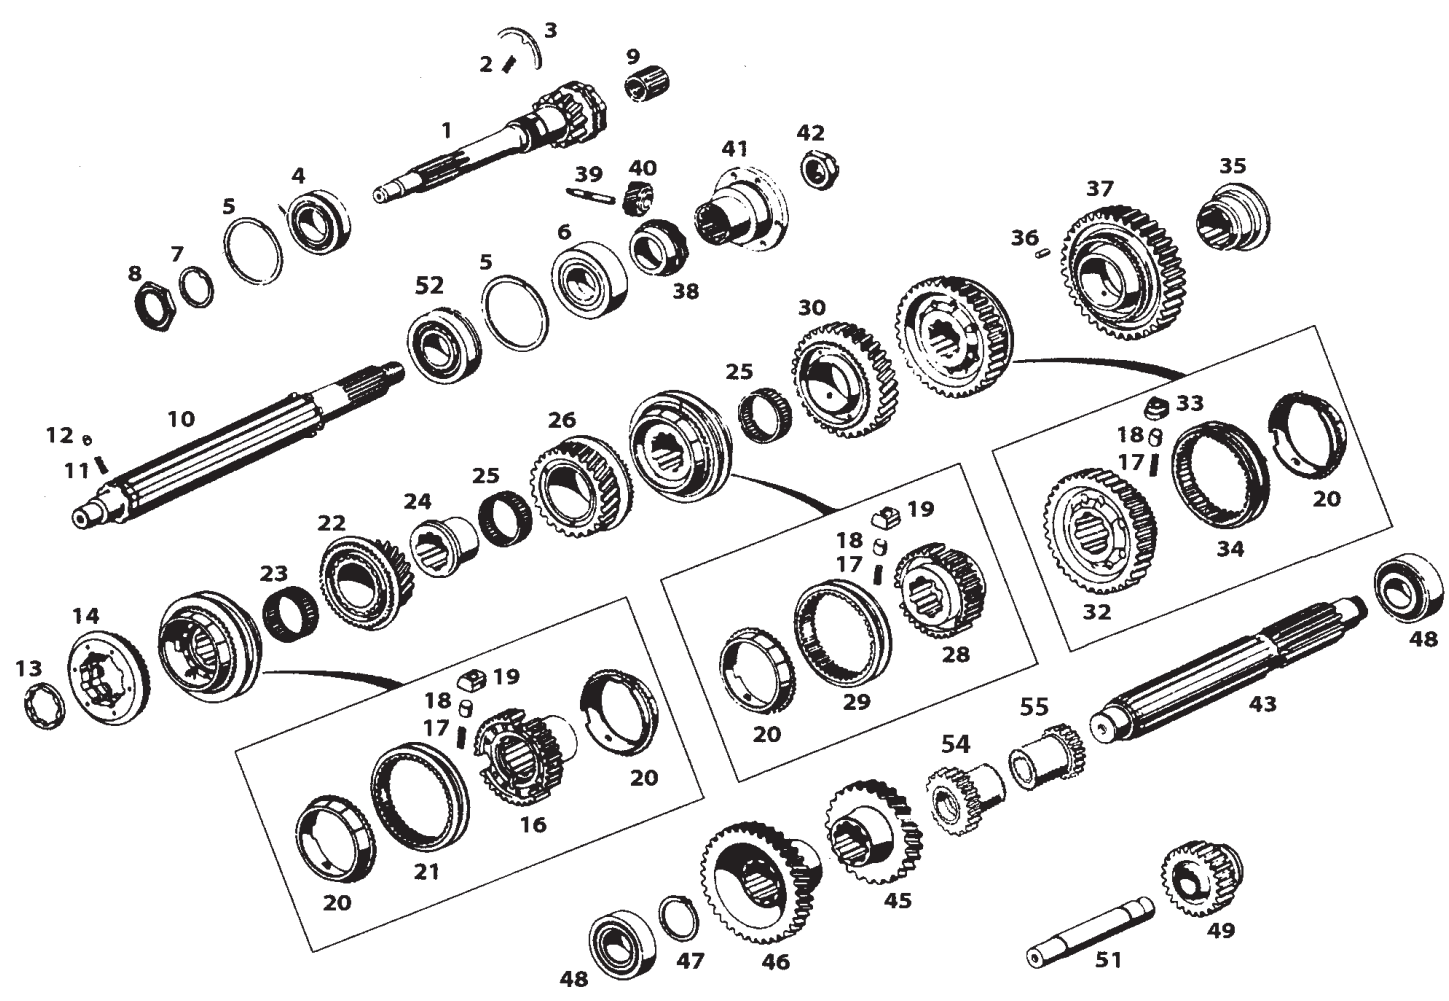


TABLE 26.2
GEAR SHAFT AND GEAR
GROUP 26

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
55	2505 2630 54 15	3rd Gear Counter Shaft						1	1					For 2505 2604 01 87 Gear Box
55	2505 2630 54 11	3rd Gear Counter Shaft		1	1	1	1			1	1	1	1	For 2505 2604 01 29 Gear Box
45	2505 3014 54 01	4th Gear Counter Shaft						1	1					For 2505 2604 01 87 Gear Box
45	2505 2630 54 01	4th Gear Counter Shaft		1	1	1	1			1	1	1	1	For 2505 2604 01 29 Gear Box
46	2505 3014 54 02	Constant Mesh Gear (On Counter Shaft)	1											
47	1455 069905 3	Circlip A 52x2.5 TS 17637	1											
48	2505 2630 31 04	Taper Roller Bearing	2											
49	2505 2635 01 02	Reverse Idle Gear with Bush	1											
51	2505 3017 79 01	Reverse Idler Gear Shaft	1											
—	8854 2604 16 12	Synchro Kit GBS 40 Consisting of :	1											
19		Carrier 4/5 & 2/3	6											
33		Carrier 1st	3											
18		Retention Pin 4/5, 2/3	6											
18		Retention Pin 1st	3											
17		Comp. Spring	9											

TABLE 26.3

GEAR SHIFTING ARRANGEMENT

GROUP 26

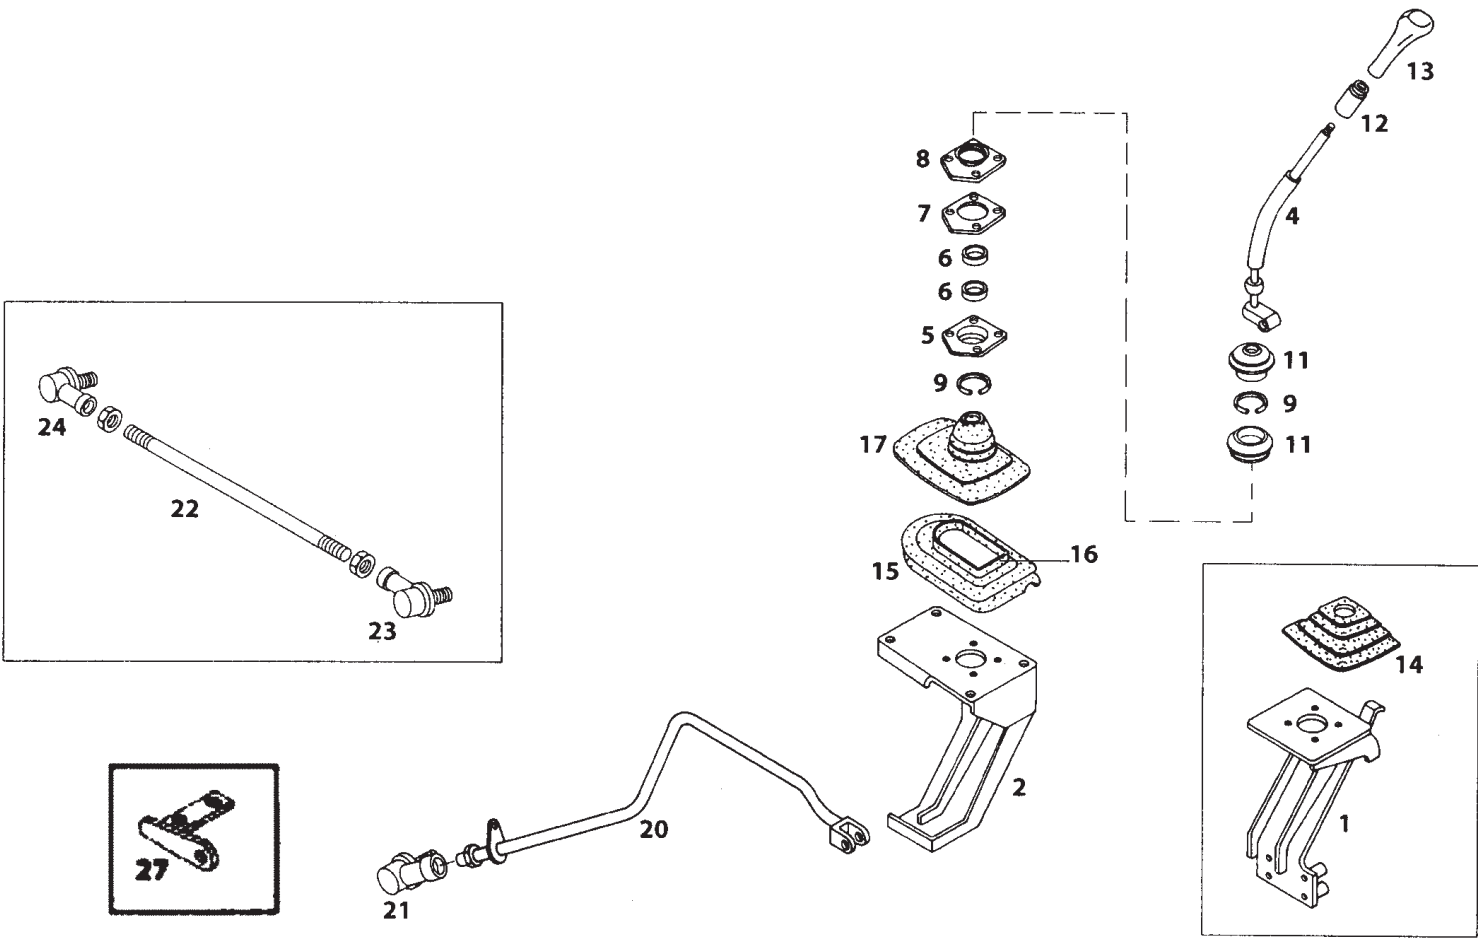



TABLE 26.3
GEAR SHIFTING ARRANGEMENT
GROUP 26

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		GEAR SHIFTING ARRANGEMENT												
1	2641 2681 01 04	Assy. Bracket		1	1	1	1			1	1	1	1	For w/o Power Strg,Cowl Version Veh.
2	2641 2680 01 97	Assy. Bracket						1	1	1	1	1	1	For w/o Power Strg,Cab Version Veh.
2	2641 2680 02 08	Assy. Bracket						1	1	1	1	1	1	For Power Strg,Cab Version Veh.
4	2641 2680 02 26	Assy. Gear Shift Lever	1											
5	2641 2680 02 04	Sub Assy. Cup	1											
6	2641 2680 34 09	Bush (G.S.L.Ball Seat)	1											
—	2641 2680 34 12	Bush (Spherical Seat G.S.Lever)	1											
—	2684 2671 34 03	Bush (Extension Arm)	2											
7	2641 2680 86 10	Spacer (Between Sub - Assy. Cup and Flange)	AR											
7	2641 2680 86 11	Spacer (Between Sub - Assy. Cup and Flange)	AR											
7	2641 2680 86 12	Spacer (Between Sub - Assy. Cup and Flange)	AR											
7	2641 2680 86 13	Spacer (Between Sub - Assy. Cup and Flange)	AR											
7	2641 2680 86 14	Spacer (Between Sub - Assy. Cup and Flange)	AR											
7	2641 2680 86 15	Spacer (Between Sub - Assy. Cup and Flange)	AR											
7	2641 2680 86 16	Spacer (Between Sub - Assy. Cup and Flange)	AR											
8	2641 2680 82 38	Retaining Plate	1											
9	2641 2680 87 02	Spring Ring	1											
—	2641 2680 82 34	Bellow Holder	1											
11	352 254 00 97	Rubber Bellow (Small)	2											

TABLE 26.3

GEAR SHIFTING ARRANGEMENT

GROUP 26

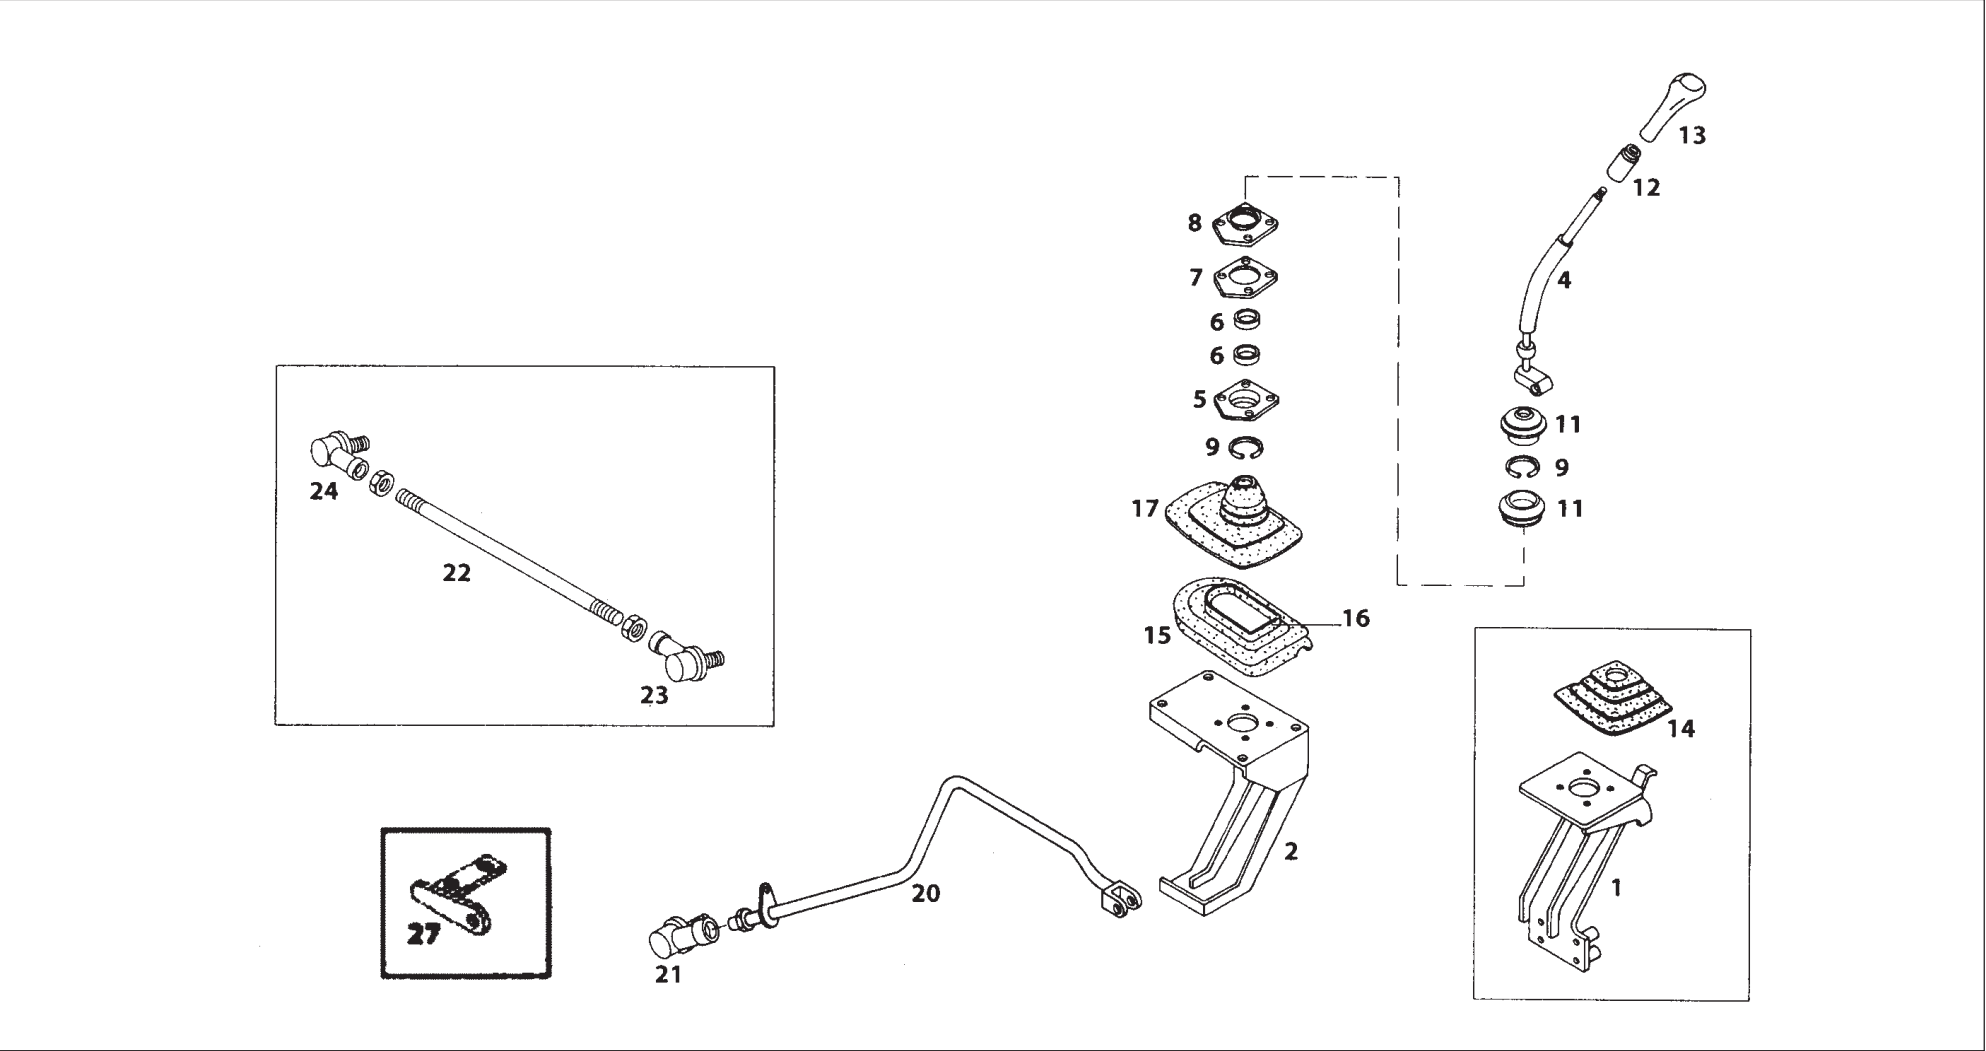

GROUP 26

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II		
12	2641 2680 63 04	Spacer (G. S. Lever)	1												For Cowl Version For Cab Version For Cab Version For Cab Version For Cab Version *For Cowl Version & TCIC Veh.
13	2630 2670 01 02	Assy. Knob (G.S. Lever)	1												
14	2641 2680 77 19	Rexin Bellow		1	1	1	1				1	1	1	1	
15	2641 2680 77 17	Rubber Seal						1	1	1	1	1	1	1	
16	2641 2680 77 15	Flap						1	1	1	1	1	1	1	
—	2705 2680 80 01	Flanged Bolt (with Serrations)						1	1	1	1	1	1	1	
17	2641 2680 01 88	Assy. Bellow (G.S. Lever Top)						1	1	1	1	1	1	1	
20	2641 2680 02 34	Assy. Turning Tube (w/o Ball Joint)		1	1	1	1	1	1						
20	2641 2680 02 12	Assy. Turning Tube (w/o Ball Joint)		1	1	1	1				1	1	1	1	
21	2507 2670 01 52	Sub - Assy. Ball & Socket Joint	1												
—	1208 090180 0	Hex. Thin Nut M 18x1.5 (Ball Joint)	1												
—	2641 2680 65 03	Hex Bolt	1												
22	2763 2680 79 01	Link Rod	1												
23	2641 2680 02 25	Assy. Ball Joint LH Threads	1												
24	2641 2680 02 24	Assy. Ball Joint RH Threads	1												
27	2755 2671 01 01	Assy. Bracket									1	1	1	1	

TABLE 26.4

POWER TAKE OFF

GROUP 26

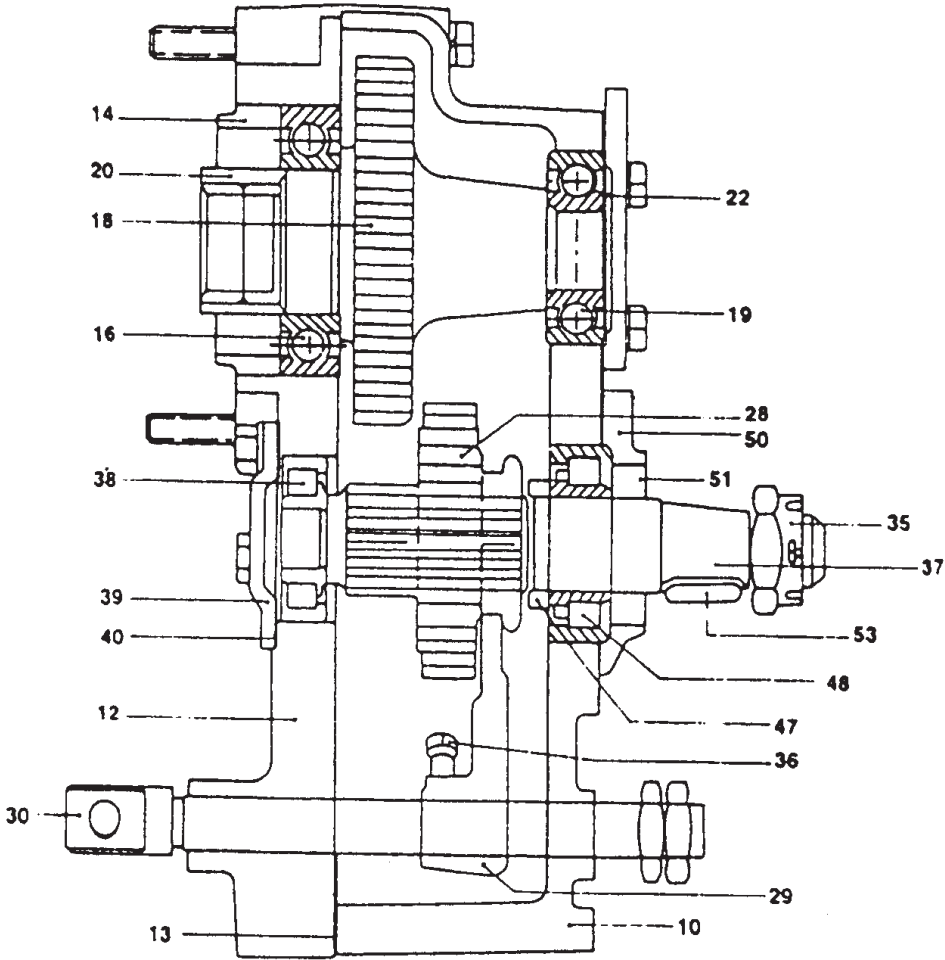


TABLE 26.4
POWER TAKE OFF
GROUP 26

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		POWER TAKE OFF												For PTO application
—	2505 2640 01 37	Assy. Power Take Off (W/o Shifting Lever)								1				
10	2505 2640 01 40	Housing								1				
—	2505 2640 37 05	Housing Half (Inner)								1				
13	2505 2640 53 01	Gasket (Housing)								1				
14	2505 2640 86 01	Spacer								1				
16	2505 2640 31 07	Ball Bearing								1				
18	2505 2640 79 02	Input Gear Shaft								1				
19	2505 2640 31 03	Ball Bearing								1				
20	2505 2640 84 01	Sleeve								1				
22	2505 2640 47 01	Bearing Cover								1				
		COVER TO HOUSINGS												
28	2505 2640 54 02	Sliding Gear Z 18								1				
29	2505 2640 51 01	Shifter Fork								1				
30	2505 2640 79 07	Shifter Shaft								1				
		FORK TO SHIFTER SHAFT												
36	312 264 10 71	Locking Screw Fork & Shifter Shaft								1				
37	2505 2640 79 08	Output Shaft								1				
38	2654 3340 31 05	Taper Roller Bearing Outer								1				
39	312 264 14 10	Front Cover								1				

TABLE 26.4

POWER TAKE OFF

GROUP 26

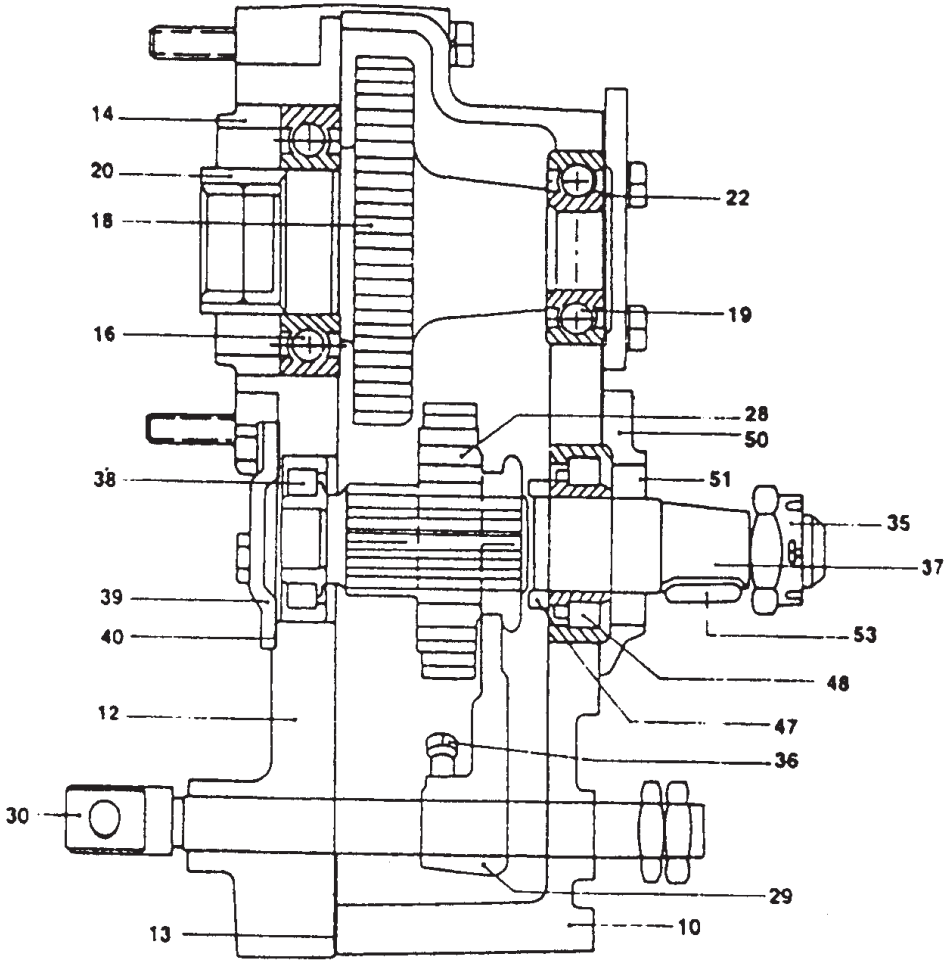


TABLE 26.4

POWER TAKE OFF

GROUP 26

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
40	312 264 11 79	Gasket (Front Cover to Housing)								1				
47	2505 2640 86 12	Spacer								1				
48	2651 3340 31 29	Taper Roller Bearing								1				
50	2505 2640 37 10	Rear Cover								1				
51	003 997 77 46	Oil Seal								1				
—	2505 2640 86 14	Spacer								1				
		FOR OUTPUT SHAFT												
53	1360 059901 6	Parallel Key A 8x5x25								1				
55	1210 229903 3	Castle Nut M 24x1.5								1				

TABLE 26.5

PNEUMATIC SHIFTING CYLINDER

GROUP 26

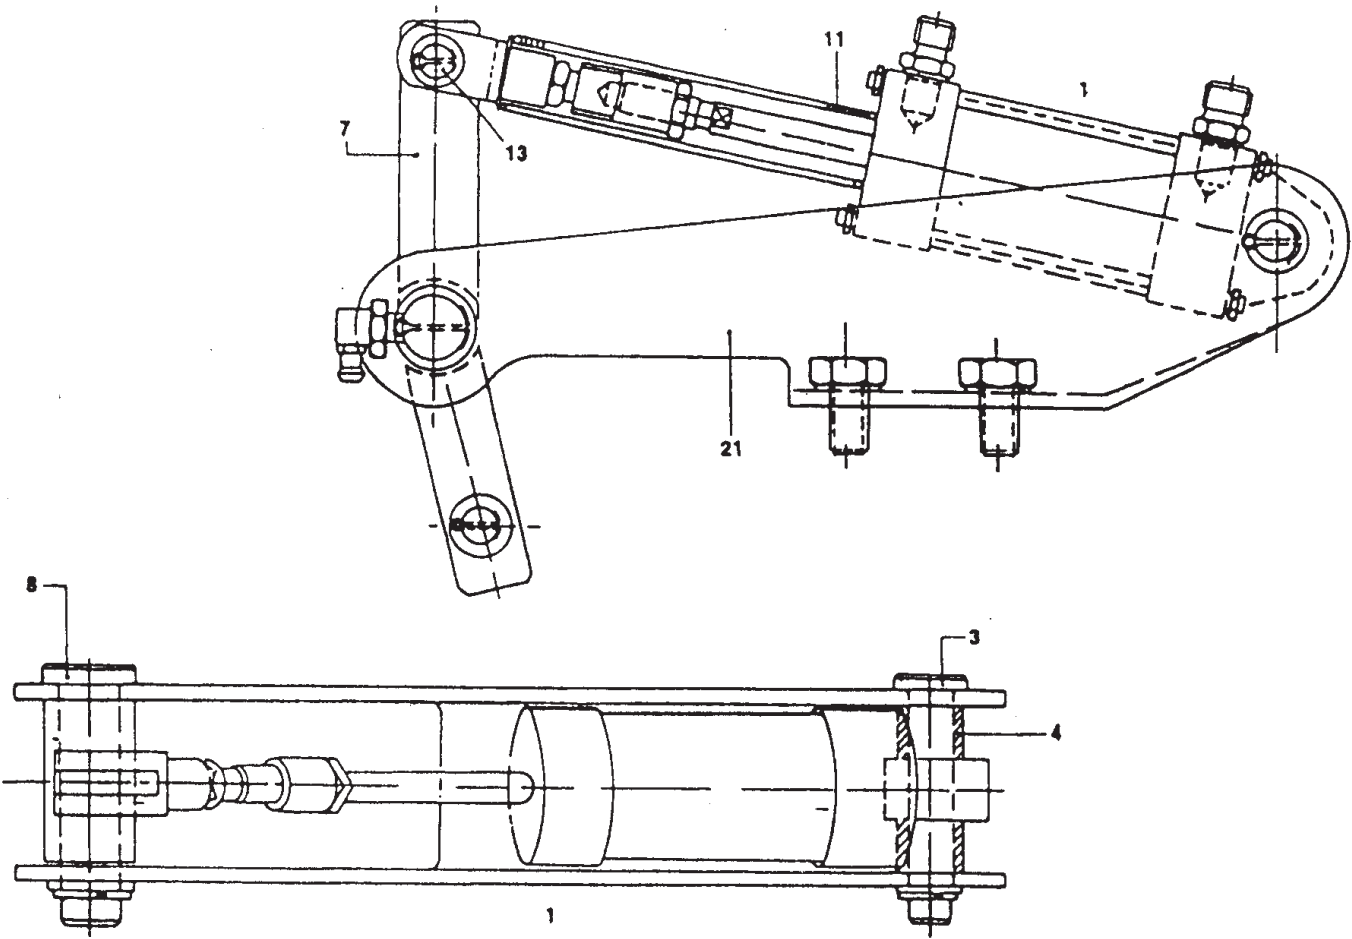


TABLE 26.5

PNEUMATIC SHIFTING CYLINDER

GROUP 26

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		PNEUMATIC SHIFTING CYLINDER												For PTO application
1	2575 4520 01 01	Assembly Pneumalic Shifting Cylinder								1				
—	2641 5420 99 48	Magnetic Valve								1				
21	2643 2640 01 09	Assy. Bracket (Pn.Shifting Cylinder Mtg.)								1				
3	2575 2640 67 02	Pin (Shift Cyl.To Bracket)								1				
4	2575 2640 86 01	Sleeve (Shift Cyl. To Bracket)								2				
7	2643 2640 01 08	Assy Lever								1				
8		Pin								1				Not Serviced
11		Pressure Spring								1				Not Serviced
13	2594 4411 67 02	Clevis Pin								1				
—	2594 4411 86 02	Spacer								2				
—	2078 4310 01 33	Assy Tube								1				

TABLE 29.1

CLUTCH AND BRAKE CONTROLS

GROUP 29

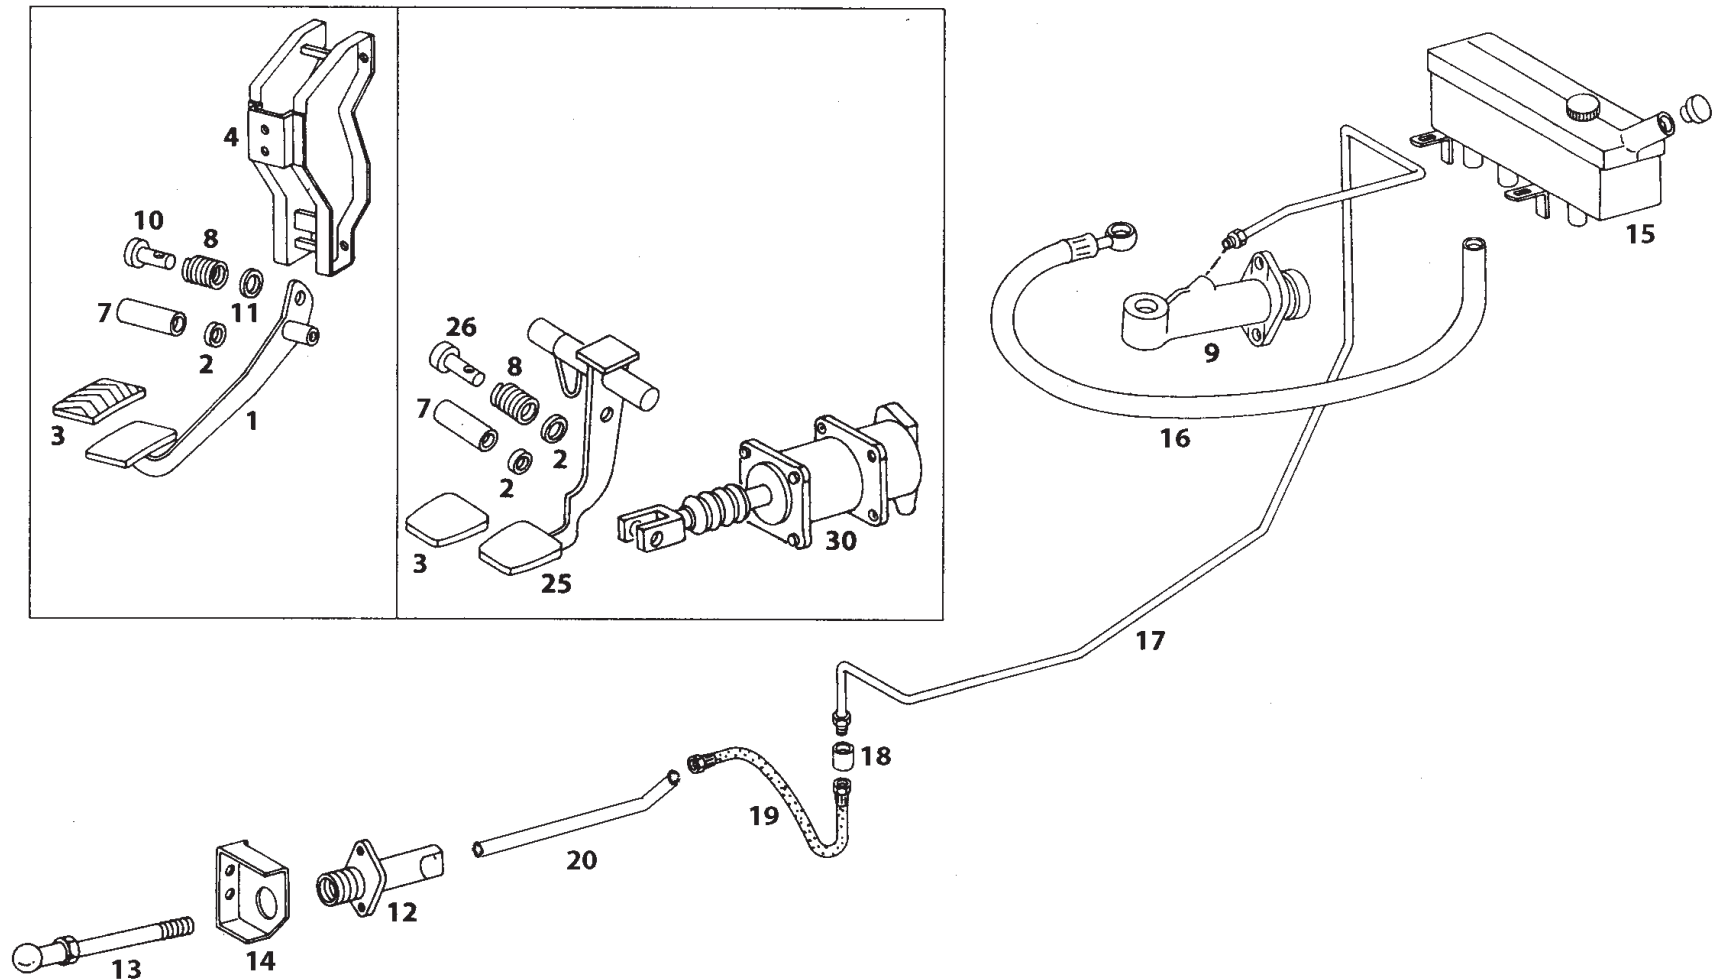


TABLE 29.1
CLUTCH AND BRAKE CONTROLS
GROUP 29

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		CLUTCH AND BRAKE CONTROLS												
1	2643 2910 01 05	Assy. Clutch Pedal Complete	1											
2	2651 2910 34 01	Sintered Bush	2											
3	2651 2910 77 03	Rubber Cover	1											
4	2643 2910 01 01	Assy. Support Complete (Clutch)	1											
7	2641 2910 86 02	Spacer	1											
8	2641 2910 87 01	Torsion Spring	1											
9	2618 2910 01 07	Assy. Clutch Master Cyl. 25.4 Dia	1											
—	2643 2910 01 04	Assy. Fork with Rod (Master Cyl.)	1											
10	2641 2910 67 02	Clutch Pedal Pin	1											
11	2641 2910 63 01	Bush (Clutch pedal)	1											
12	2573 2910 01 54	Assy. Clutch Slave Cylinder	1											
13	2643 2930 01 02	Assy Push Rod	1											
14	2093 2930 01 01	Assy Bracket	1											
15	2641 2910 01 73	Brake Fluid Reservoir	1											
16	2641 4280 58 04	Rubber Hose	1											
17	2153 2910 01 04	Assy Pipe						1	1	1	1	1	1	
17	2154 2910 01 01	Assy Pipe								1	1	1	1	For Cowl Version
17	2154 2910 01 01	Assy Pipe		1	1	1	1							
18	2641 4280 68 02	Adaptor	1											

TABLE 29.1

CLUTCH AND BRAKE CONTROLS

GROUP 29

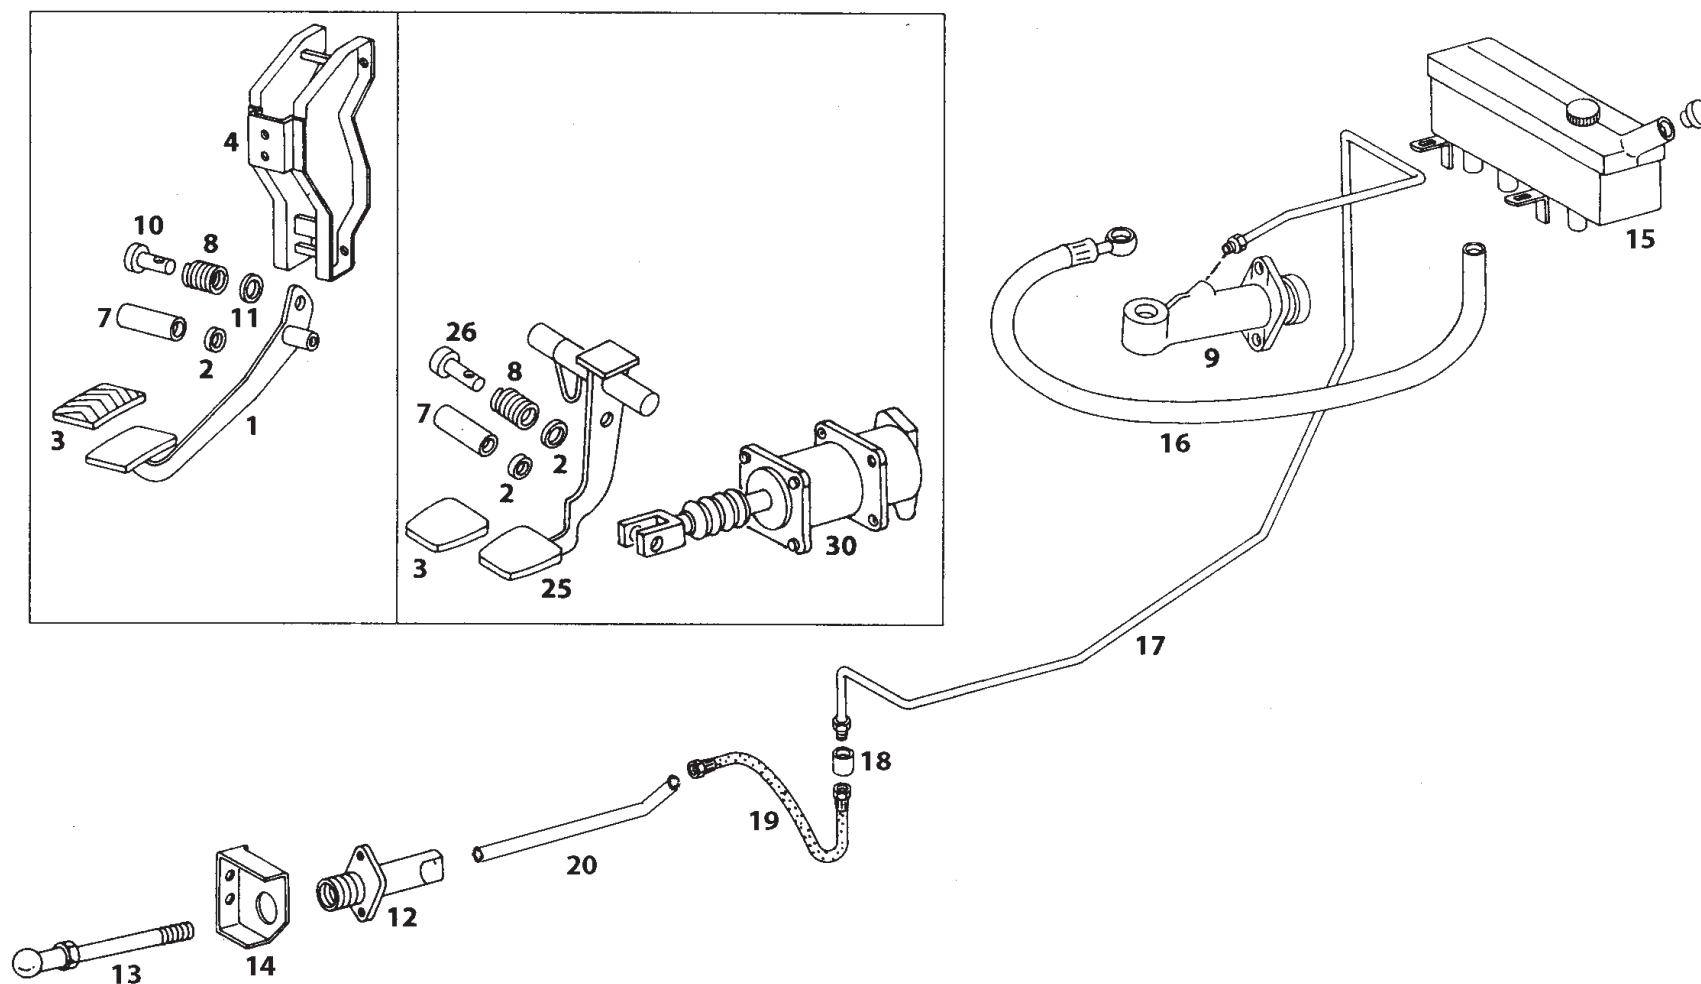


TABLE 29.1
CLUTCH AND BRAKE CONTROLS
GROUP 29

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
19	2699 2910 01 69	Assy Hose	2											For Cowl Version
20	2153 2910 01 05	Assy Pipe						1	1	1	1	1	1	
20	2153 2910 01 03	Assy Pipe								1	1	1	1	
20	2153 2910 01 03	Assy Pipe		1	1	1	1							
—	2651 2910 01 25	Assy Clutch Hose		1	1	1	1			1	1	1	1	
—	2574 4295 51 01	Elbow		1	1	1	1							
—	2573 4290 68 21	Elbow		1	1	1	1			1	1	1	1	
25	2641 2910 01 89	Assy. Brake Pedal Complete	1											
2	2651 2910 34 01	Sintered Bush	2											
3	2651 2910 77 03	Rubber Cover	1											
—	2641 2910 99 02	Sleeve	1											For w/o Face Vehicle
7	2641 2910 86 02	Spacer	1											
8	2641 2910 87 01	Torsion Spring	1											
26	2641 2910 67 03	Brake Pin	1											
30	2782 4370 01 59	Dual Brake Valve						1	1	1	1	1	1	
30	2641 4370 01 02	Dual Brake Valve		1	1	1	1							
—	2641 2910 01 86	Assy.Cover (Control)	1											
—	2618 2910 01 09	Major Repair Kit for M/Cyl. Consisting of	1											
		Plunger	1											
		Seal	1											

TABLE 29.1

CLUTCH AND BRAKE CONTROLS

GROUP 29

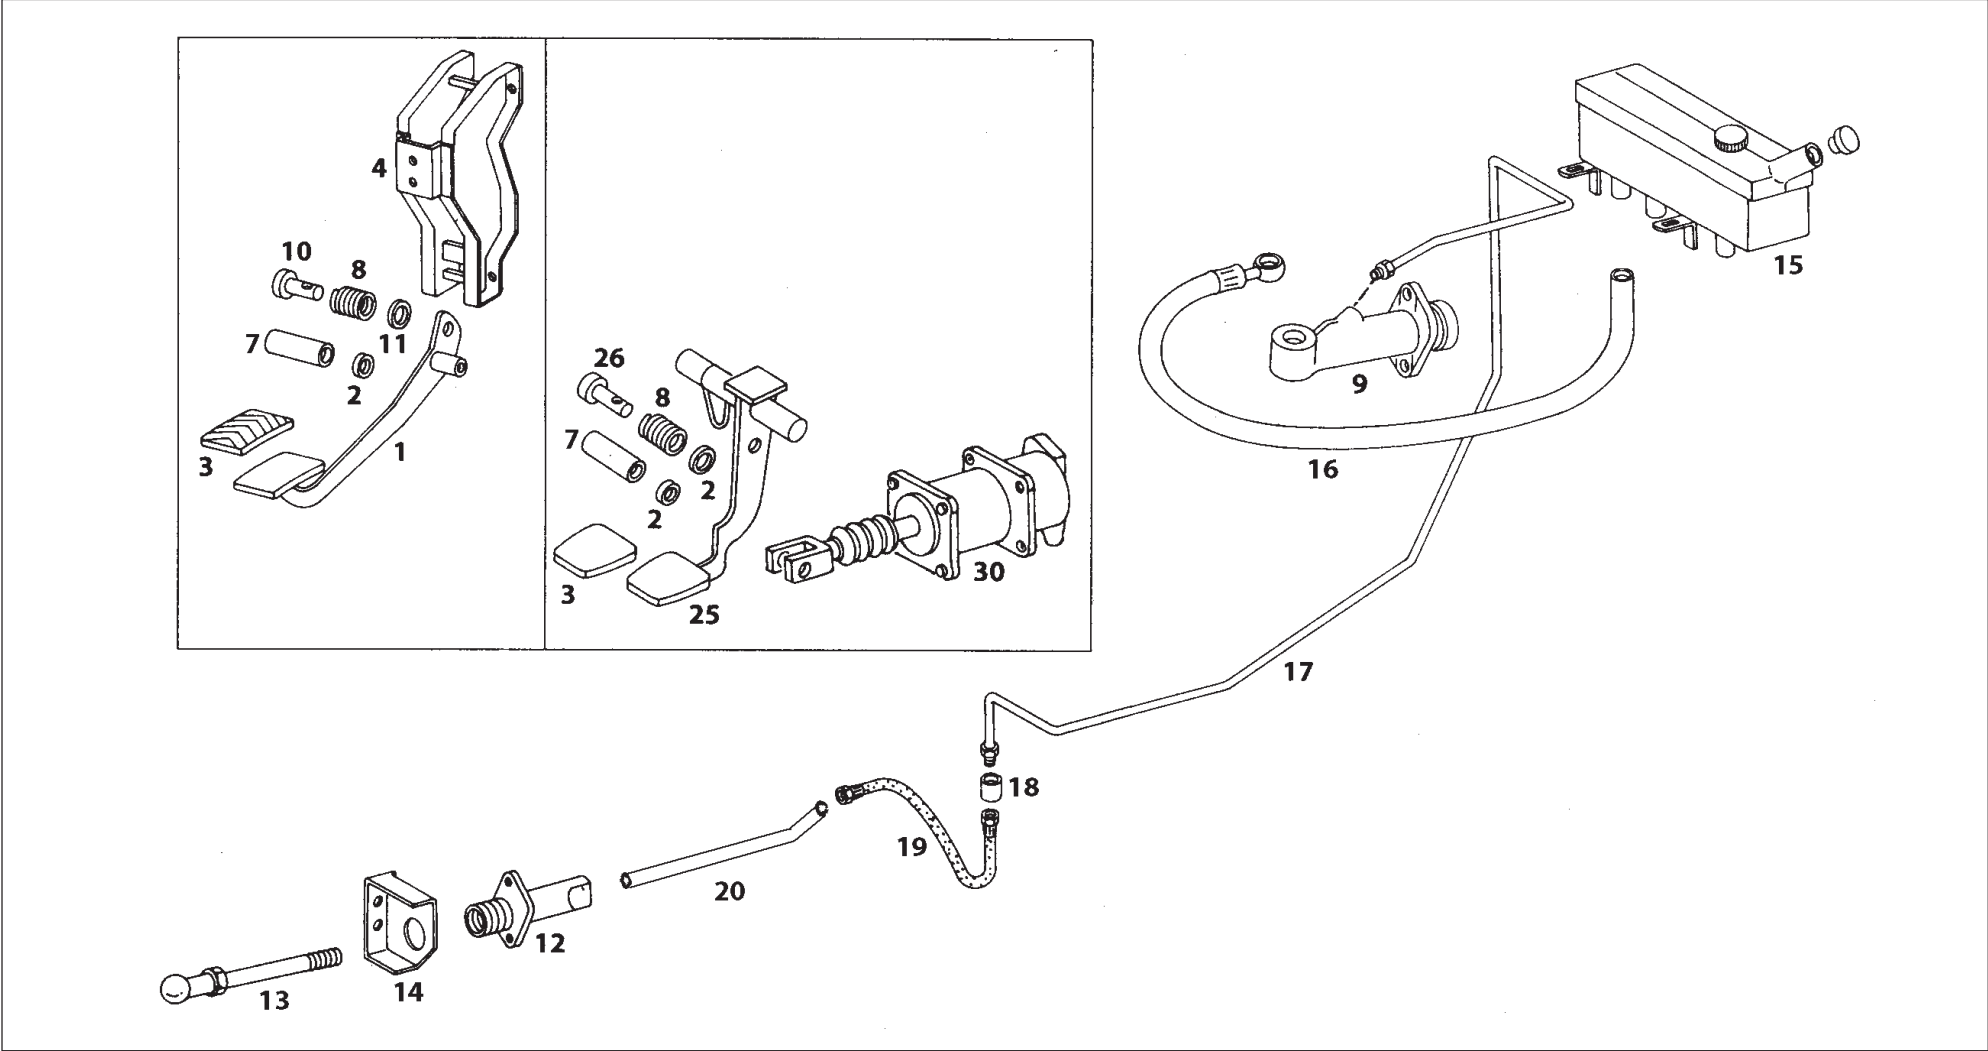


TABLE 29.1

CLUTCH AND BRAKE CONTROLS

GROUP 29

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	2618 2910 01 10	Shim	1											
		Seal	1											
		Spring	1											
		Circlip	1											
		Seal (for Fluid Tank)	1											
		Dust Cover	1											
		Minor Repair Kit for M/Cyl. Consisting of :	1											
		Seal	1											
		Seal	1											
		Seal (for Fluid Tank)	1											
—	2573 2910 01 61	Dust cover												
		Repair Kit for Slave Cylinder,Consisting of:	1											
		Circlip	1											
		Gland Seal	1											
		Dust Cover	1											
		Grease Tube	1											

TABLE 30.1

ACCELERATOR CONTROL

GROUP 30

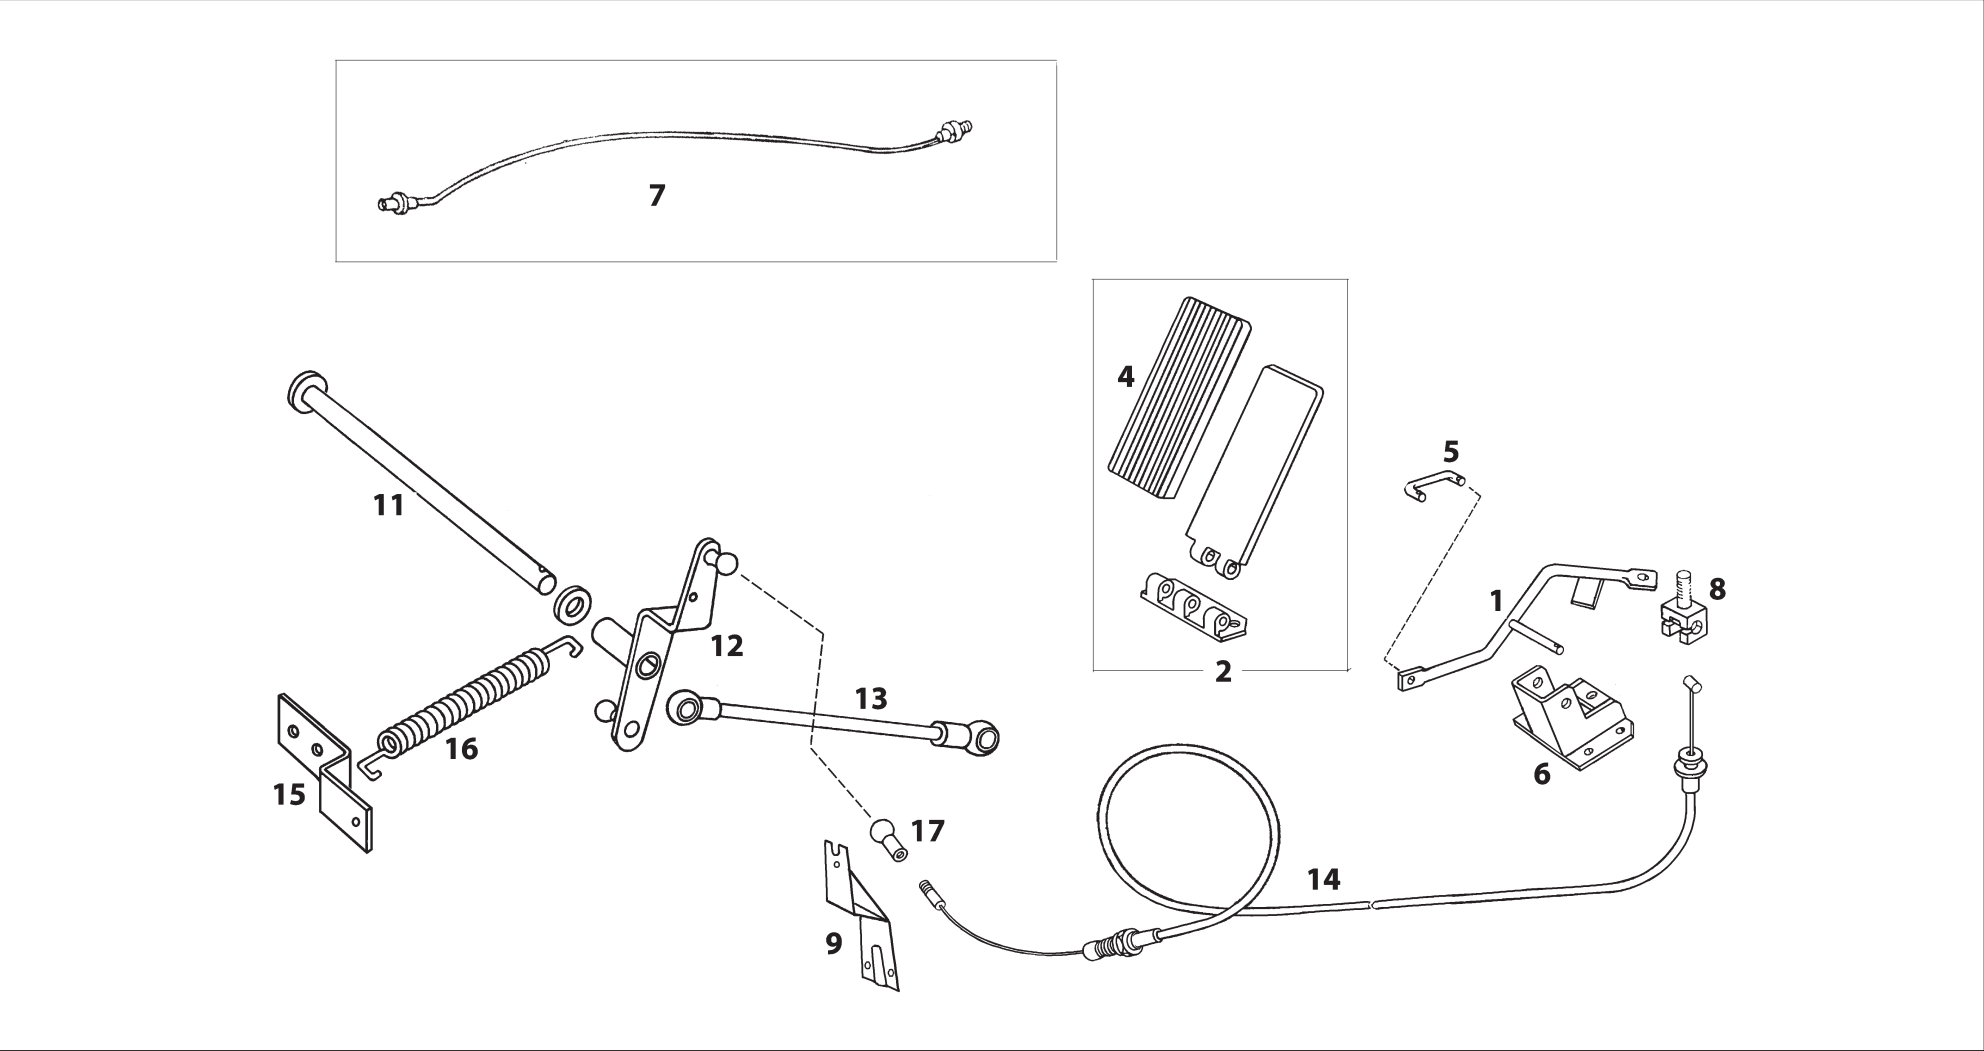


TABLE 30.1

ACCELERATOR CONTROL

GROUP 30

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		ACCELERATOR CONTROL												
1	2641 3010 01 27	Assy. Pedal Lever Accelerator	1											
2	2641 3010 01 35	Assy. Accelerator Pedal Plate with Cover	1											
4	2641 3010 77 01	Cover (For Accl. Pedal)	1											
5	2641 3010 60 04	Link Rod	1											
6	2641 3010 01 26	Assy. Bracket Accelerator	1											
7	2705 3010 01 11	Assy. Pull Cable Accelerator	1											
—	1727 120100 1	Ball End Assy B10	1											
—	1445 060100 5	Locking Ring 10	1											
8	2641 3010 99 02	Fork	1											
—	2654 4270 01 44	Assy. Clip with PVC Sleeve (Clamping of Accl. Cable)	1											
		MECHANICAL ENGINE STOP												
7	2093 3010 01 06	Assy. Pull Cable (Accelerator)								1		1		
—	000 991 05 22	Ball End (40 mm)								1		1		
—	1445 060100 5	Locking Ring 10								1		1		
9	2093 3010 01 07	Assy. Bracket Accl. Cable Mounting								1		1		
11	2093 3010 01 04	Assy. Control Shaft With Bracket								1		1		
12	2093 3010 01 01	Assy. Lever with Bush								1		1		
13	2093 3010 01 05	Assy. Pull Rod								1		1		
14	2093 3020 01 01	Assy. Cable Complete (Engine Stop)								1		1		

TABLE 30.1

ACCELERATOR CONTROL

GROUP 30

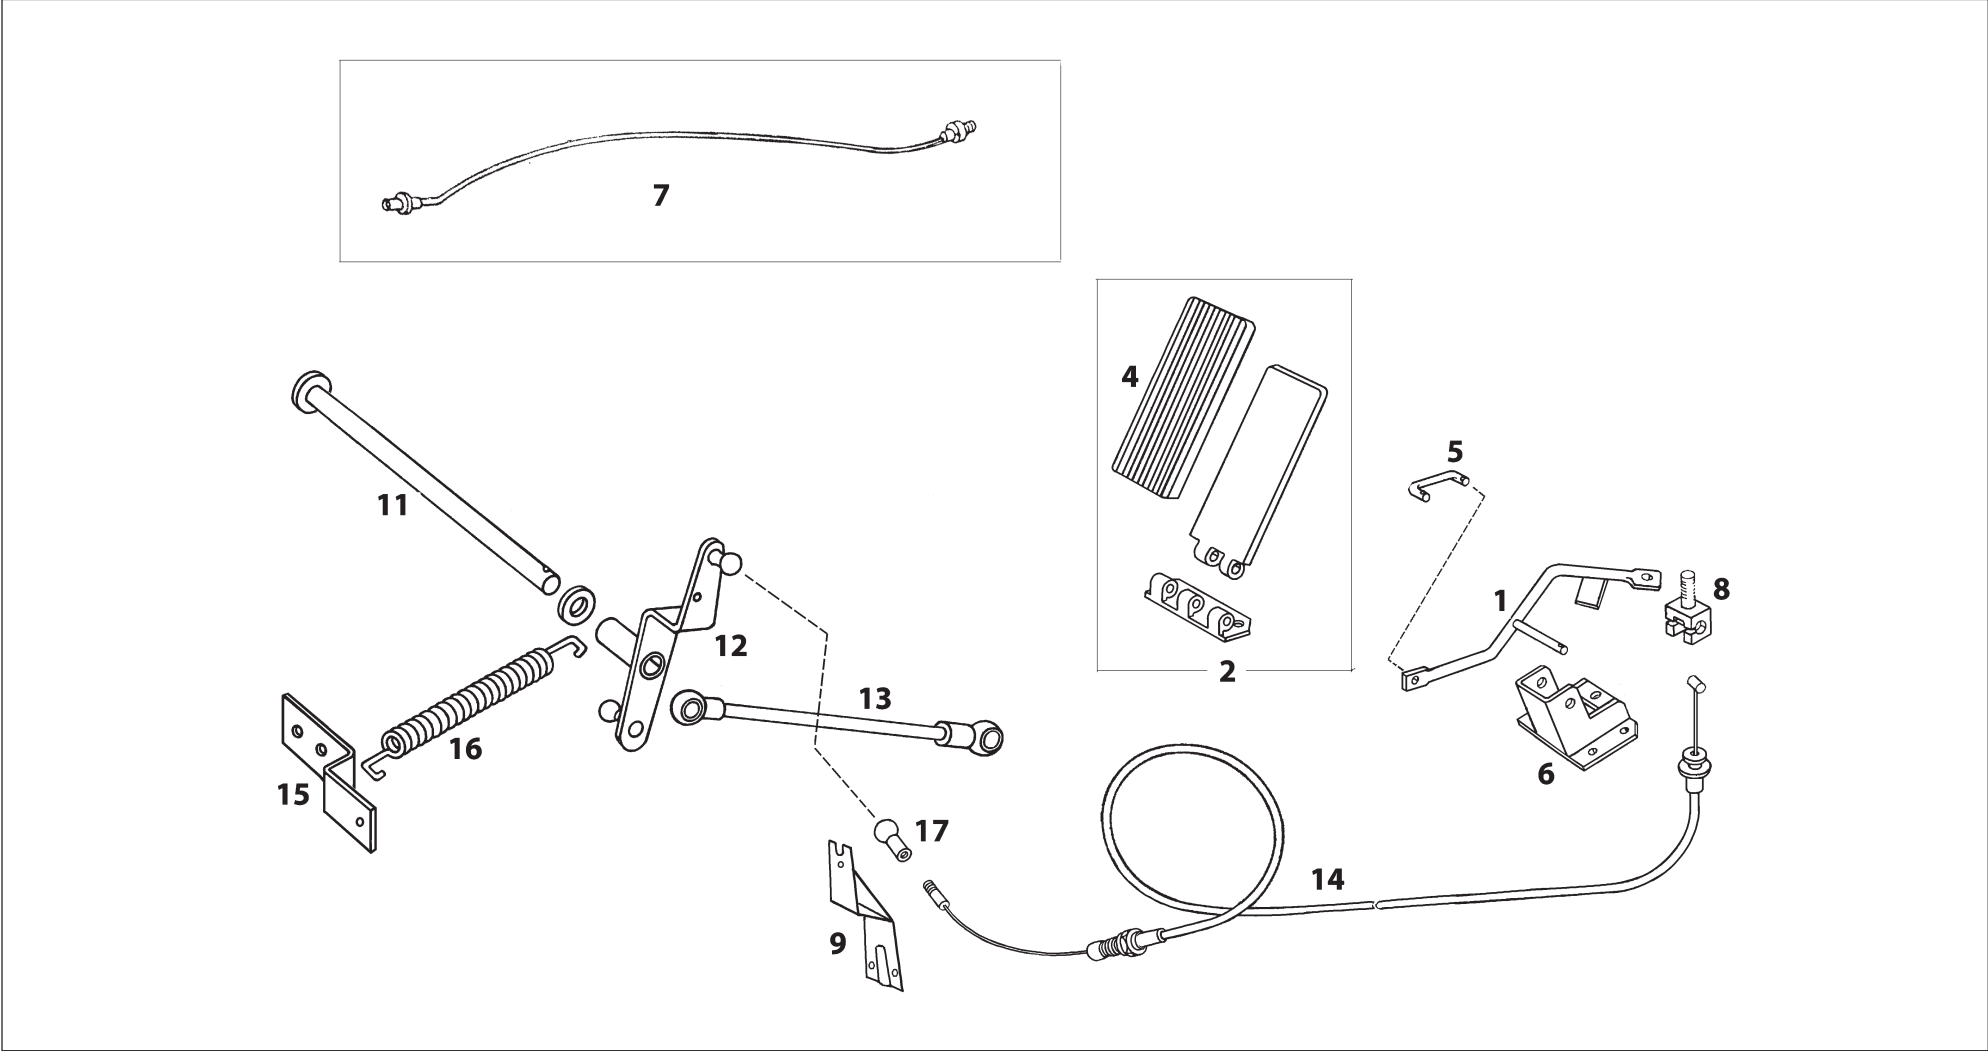


TABLE 30.1

ACCELERATOR CONTROL

GROUP 30

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
17	000 991 05 22	Ball End (40 mm)								1		1		
—	1445 060100 5	Locking Ring 10								1		1		
15	2093 3010 33 02	Bracket								1		1		
16	322 993 03 10	Return Spring								1		1		

TABLE 31.1

FRAME

GROUP 31

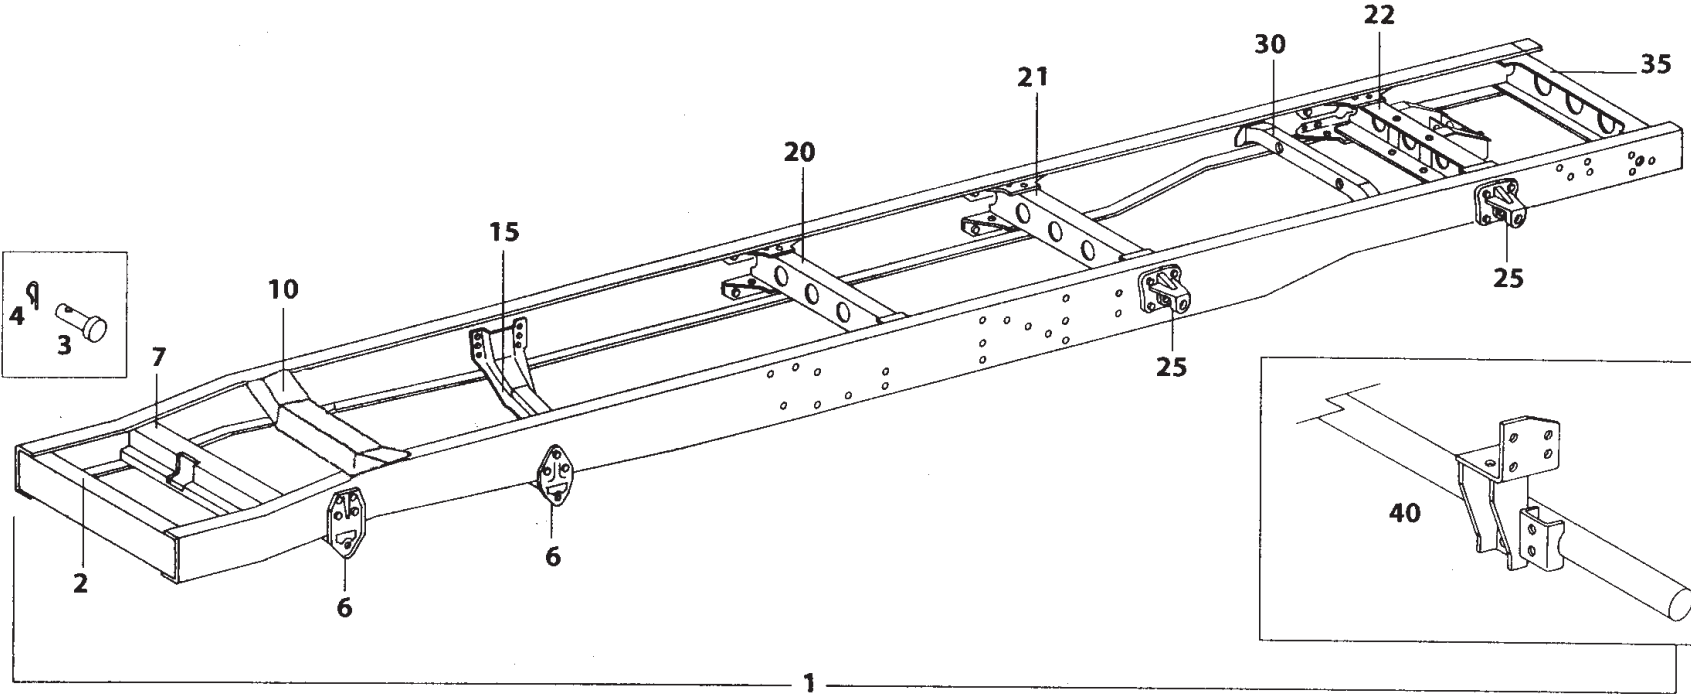


TABLE 31.1

FRAME

GROUP 31

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		FRAME												
1	2153 3170 01 16	Assy. Frame Complete						1						
1	2153 3100 01 03	Assy. Frame Complete		1	1									
1	2153 3170 01 10	Assy. Frame Complete								1	1			
1	2153 3170 01 11	Assy. Frame Complete							1			1	1	
1	2153 3100 01 02	Assy. Frame Complete				1	1							
2	2093 3120 01 12	Assy. Cross Member Front (With Towing Hook)	1											
3	2064 3140 67 01	Pin	1											
4	2651 3140 67 02	Pin	1											
6	042 322 04 01 J	Front Spring Bracket Front & Rear	4											
—	2154 3120 71 01	Reinforcement Frt.Spring Bkt.RH	2											
—	321 990 19 01	Hex Screw (Spg Hanger Bkt to Long Member)	12											
7	2064 3120 82 01	Cross Member (2nd)	1											
—	2064 3120 01 04	Assy. Bracket (RH) Eng. Mtg. C.M. Frt	1											
—	2064 3120 01 05	Assy. Bracket (LH) Eng. Mtg. C.M. Frt	1											
10	2064 3120 01 06	Assy. Cross Member Front Eng. Mtg.	1											
—	2576 3120 82 11	Packing Plate 3 Thk	AR											
—	2576 3120 82 12	Packing Plate 1.5 Thk	AR											
—	2064 3120 82 10	Packing Plate 0.5 Thk								AR	AR			
—	2064 3120 82 11	Packing Plate 1 Thk								AR	AR			

TABLE 31.1

FRAME

GROUP 31

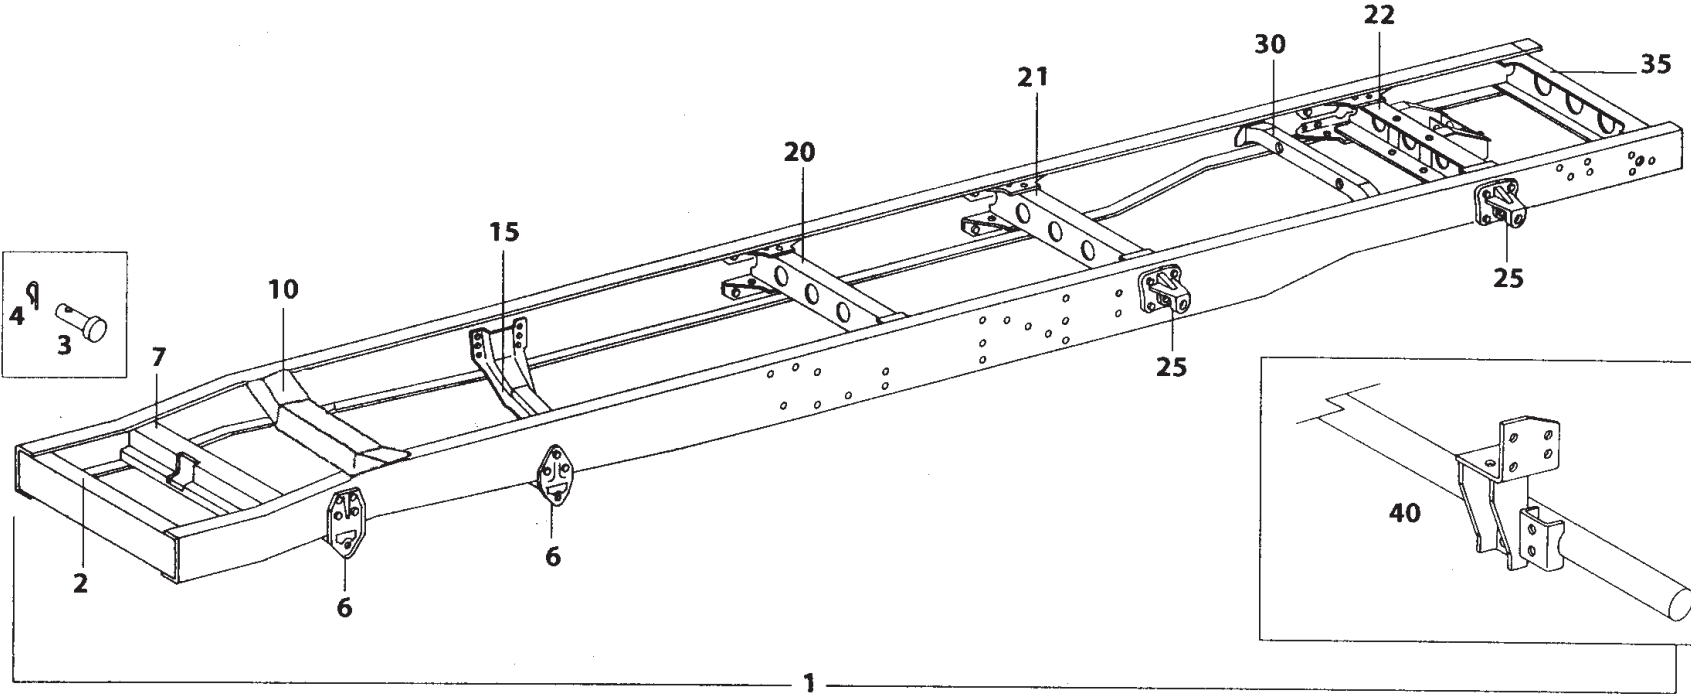


TABLE 31.1
FRAME
GROUP 31

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	2064 3120 82 12	Packing Plate 2 Thk								AR	AR			
—	2093 3120 71 22	Reinforcement LH		1	1			1		1	1			
—	2093 3120 71 23	Reinforcement RH		1	1			1		1	1			
—	2153 3120 71 01	Reinforcement RH				1	1		1			1	1	
—	2153 3120 71 02	Reinforcement LH				1	1		1			1	1	
—	2093 3120 71 20	Support LH	1											
—	2093 3120 71 21	Support LH (Top Flange)	1											
—	2153 3120 71 03	Reinforcement R.H. (Bottom)				1	1		1			1	1	
—	2153 3120 71 04	Reinforcement L.H. (Bottom)				1	1		1			1	1	
15	2093 3120 01 07	Assy. Engine Cross Member (Rear)	1											
—	2093 3120 01 08	Assy. Support (Frt) LH	1											
—	2093 3120 01 09	Assy. Support (Frt) RH	1											
—	2093 3120 01 05	Assy. Support (Rear) LH	1											
—	2093 3120 01 06	Assy. Support (Rear) RH	1											
20	2573 3120 82 16	Cross Member		1	1			1		1	1			
21	2573 3120 82 16	Cross Member		1	1			1		1	1			
20	2153 3120 01 01	Assy. Cross Member				1	1		1			1	1	
21	2153 3120 01 02	Assy Cross Member				1	1		1			1	1	
—	042 312 16 52 J	Support Top		4	4			4		4	4			
—	2573 3120 71 01	Support Bottom		4	4			4		4	4			

TABLE 31.1

FRAME

GROUP 31

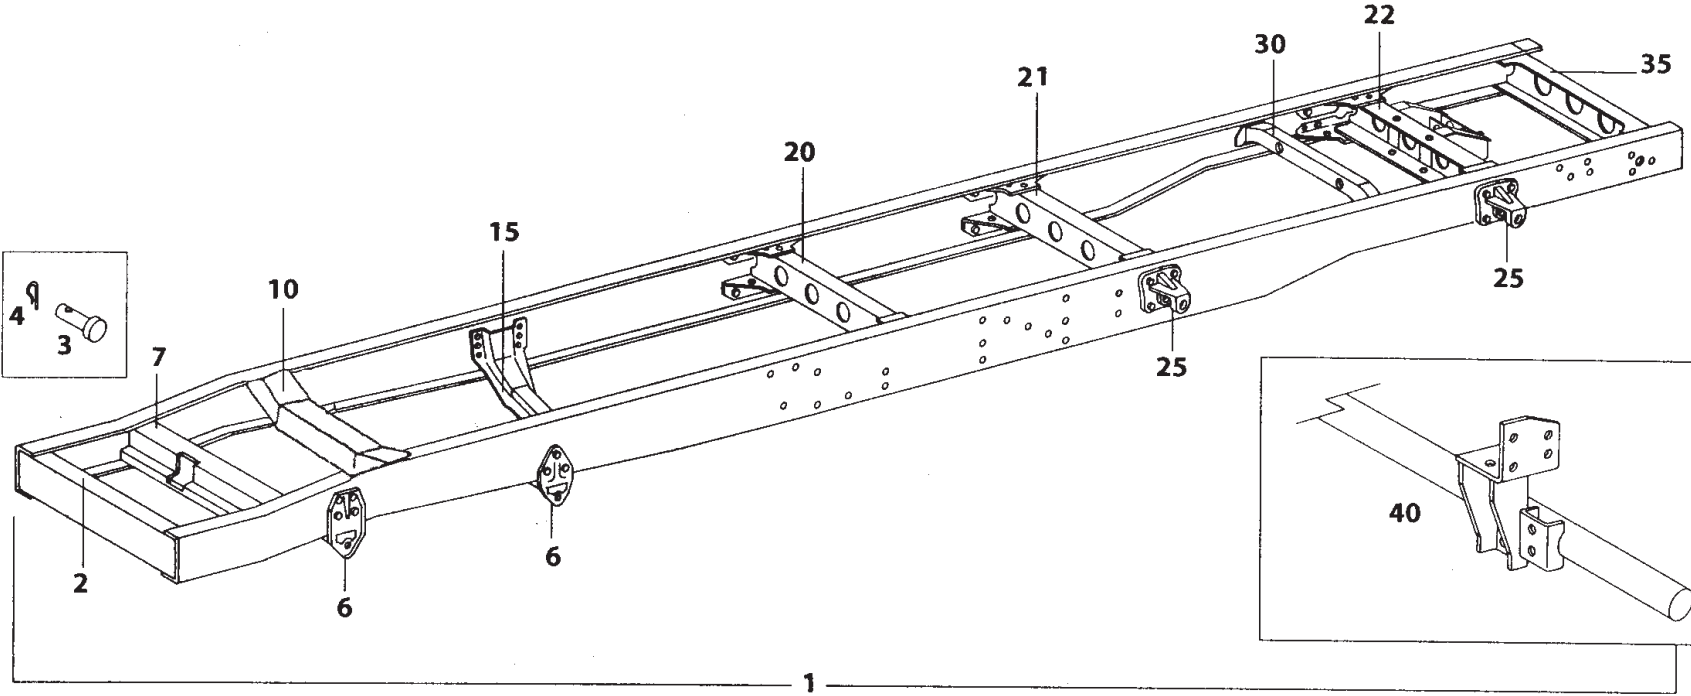


TABLE 31.1
FRAME
GROUP 31

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	042 312 00 76 J	Washer		8	8			8		8	8			
—	2150 3120 71 25	Reinforcement Front RH(Bottom)				1	1	1	1			1	1	
—	2150 3120 71 27	Reinforcement Rear RH(Bottom)				1	1	1	1			1	1	
—	2150 3120 71 26	Reinforcement Front LH(Bottom)				1	1	1	1			1	1	
—	2150 3120 71 28	Reinforcement Rear LH(Bottom)				1	1	1	1			1	1	
—	2150 3120 71 16	Reinforcement-R.H(Top)				1	1	1	1			1	1	
—	2150 3120 71 17	Reinforcement L.H (Top)				1	1	1	1			1	1	
—	2093 3120 71 05	Reinforcement R.H		1	1					1	1			
—	2093 3120 71 06	Reinforcement R.H		1	1					1	1			
—	2093 3120 71 07	Reinforcement L.H		1	1					1	1			
—	2093 3120 71 08	Reinforcement L.H		1	1					1	1			
22	2573 3120 82 12	Cross Member Rear Spring	2											
—	2571 3120 71 06	Reinforcement(Crossmember Rear Spg)	4											
—	042 312 00 76 J	Washer	16											
25	2604 3240 37 01	Rear Spring Bracket Front & Rear	4											
—	321 990 19 01	Hex Screw	16											
—	2573 3240 33 01	Slide Support						4	4	4	4	4	4	
—	321 325 00 41	Reinforcement Plate						4	2	4	4	2	2	
—	2574 3120 71 14	Spacer						2	1	2	2	1	1	
—	2574 3120 71 15	Spacer						2	1	2	2	1	1	

TABLE 31.1

FRAME

GROUP 31

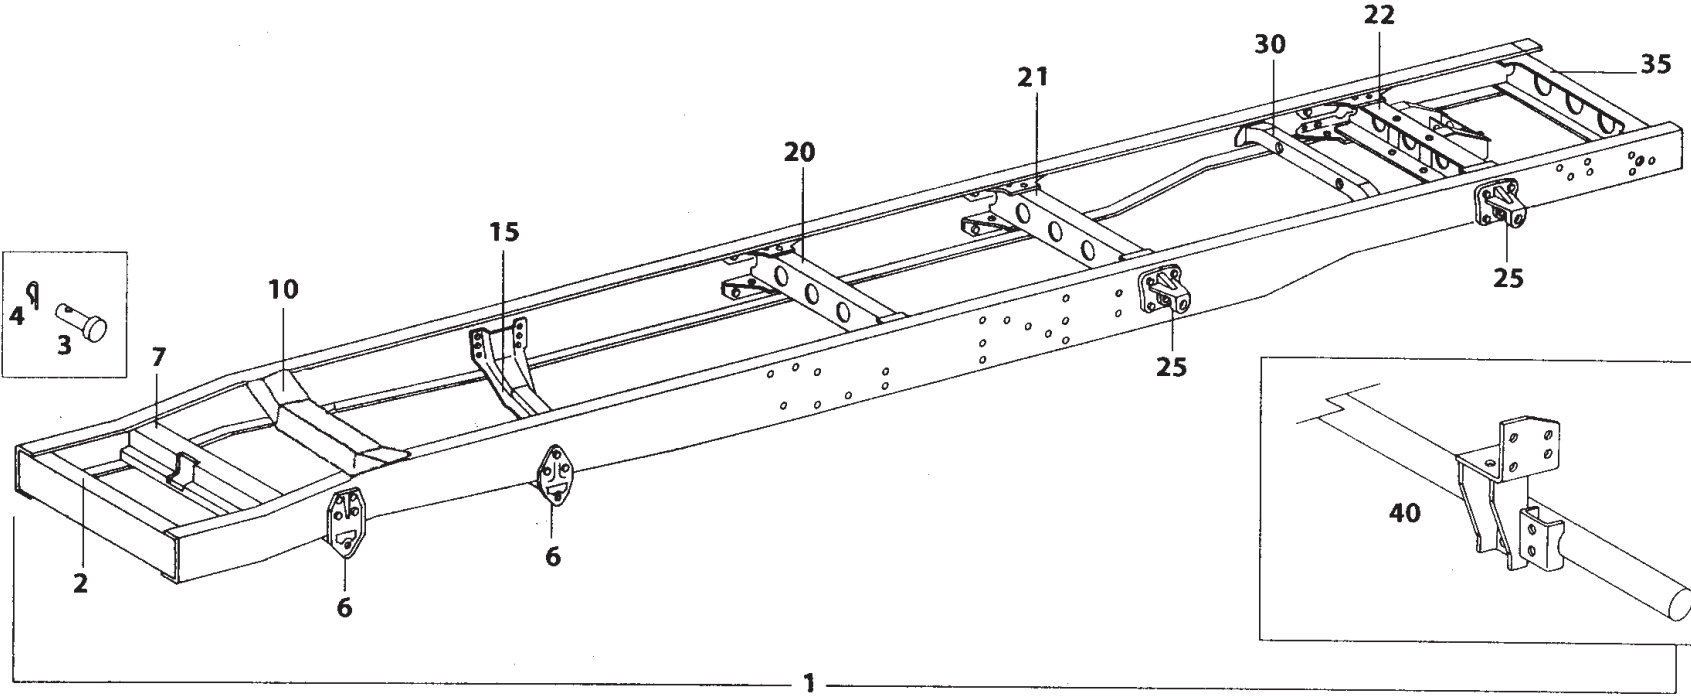


TABLE 31.1

FRAME

GROUP 31

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
30	2571 3120 01 01	Assy Shock Absorber Cross Member		1	1	1	1							
35	2573 3121 71 10	End Cross Member				1	1	1	1			1	1	
35	2610 3120 71 18	End Cross Member		1	1					1	1			
—	2604 3240 01 04	Assy. Rear Bump Stop Bracket		2	2	2	2							
		REAR UNDERRUN PROTECTIVE DEVICE (RUPD)												
40	2153 3170 01 03	Assy. Tube						1	1	1	1	1	1	
—	2153 3170 01 01	Assy. Bracket Compl. RH								1	1			
—	2153 3170 01 02	Assy. Bracket Compl. LH								1	1			
—	2153 3170 01 08	Assy. Bracket Compl. RH						1	1			1	1	
—	2153 3170 01 09	Assy. Bracket Compl. LH						1	1			1	1	
		ENGINE ENCAPSULATION												
—	2153 3170 01 43	Assy Air Deflector			1		1	1	1		1		1	
—	2153 3170 01 34	Assy.Bottom Shield(Radiator Side)			1		1	1	1		1		1	
—	2153 3170 01 44	Radiator Bottom Shield Mtg.Bracket			2		2	2	2		2		2	
—	2153 3170 82 10	Bracket LH Rear For Mtg. Rad.Shield			1		1	1	1		1		1	
—	2153 3170 82 17	Bracket RH Rear For Mtg. Rad.Shield			1		1	1	1		1		1	
—	2153 3170 01 21	Assy.Shield Centrepiece Eng.Encapsulation			1		1	1	1		1		1	
—	2153 3170 01 22	Assy.Side Shield LH Eng.Encapsulation			1		1	1	1		1		1	
—	2153 3170 01 20	Assy.Side Shield RH Eng.Encapsulation			1		1	1	1		1		1	
—	2153 3170 01 36	Assy.Bkt.RH (Front)			1		1	1	1		1		1	

TABLE 31.1

FRAME

GROUP 31

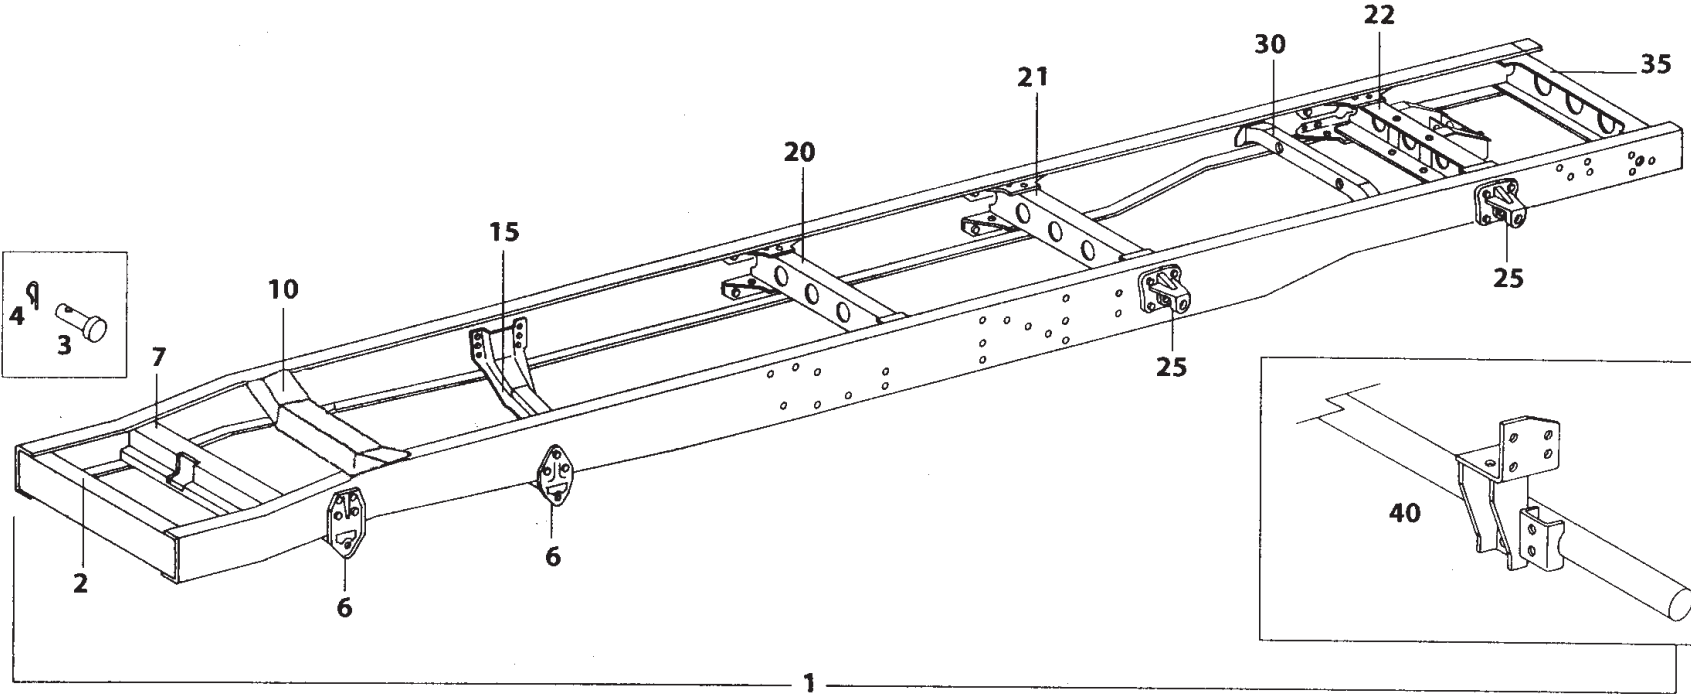


TABLE 31.1
FRAME
GROUP 31

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	2153 3170 01 37	Assy.Bkt.LH(Frt)			1		1	1	1		1		1	
—	2153 3170 01 38	Assy.Bkt.RH(Rear)			1		1	1	1		1		1	
—	2153 3170 01 39	Assy.Bkt.LH (Rear)			1		1	1	1		1		1	
—	2153 3170 01 24	Assy.Bottom Shield G/Box & Clutch			1		1	1	1		1		1	
—	2153 3170 82 07	Bracket RH			1		1	1	1		1		1	
—	2153 3170 82 08	Bracket LH			1		1	1	1		1		1	
—	2153 3170 71 15	Bracket For Gear Box Shield			1		1	1	1		1		1	
—	2153 3170 71 16	Bracket (For GB Shleld) R.H			1		1	1	1		1		1	
—	2153 3170 01 42	Assy.Side Shield RH(between Cab & L/Body)			1		1	1	1		1		1	
—	2153 3170 01 35	Assy.Side Shield LH(between Cab & L/Body)			1		1	1	1		1		1	

TABLE 32.1

FRONT SPRING AND SUSPENSION

GROUP 32

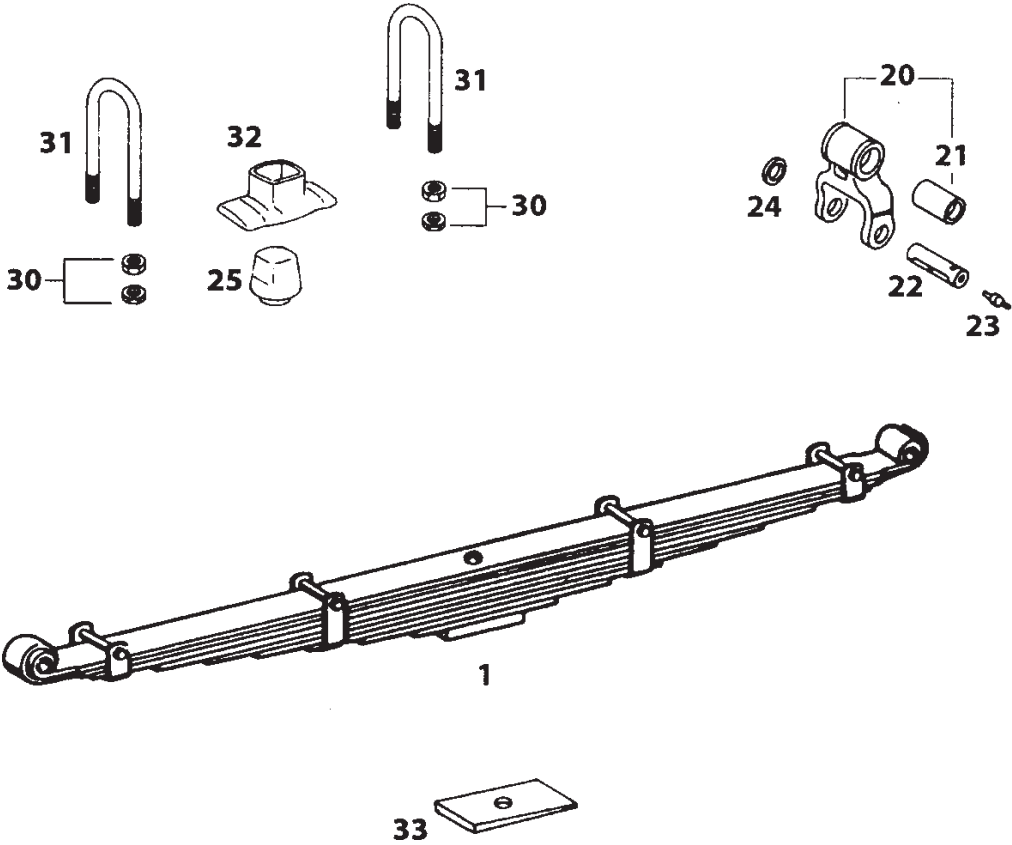


TABLE 32.1
FRONT SPRING AND SUSPENSION
GROUP 32

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		FRONT SPRING AND SUSPENSION												
1	2153 3210 01 11	Assy.Front Spring						2	2					For Power Strg Vehicle
1	2153 3210 01 09	Assy. Front Spring		2	2	2	2			2	2	2	2	
1	2153 3210 01 02	Assy. Front Spring								2				
—	2060 3202 34 01	Bush (For First Leaf)	2											
20	352 320 00 63	Assy. Spring Shackle Front	2											
21	352 322 00 50	Bush	2											
22	352 322 05 30	Spring Pin (To Spg. Bracket Rear)	2											
22	2575 3210 67 01	Spring Pin (To Spg. Bracket Front)	2											
—	2575 3210 63 01	Dust Cap Spring Pin	2											
23	1717 060100 9	Grease Nipple AM 10x1	4											
24	2573 3210 01 07	Assy. Sealing Ring	12											
—	042 990 00 37 J	Cotter Pin	6											
25	352 331 00 44	Rubber Buffer Front Axle	2											
30	1205 169605 9	Hex. Nut M 16x1.5	16											
31	2158 3310 32 01	U Clamp (Front)		4	4	4	4	4	4	4	4	4	4	For Power Strg Vehicle
31	2604 3310 32 01	U Clamp (Front)								4				
32	2060 3310 53 01	Guide Plate Front	2											
33	342 322 00 84	Caster Plate	2											

TABLE 32.2

FRONT SHOCK ABSORBER

GROUP 32

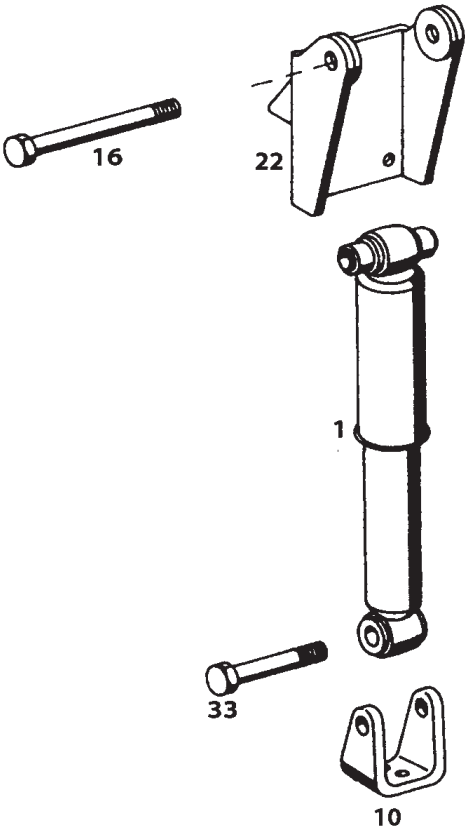


TABLE 32.2

FRONT SHOCK ABSORBER

GROUP 32

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		FRONT SHOCK ABSORBER												
1	2574 3235 01 09	Shock Absorber Front	2											
—	2574 3230 86 02	Bush (Front Shock Absorber)	4											
—	312 323 15 76	Washer (Shock Absorber Fitting)	4											
10	042 323 00 63 J	Bracket Lower (Frt. Shock Absorber)	2											
—	2573 3230 82 01	Locking Sheet (Bracket to Frt Axle Beam)	2											
16	1106 399611 6	Hex. Bolt M 16x1.5x85	2											
22	2153 3230 01 01	Assy. Bracket (LH) Front Shock Absorber	1											
22	2153 3230 01 02	Assy. Bracket (RH) Front Shock Absorber	1											
—	2093 3120 01 03	Assy. Reinforcement Bracket LH	1											
—	2093 3120 01 04	Assy. Reinforcement Bracket RH	1											
33	1106 399621 3	Hex. Bolt M 14x1.5x75	2											

TABLE 32.3

REAR SPRING AND SUSPENSION (TRUCK)

GROUP 32

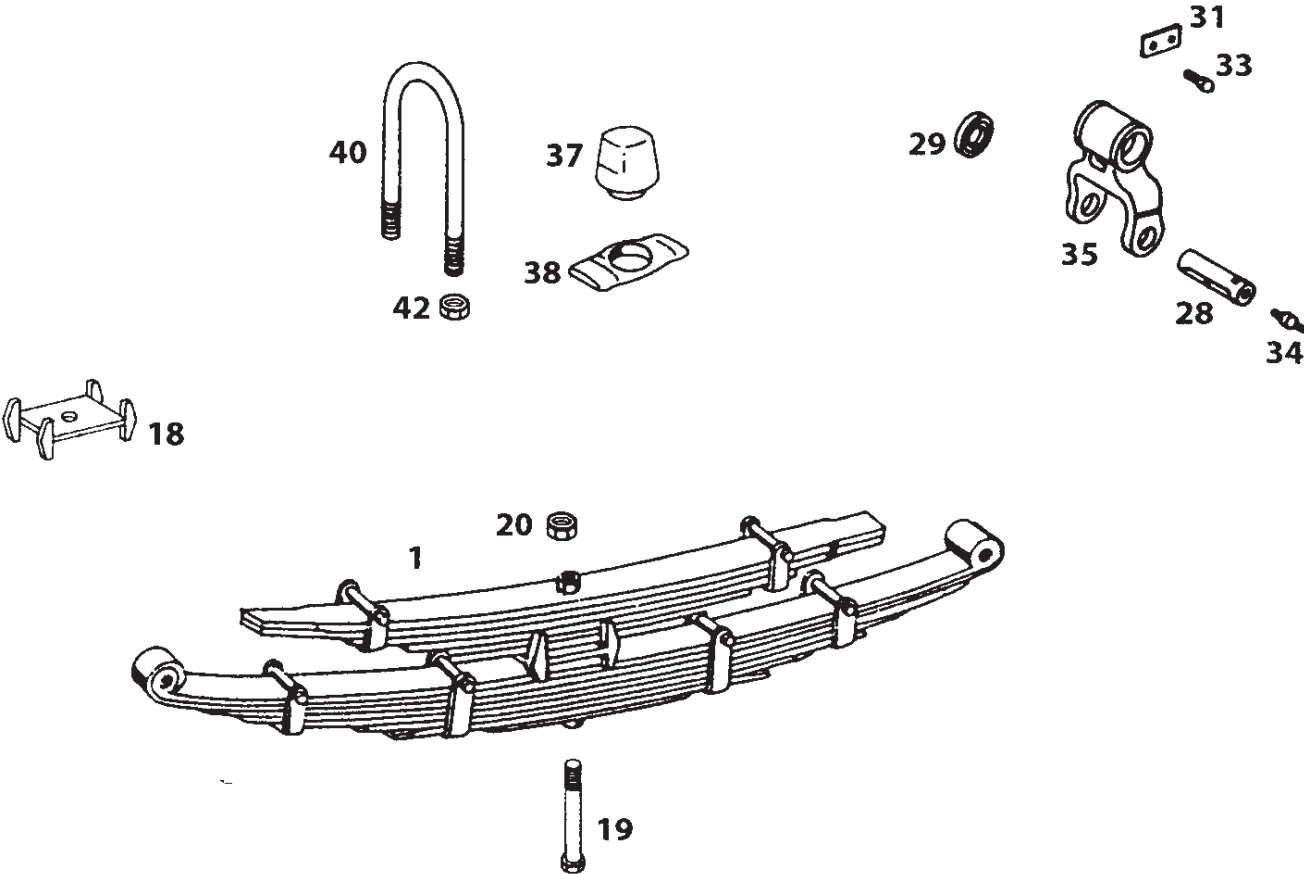


TABLE 32.3
REAR SPRING AND SUSPENSION (TRUCK)
GROUP 32

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		REAR SPRING AND SUSPENSION (TRUCK)												
1	2153 3240 01 05	Assy. Rear Spring with Aux Spring						2	2					
1	2153 3240 01 03	Assy. Rear Spring with Aux Spring								2	2	2	2	
18	340 324 03 35	Support Plate						2	2	2	2	2	2	
19	2153 3240 32 03	Centre Pin						2	2					
19	2153 3240 32 02	Centre Pin								2	2	2	2	
20	1205 229605 4	Hex. Nut M12						2	2	2	2	2	2	
28	2604 3250 67 01	Spring Pin Rear						6	6	6	6	6	6	
29	2573 3210 01 07	Assy. Sealing Ring						12	12	12	12	12	12	
31	312 994 12 09	Lock Plate						6	6	6	6	6	6	
33		Hex. Screw M 8x18						12	12	12	12	12	12	Not Serviced
34	1717 060100 9	Grease Nipple AM 10x1						6	6	6	6	6	6	
35	2604 3250 01 01	Assy. Spring Shackle Rear Spring						2	2	2	2	2	2	
37	2576 3220 77 01	Rubber Buffer												
38	2060 3510 53 01	Guide Plate						2	2	2	2	2	2	
40	2153 3510 32 01	U-Clamp (Banjo)						4	4	4	4	4	4	
42	1205 239602 4	Hex. Nut M 18x1.5						16	16	16	16	16	16	
—	327 997 00 26	Spherical Washer(U Clamp To Spring Saddle)						8	8	8	8	8	8	

TABLE 32.4

REAR SPRING AND SUSPENSION (BUS)

GROUP 32

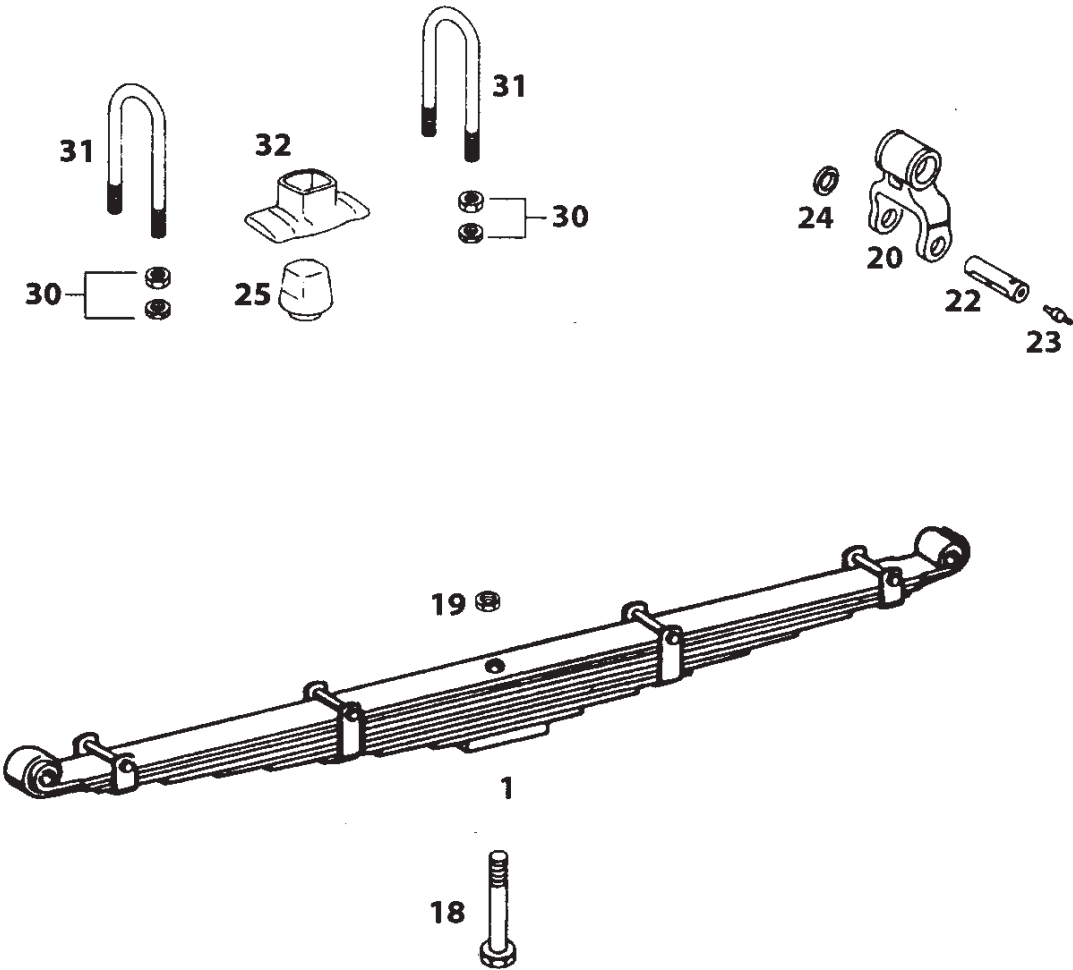


TABLE 32.4
REAR SPRING AND SUSPENSION (BUS)
GROUP 32

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		REAR SPRING AND SUSPENSION (BUS)												
1	2610 3240 01 08	Assy. Main Spring - Rear		2	2	2	2							
18	1108 411275 7	Centre Bolt M 12x137x11		2	2	2	2							
19	1205 229605 4	Hex. Nut M12		2	2	2	2							
20	2604 3250 01 01	Assy. Spring Shackle Rear Spring		2	2	2	2							
22	2604 3250 67 01	Spring Pin Rear		6	6	6	6							
23	1717 060100 9	Grease Nipple AM 10x1		6	6	6	6							
24	2573 3210 01 07	Assy. Sealing Ring		12	12	12	12							
—	312 994 12 09	Lock Plate		6	6	6	6							
25	2576 3220 77 01	Rubber Buffer		2	2	2	2							
30	1205 239602 4	Hex. Nut M 18x1.5		8	8	8	8							
31	2150 3510 32 01	U Clamp (Rear)		4	4	4	4							
32	2604 3240 32 01	Guide Plate		2	2	2	2							

TABLE 32.5

REAR SHOCK ABSORBER (BUS)

GROUP 32

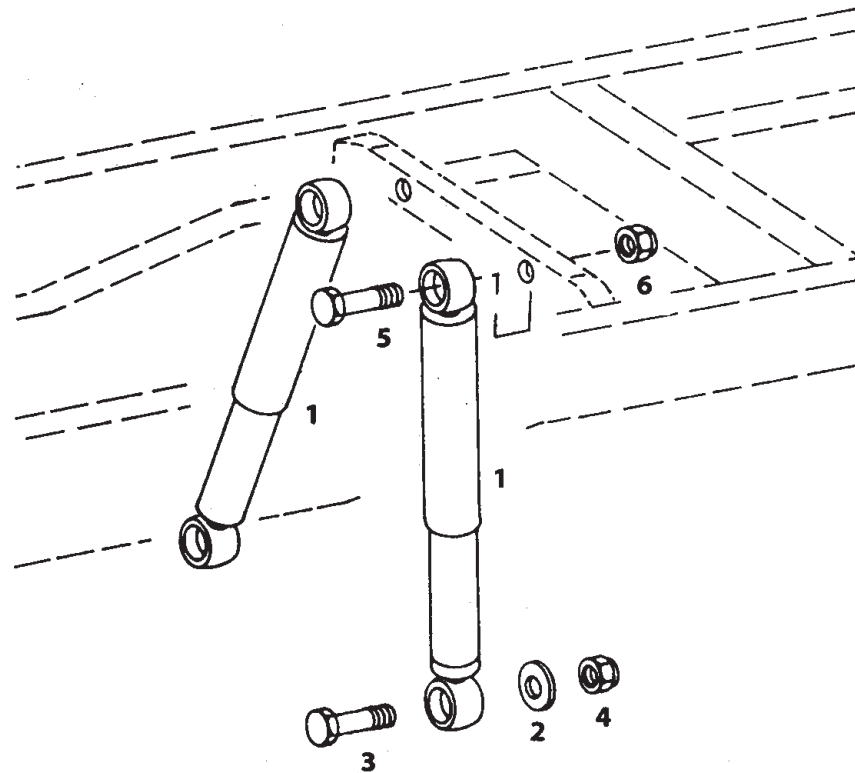


TABLE 32.5

REAR SHOCK ABSORBER (BUS)

GROUP 32

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		REAR SHOCK ABSROBER (BUS)												
1	2618 3260 01 10	Shock Absrober Rear		2	2	2	2							
2	312 323 15 76	Washer (Shock Absorber Fitting)		4	4	4	4							
3	2576 3260 80 02	Mounting Pin		2	2	2	2							
4	1210 220200 5	Castle Nut M 20x1.5		2	2	2	2							
5	2576 3260 80 05	Mounting Pin		2	2	2	2							
—	2573 3260 86 01	Spacer		4	4	4	4							
6	1210 220200 5	Castle Nut M 20x1.5		2	2	2	2							
—	1315 060936 9	Split Pin 4x36		2	2	2	2							
—	2573 3260 37 03	Rear Shock Absorber Bracket RH Bottom		1	1	1	1							
—	2573 3260 37 04	Rear Shock Absorber Bracket LH Bottom		1	1	1	1							

TABLE 32.6

ANTI-ROLL BAR (BUS)

GROUP 32

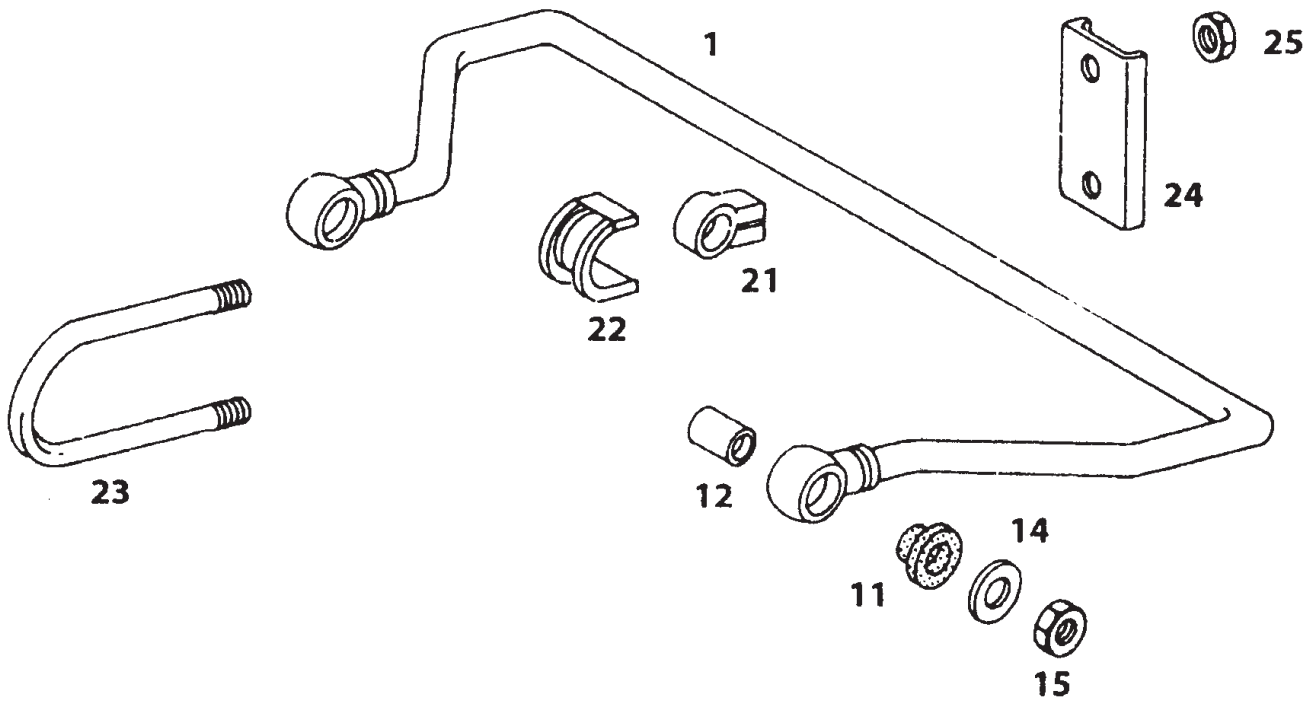


TABLE 32.6

ANTI-ROLL BAR (BUS)

GROUP 32

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		ANTI - ROLL BAR (BUS)												
1	2604 3280 01 03	Anti - Roll Bar Assy.		1	1	1	1							
—	2604 3280 01 01	Shackle Assy.		2	2	2	2							
—	2604 3280 37 01	Bracket		2	2	2	2							
11	2596 3280 77 01	Rubber Bush		8	8	8	8							
12	2596 3280 69 01	Tube		4	4	4	4							
14	1246 050150 2	Bright Washer 15		8	8	8	8							
15	1210 229601 8	Castle Nut M 14x1.5		4	4	4	4							
21	2604 3280 77 04	Bearing Block		2	2	2	2							
22	2604 3280 38 01	Clamp Support		2	2	2	2							
23	2604 3280 42 01	U - Clamp		2	2	2	2							
24	2604 3280 71 03	Clamp Plate		2	2	2	2							
25	1214 050100 8	Nyloc Nut M 10		2	2	2	2							

TABLE 33.1

FRONT AXLE

GROUP 33

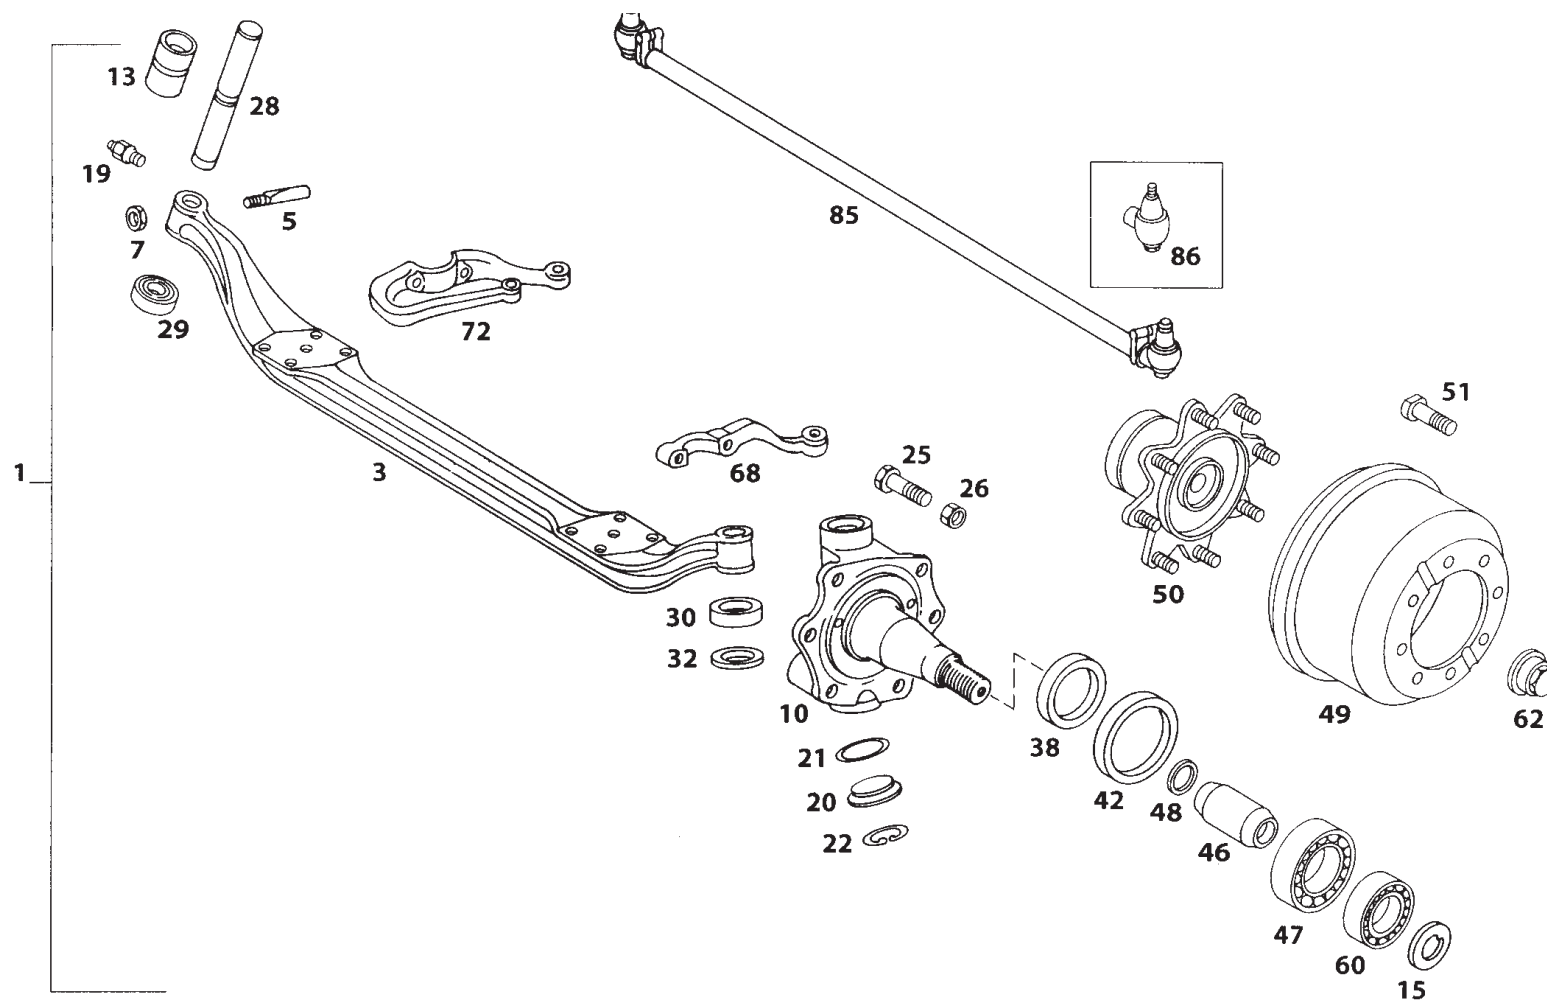


TABLE 33.1
FRONT AXLE
GROUP 33

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		FRONT AXLE												
1	2153 3300 01 01	Assy. Front Axle with Brakes	1											
3	2604 3310 51 05	Front Axle Beam	1											
5	327 990 01 37	Cotter Pin (Stub Axle To Axle Beam)	2											
—	1252 069802 5	Spring Washer B 8	2											
7	1205 150080 4	Nut M 8	2											
10	2153 3320 01 01	Front Stub Axle with Bush	2											
13	321 332 02 49	Bush	4											
—	2060 3320 72 01	Plug (Stub Axle Top)	2											
15	327 332 16 62	Thrust Washer	2											
—	1210 229906 8	Castle Nut M 32x1.5	2											
—	1315 061156 8	Split Pin 6.3x56	2											
19	1717 060100 9	Grease Nipple AM 10x1	4											
20	327 332 00 29	Sealing Cap	8											
21	327 997 01 45	Gasket Ring	4											
22	1458 060420 1	Circlip B 42x1.75	4											
25	1106 399907 7	Hex. Bolt M12x1.5x55	2											
26	1205 169902 3	Nut M 12x1.5	2											
28	327 332 00 06	King Pin 35.00 mm Dia	2											
29	2618 3320 31 01	Taper Roller Thrust Bearing Normal	1											

TABLE 33.1

FRONT AXLE

GROUP 33

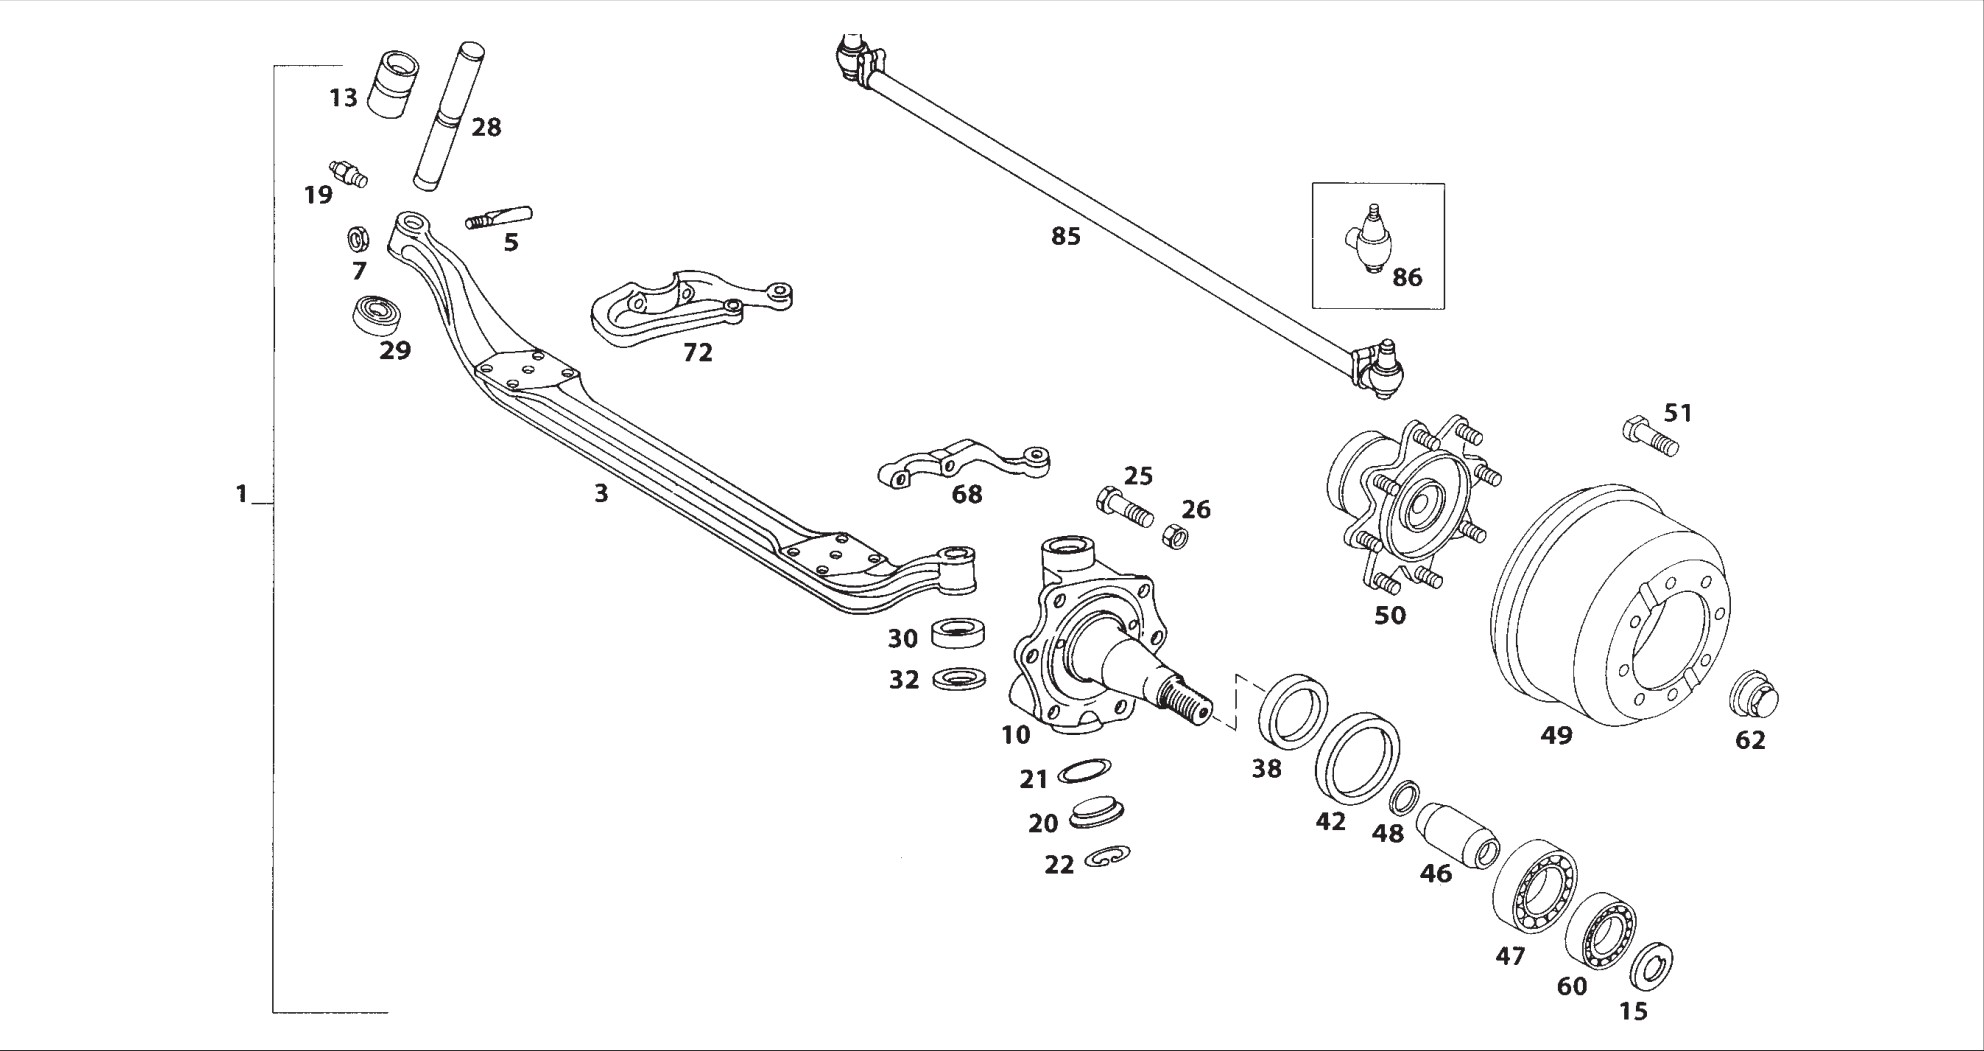


TABLE 33.1

FRONT AXLE

GROUP 33

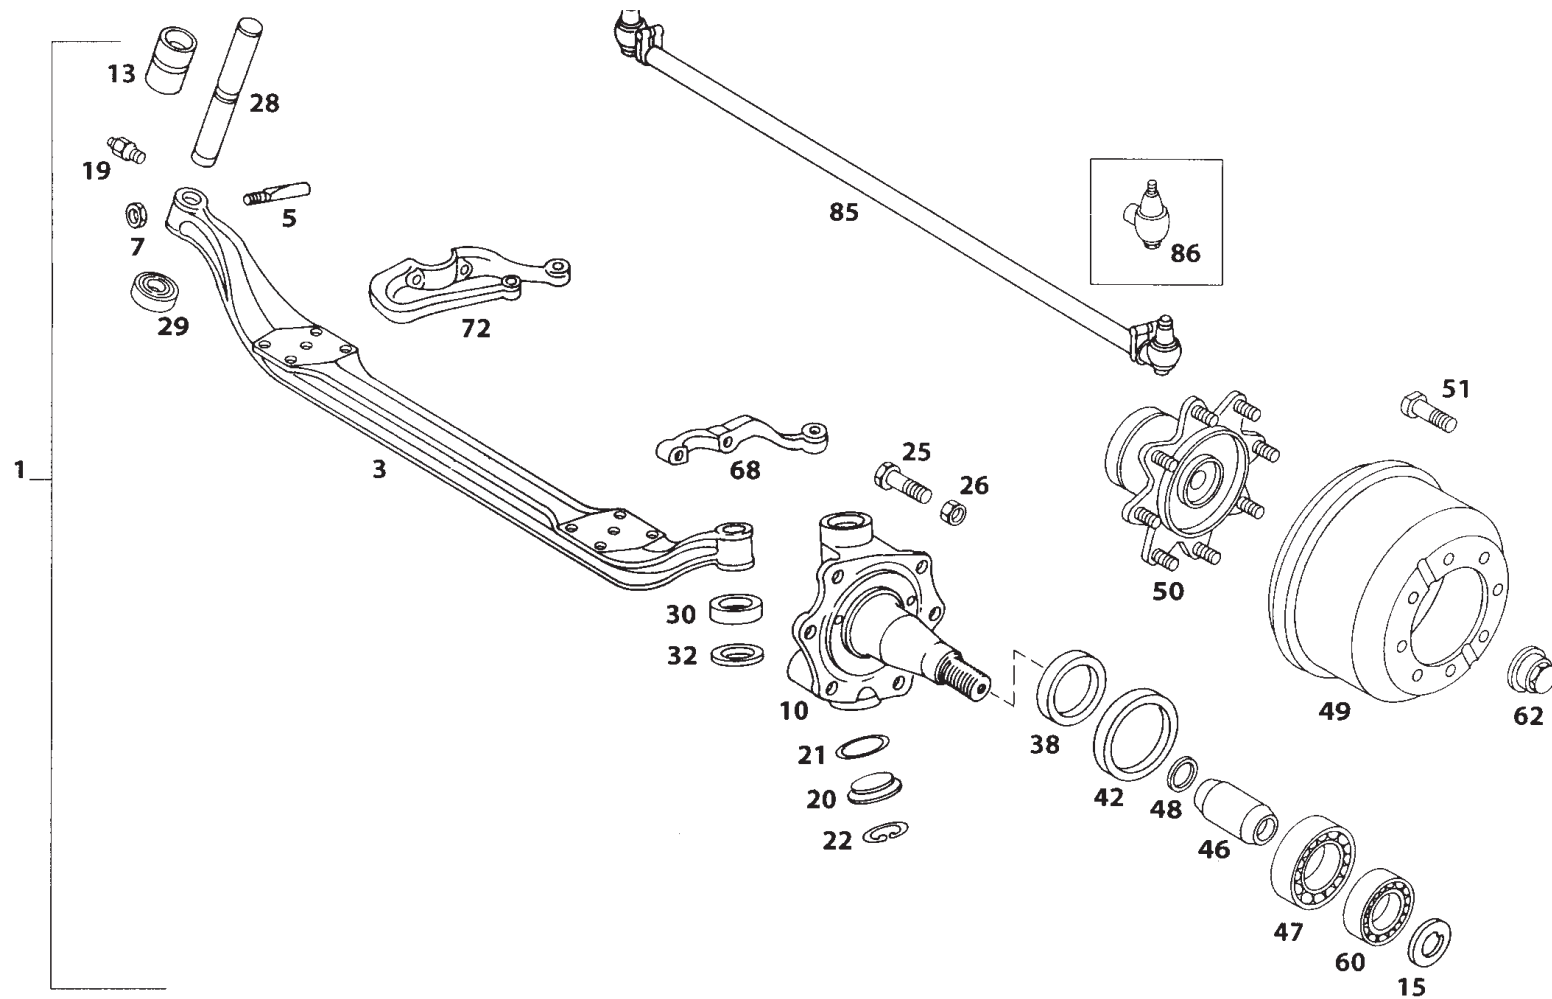


TABLE 33.1
FRONT AXLE
GROUP 33

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
62	2573 3340 37 01	Front Hub Cover	2											
68	2604 3380 51 02	Tie Rod Arm LH	1											
68	2621 3380 51 02	Tie Rod Arm RH	1											
72	2621 3380 51 03	Steering Arm Top	1											
85	2610 3380 01 03	Assy Tie Rod	1											
86	000 338 34 29	Ball Joint RH Thread	1											
86	000 338 26 29	Ball Joint LH Thread	1											
—	000 330 00 03 J	Tie Rod Repair Kit Consisting to :	1											
		Lower Ball Cup	2											
		Upper Ball Cup	2											
		Pressure Spring	2											
		Locking Ring	2											
		Spherical Pin	2											
		Castle Nut	2											
		Seal Cup	2											
—	042 330 00 80 J	King Pin Repair Kit Std.Consisting of :	1											
		King Pin	2											
		Bush	4											
		Sealing Cap	8											
		Gasket Ring	4											

TABLE 33.1

FRONT AXLE

GROUP 33

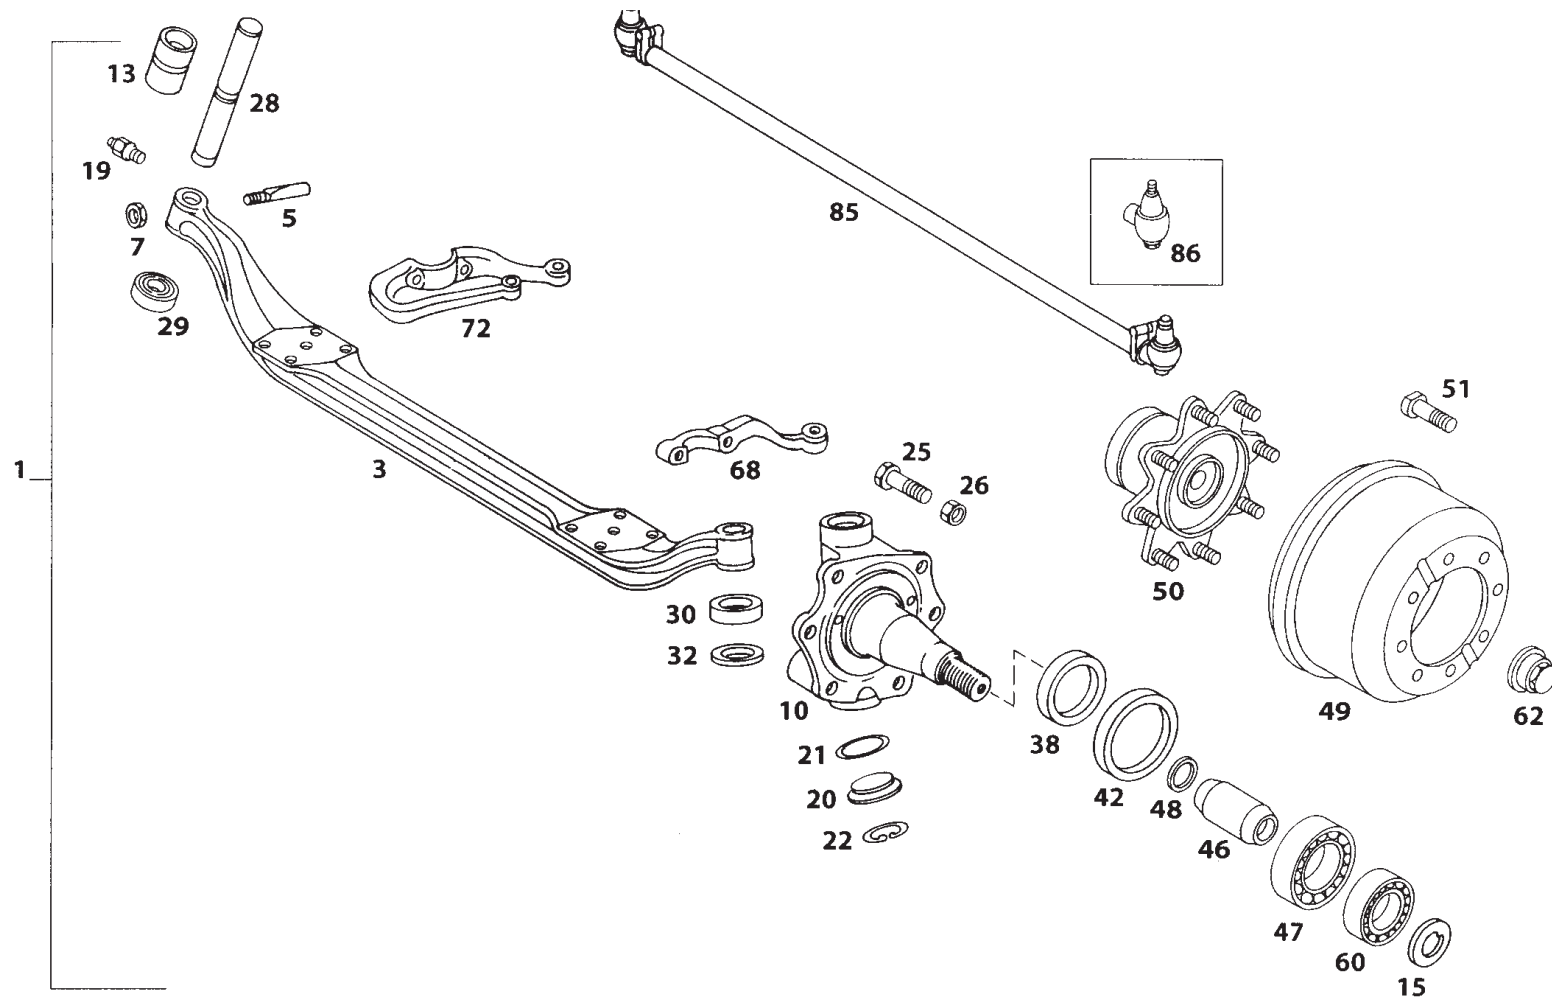


TABLE 33.1

FRONT AXLE

GROUP 33

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	042 330 01 80 J	Circlip	4											
		Wedge Screw	2											
		Tapered Roller Bearing	1											
		Thrust Washer (Upper)	1											
		Thrust Washer (Lower)	1											
		King Pin Repair Kit Std. I Consisting of :	1											
		King Pin	2											
		Bush	4											
		Sealing Cap	8											
		Gasket Ring	4											
		Circlip	4											
		Wedge Screw	2											
		Tapered Roller Bearing	1											
		Thrust Washer (Upper)	1											
—	042 330 02 80 J	Thrust Washer (Lower)	1											
		King Pin Repair Kit R/S I Consisting of :	1											
		King Pin	2											
		Bush	4											
		Sealing Cup	8											
		Gasket Ring	4											

TABLE 33.1

FRONT AXLE

GROUP 33

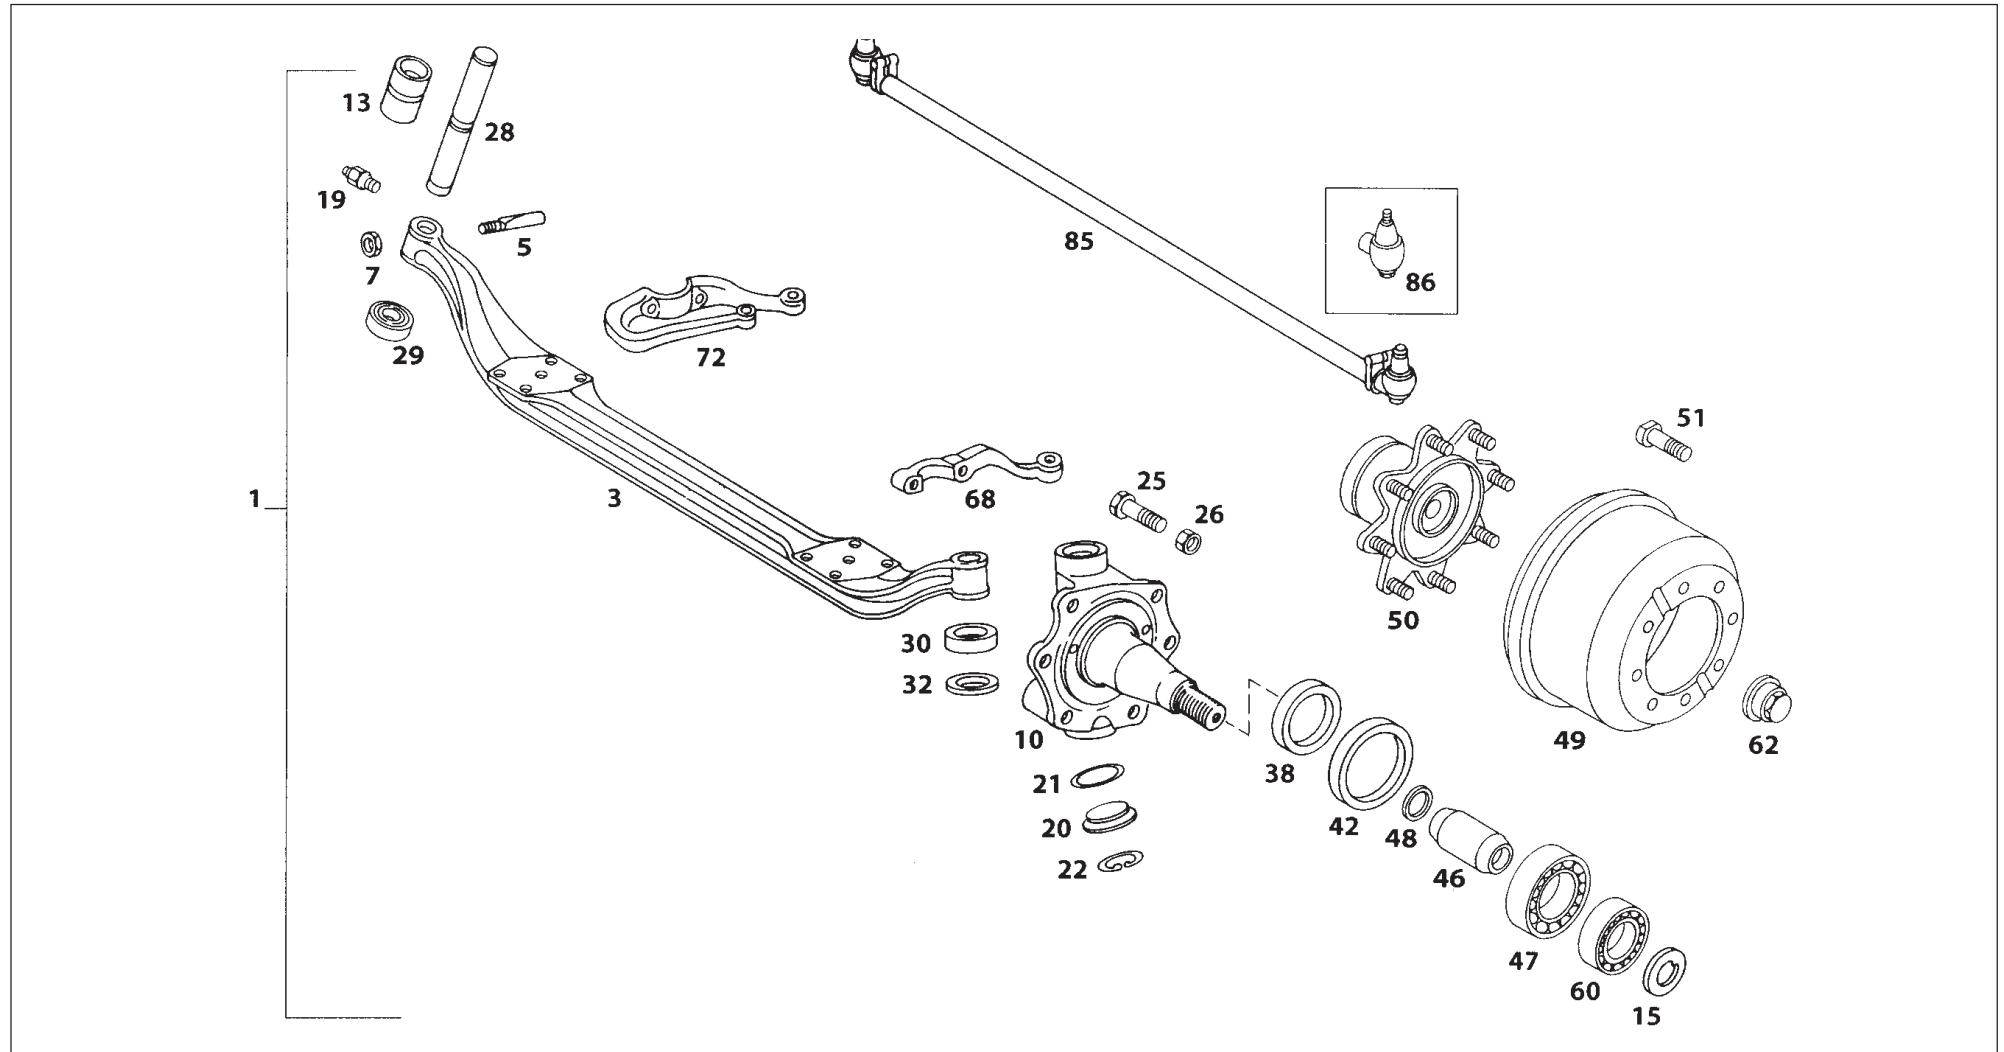


TABLE 33.1

FRONT AXLE

GROUP 33

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	042 330 03 80 J	Circlip	4											
		Wedge Screw	2											
		Tapered Roller Bearing	1											
		Thrust Washer (Upper)	1											
		Thurst Washer (Lower)	1											
		King Pin Repair Kit Std. II Consisting of :	1											
		King Pin	2											
		Bush	4											
		Sealing Cap	8											
		Gasket Ring	4											
		Circlip	4											
		Wedge Screw	2											
		Tapered Roller Bearing	1											
		Thrust Washer (Upper)	1											
		Thrust Washer (Lower)	1											

TABLE 35.1

REAR AXLE

GROUP 35

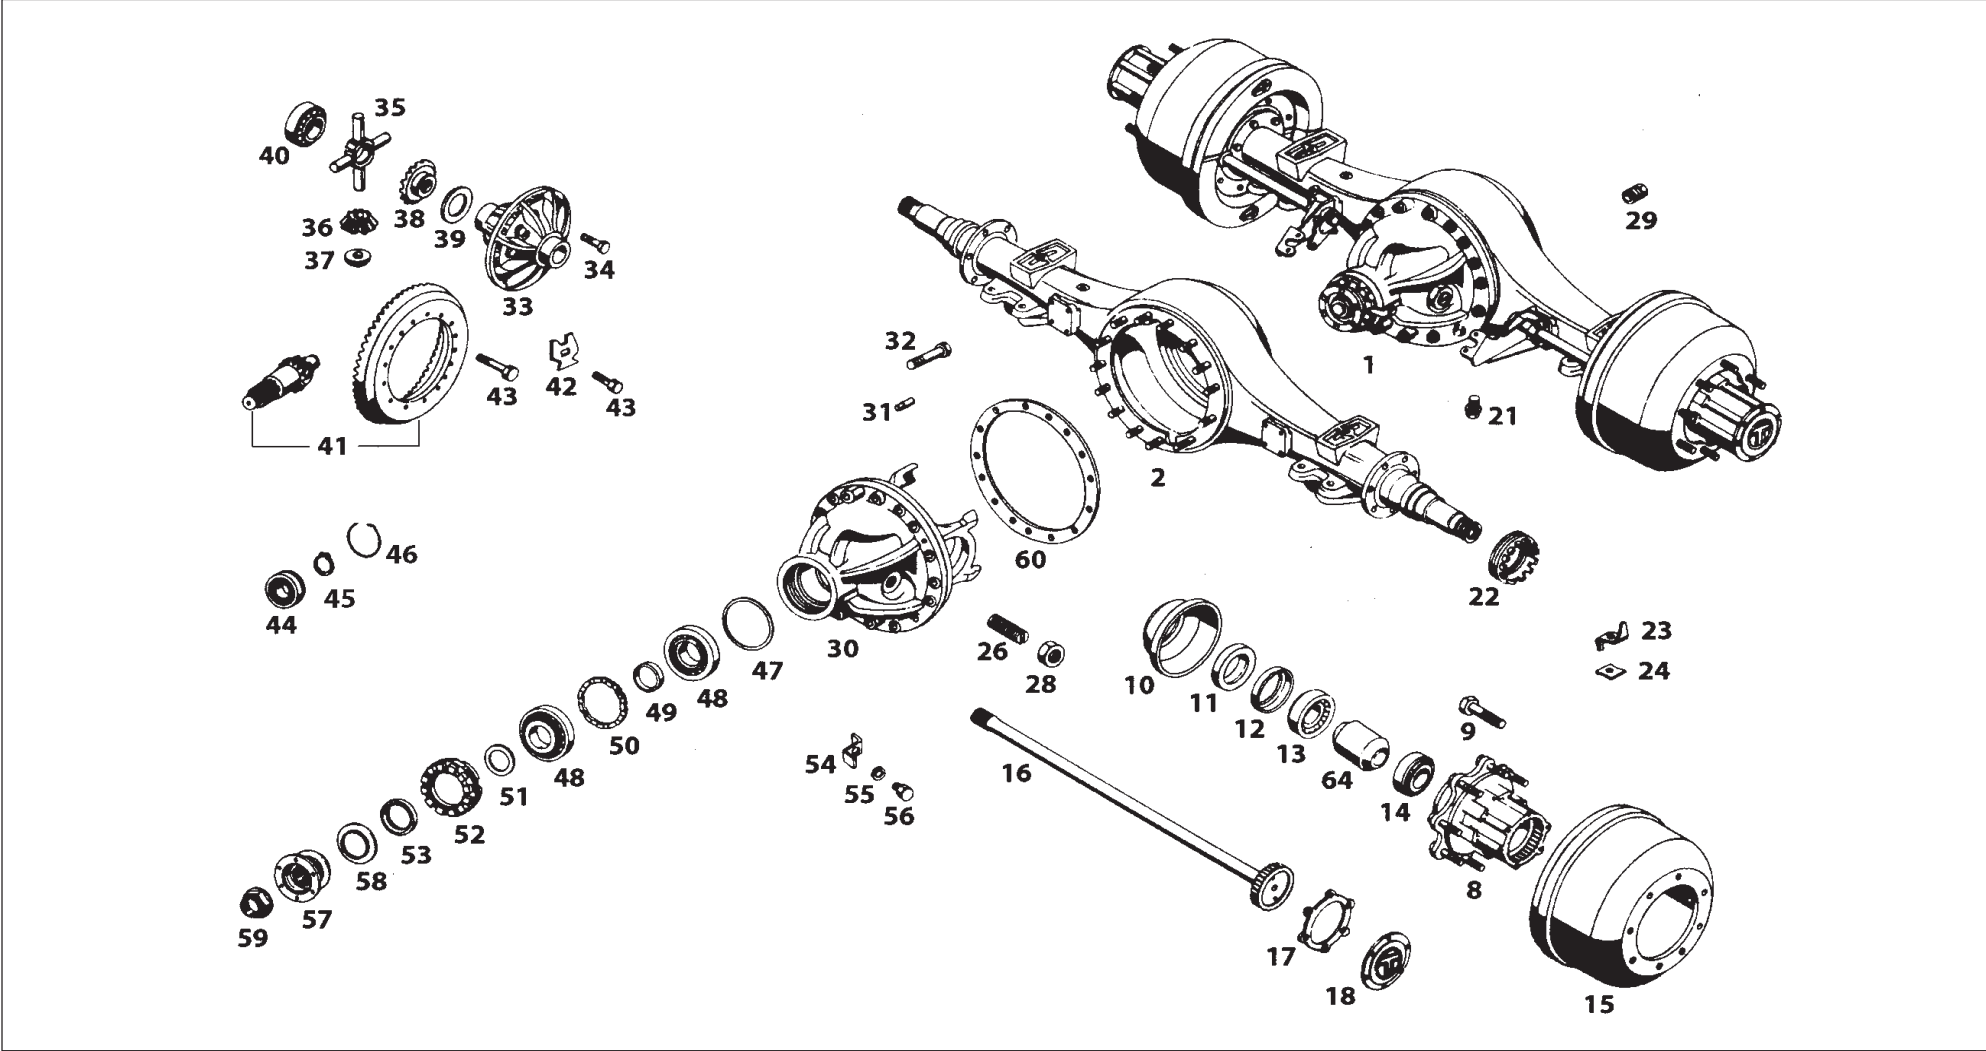


TABLE 35.1
REAR AXLE
GROUP 35

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
1	2730 3500 01 26	REAR AXLE Assy.Rear Axle Complete with Brakes (37/7 Ratio)			1*		1*	1	1					*For w/o Face Veh & TCIC Vehicle (suitable for LCR Valve)
1	2730 3500 01 18	Assy.Rear Axle Complete with Brakes (37/7 Ratio)		1	1	1	1			1	1	1	1	
2	2730 3510 01 05	Assy. Rear Axle Beam with Pr. Ring, Stud & Dowels	1											
—	1163 260940 1	Stud BM 12X40	11											
—	1163 260955 0	Stud BM 12X55	2											
—	1163 260964 9	Stud BM 12X80	1											
—	2668 3510 88 01	Stud	2											
—	1305 091030 4	Cyl Pin 12h8X30	1											
—	2730 3510 86 01	Pressure Ring	2											
—	2573 3560 86 02	Spacer	1											
—	321 356 00 26	Locking Ring	4											
—	321 356 01 73	Locking Plate	1											
8	2604 3560 01 05	Assy. Hub Rear w/o Bearing	1											
9	2618 4020 67 01	Hub Bolt Rear	16											
10	321 356 00 82	Oil Catcher	2											
11	321 356 00 51	Spacer	2											
12	2060 3571 77 01	Sealing Ring	2											
13	2618 3560 31 03	Tapered Roller Bearing, Inner	2											

TABLE 35.1

REAR AXLE

GROUP 35

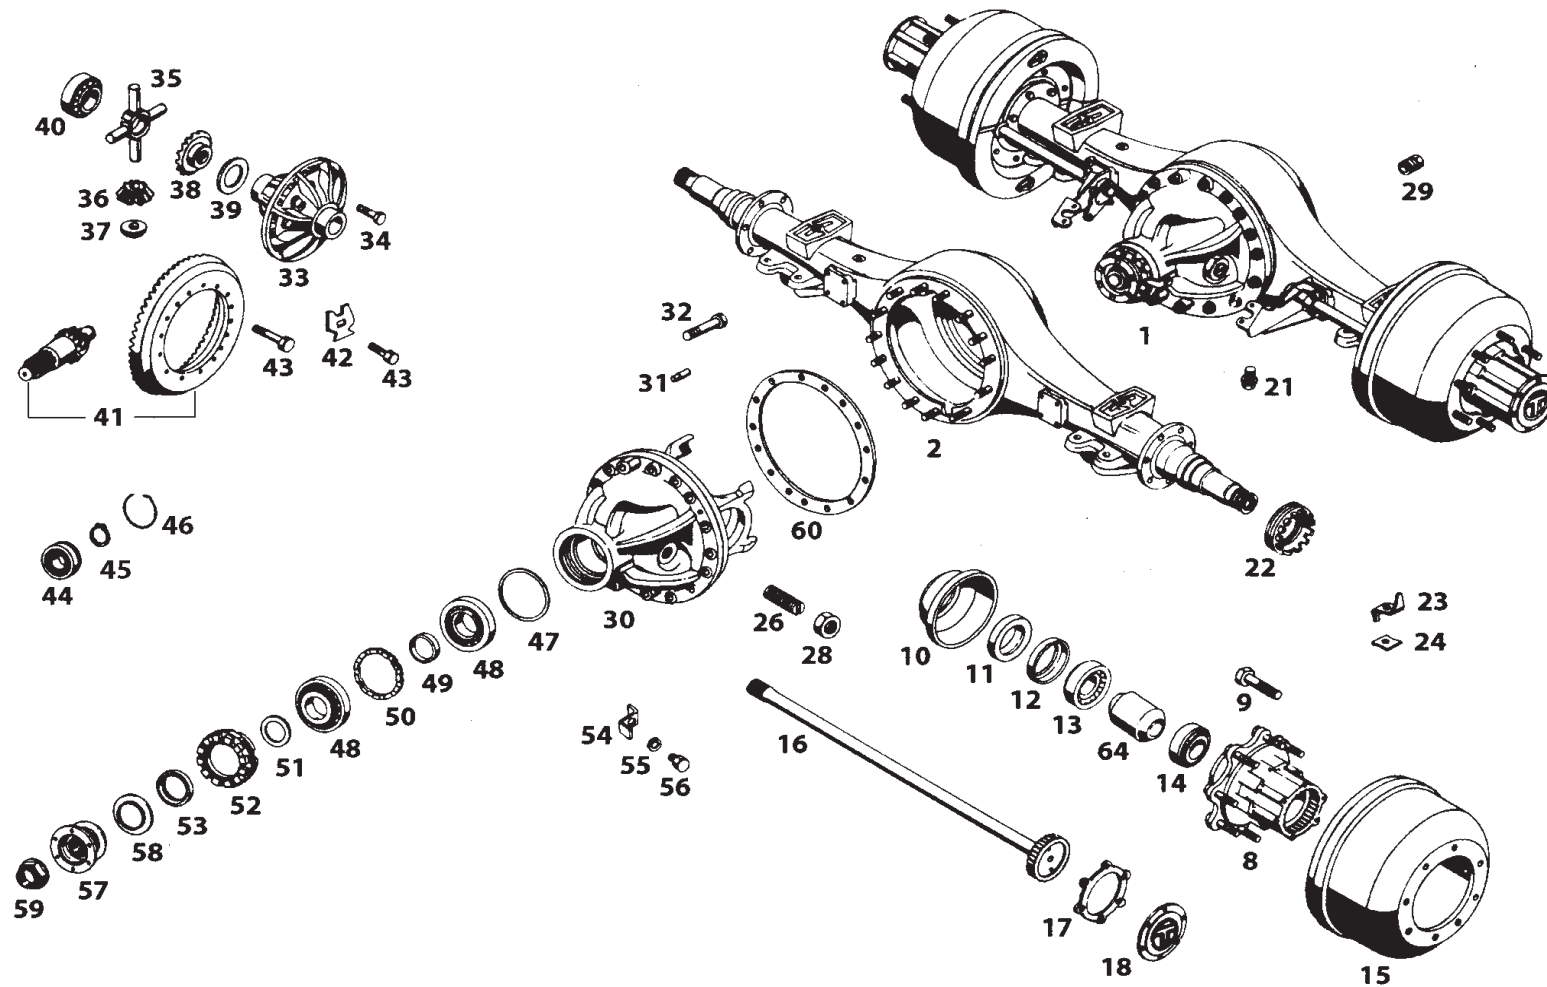


TABLE 35.1
REAR AXLE
GROUP 35

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
14	2573 3560 31 11	Tapered Roller Bearing, Outer	2											
64	322 356 00 53	Spacer Tube	2											
—	1458 061200 9	Circlip 120x4 N	2											
15	2064 4210 37 01	Brake Drum	2											
16	2730 3570 79 01	Rear Axle Shaft	2											
17	2730 3560 53 01	Gasket (in Between Cover To Hub)	2											
18	2730 3560 47 01	Cover (Rear Hub)	2											
21	2663 3510 72 07	Plug, Magnetic (Oil Drainage)	1											
22	321 353 00 25	Threaded Ring	2											
23	312 353 11 73	Lock for Threaded Ring	2											
24	312 994 12 01	Locking Plate	2											
26	2730 3530 01 08	Assy.Adjusting Pin	1											
28	315 990 00 51	Lock Nut	1											
29	2668 3515 01 02	Pressure Relief Valve	1											
30	2573 3511 01 06	Assy. Carrier Housing	1											
31	1305 090716 8	Cylindrical Pin 6H 8x16	4											
32	2575 3511 32 01	Bolt Plummer Block Cover	4											
33	2574 3530 01 02	Differential Housing Assy.	1											
34	1134 251450 4	Screw M 14X1.5X50	8											
35	321 353 02 20	Differential Spider	1											

TABLE 35.1

REAR AXLE

GROUP 35

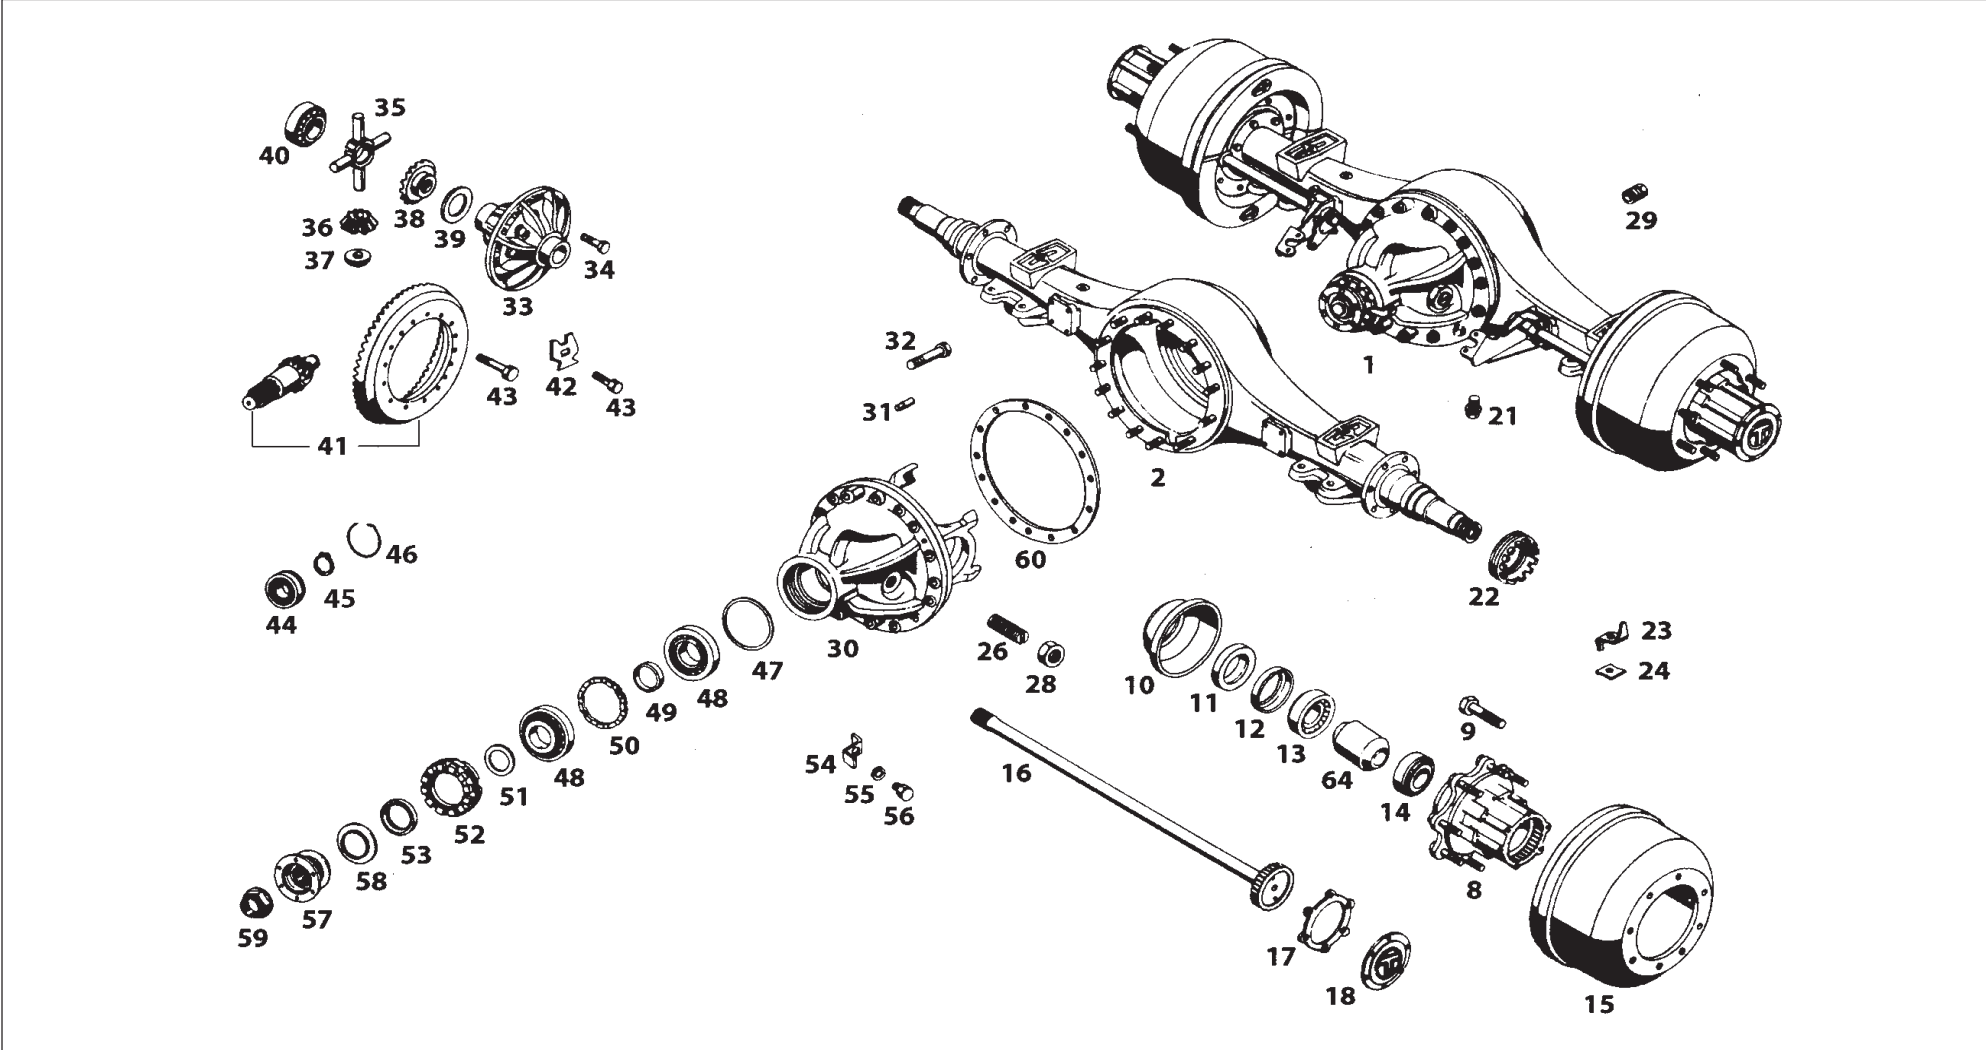


TABLE 35.1
REAR AXLE
GROUP 35

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
36	2574 3530 54 02	Differential Bevel Pinion	4											For Selection

TABLE 35.1

REAR AXLE

GROUP 35

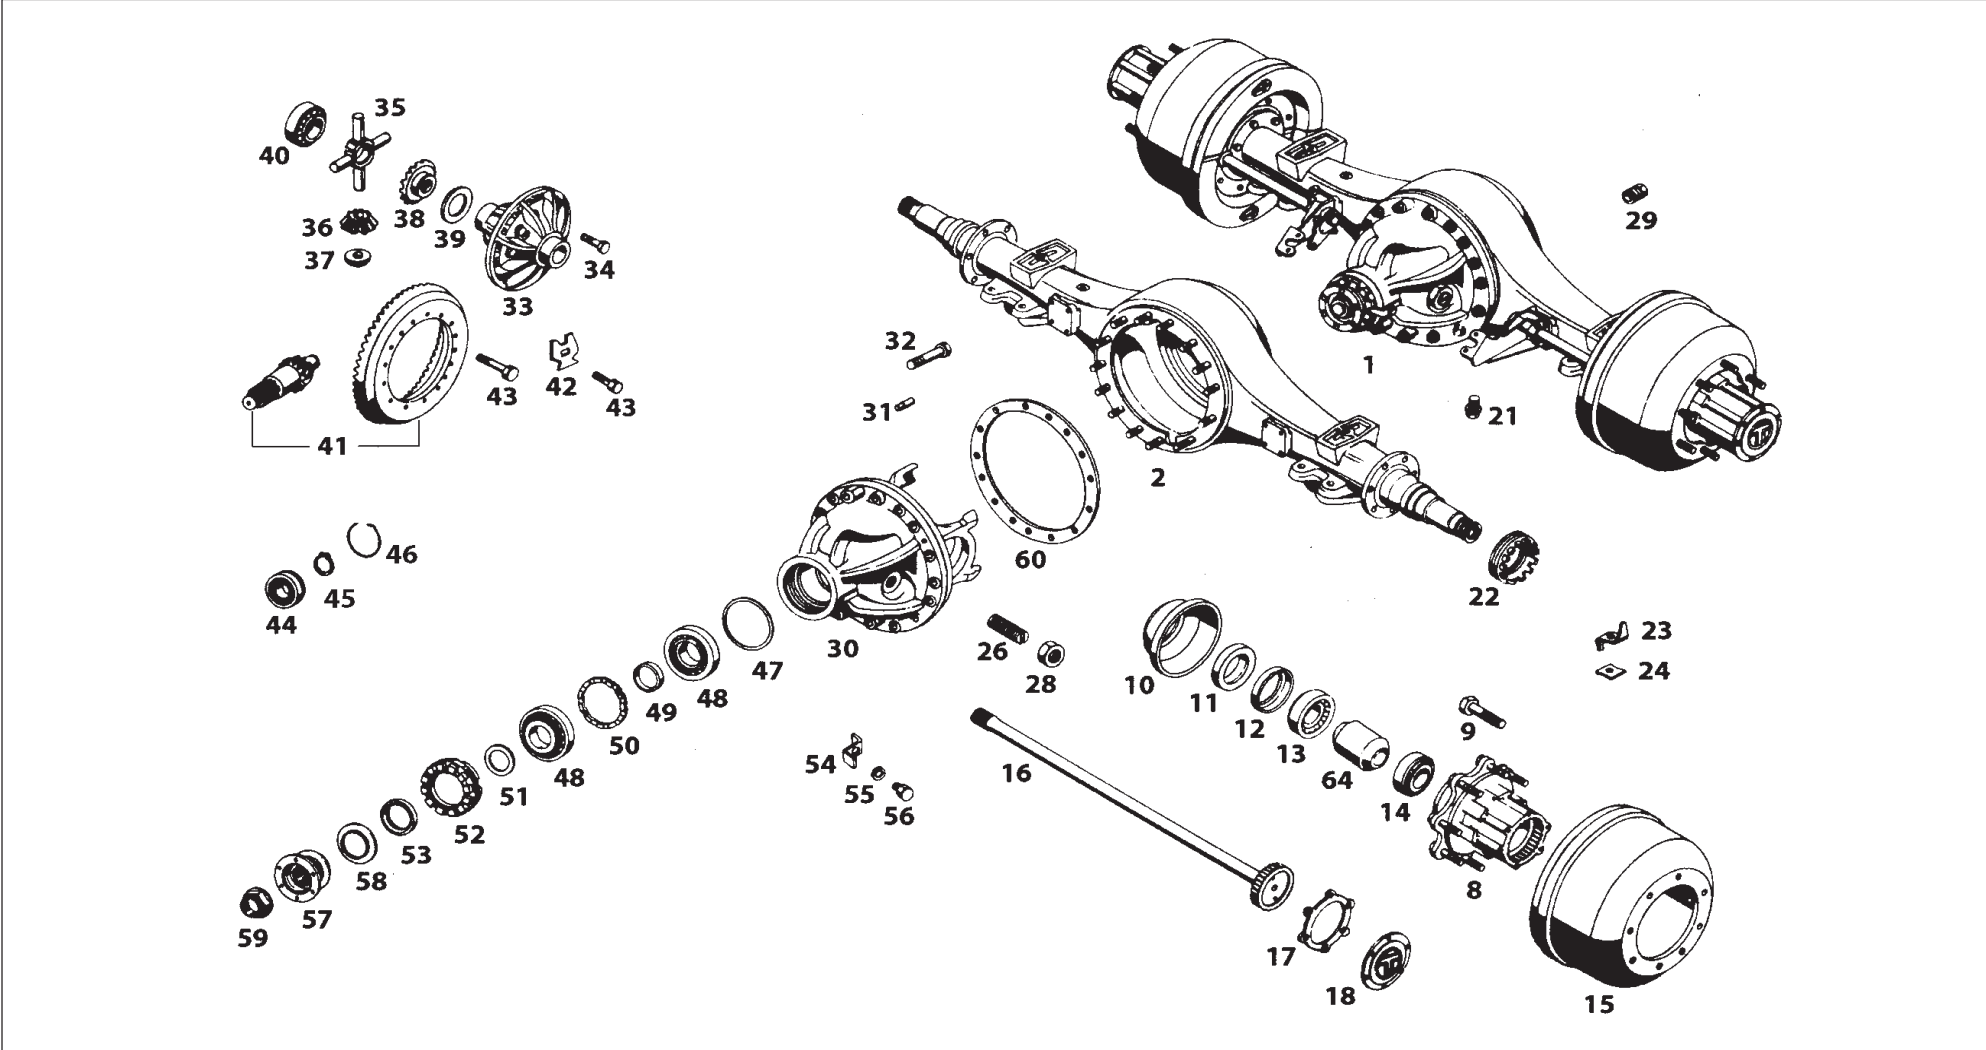


TABLE 35.1
REAR AXLE
GROUP 35

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
47	2574 3530 83 01	Shim 1.0 mm Thick	AR											For Selection
48	2060 3501 30 01	Taper Roller Bearing (60x135x33.44)	2											
49	322 353 00 51	Spacer Ring (To Drive Pinion)	1											
50	322 353 01 52	Spacer Ring 10.28 mm Thick	AR											For Selection
50	322 353 02 52	Spacer Ring 10.30 mm Thick	AR											For Selection
50	322 353 03 52	Spacer Ring 10.32 mm Thick	AR											For Selection
50	322 353 04 52	Spacer Ring 10.34 mm Thick	AR											For Selection
50	322 353 05 52	Spacer Ring 10.36 mm Thick	AR											For Selection
50	322 353 06 52	Spacer Ring 10.38 mm Thick	AR											For Selection
50	322 353 07 52	Spacer Ring 10.40 mm Thick	AR											For Selection
50	322 353 08 52	Spacer Ring 10.42 mm Thick	AR											For Selection
50	322 353 09 52	Spacer Ring 10.44 mm Thick	AR											For Selection
50	322 353 10 52	Spacer Ring 10.46 mm Thick	AR											For Selection
50	322 353 11 52	Spacer Ring 10.48 mm Thick	AR											For Selection
50	322 353 12 52	Spacer Ring 10.50 mm Thick	AR											For Selection
50	322 353 13 52	Spacer Ring 10.10 mm Thick	AR											For Selection
50	322 353 14 52	Spacer Ring 10.12 mm Thick	AR											For Selection
50	322 353 15 52	Spacer Ring 10.14 mm Thick	AR											For Selection
50	322 353 16 52	Spacer Ring 10.16 mm Thick	AR											For Selection
50	322 353 17 52	Spacer Ring 10.18 mm Thick	AR											For Selection

TABLE 35.1

REAR AXLE

GROUP 35

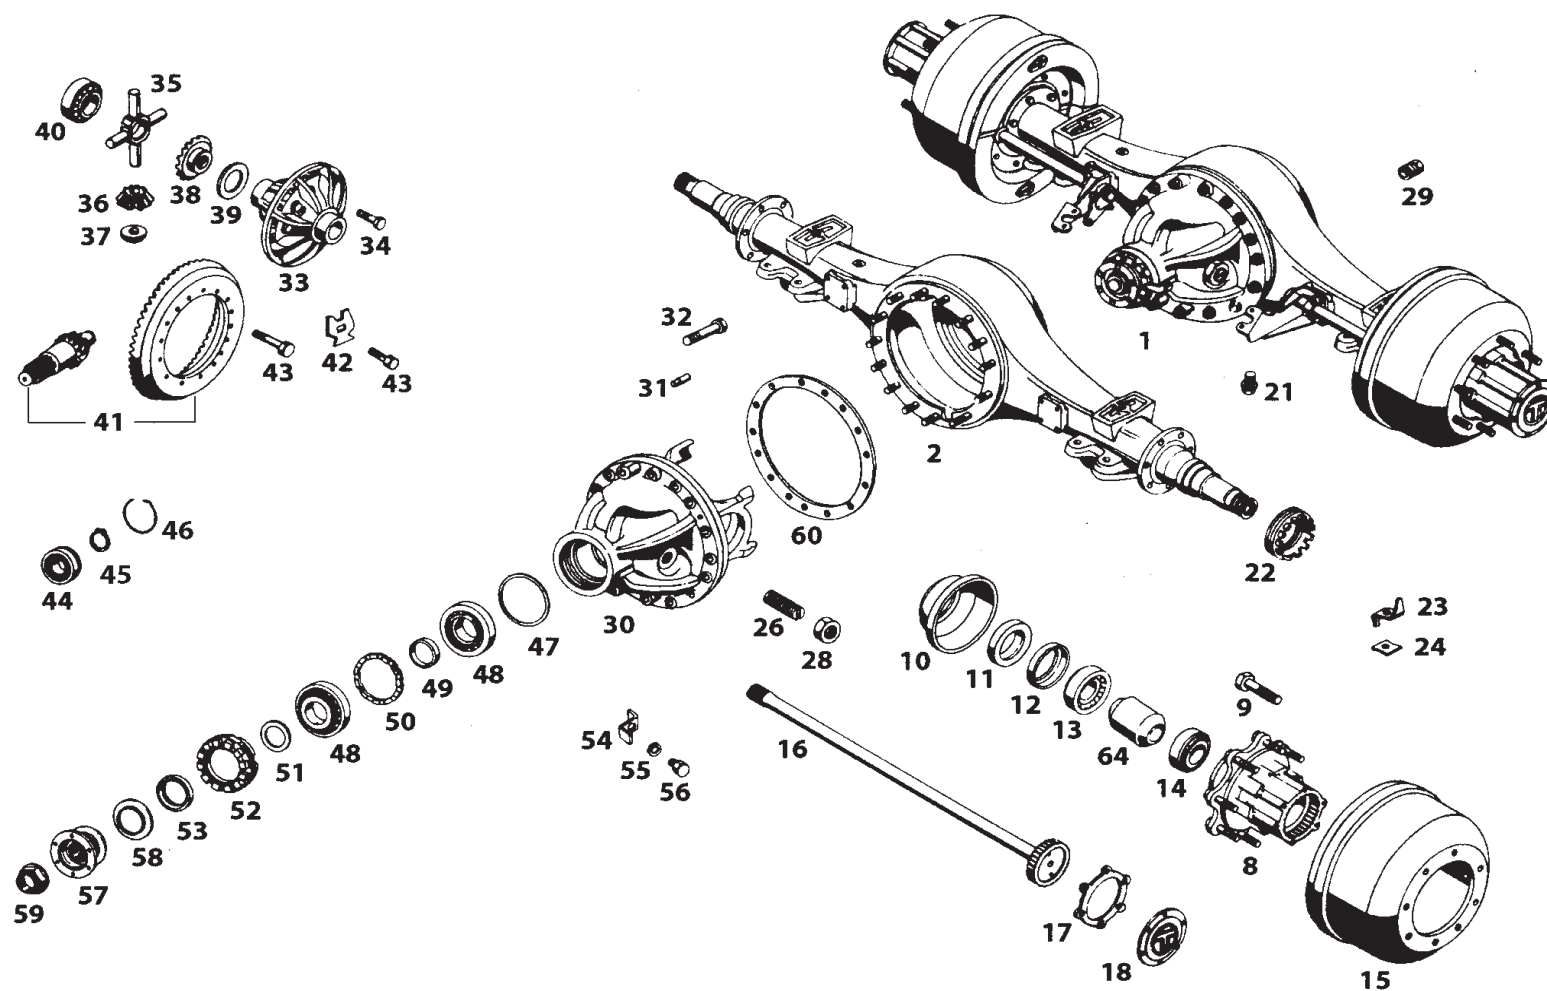


TABLE 35.1
REAR AXLE
GROUP 35

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
50	322 353 18 52	Spacer Ring 10.20 mm Thick	AR											For Selection
50	322 353 19 52	Spacer Ring 10.22 mm Thick	AR											For Selection
50	322 353 20 52	Spacer Ring 10.24 mm Thick	AR											For Selection
50	322 353 21 52	Spacer Ring 10.26 mm Thick	AR											For Selection
51	2668 3530 86 01	Spacer (Between Pinion Brg and Coup.Flange)	1											
—	2668 3530 82 01	Oil Slinger (Tail Pinion)	1											
52	2668 3530 65 01	Threaded Ring	1											
53	2573 3530 77 05	Oil Seal (to Pinion)	1											
54	322 353 00 73	Locking Plate	1											
55	1252 069802 5	Spring Washer B 8	1											
56	1132 399619 1	Screw M 8x12	1											
57	2730 3530 01 30	Assy.Coupling Flange (6 Bolt,120 OD)	1											
58	2732 3530 77 01	Dust Seal (Mechanical Face Seal)	1											
59	042 353 01 72 J	Nut	1											
60	2730 3511 53 01	Gasket (Carrier To Beam)	1											

TABLE 40.1

WHEEL DISC

GROUP 40

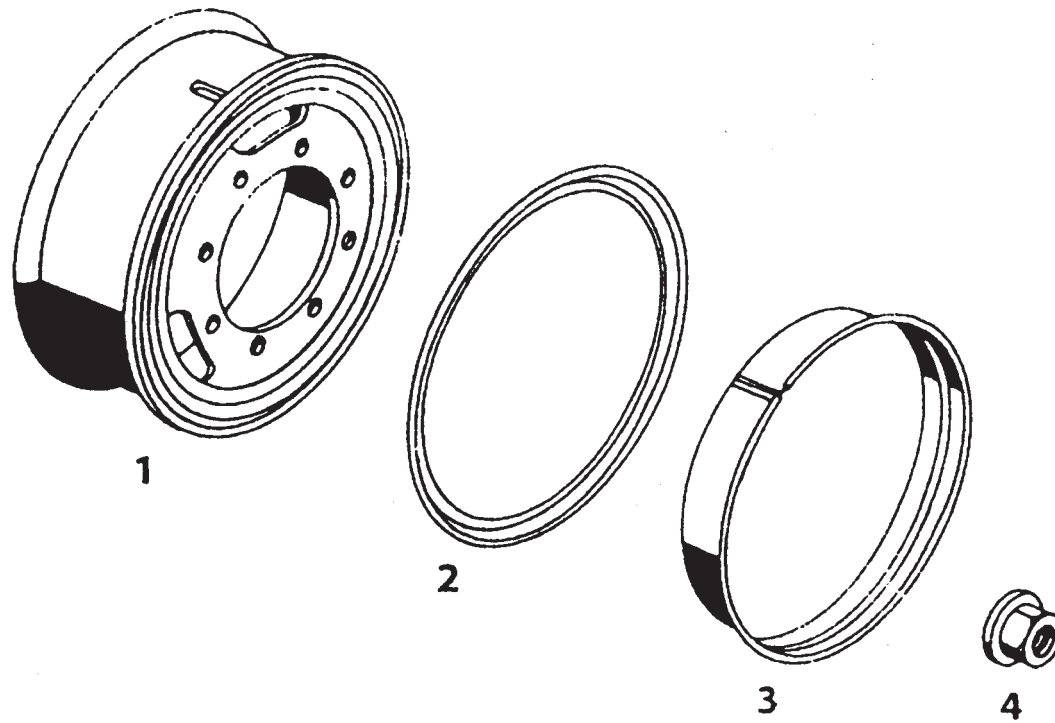


TABLE 40.1

WHEEL DISC

GROUP 40

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		WHEEL DISC												
1	2604 4030 01 02	Assy. Wheel Disc and Rim 6x20 Spigotted	7											
2	000 401 05 06 J	Side Ring	7											
3	000 401 05 07 J	Locking Ring	7											
4	2618 4010 01 02	Assy. Wheel Nut (M 20)	32											

TABLE 40.2

SPARE WHEEL CARRIER

GROUP 40

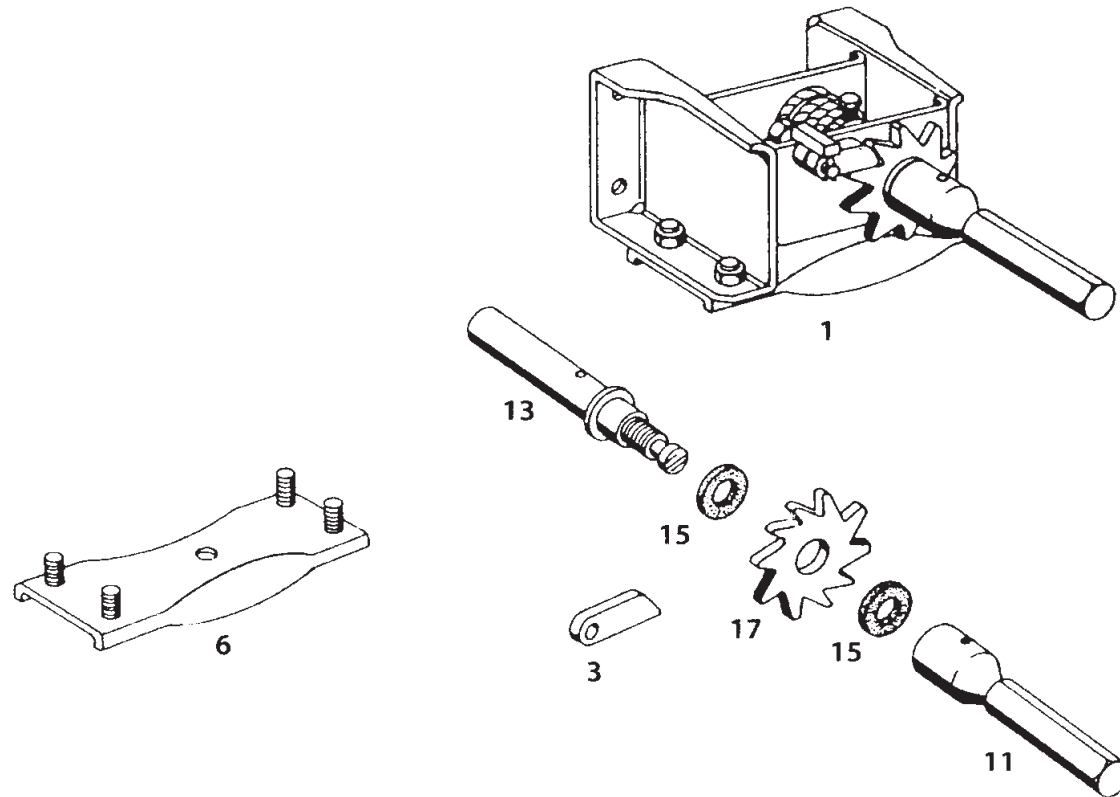


TABLE 40.2
SPARE WHEEL CARRIER
GROUP 40

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		SPARE WHEEL CARRIER												
1	2153 4030 01 06	Assy. Spare Wheel Carrier(Winch Type)						1	1	1	1	1	1	
3	2576 4030 71 09	Ratchet Arm						1	1	1	1	1	1	
6	2573 4030 01 04	Assy. Holding Bracket						1	1	1	1	1	1	
11	2573 4030 01 13	Assy. Handle						1	1	1	1	1	1	
13	2573 4030 01 11	Assy. Shaft						1	1	1	1	1	1	
15	2573 4030 63 01	Friction Pad						2	2	2	2	2	2	
17	2576 4030 71 08	Ratchet Wheel						1	1	1	1	1	1	
—	2153 4030 71 01	Spacer Plate								1	1			
—	2153 4030 71 02	Spacer Plate LH							1			1	1	
—	2153 4030 71 03	Spacer Plate						1						
—	2573 4010 71 01	Spacer (between Inner & Outer Rim)						2	2	2	2	2	2	

TABLE 41.1

PROPELLER SHAFT

GROUP 41

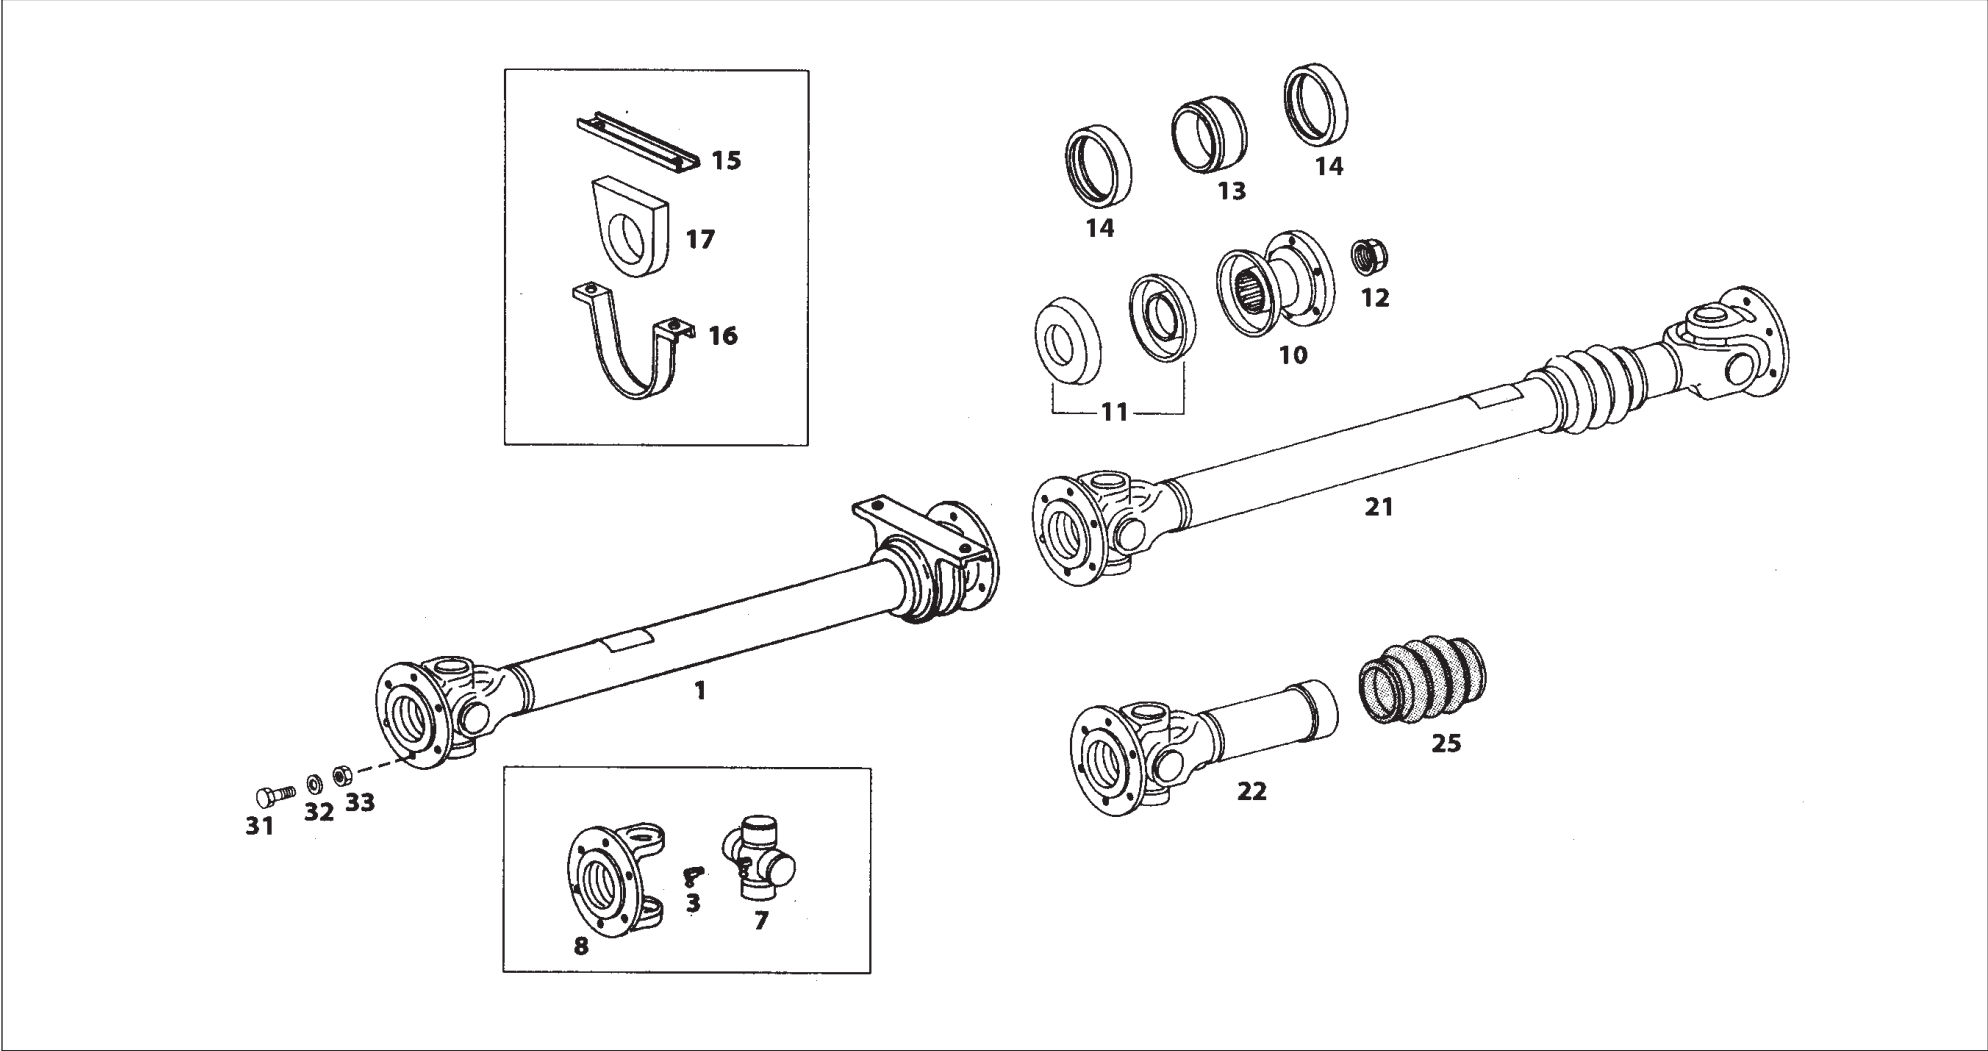


TABLE 41.1
PROPELLER SHAFT
GROUP 41

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		PROPELLER SHAFT												
1	2093 4111 01 01	Assy. Propeller Shaft with Centre Brg.		1	1			1		1	1			
1	2153 4110 01 03	Assy. Propeller Shaft with Centre Brg.				1	1		1			1	1	
3	1717 200100 9	Grease Nipple AM 10x1	1											
—	1143 089901 7	Set Screw M 10x1x6	1											
—	312 411 12 05	Universal Joint Fork (Cardan Shaft)	1											
7	8854 4101 12 10	Cross Repair Kit, Consisting off	1											
		Cross	1											
		Assy. Bearing Cup	4											
		Closing Ring	4											
		Grease Nipple	1											
		Hex. Thin Nut M 8x1	1											
—	2060 4111 87 02	Spring Ring 2.60 mm Thick	4											For Selection
—	2060 4111 87 03	Spring Ring 2.65 mm Thick	4											For Selection
—	2060 4111 87 04	Spring Ring 2.70 mm Thick	4											For Selection
—	2060 4111 87 05	Spring Ring 2.75 mm Thick	4											For Selection
8	312 411 11 11	Universal Joint Flange	1											
10	2573 4130 01 14	Assy. Coupling Flange-with Protective Cover	1											
11	2573 4130 82 09	Protective Cap	1											
12	042 411 00 72 J	Hex. Nut	1											

TABLE 41.1

PROPELLER SHAFT

GROUP 41

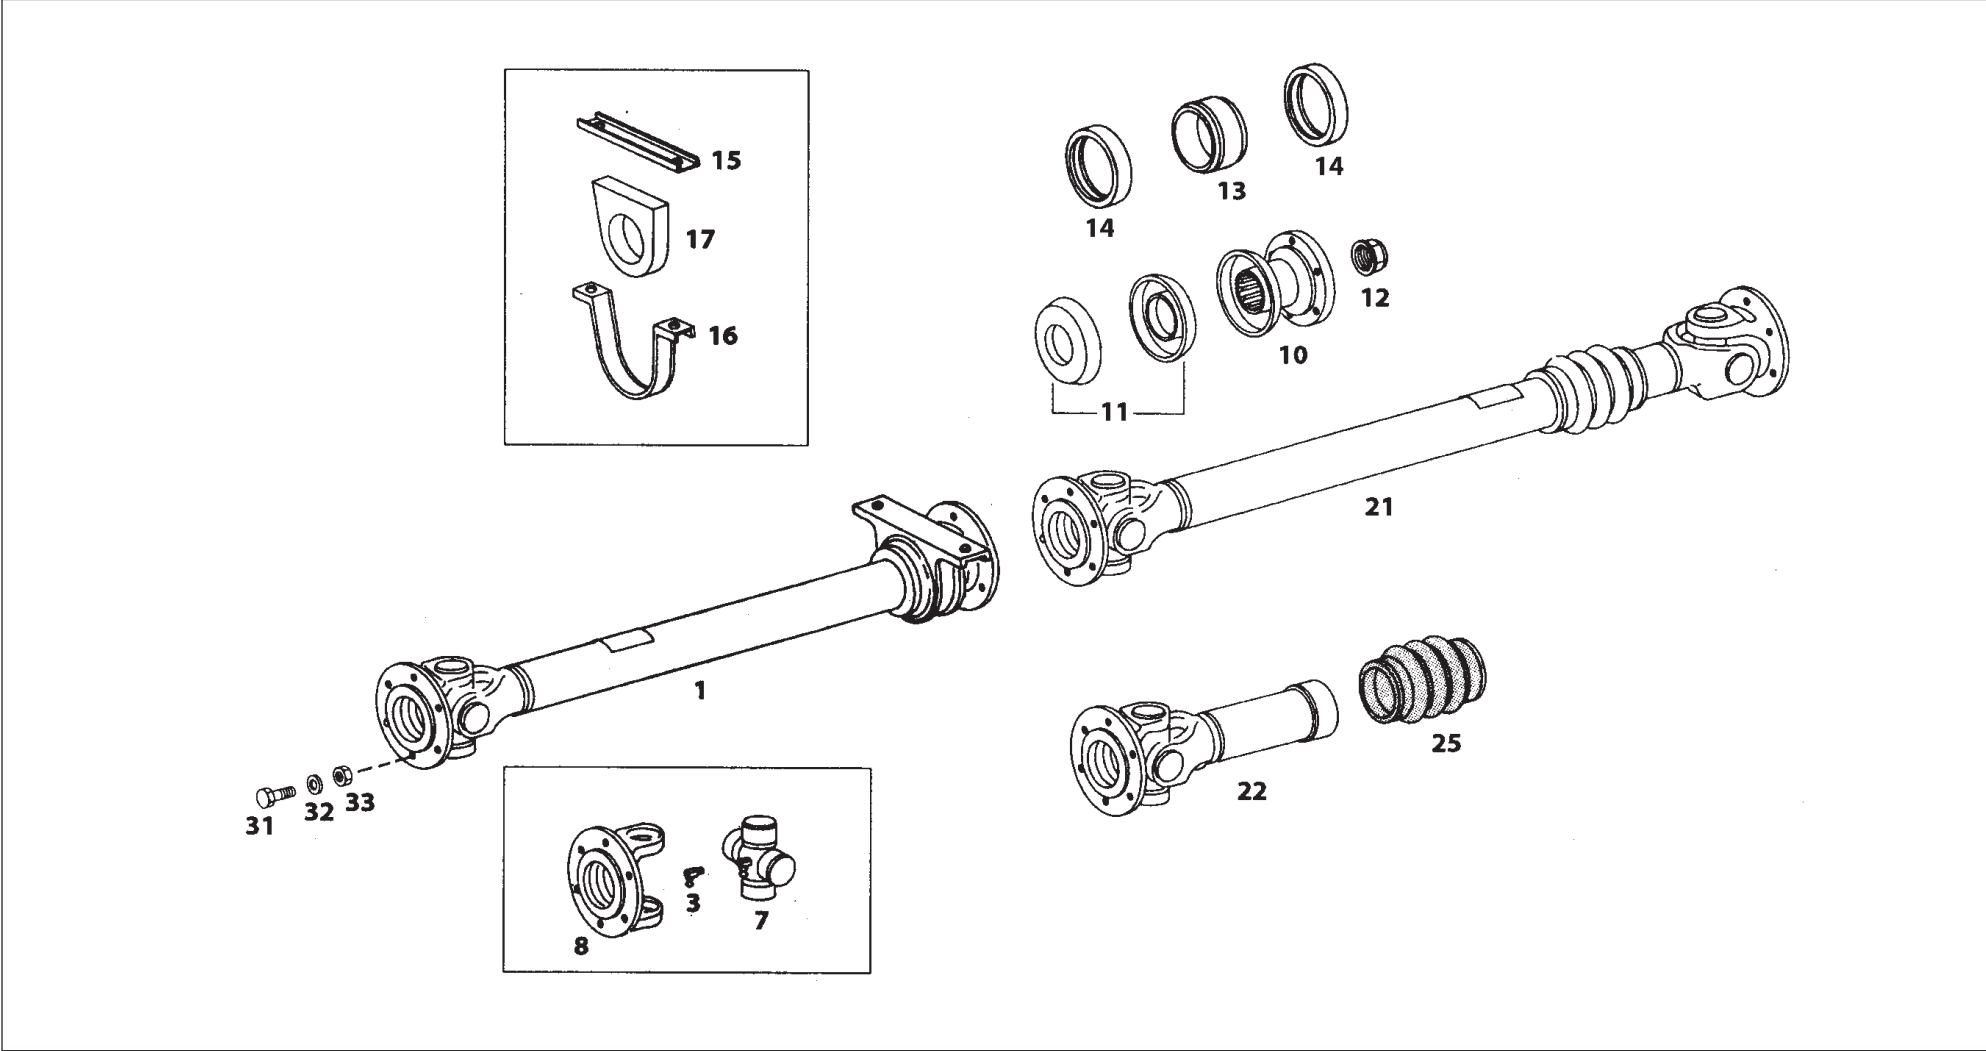


TABLE 41.1
PROPELLER SHAFT
GROUP 41

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
—	2573 4130 01 15	Assy.Centre Bearing Complete	1											
13	2573 4130 01 18	Assy. Centre Bearing(w/o R/Hsg,Bracket)	1											
14	2573 4130 82 16	Dust Seal Retainer	2											
—	2574 4130 31 01	Ball Bearing (Type 6208)	1											
—	000 997 22 47	Packing Ring	2											
15	2573 4130 42 02	Clamp	1											
16	2573 4130 33 07	Bracket	1											
17	2573 4130 75 05	Rubber Housing	1											
—	312 413 12 31	Spacer Ring Centre Bearing	2											
—	2064 4111 82 01	Spacer Centre Bearing Mounting		1	1			1		1	1			
—	2153 4111 82 02	Spacer Centre Bearing Mounting				1	1		1			1	1	
—	2573 4130 82 17	Spacer Plate (to Cross Member)	2											
21	2573 4112 01 81	Assy. Propeller Shaft Rear		1	1			1		1	1			
21	2153 4110 01 06	Assy. Propeller Shaft Rear				1	1		1			1	1	
—	312 411 12 05	Universal Joint Fork (Cardan Shaft)	1											
22	2573 4112 01 09	Assy. U J Long Fork Complete	1											
7	8854 4101 12 10	Cross Repair Kit, Consisting off	1											
		Cross	1											
		Assy. Bearing Cup	4											
		Closing Ring	4											

TABLE 41.1

PROPELLER SHAFT

GROUP 41

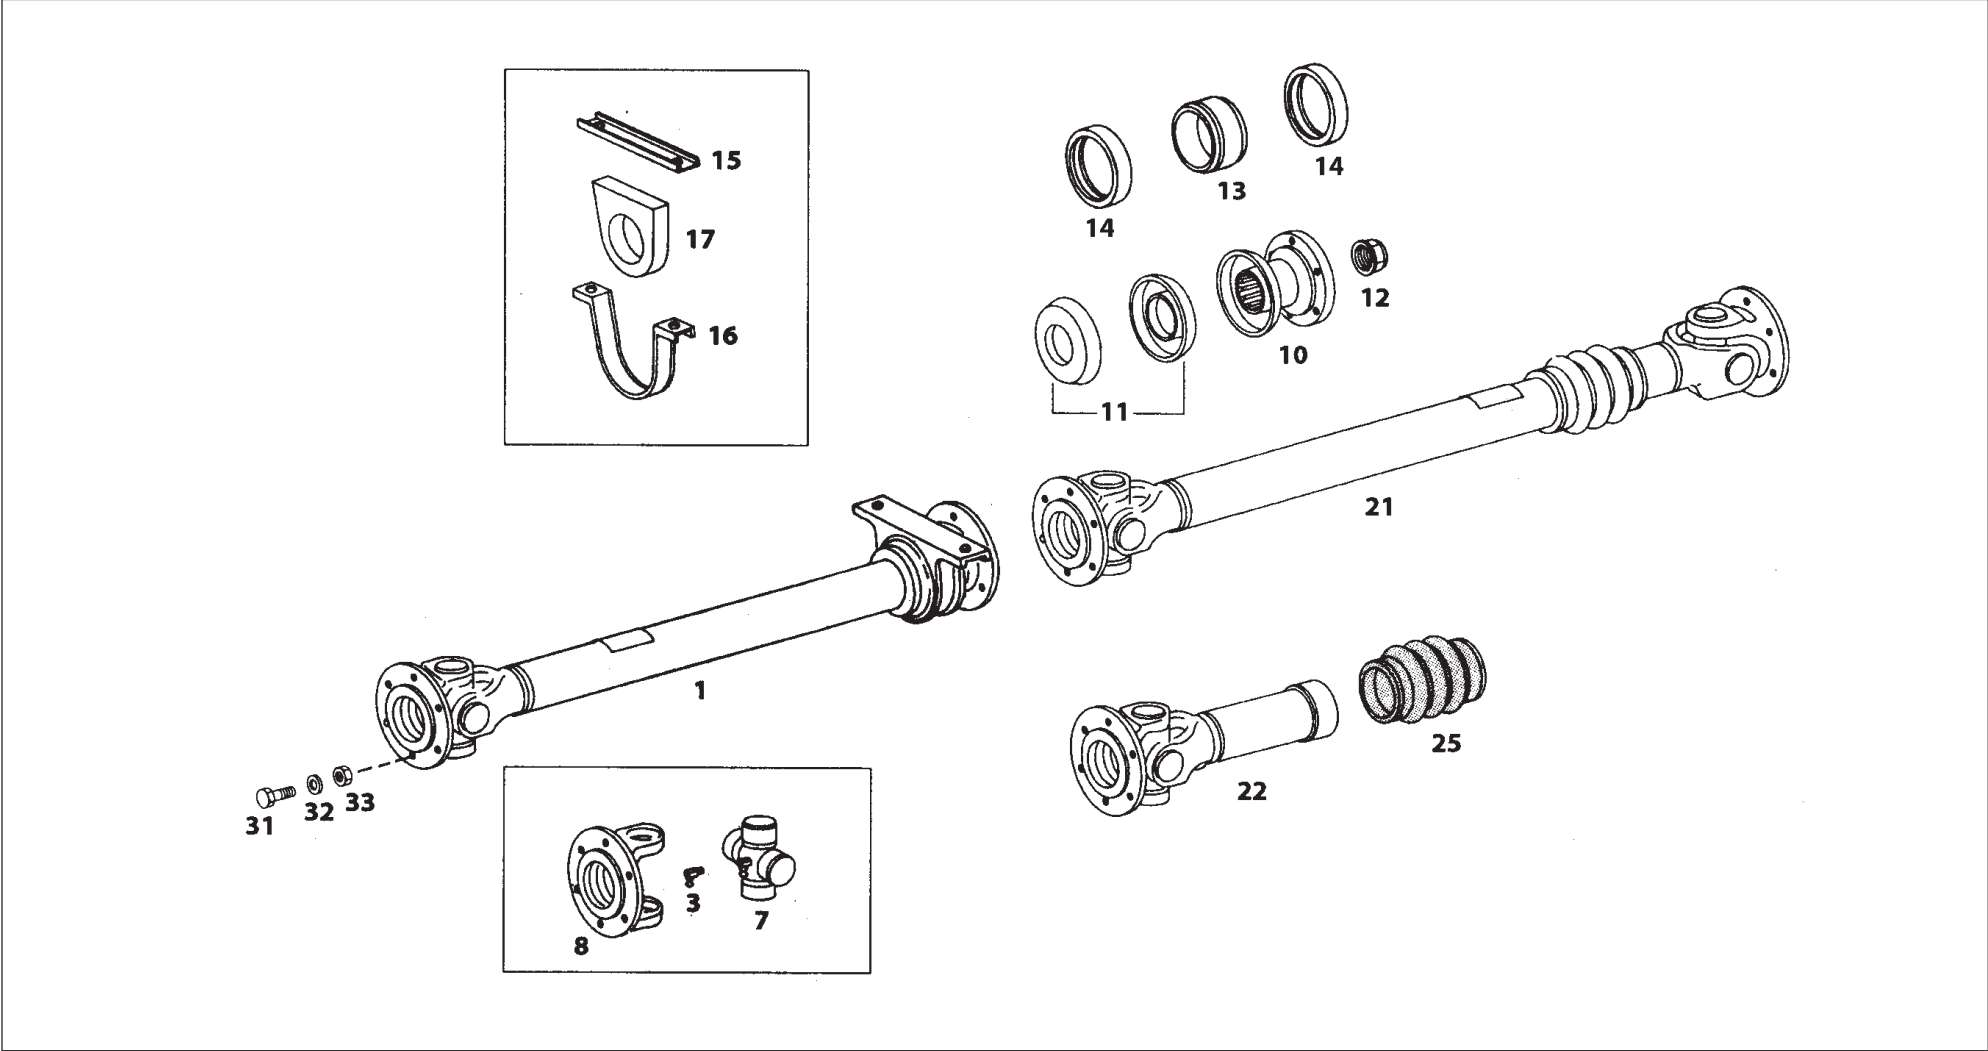


TABLE 41.1
PROPELLER SHAFT
GROUP 41

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
8	312 411 11 11	Grease Nipple	1											
25	328 410 00 80	Hex. Thin Nut M 8x1	1											
—	1428 050070 5	Universal Joint Flange	2											
—	1428 050080 2	Assy Protective Cap	1											
31	2576 4111 32 01	Hose Clamp 70	1											
32	2505 2640 61 01	Hose Clamp 80	1											
33	1205 239601 6	Bolt	18											
—	2177 4110 01 13	Locking Plate	9											
—	2187 4110 82 01	Hex. Nut M 10x1	18											
		Assy Guard (Prop Shaft)				1	1		1			1	1	
		Channel (Guard Mtg.)				1	1		1			1	1	

TABLE 42.1

FRONT WHEEL BRAKE

GROUP 42

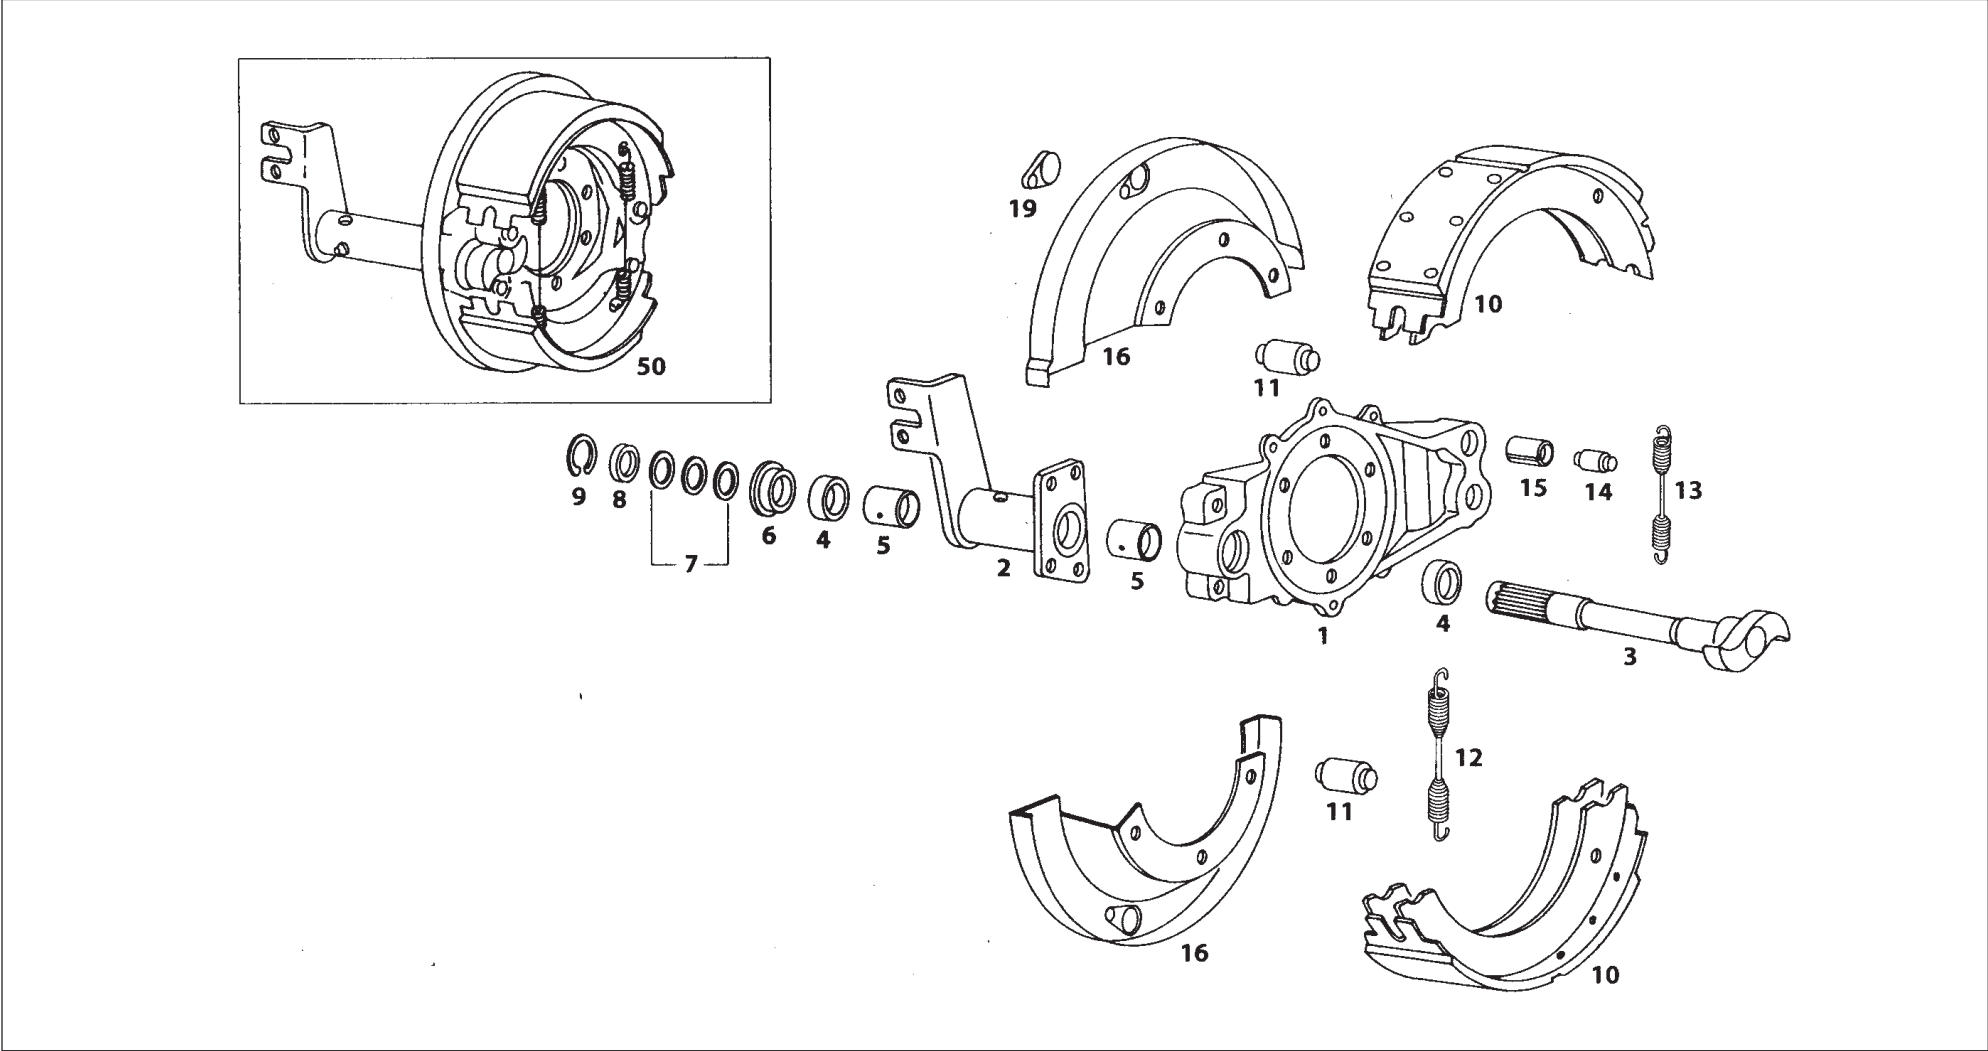


TABLE 42.1
FRONT WHEEL BRAKE
GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		FRONT WHEEL BRAKE												
50	2153 4210 01 09	Assy. Drum Brake RH Front (Asbestos Type)	1											
50	2153 4210 01 12	Assy. Drum Brake LH Front (Asbestos Type)	1											
1	2153 4210 37 01	Torque Plate LH	1											
1	2153 4210 37 02	Torque Plate RH	1											
2	2153 4210 01 22	Flange, Tube & Bracket Assy. LH	1											
2	2153 4210 01 23	Flange, Tube & Bracket Assy. RH	1											
3	2641 4210 51 04	Camshaft LH	1											
3	2641 4210 51 05	Camshaft RH	1											
4	2641 4210 77 03	Oil Seal	4											
5	2641 4210 34 04	Bush (Bronze)	4											
6	2641 4210 86 02	Sleeve (Slack Adj. End)	2											
7	2641 4210 83 04	Shim 0.5 mm	4											
7	2641 4210 83 05	Shim 0.3 mm	2											
8	2093 4210 92 03	Washer 2.5 mm	2											
8	2093 4210 92 04	Washer 1.5 mm	2											
9	2641 4210 43 01	Circlip	2											
10	2153 4210 01 24	Lined Shoe LH & RH Std.	4											
—	2153 4210 01 25	Kit-Lining Set (Std.)	1											
—	2153 4210 01 26	Kit-Lining Set (1.0 mm O/S) - R/S I	1											

TABLE 42.1

FRONT WHEEL BRAKE

GROUP 42

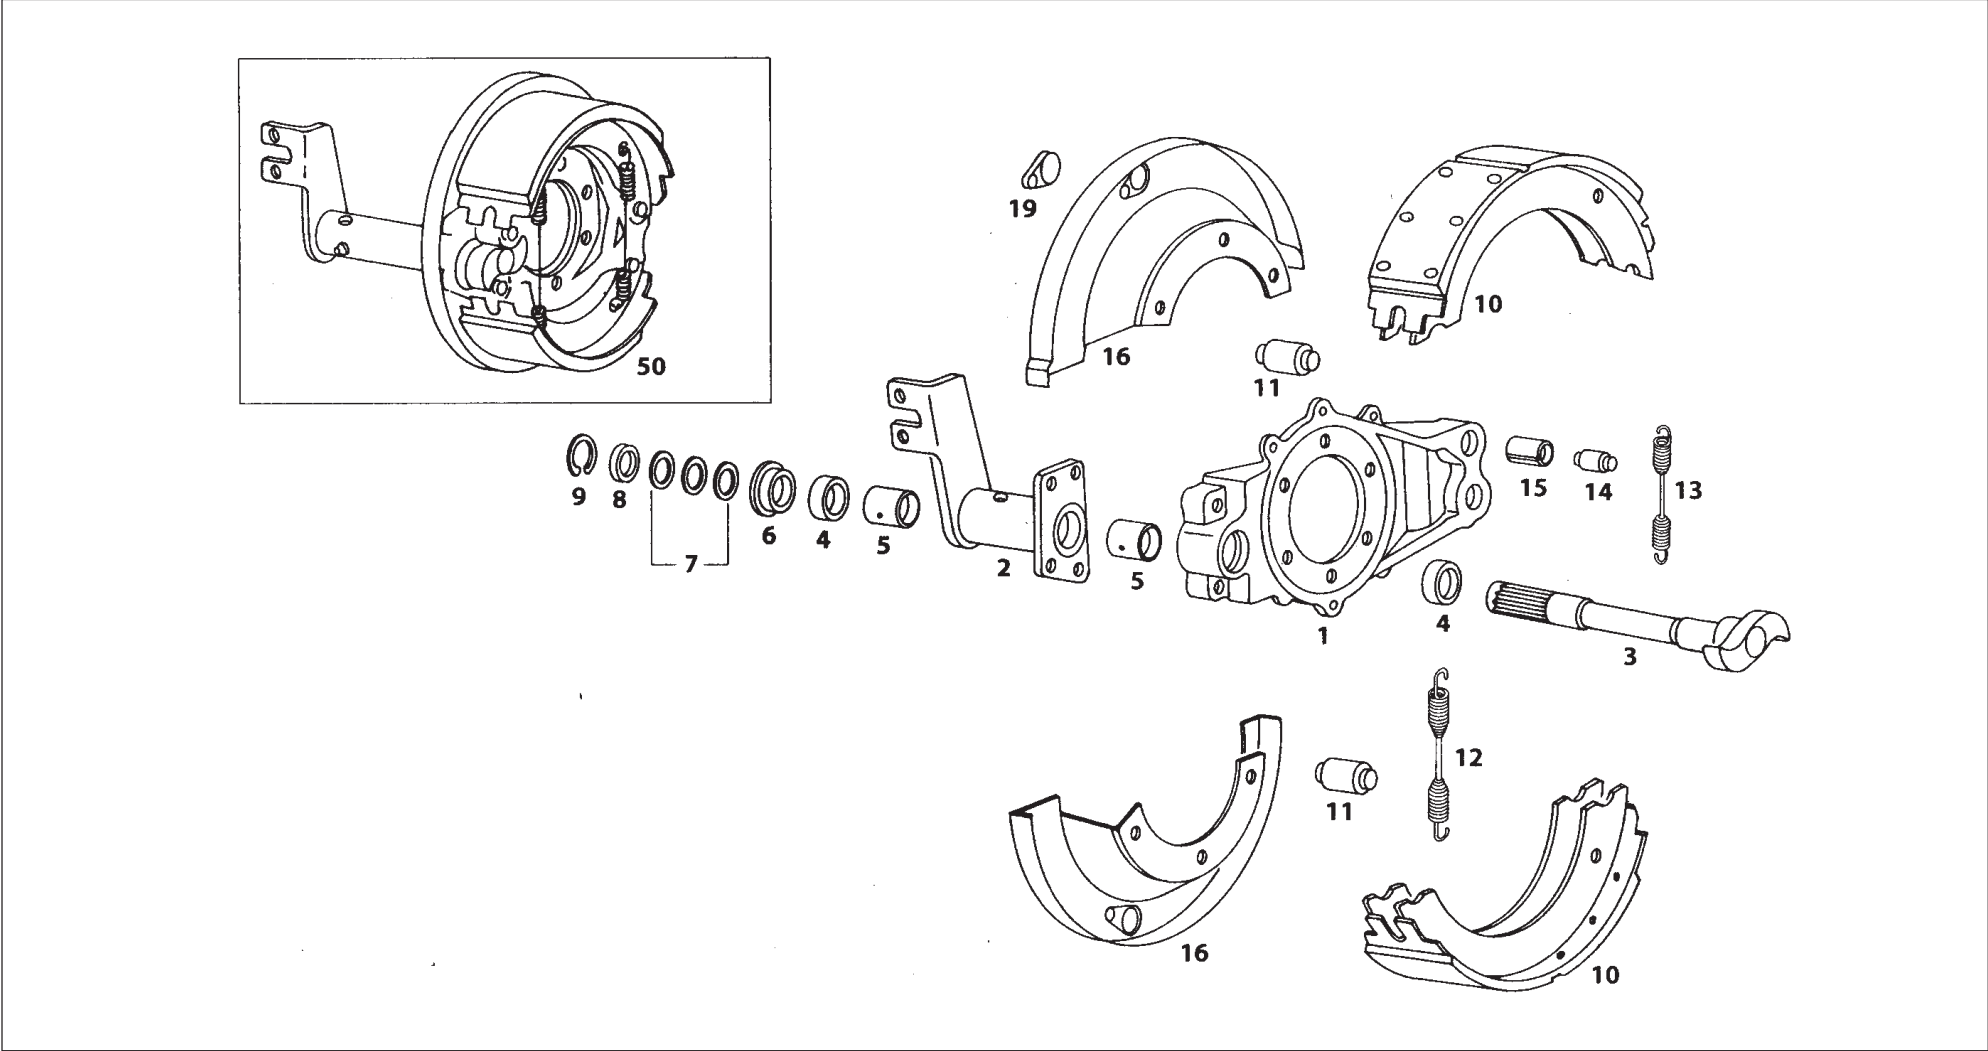


TABLE 42.1
FRONT WHEEL BRAKE
GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
—	2153 4210 01 27	Kit-Lining Set (2.0 mm O/S) R/S II	1											
11	2641 4210 99 06	Roller	4											
12	2641 4210 87 05	Spring Pull Off-Cam End	2											
13	2641 4210 87 06	Spring Fulcrum End	4											
14	2641 4210 67 04	Fulcrum Pin	4											
15	2641 4210 34 05	Fulcrum Pin Bush	4											
16	2064 4211 82 02	Dust Cover Top	2											
16	2064 4211 82 01	Dust Cover Bottom	2											
19	2573 4210 75 01	Grommet	4											

TABLE 42.2

REAR WHEEL BRAKE

GROUP 42

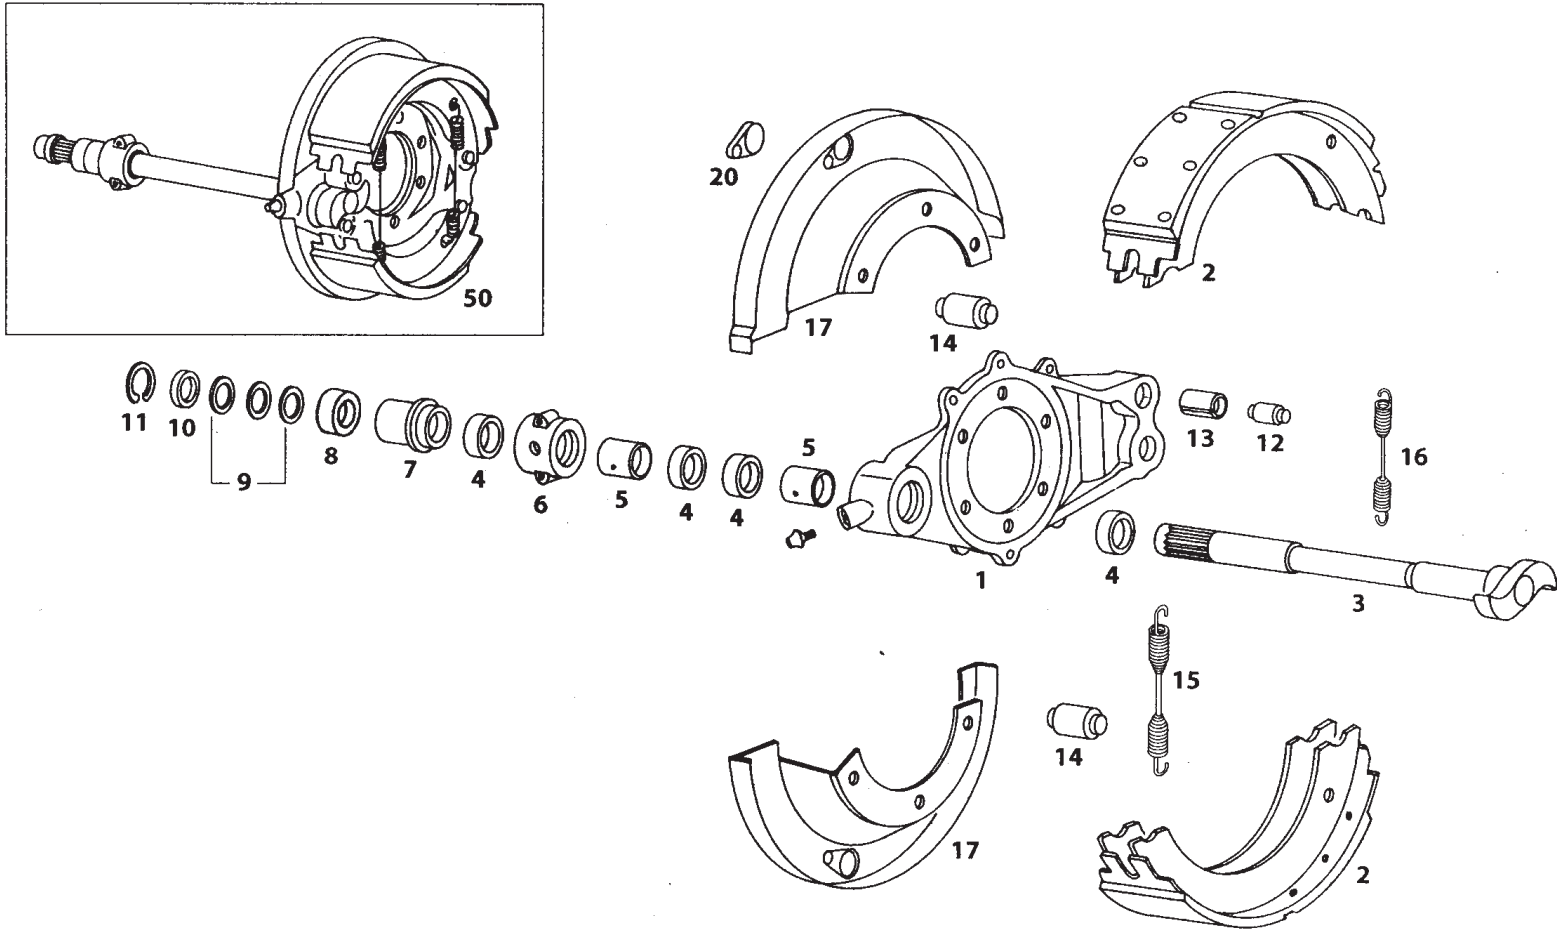


TABLE 42.2
REAR WHEEL BRAKE
GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		REAR WHEEL BRAKE												
50	2153 4230 01 01	Assy. Drum Brake RH Rear (Asbestos Type)	1											
50	2153 4230 01 03	Assy. Drum Brake LH Rear (Asbestos Type)	1											
1	2093 4230 37 01	Torque Plate RH / LH	2											
2	2153 4210 01 24	Lined Shoe LH & RH Std.	4											
—	2153 4210 01 25	Kit-Lining Set (Std.)	1											
—	2153 4210 01 26	Kit-Lining Set (1.0 mm O/S) - R/S I	1											
—	2153 4210 01 27	Kit-Lining Set (2.0 mm O/S) R/S II	1											
3	2641 4230 51 06	Cam Shaft Rear LH	1											
3	2641 4230 51 07	Cam Shaft Rear RH	1											
4	2641 4210 77 03	Oil Seal	8											
5	2641 4210 34 04	Bush (Bronze)	4											
6	2641 4230 01 91	Cam Shaft Bracket Assy	2											
7	2641 4230 86 03	Spacer (Cam Shaft)	2											
8	2093 4230 86 01	Sleeve (Slack Adj. End) Delrin	2											
9	2641 4210 83 04	Shim 0.5 mm	4											
9	2641 4210 83 05	Shim 0.3 mm	2											
10	2093 4210 92 03	Washer 2.5 mm	2											
10	2093 4210 92 04	Washer 1.5 mm	2											
11	2641 4210 43 01	Circlip	2											

TABLE 42.2

REAR WHEEL BRAKE

GROUP 42

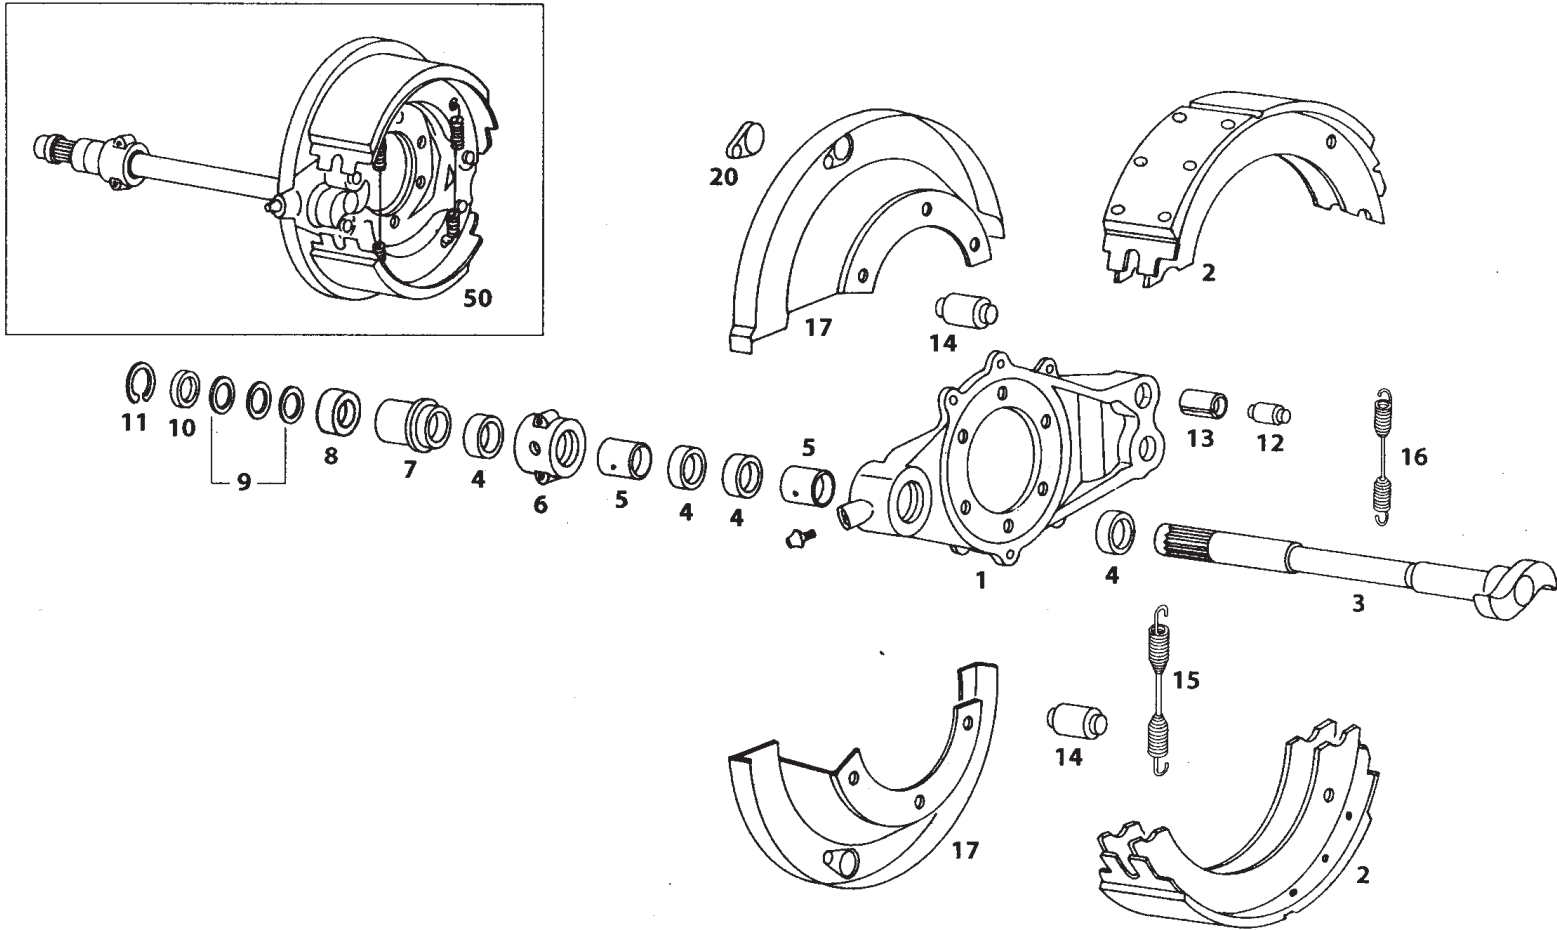


TABLE 42.2
REAR WHEEL BRAKE
GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
12	2641 4210 67 04	Fulcrum Pin	4											
13	2641 4210 34 05	Bush Fulcrum Pin	4											
14	2641 4210 99 06	Roller	4											
15	2641 4210 87 05	Spring Pull Off-Cam End	2											
16	2641 4210 87 06	Spring-Fulcrum End	4											
17	2064 4231 82 02	Dust Cover Top	2											
17	2064 4231 82 01	Dust Cover Bottom	2											
20	2573 4210 75 01	Grommet	4											

TABLE 42.3

BRAKE AGGREGATES

GROUP 42

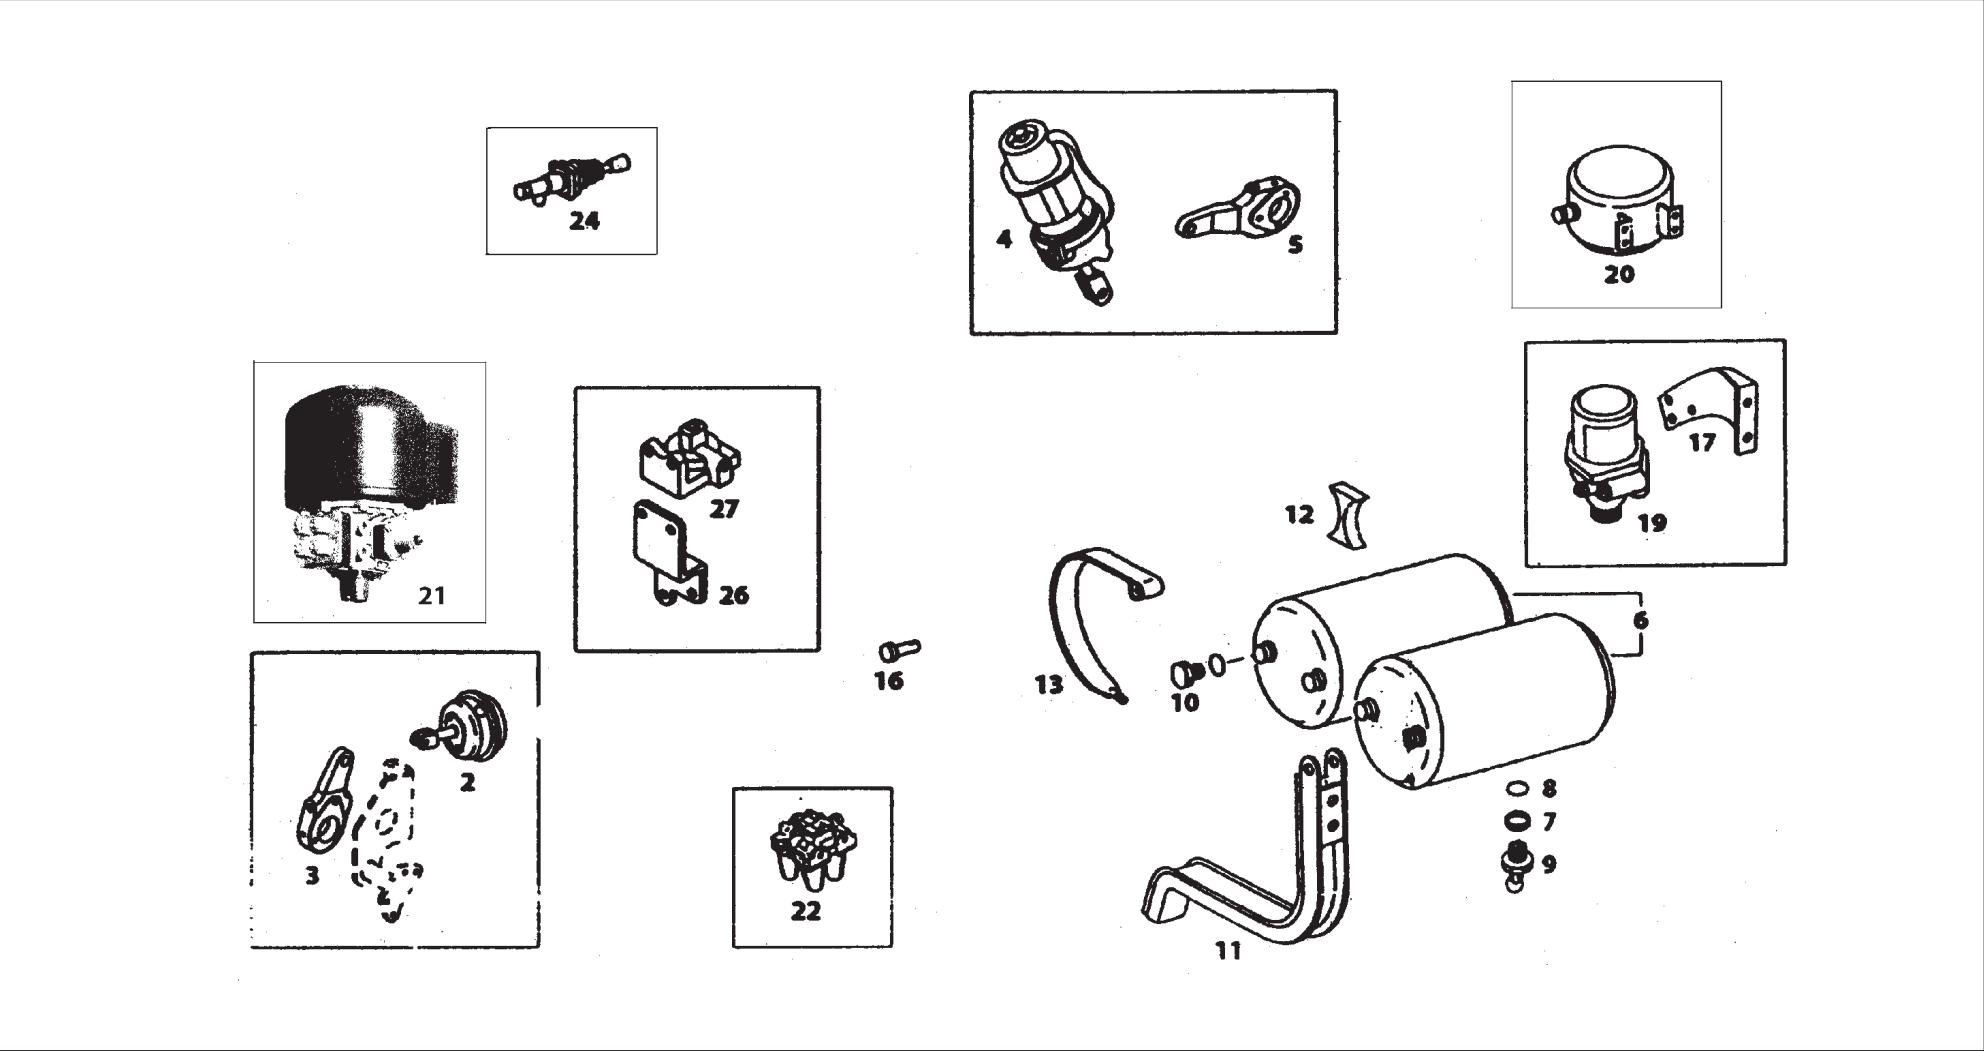


TABLE 42.3
BRAKE AGGREGATES
GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		BRAKE AGGREGATES												
2	2153 4210 01 01	Brake Chamber With Adaptor (Type-16)	2											
3	2641 4210 01 39	Manual Slack Adjuster Front	2											Upto Feb'07
3	2641 4210 01 32	Automatic Slack Adjuster Front	2											From March 2007
—	2876 4210 82 01	Anchor Bracket RH (Auto Slack Adjuster)	1											From March 2007
—	2876 4210 82 02	Anchor Bracket LH (Auto Slack Adjuster)	1											From March 2007
—	2643 4210 86 01	Spacer (Auto Slack Adjuster)	4											From March 2007
—	2643 4210 83 01	Shim (Auto Slack Adjuster)	AR											From March 2007
4	2093 4230 01 12	Spring Brake Actuator with Adaptor (Type 12/12)-Inclined Port	2											Upto March'07
4	2153 4230 01 30	Spring Brake Actuator RH(Type 16/24)-Straight Port	1											From April'07
4	2153 4230 01 31	Spring Brake Actuator LH(Type 16/24)-Straight Port	1											From April'07
—	2153 4230 01 05	Assy Bracket LH (For 16/24 Straight Port-Chamber Mtg)	1											From April'07
—	2153 4230 01 06	Assy Bracket RH (For 16/24 Straight Port-Chamber Mtg)	1											From April'07
5	2641 4230 01 64	Rear Slack Adjuster RH-Type 15(Manual)	1											Upto Feb'07
5	2641 4230 01 65	Rear Slack Adjuster LH-Type 15(Manual)	1											Upto Feb'07
5	2876 4230 01 06	Automatic Slack Adjuster Rear RH (43mm Offset)	1											From March 2007
5	2876 4230 01 07	Automatic Slack Adjuster Rear LH (43mm Offset)	1											From March 2007
—	2770 4230 82 01	Anchor Bracket RH (Auto Slack Adjuster)	1											From March 2007
—	2770 4230 82 02	Anchor Bracket LH (Auto Slack Adjuster)	1											From March 2007
6	2153 4320 01 07	Assy.Air Tank Complete with Support,Spacer,Strap.									1	1		Cab Version

TABLE 42.3

BRAKE AGGREGATES

GROUP 42

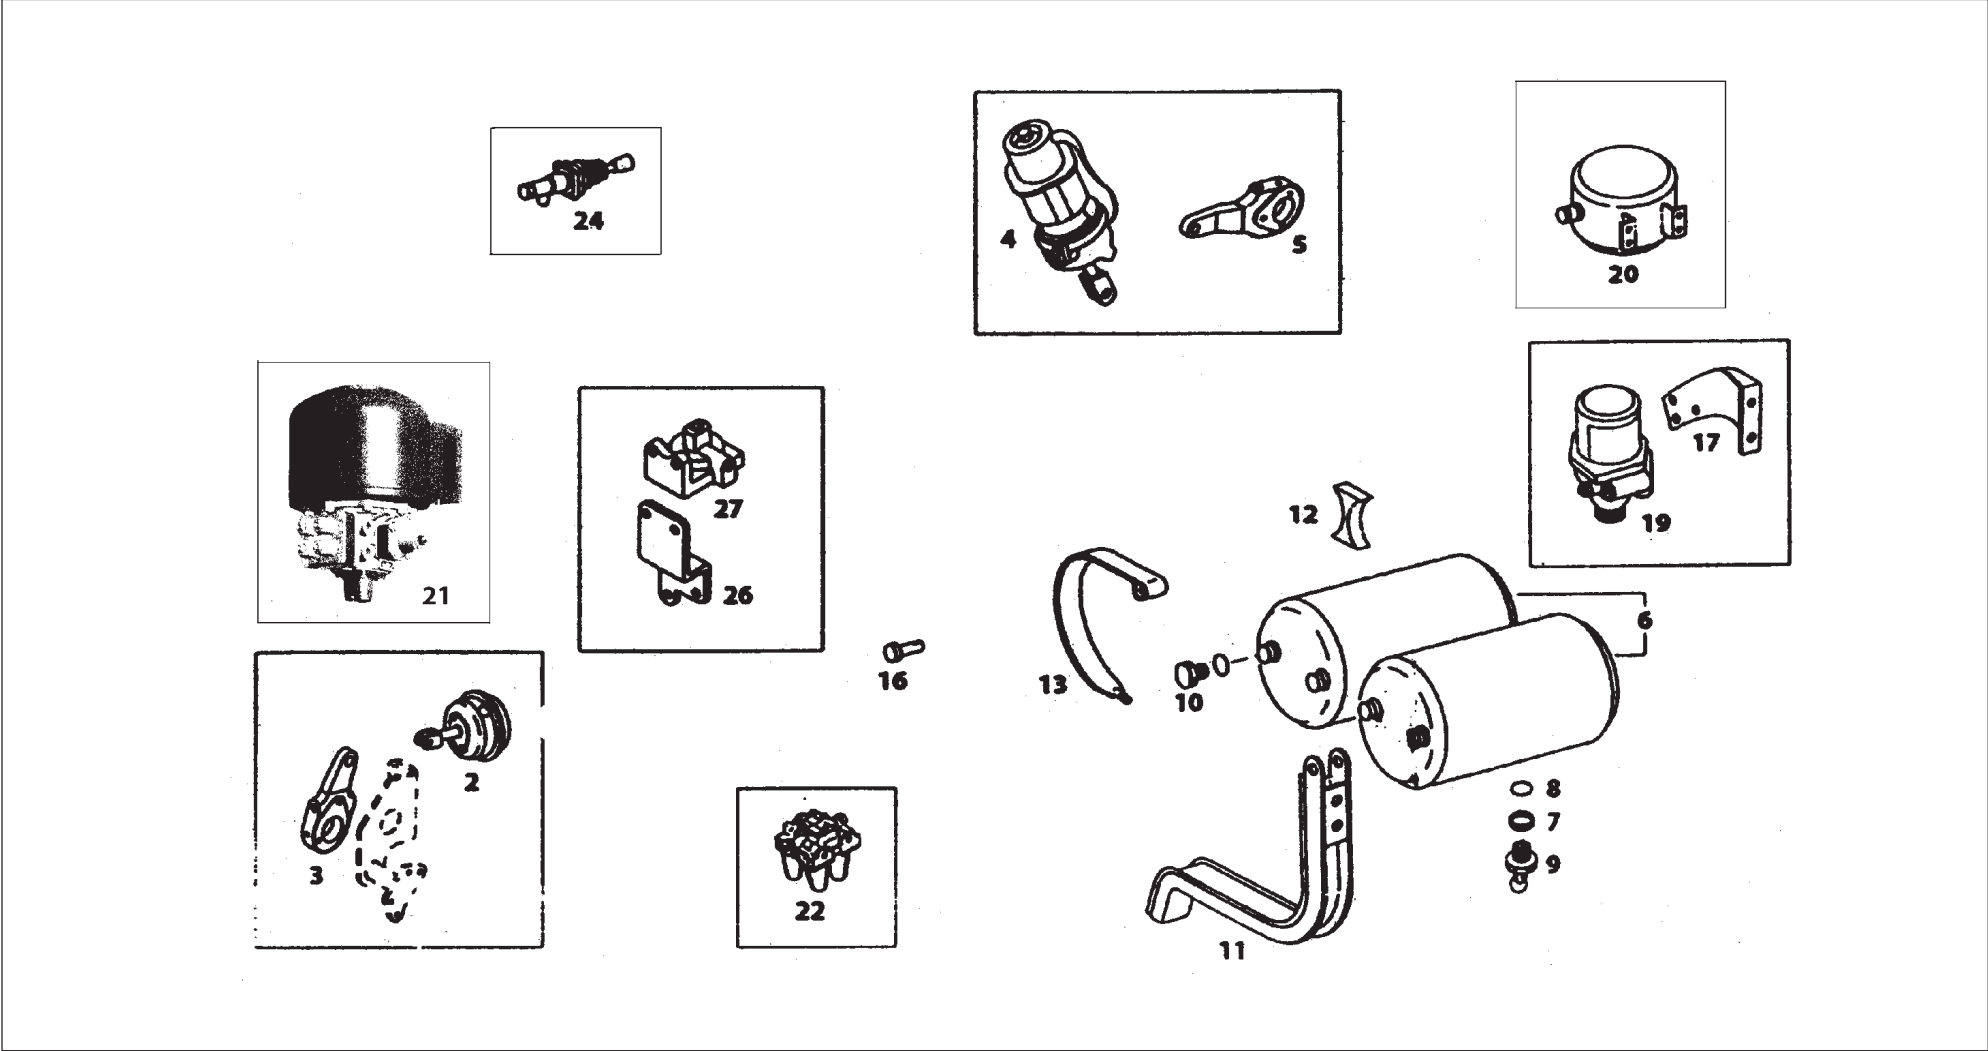


TABLE 42.3
BRAKE AGGREGATES
GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	2632 4290 01 09	Assy.Air Tank Complete (w/o Support,Spacer,Strap)			2			2	2					For Bus Version For Bus Version
—	2636 4320 01 01	Assy.Air Tank Complete (w/o Support,Spacer,Strap)		2		2	2				2	2	2	
7	2576 4350 92 01	Thrust Ring	4											
8	1705 050117 5	O Ring 20.30x2.62	4											
9	2576 4379 01 59	Water Drain Valve (Brass Version)	2											
10	1608 100220 1	Sealing Plug AM 22x1.5	2											
11	2573 4320 01 35	Assy. Support	2											
—	2099 4320 01 01	Assy Bracket RH (Air Tank Mtg)				1	1							
—	2099 4320 01 02	Assy Bracket LH (Air Tank Mtg)				1	1							
12	2576 4320 86 02	Spacer Block	2											
13	2576 4320 01 18	Assy. Strap Complete	2											
16	2576 4320 67 02	Pin	2											
17	2093 4320 71 01	Bracket (For Air Drier Mtg)		1	1					1	1			
17	2618 4370 01 08	Assy. Bracket (Air Dryer)				1	1					1	1	
19	2641 4370 01 05	Air Dryer with Unloader Valve		1	1	1	1			1	1	1	1	
20	2768 4370 01 02	Purge Tank		1	1	1	1			1	1	1	1	
21	2782 4370 01 63	Assy Drying and Distribution Unit						1	1					
22	2573 4370 01 57	System Protection Valve		1	1	1	1			1	1	1	1	
—	2643 4370 01 04	Automatic Load Sensing Valve						1	1					
—	2153 4240 71 02	Bracket For Load Sensing Valve Mtg.						1	1					

TABLE 42.3

BRAKE AGGREGATES

GROUP 42

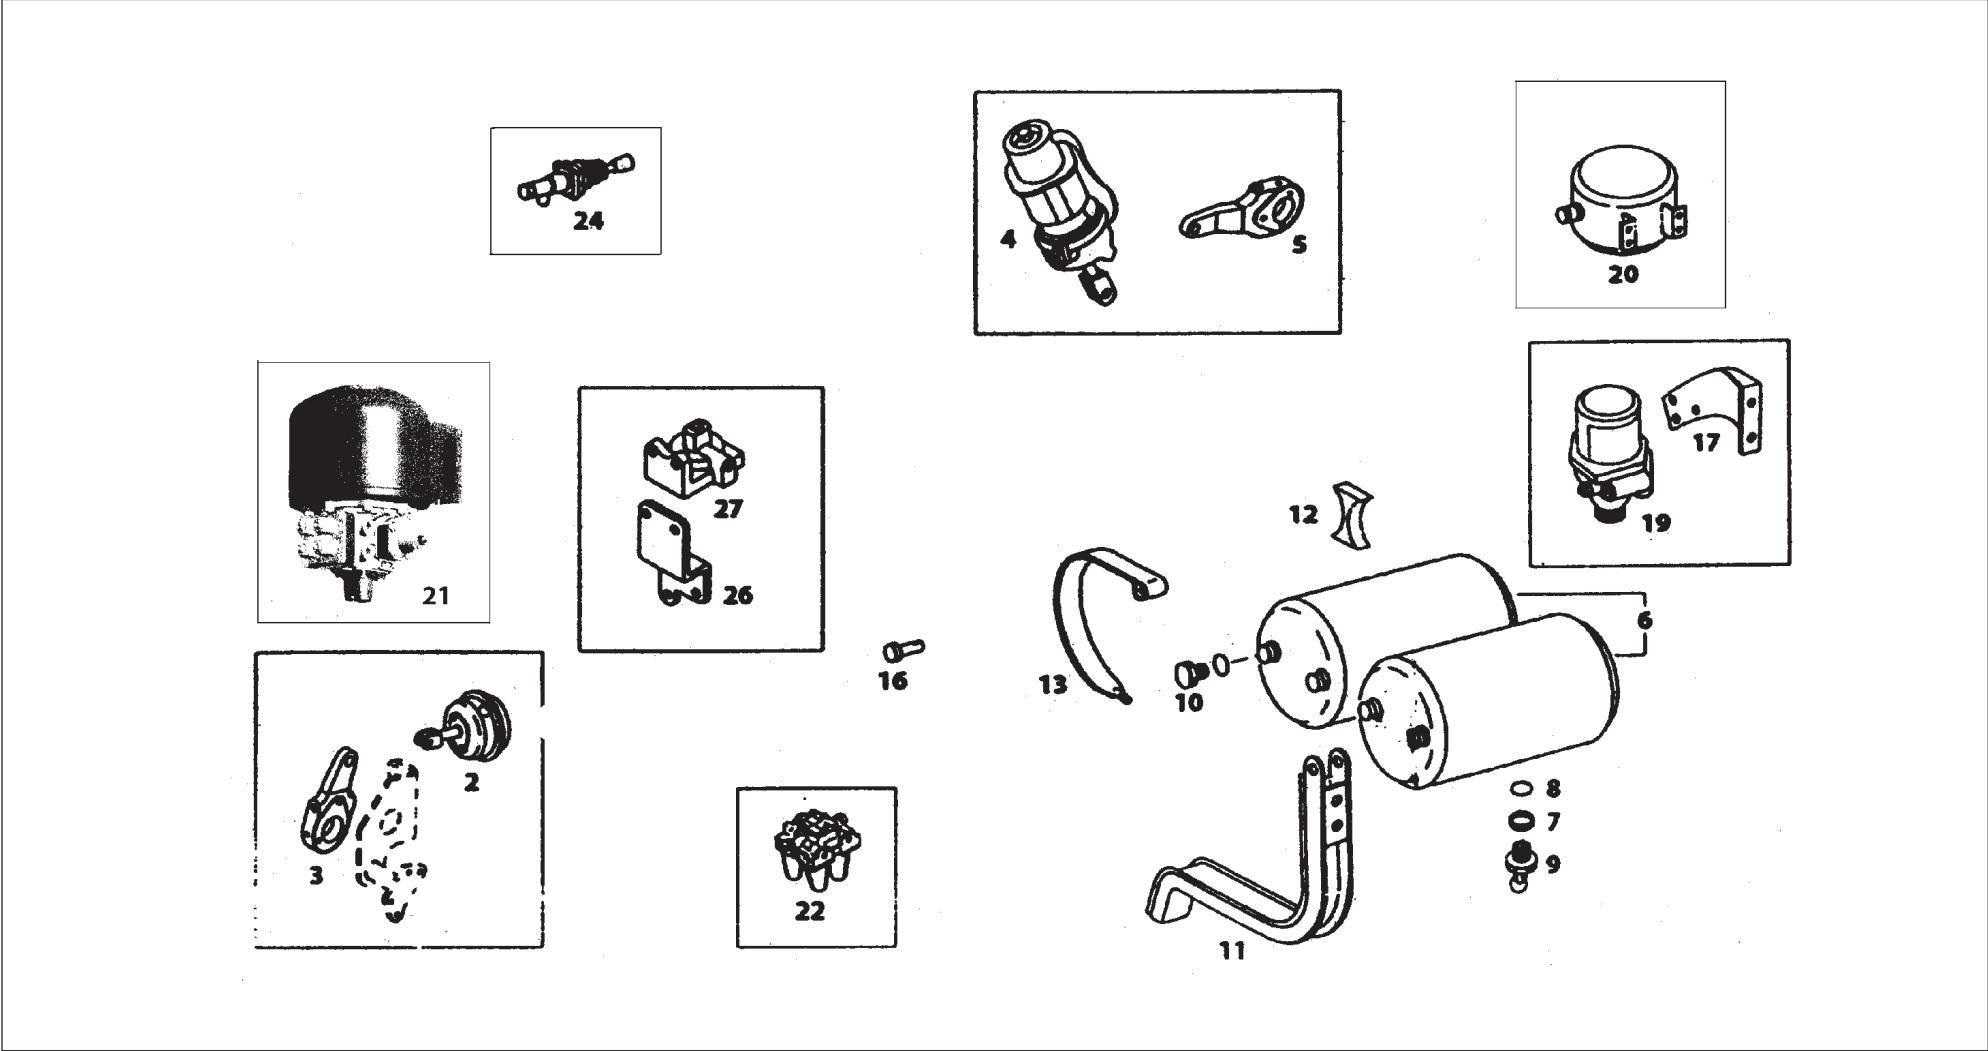


TABLE 42.3
BRAKE AGGREGATES
GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	2153 4240 01 02	Assy Pull Rod						1	1					Not Serviced
—	2153 4240 01 03	Bracket For Pull Rod						1	1					
24	2573 4370 01 53	Graduated Hand Brake Valve	1											
26	2632 4290 01 01	Assy. Bracket for Quick Release Valve				1	1		1			1	1	
27	2632 4291 01 65	Quick Release Valve				1	1		1			1	1	
—	2093 4290 01 24	Assy. Pipe (Air Comp.to DDU)		1	1	1	1			1		1	1	
—	2153 4291 01 25	Assy. Pipe (Air Comp.to DDU)						1	1		1			
—	2085 4680 01 01	1/2" Assy Hose(450 Lg)	1											
—	2153 4290 01 41	Assy.Pipe (Hose to Int.Joint towards Air Drier)				1	1					1	1	
—	2153 4290 01 42	Assy.Pipe (Int.Joint to Air Drier)				1	1					1	1	
—	2153 4291 01 56	Assy.Pipe (Hose to Int.Joint towards Air Drier)							1					
—	2153 4291 01 57	Assy.Pipe (Int.Joint to Air Drier)							1					
—		Assy.Pipe (Hose to Int.Joint towards Air Drier)		1	1			1		1	1			
—	2153 4290 01 81	Assy.Pipe (Int.Joint to Air Drier)		1	1			1		1	1			
—	2064 4270 01 14	Assy Pipe (Hand Brake Valve to Elbow)	1											
—	2573 4295 01 76	3/8" Hose Assy. with End Fittings(L=630)	2											
—	2573 4295 01 77	Assy Hose with End Fittingd	2											
—	2153 4290 01 55	Assy Nylon Pipe Set Complete		1	1					1	1			Cab Version
—	2153 4290 01 12	Assy Nylon Pipe Set Complete		1	1					1	1			Cowl Version
—	2153 4291 01 58	Assy Nylon Pipe Set Complete						1						for DDU Fitment

TABLE 42.3

BRAKE AGGREGATES

GROUP 42

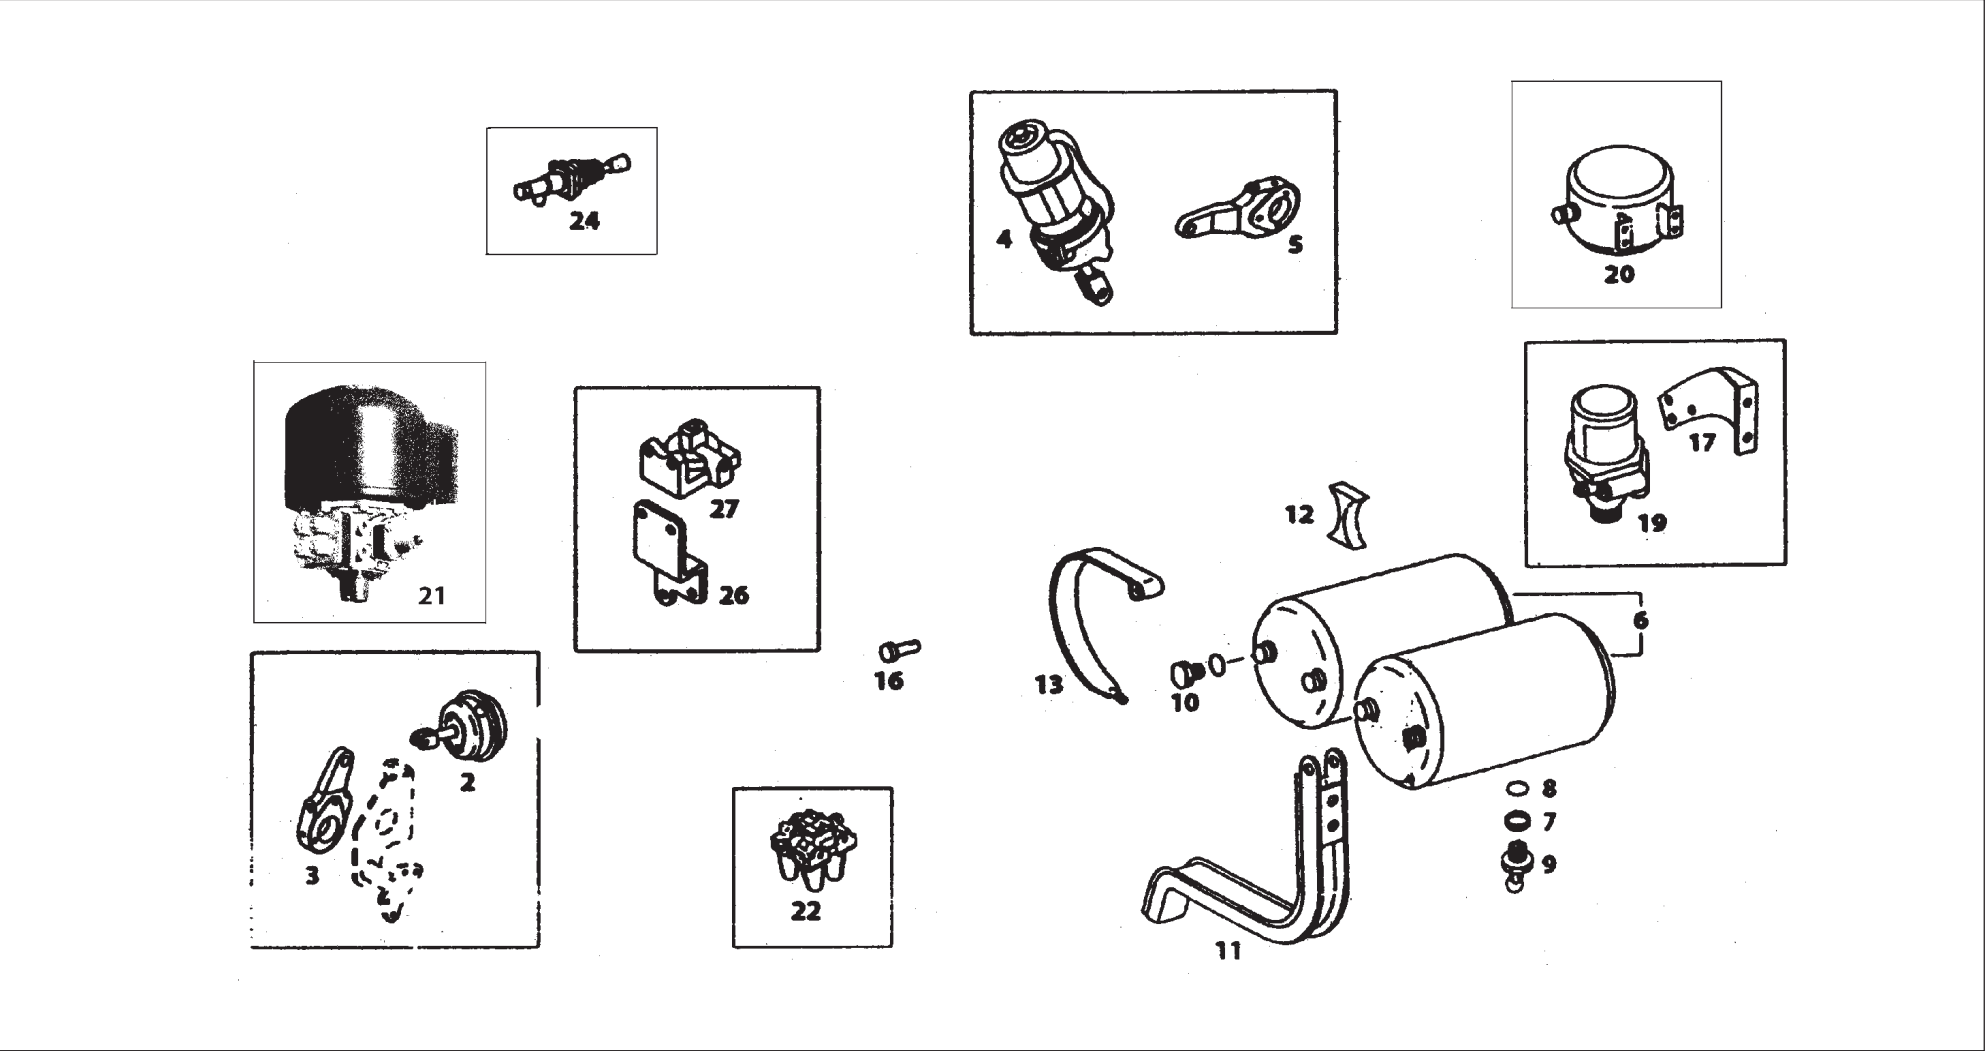


TABLE 42.3
BRAKE AGGREGATES
GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	2153 4290 01 43	Assy Nylon Pipe Set Complete				1	1					1	1	Cowl Version
—	2153 4290 01 60	Assy Nylon Pipe Set Complete				1	1					1	1	Cab Version
—	2153 4291 01 59	Assy Nylon Pipe Set Complete							1					for DDU Fitment

TABLE 42.4

AIR DRYER WITH TYRE INFLATOR

GROUP 42

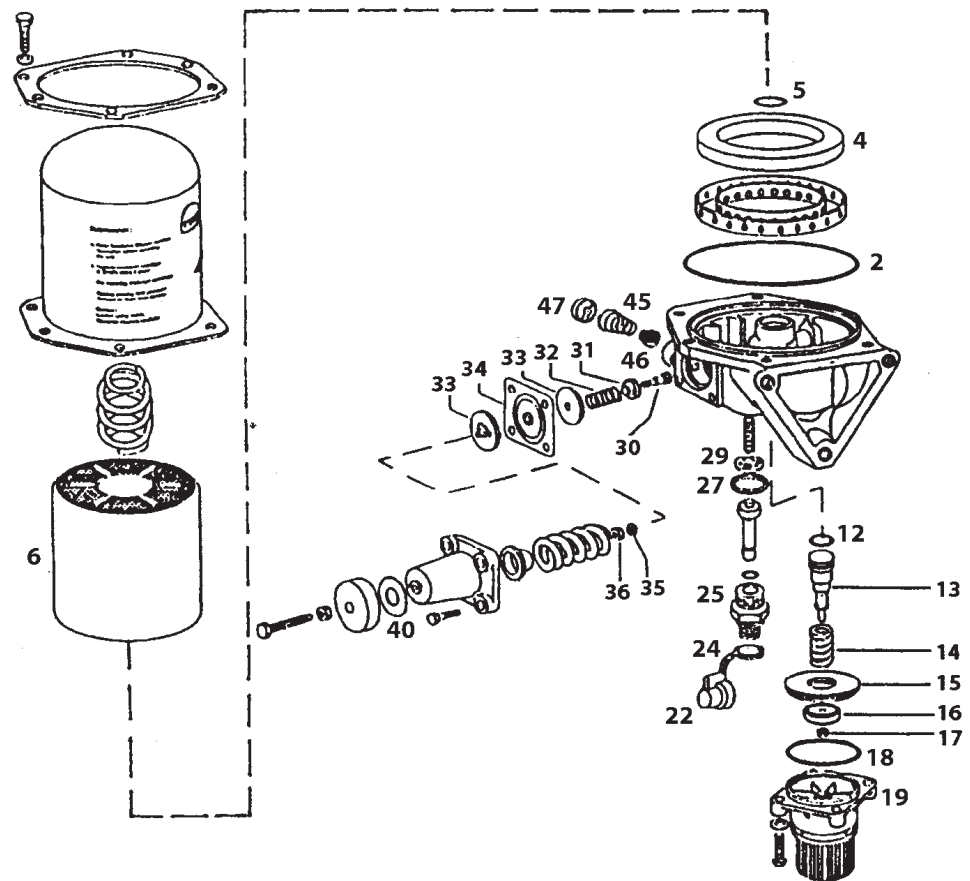
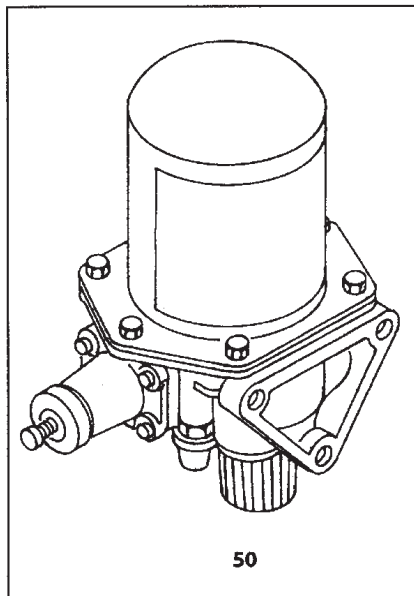


TABLE 42.4
AIR DRYER WITH TYRE INFLATOR
GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
50	2641 4370 01 05	AIR DRYER WITH TYRE INFLATOR												Not Serviced
—		Air Dryer with Unloader Valve		1	1	1	1			1	1	1	1	
13		Plunger Assy. Consists of :		1	1	1	1			1	1	1	1	
14		Unloader Plunger		1	1	1	1			1	1	1	1	
15		Compression Spring		1	1	1	1			1	1	1	1	
16		Valve Seat		1	1	1	1			1	1	1	1	
17		Valve		1	1	1	1			1	1	1	1	
—		Hex. Nyloc Nut		1	1	1	1			1	1	1	1	
30	2641 4370 01 13	Diaphragm Assy. Consists of :		1	1	1	1			1	1	1	1	
31		Governor Plunger		1	1	1	1			1	1	1	1	
32		Valve		1	1	1	1			1	1	1	1	
33		Spring		1	1	1	1			1	1	1	1	
34		Follower		2	2	2	2			2	2	2	2	
35		Diaphragm		1	1	1	1			1	1	1	1	
36		Spring Washer		1	1	1	1			1	1	1	1	
—		Hex. Nut		1	1	1	1			1	1	1	1	
2	2641 4370 01 23	Repair Kit, Major For Air Dryer, Consisting of :		1	1	1	1			1	1	1	1	
4		Sealing Ring		1	1	1	1			1	1	1	1	
5		Filter		1	1	1	1			1	1	1	1	
		Sealing Ring		1	1	1	1			1	1	1	1	

TABLE 42.4

AIR DRYER WITH TYRE INFLATOR

GROUP 42

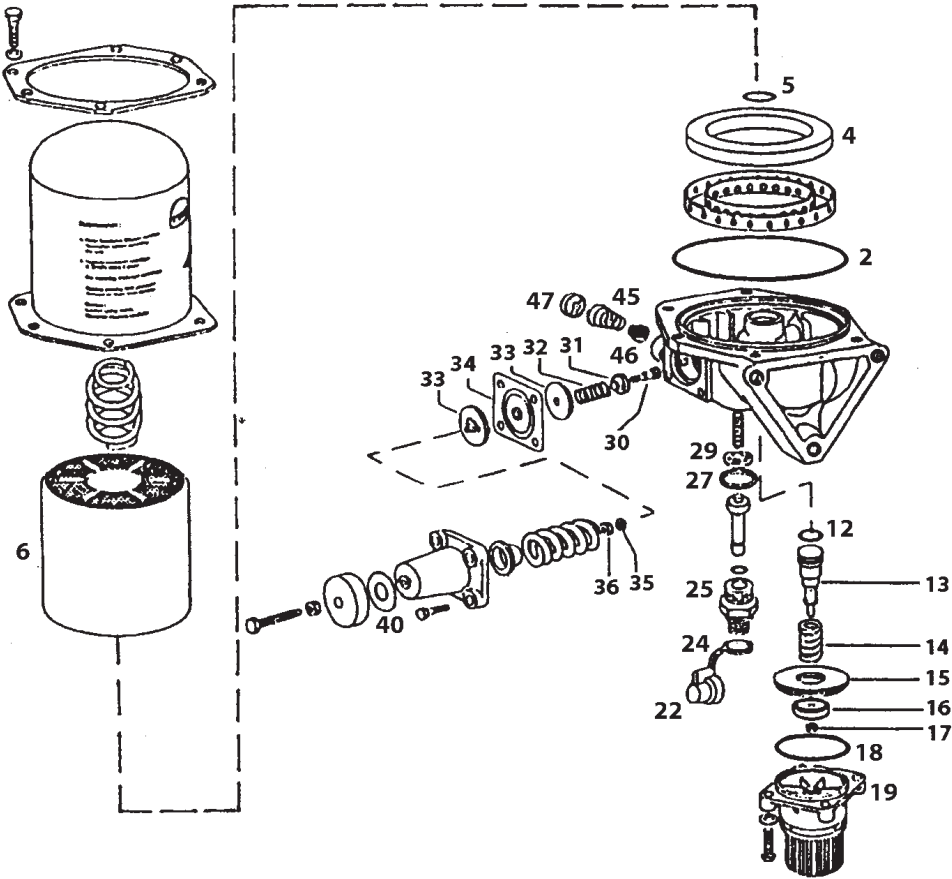
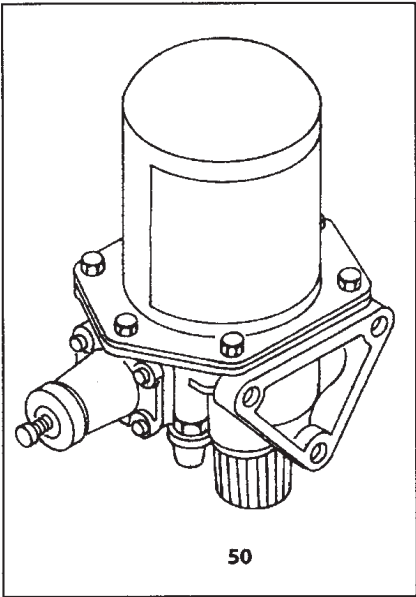


TABLE 42.4
AIR DRYER WITH TYRE INFLATOR
GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
6	2641 4370 01 24	Dessicant Cartridge		1	1	1	1			1	1	1	1	
12		Sealing Ring		1	1	1	1			1	1	1	1	
16		Valve		1	1	1	1			1	1	1	1	
17		Nyloc Nut		1	1	1	1			1	1	1	1	
18		Sealing Ring		1	1	1	1			1	1	1	1	
19		Silencer		1	1	1	1			1	1	1	1	
22		Dust Cap		1	1	1	1			1	1	1	1	
24		Sealing Ring		1	1	1	1			1	1	1	1	
25		Valve		1	1	1	1			1	1	1	1	
27		Sealing Washer		1	1	1	1			1	1	1	1	
29		Sealing Washer		1	1	1	1			1	1	1	1	
31		Valve		1	1	1	1			1	1	1	1	
34		Diaphragm		1	1	1	1			1	1	1	1	
40		Exhaust Flap		1	1	1	1			1	1	1	1	
45		Conical Spring		1	1	1	1			1	1	1	1	
46		Non Return Valve		1	1	1	1			1	1	1	1	
47		Valve Stop & Spring Retainer		1	1	1	1			1	1	1	1	
		Grease Sachet		2	2	2	2			2	2	2	2	
—	2641 4370 01 24	Repair Kit, Minor For Air Dryer, Consisting of :		1	1	1	1			1	1	1	1	
2		Sealing Ring		1	1	1	1			1	1	1	1	

TABLE 42.4

AIR DRYER WITH TYRE INFLATOR

GROUP 42

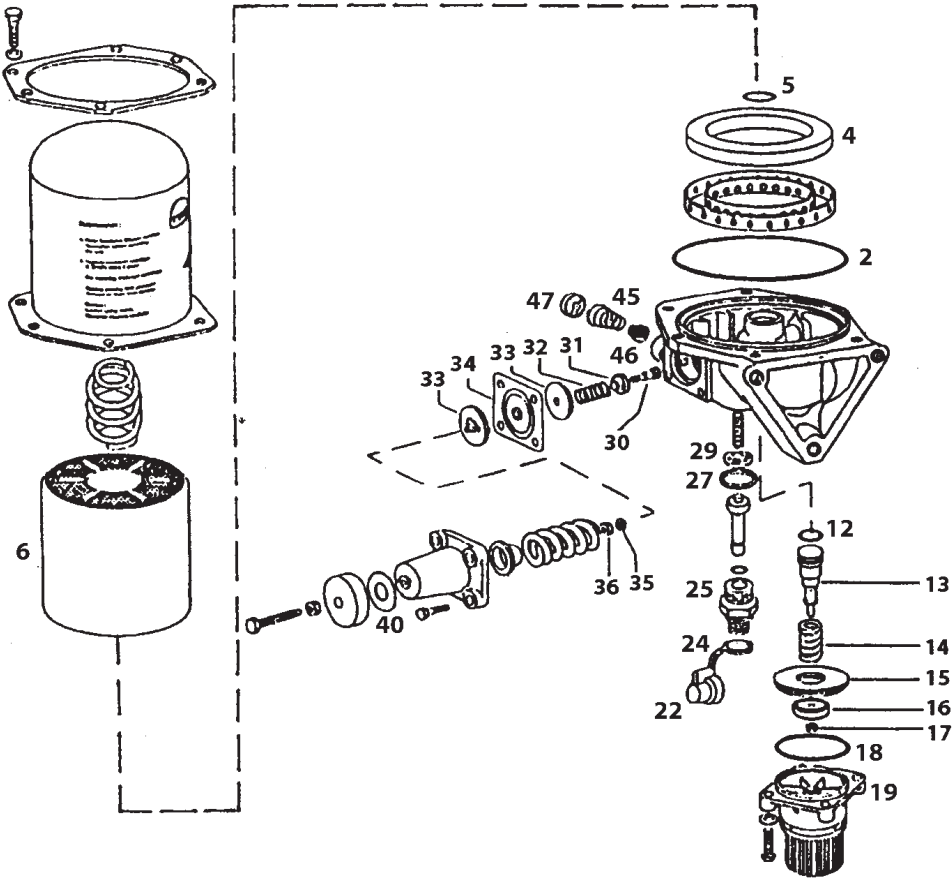
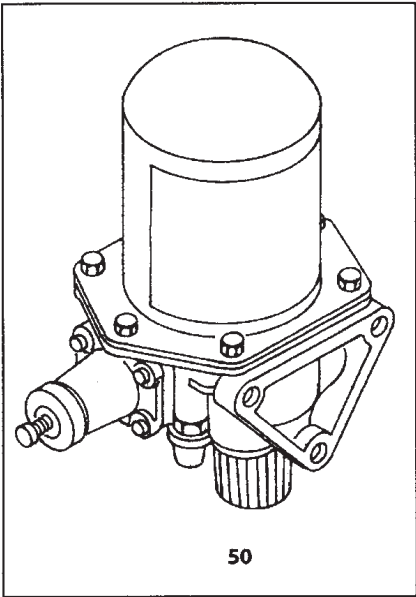


TABLE 42.4

AIR DRYER WITH TYRE INFLATOR

GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
5		Sealing Ring		1	1	1	1			1	1	1	1	
16		Valve		1	1	1	1			1	1	1	1	
17		Nyloc Nut		1	1	1	1			1	1	1	1	
18		Sealing Ring		1	1	1	1			1	1	1	1	
22		Dust Cap		1	1	1	1			1	1	1	1	
24		Sealing Ring		1	1	1	1			1	1	1	1	
25		Valve		1	1	1	1			1	1	1	1	
27		Sealing Washer		1	1	1	1			1	1	1	1	
29		Sealing Washer		1	1	1	1			1	1	1	1	
31		Valve		1	1	1	1			1	1	1	1	
34		Diaphragm		1	1	1	1			1	1	1	1	
40		Exhaust Flap		1	1	1	1			1	1	1	1	
46		Non Return Valve		1	1	1	1			1	1	1	1	
—		Grease Sachet		2	2	2	2			2	2	2	2	

TABLE 42.5

SYSTEM PROTECTION VALVE

GROUP 42

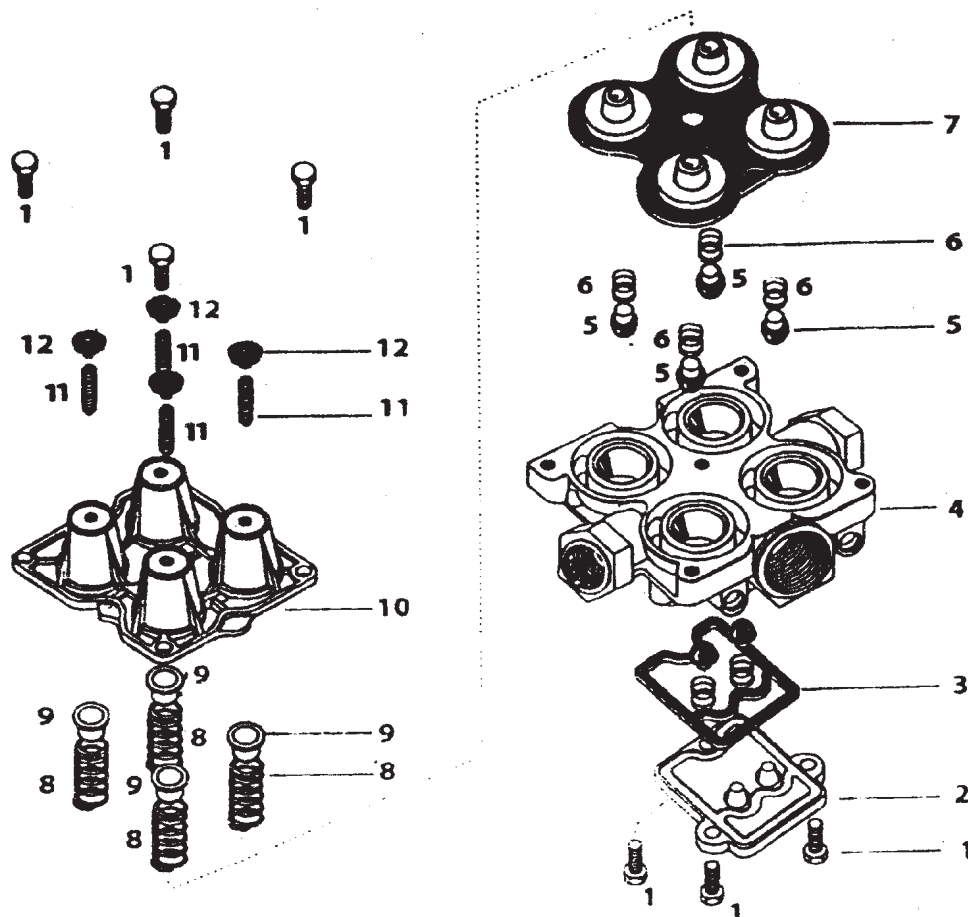
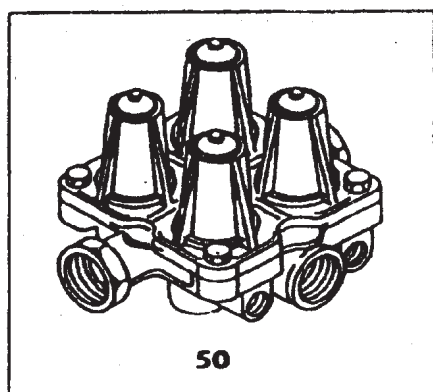


TABLE 42.5
SYSTEM PROTECTION VALVE
GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		SYSTEM PROTECTION VALVE												
50	2573 4370 01 57	System Protection Valve		1	1	1	1			1	1	1	1	
1		Set Screw		8	8	8	8			8	8	8	8	Not Serviced
2		Base Cover		1	1	1	1			1	1	1	1	Not Serviced
3		Gasket		1	1	1	1			1	1	1	1	Not Serviced
4		Body		1	1	1	1			1	1	1	1	Not Serviced
5		Valve		6	6	6	6			6	6	6	6	Not Serviced
6		Spring		6	6	6	6			6	6	6	6	Not Serviced
7		Diaphragm Assy.		1	1	1	1			1	1	1	1	Not Serviced
8		Compression Spring		4	4	4	4			4	4	4	4	Not Serviced
9		Spring Guide		4	4	4	4			4	4	4	4	Not Serviced
10		Top Cover		1	1	1	1			1	1	1	1	Not Serviced
11		Pressure Setting Screw		4	4	4	4			4	4	4	4	Not Serviced
12		Dust Cover		4	4	4	4			4	4	4	4	Not Serviced
—	2576 4374 01 16	Repair Kit Sys. Protection Valve Consisting of :		1	1	1	1			1	1	1	1	
3		Gasket		1	1	1	1			1	1	1	1	
5		Valve		6	6	6	6			6	6	6	6	
6		Spring		6	6	6	6			6	6	6	6	
7		Diaphragm Assy.		1	1	1	1			1	1	1	1	
12		Dust Cover		4	4	4	4			4	4	4	4	

TABLE 42.6

DUAL BRAKE VALVE

GROUP 42

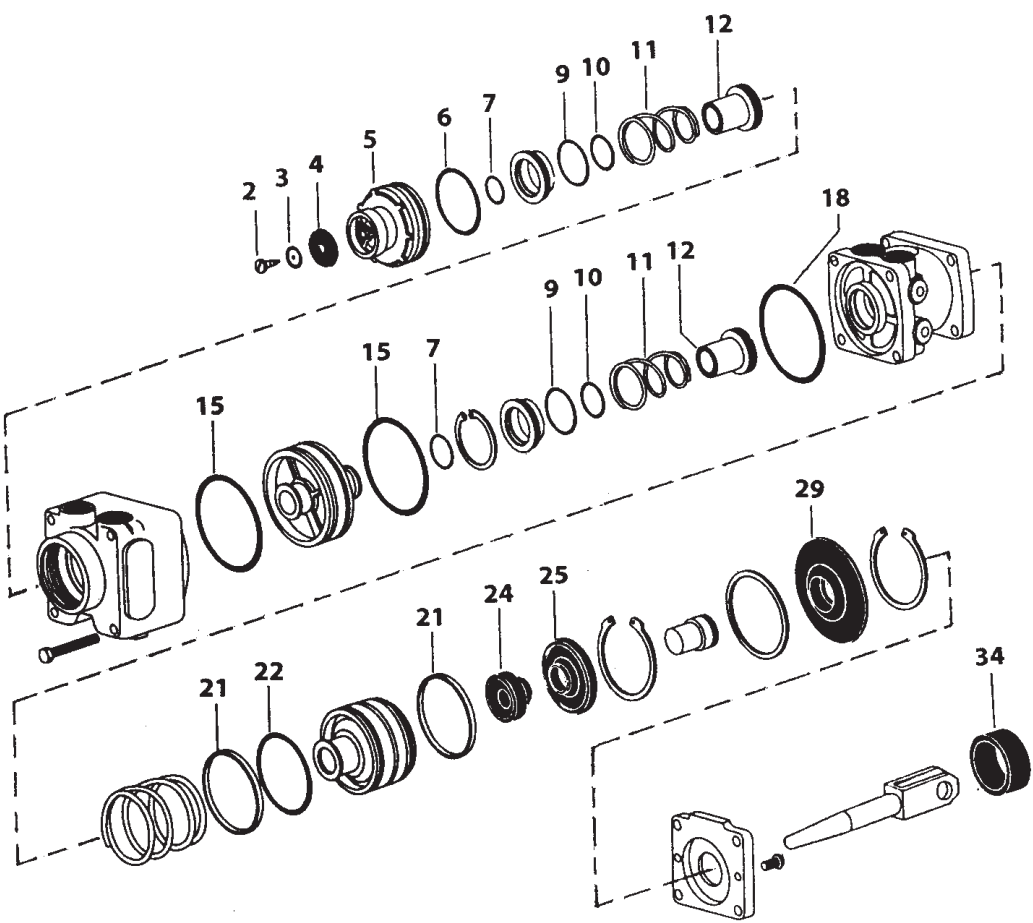
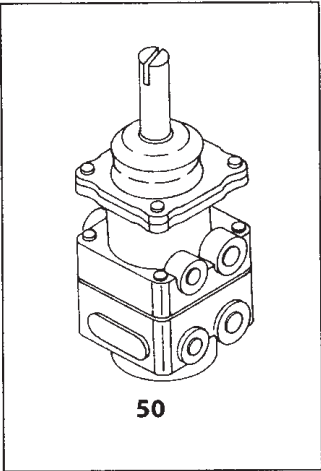


TABLE 42.6
DUAL BRAKE VALVE
GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		DUAL BRAKE VALVE												
50	2641 4370 01 02	Dual Brake Valve		1	1	1	1							
50	2782 4370 01 59	Dual Brake Valve						1	1	1	1	1	1	
—	2641 4370 01 26	Repair Kit Dual Brake Valve Consisting of :	1											
4		Washer	1											
6		'O' Ring	1											
7		'O' Ring	2											
9		'O' Ring	2											
10		'O' Ring	2											
11		Spring	2											
12		Valve	2											
15		'O' Ring	2											
18		'O' Ring	1											
21		Guide Ring	2											
22		'O' Ring	1											
24		Rubber Spring	1											
25		Spring Seat	1											
29		Boot	1											
34		Boot	1											

TABLE 42.7

FRONT BRAKE CHAMBER

GROUP 42

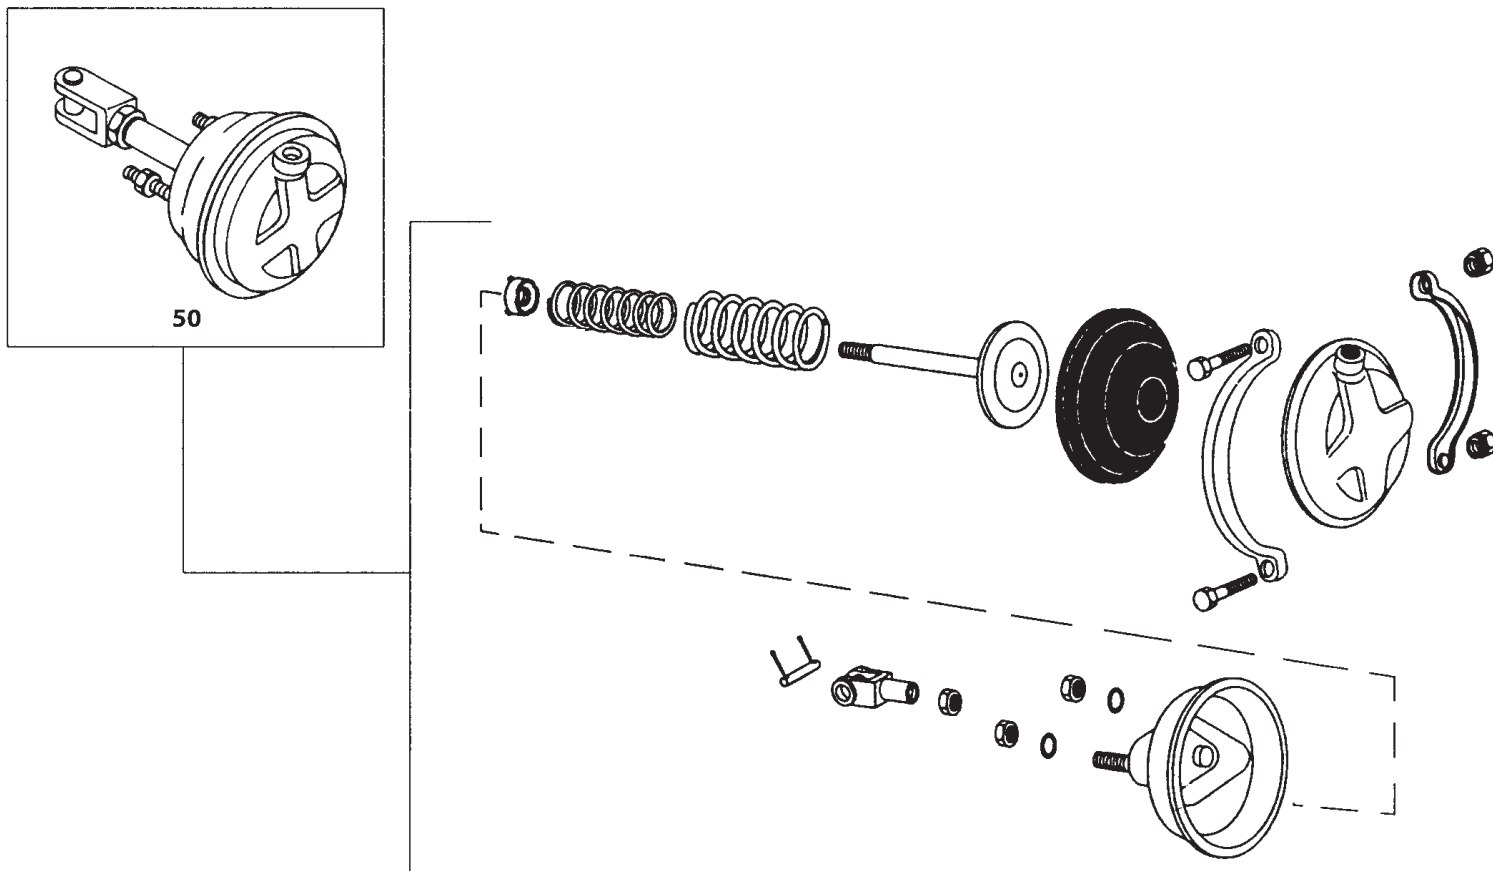


TABLE 42.7

FRONT BRAKE CHAMBER

GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
50	2153 4210 01 01	FRONT BRAKE CHAMBER Front Brake Chamber (Type -16)	2											
—	2632 4370 01 16	Diaphragm	2											

TABLE 42.8

REAR BRAKE ACTUATOR

GROUP 42

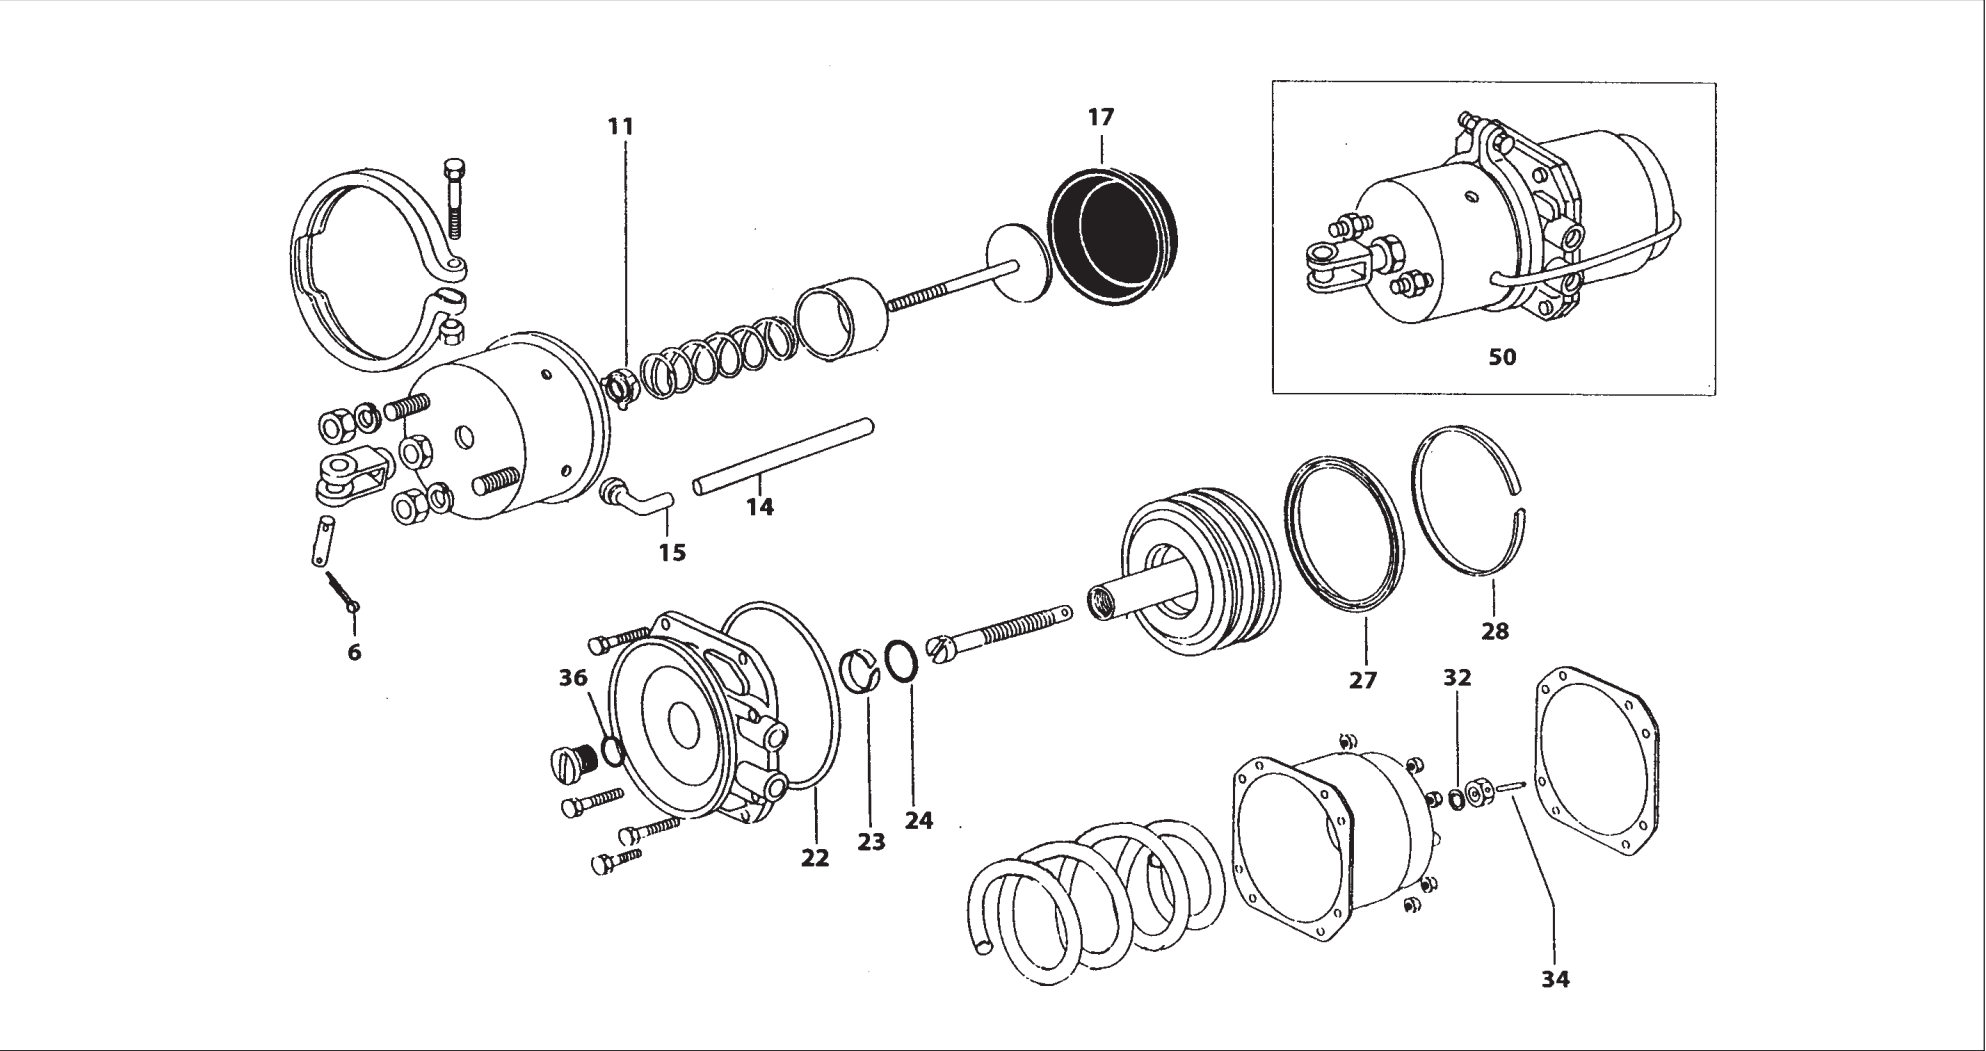


TABLE 42.8
REAR BRAKE ACTUATOR
GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		REAR BRAKE ACTUATOR												
50	2093 4230 01 12	Spring Brake Actuator with Adaptor (Type 12/12)-Inclined Port	2											Upto March'07
50	2153 4230 01 30	Spring Brake Actuator RH(Type 16/24)-Straight Port	1											From April'07
50	2153 4230 01 31	Spring Brake Actuator LH(Type 16/24)-Straight Port	1											From April'07
—	2641 4230 01 29	Repair Kit Spring Brake Actuator Consisting of :	1											For Actuator Part No.2093 4230 01 12
1		Knurl Pin	1											
3		Sealing Washer	1											
5		Elbow	1											
8		Bearing (Ram)	1											
9		Seal (Ram)	1											
12		O' Ring	1											
13		Bearing	1											
14		Sealing Ring	1											
18		O' Ring	1											
19		Diaphragm	1											
23		Dust Seal	1											
24		Tube	1											
28		Split Pin	1											

TABLE 42.9

FRONT AND REAR SLACK ADJUSTER

GROUP 42

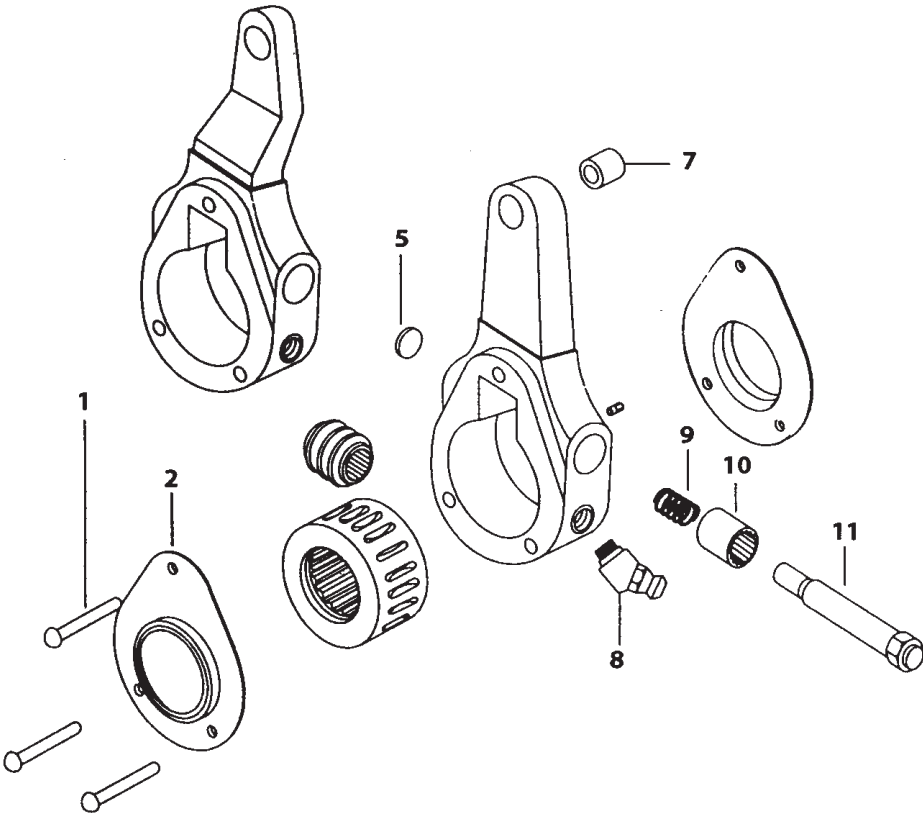
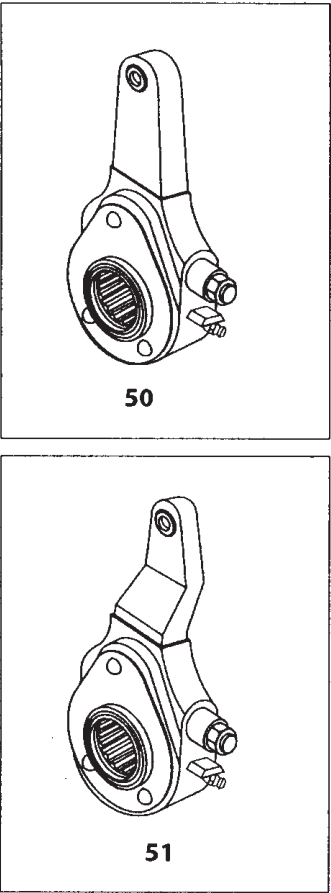


TABLE 42.9
FRONT AND REAR SLACK ADJUSTER
GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		FRONT AND REAR SLACK ADJUSTER												
50	2641 4210 01 39	Manual Slack Adjuster Front	2											Upto Feb'07
50	2641 4210 01 32	Automatic Slack Adjuster Front	2											From March 2007
51	2641 4230 01 64	Rear Slack Adjuster RH-Type 15(Manual)	1											Upto Feb'07
51	2641 4230 01 65	Rear Slack Adjuster LH-Type 15(Manual)	1											Upto Feb'07
51	2876 4230 01 06	Automatic Slack Adjuster Rear RH (43mm Offset)	1											From March 2007
51	2876 4230 01 07	Automatic Slack Adjuster Rear LH (43mm Offset)	1											From March 2007
—	2641 4210 01 68	Worm Shaft Kit Consisting of :	1											
7		Bush	1											
9		Warm Shaft Lock Spring	1											
10		Worm Shaft Lock	1											
11		Worm Shaft	1											
—	2641 4210 01 69	Major Repair Kit Consisting of :	1											
1		Rivet	3											
2		Cover	2											
5		Welch Plug	1											
7		Bush	1											
8		Conical Head Grease Nipple	1											
9		Worm Shaft Lock Spring	1											
10		Worm Shaft Lock	1											
11		Worm Shaft	1											

TABLE 42.10

DRYING AND DISTRIBUTION UNIT

GROUP 42

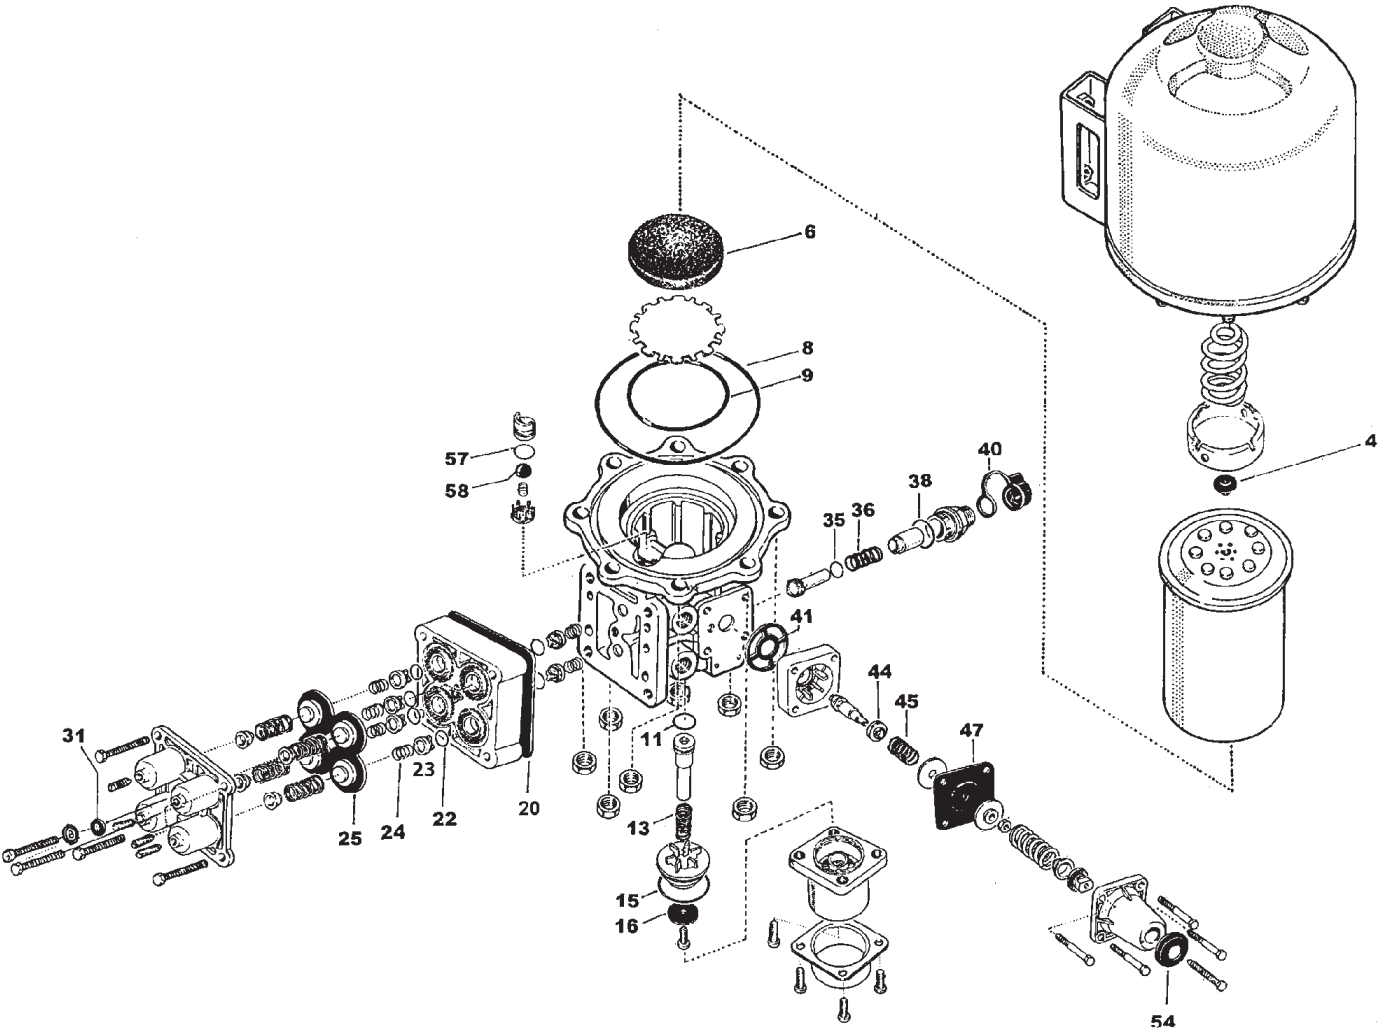
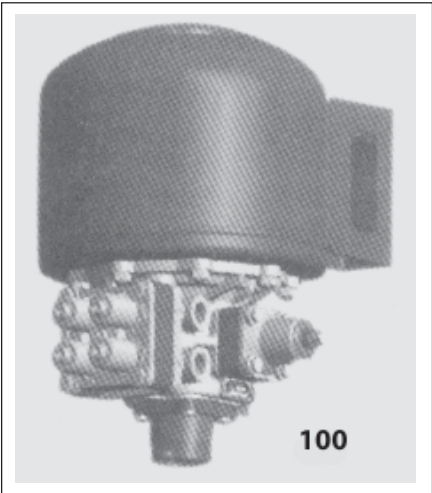


TABLE 42.10
DRYING AND DISTRIBUTION UNIT
GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		DRYING AND DISTRIBUTION UNIT												
100	2782 4370 01 63	Drying and Distribution Unit						1	1					
—	2641 4370 01 27	Repair Kit, Drying and Distribution Unit, Consisting of :-						1	1					
4		Purge Valve						1	1					
6		Filter						1	1					
8		Sealing Ring						1	1					
9		Sealing Ring						1	1					
11		'O' Ring						1	1					
13		Spring						1	1					
15		'O' Ring						1	1					
16		Spherical Valve						1	1					
20		Gasket, QSPV						1	1					
22		'O' Ring						6	6					
23		Valve						6	6					
24		Spring, Sys. Prot. Valve						7	7					
25		Diaphragm, Sys. Prot. Valve						1	1					
31		Lip Seal						1	1					
35		'O' Ring						1	1					
36		Spring						1	1					
38		'O' Ring						1	1					

TABLE 42.10

DRYING AND DISTRIBUTION UNIT

GROUP 42

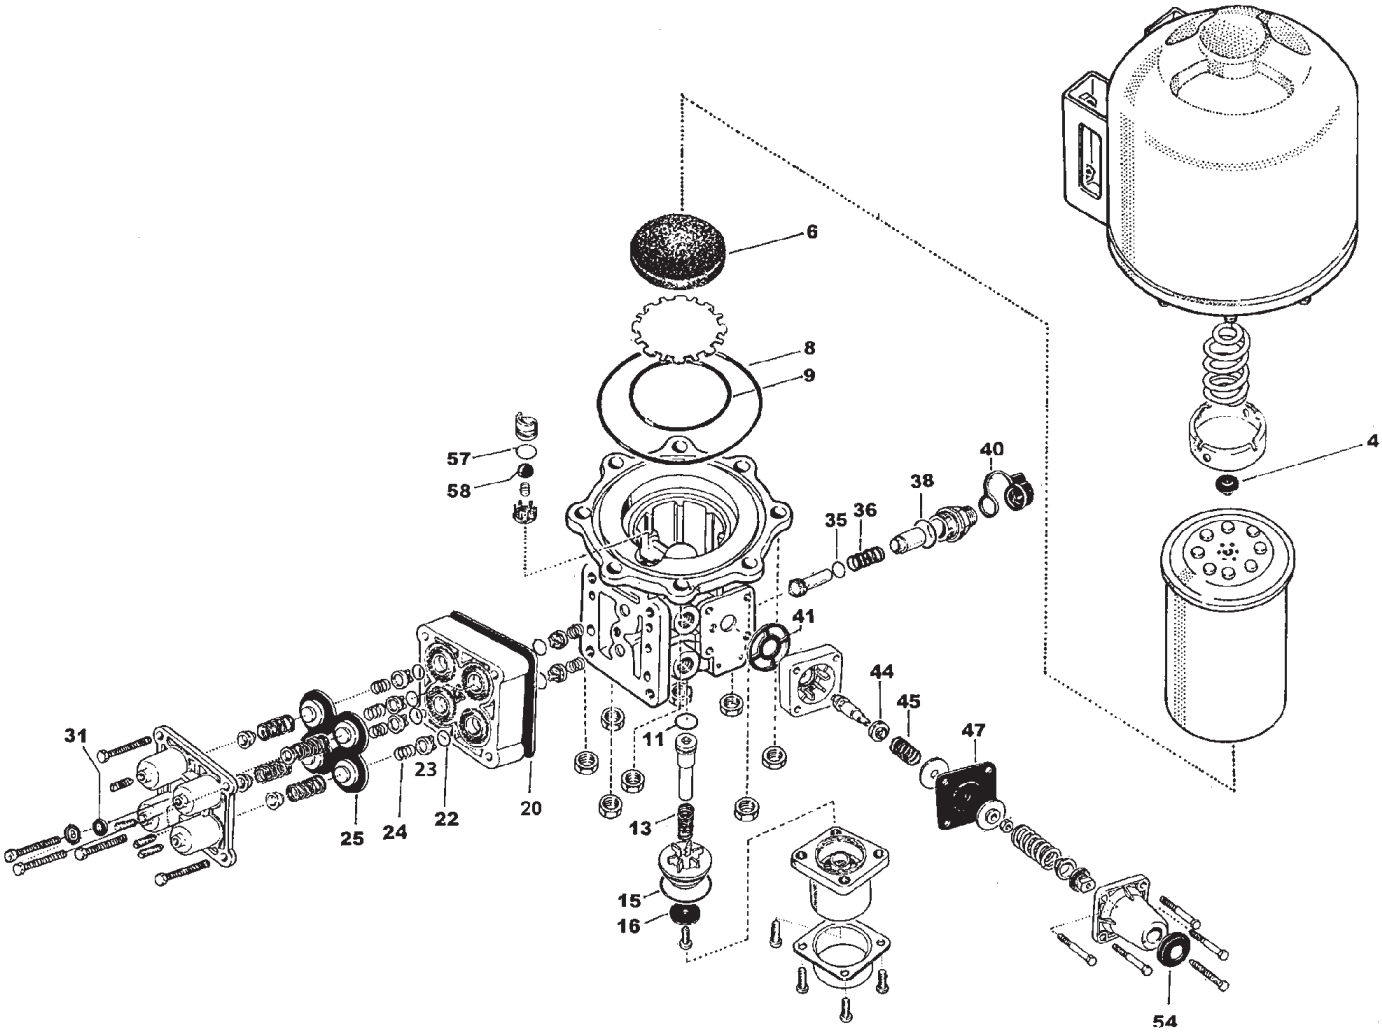
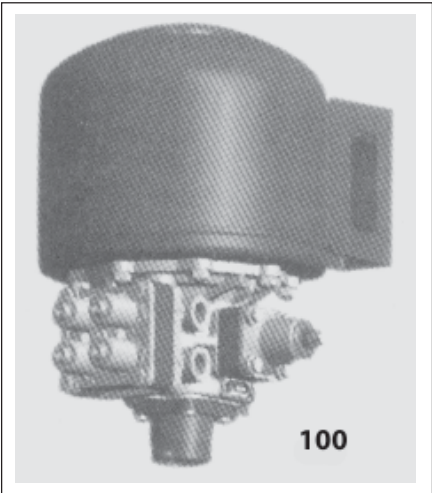


TABLE 42.10
DRYING AND DISTRIBUTION UNIT
GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
40		Cap						1	1					
41		Gasket, Unloader Valve						1	1					
44		Bonded Valve						1	1					
45		Spring, Unloader Valve						1	1					
47		Diaphragm, Unloader Valve						1	1					
54		Cap						1	1					
57		'O' Ring						1	1					
58		Spherical Valve						1	1					
—		Grease Sachet						2	2					

TABLE 42.11

AUTOMATIC LOAD SENSING VALVE

GROUP 42

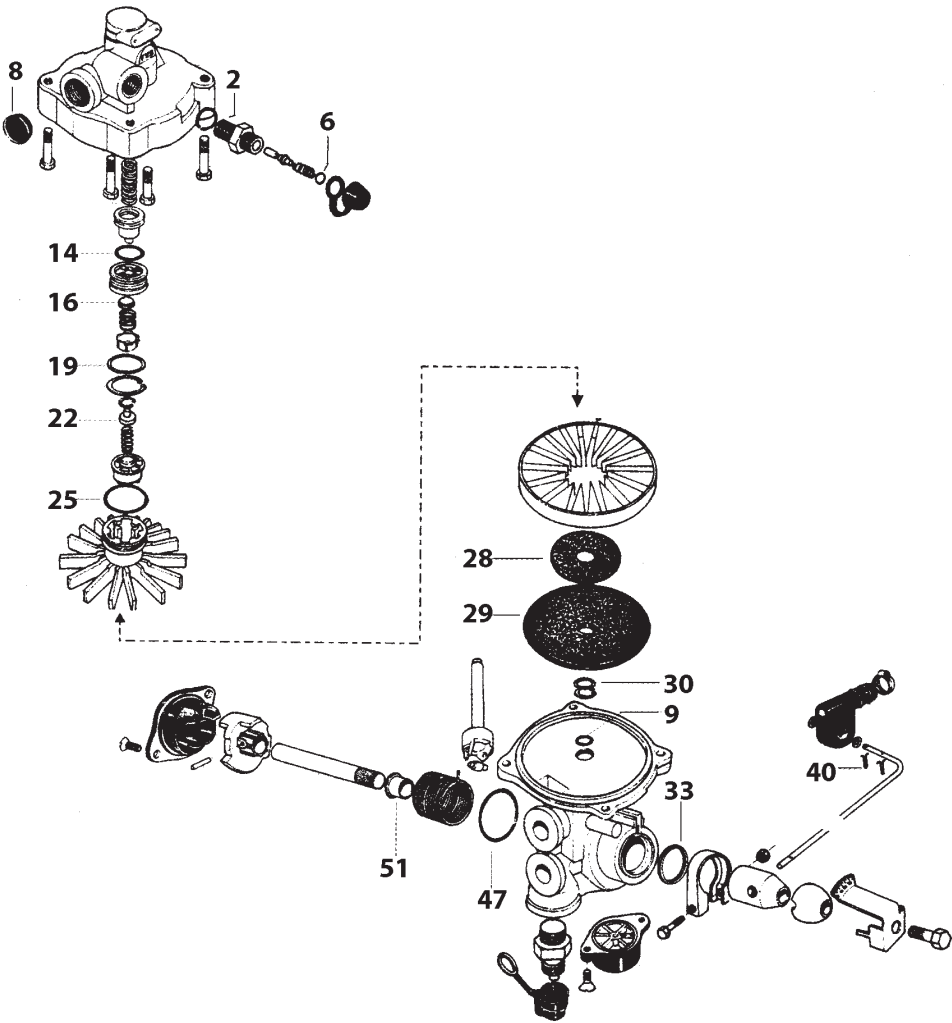
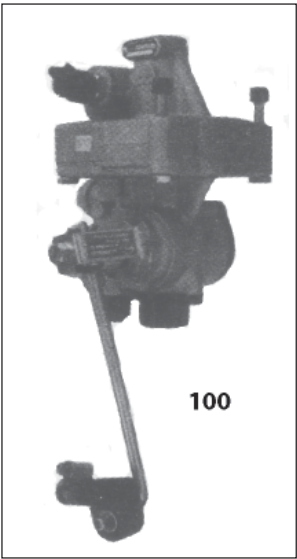


TABLE 42.11
AUTOMATIC LOAD SENSING VALVE
GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		AUTOMATIC LOAD SENSING VALVE												
100	2643 4370 01 04	Automatic Load Sensing Valve						1	1					
—	2782 4370 01 70	Repair Kit for Automatic Load Sensing Valve,Consisting Off:						1	1					
2		Sealing Ring						2	2					
6		Sealing Ring						2	2					
8		Strainer						1	1					
9		Sealing Ring						1	1					
14		Sealing Ring						1	1					
16		Bonded Valve						1	1					
19		Sealing Ring						1	1					
22		Bonded Valve						1	1					
25		Sealing Ring						1	1					
28		Diaphragm Disc						1	1					
29		Diaphragm						1	1					
30		Seal						1	1					
33		Dust Seal						1	1					
40		Split Pin						2	2					
47		'O'-Ring						1	1					
51		Split Bush						1	1					
—		Grease Sachet						2	2					

TABLE 42.12

QUICK RELEASE VALVE

GROUP 42

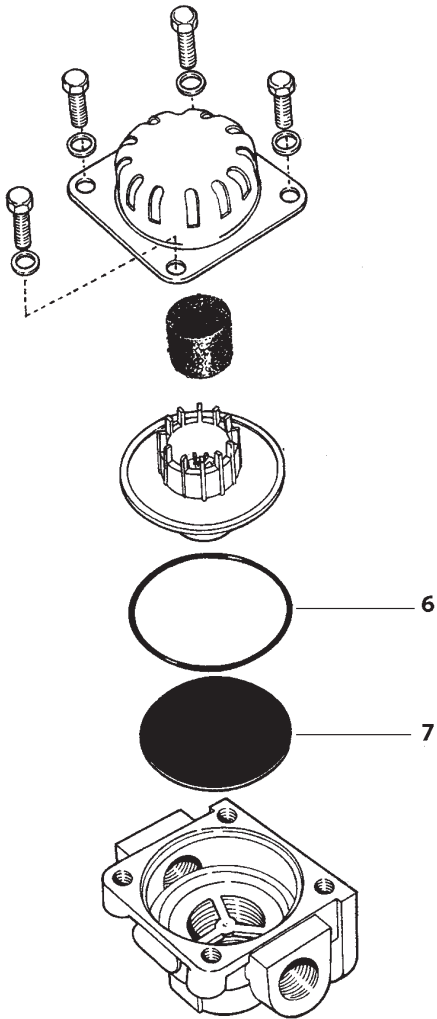
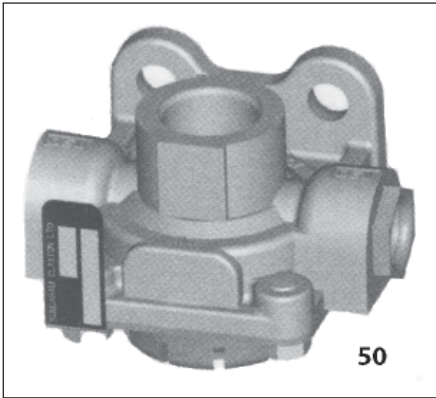


TABLE 42.12

QUICK RELEASE VALVE

GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
50	2632 4291 01 65	QUICK RELEASE VALVE Quick Release Valve				1	1		1			1	1	
—	2632 4291 01 89	Repair Kit Quick Release Valve,Consisting Off:				1	1		1			1	1	
6		Sealing Ring				1	1		1			1	1	
7		Diaphragm				1	1		1			1	1	
—		Grease Sachet				1	1		1			1	1	

TABLE 42.13

GRADUATED HAND BRAKE VALVE

GROUP 42

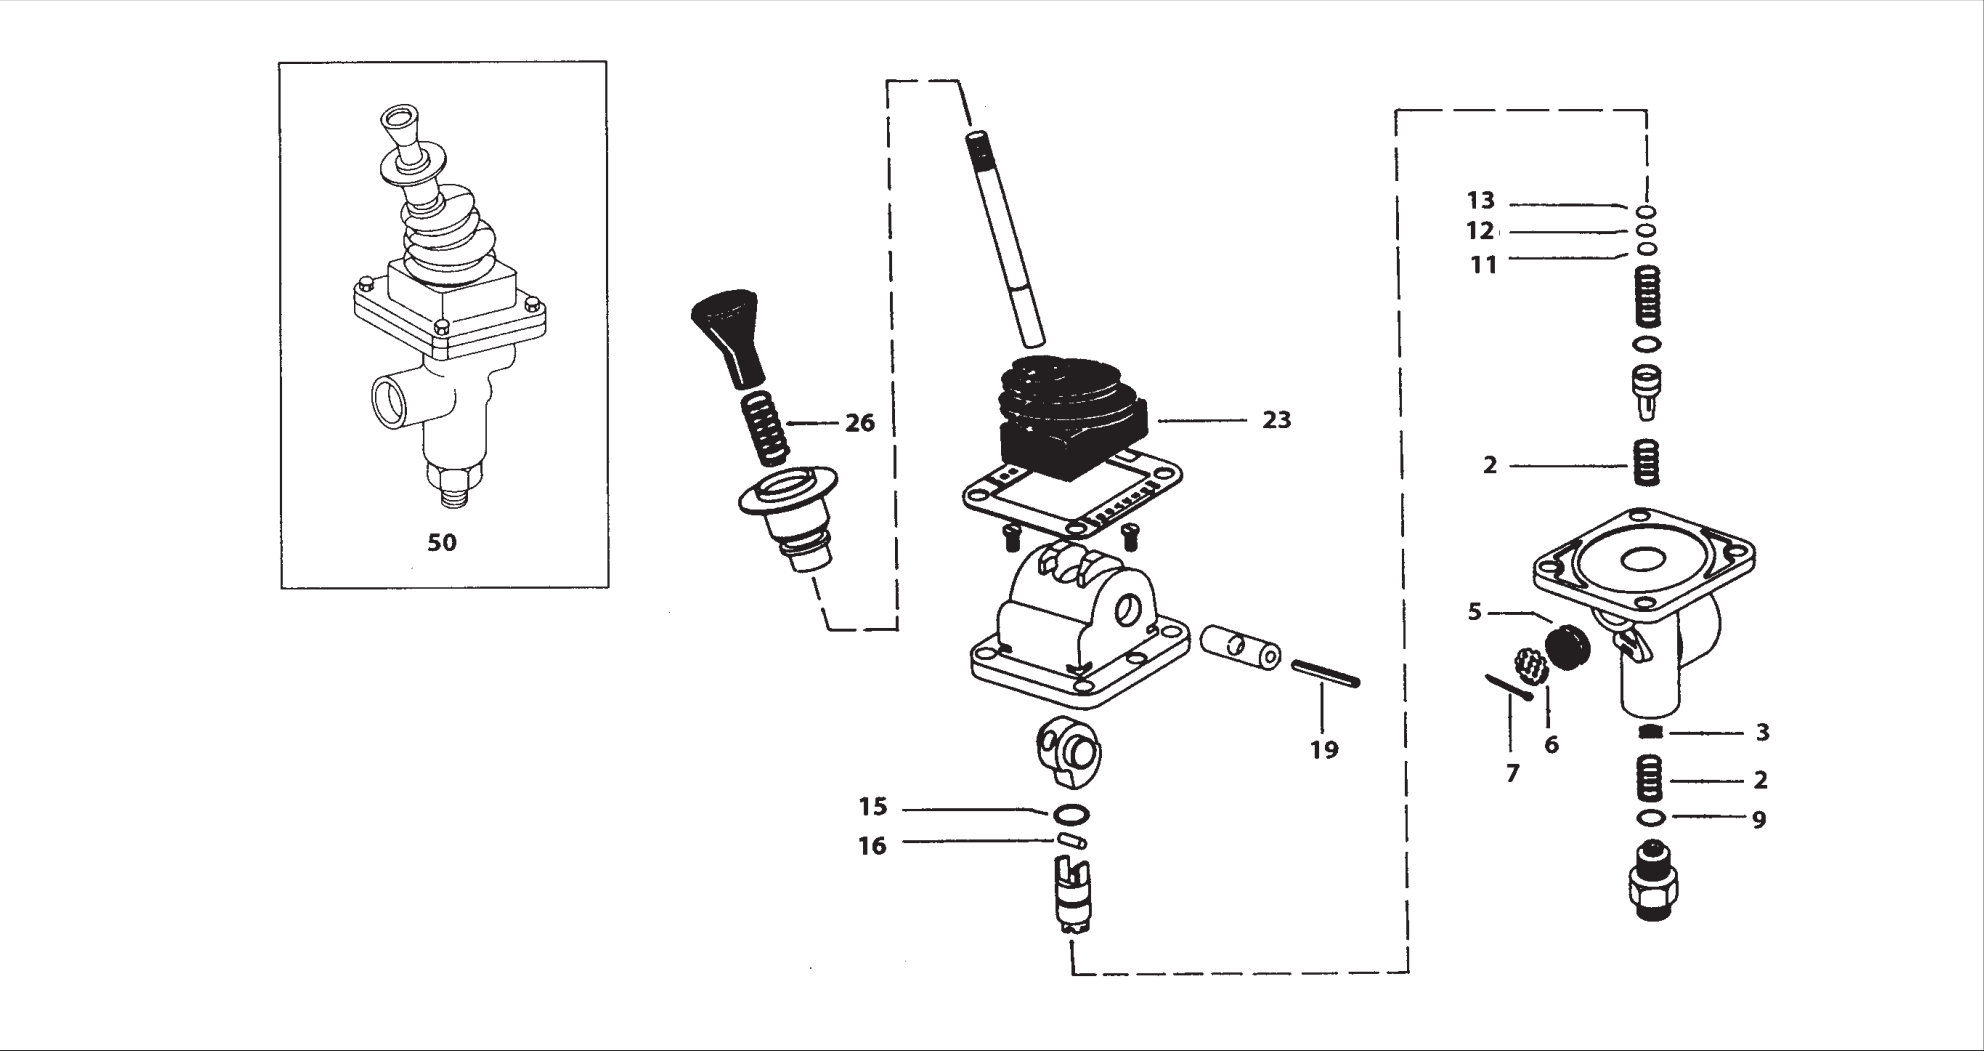


TABLE 42.13
GRADUATED HAND BRAKE VALVE
GROUP 42

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		GRADUATED HAND BRAKE VALVE												
50	2573 4370 01 53	Graduated Hand Brake Valve	1											
—	2618 4230 01 34	Repair Kit Consisting of :	1											
2		Spring	2											
3		Valve	1											
5		Filter	1											
6		Strainer Plate	1											
7		Split Pin	1											
9		Sealing Ring	1											
11		Shim	1											
12		Shim	1											
13		Shim	1											
15		Sealing Ring	1											
16		Roller	1											
19		Tension Pin	1											
23		Gaiter	1											
26		Spring	1											
—		Grease Sachet	1											

TABLE 46.1

STEERING WHEEL AND LINKAGES

GROUP 46

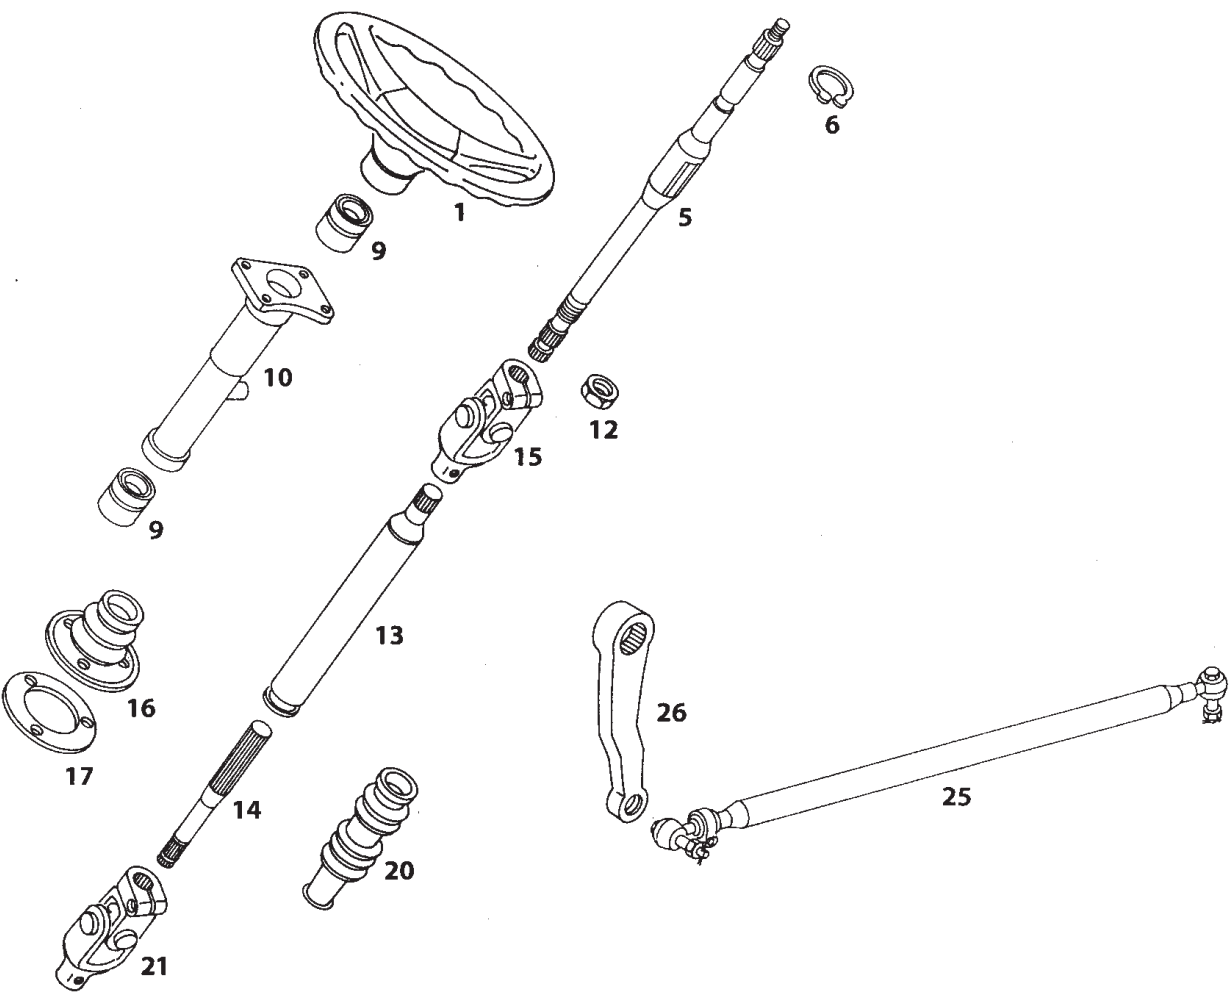


TABLE 46.1
STEERING WHEEL AND LINKAGES
GROUP 46

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		STEERING WHEEL AND LINKAGES												
1	2821 4640 01 02	Assy.Steering Wheel w/o T-Emblem						1	1					
1	2698 4640 01 03	Assy.Steering Wheel w/o T-Emblem								1			1	For Power Strg.
1	2093 4640 01 02	Assy.Steering Wheel w/o T-Emblem		1	1	1	1			1	1	1	1	For Variable Ratio Strg
—	2654 4640 63 12	T-Emblem	1											
5	2641 4620 01 89	Assy. Steering Spindle Top		1	1	1	1			1	1	1	1	For Variable Ratio Strg
5	2783 4620 01 04	Assy. Steering Spindle Top						1	1	1			1	For Power Stg.& TCIC vehicle
6	1455 060200 9	Ext. Circlip 20x1.2 N	1											
9	2640 4620 31 02	Deep Groove Ball Bearing	2											
10	2641 4620 01 02	Assy. Steering Column		1	1	1	1			1	1	1	1	For Variable Ratio Strg
10	2783 4620 01 05	Assy. Steering Column						1	1	1			1	For Power Stg.& TCIC vehicle
12	1208 099602 9	Hex. Thin Nut M 14x1.5	1											
13	2641 4621 01 20	Assy. Steering Spindle (Middle)		1	1	1	1			1	1	1	1	For Variable Ratio Strg
13	2643 4620 01 04	Assy. Steering Spindle (Middle)						1	1	1			1	For Power Stg.& TCIC vehicle
14	2641 4620 79 30	Steering Spindle Bottom	1											
—	2641 4620 79 20	Spacer	1											
—	2654 4620 99 15	Spring Seat	1											
—	2654 4620 87 11	Compression Spring	1											
—	2654 4620 82 78	Spring Seat Cup	1											
15	2651 4660 01 02	Assy. Universal Joint	1											

TABLE 46.1

STEERING WHEEL AND LINKAGES

GROUP 46

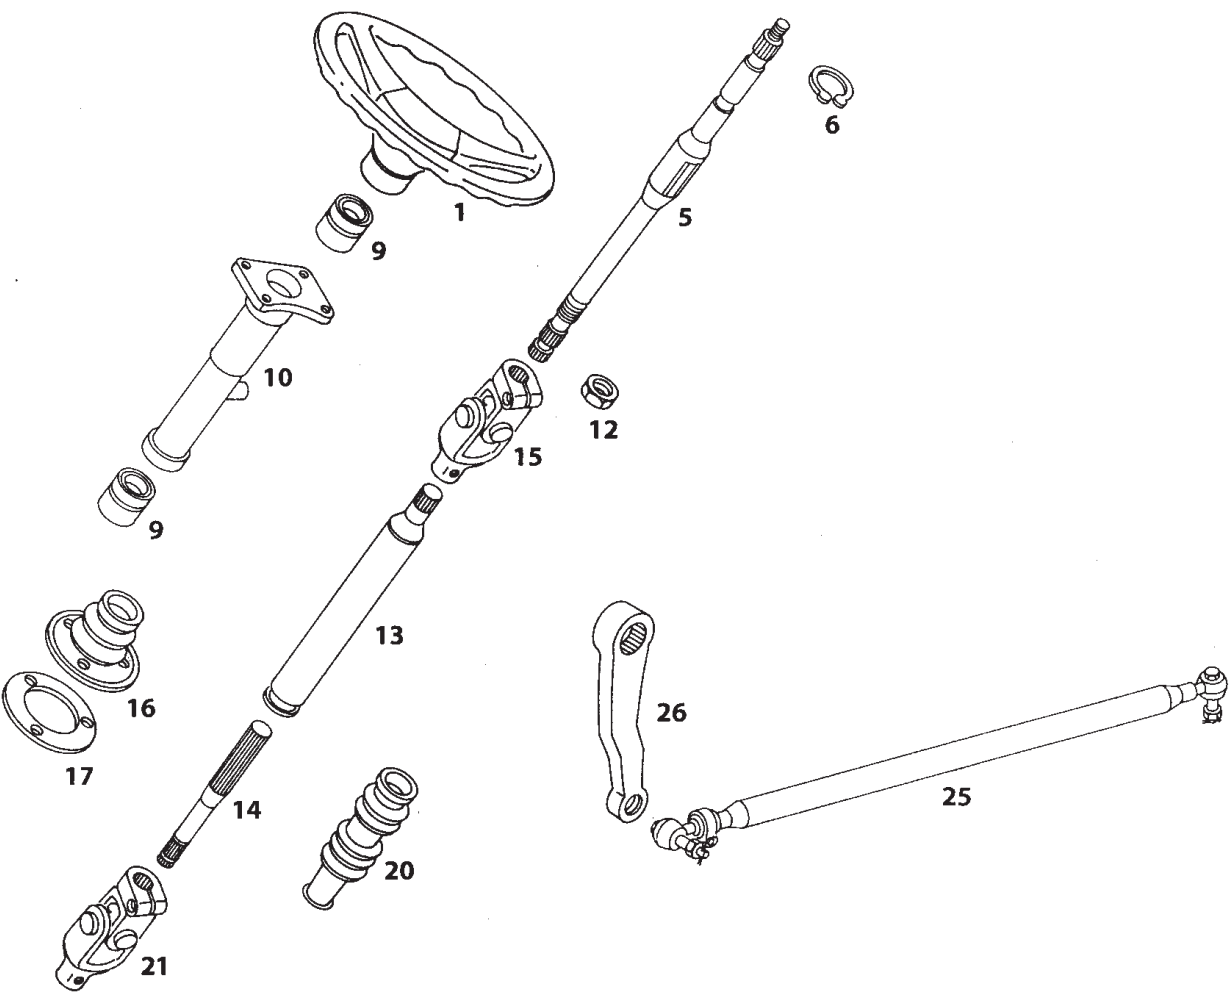


TABLE 46.1
STEERING WHEEL AND LINKAGES
GROUP 46

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
16	2641 4610 63 01	Rubber Bellow (Floor)	1											For Rane Strg For ZF Strg For Variable Ratio Strg For Power Stg. For Variable Ratio Strg For Power Stg.
17	2641 4610 82 01	Clamping Ring	1											
20	2641 4620 63 01	Rubber Bellow (U.J.)	1											
21	2093 4660 01 05	Assy. Universal Joint	1											
21	2651 4660 01 02	Assy. Universal Joint	1											
—	2651 4660 32 01	Bolt	2											
25	2153 4660 01 01	Drag Link Assy.	1											
25	2093 4660 01 02	Drag Link Assy.							1	1			1	
26	2093 4630 60 03	Pitman Arm	1											
26	2093 4630 60 02	Pitman Arm							1	1			1	

TABLE 46.2

STEERING GEAR BOX (VARIABLE RATIO) AND COMPONENTS

GROUP 46

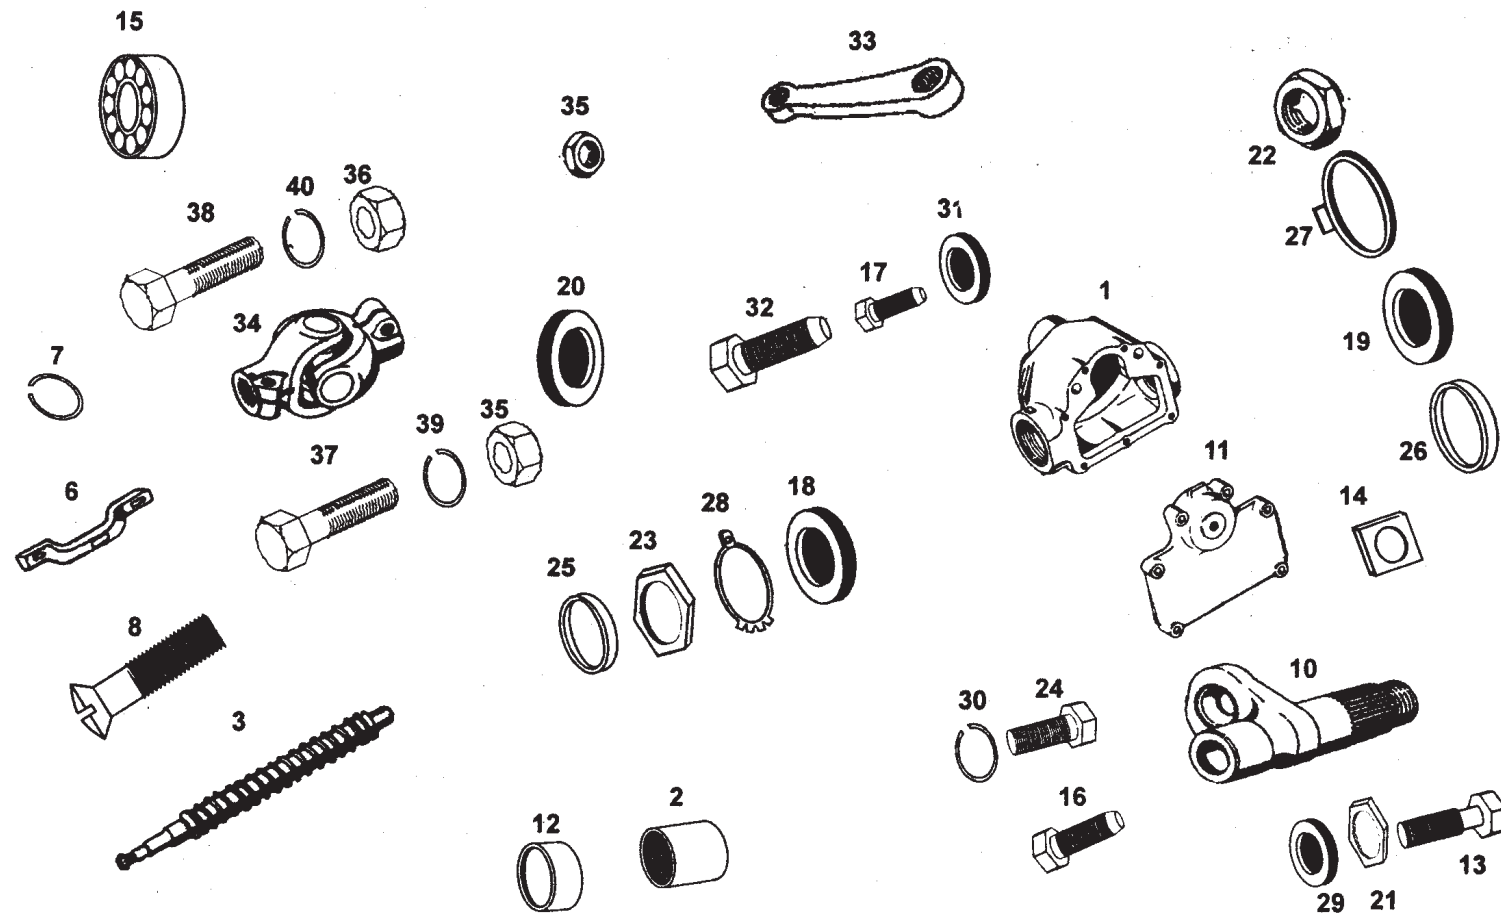


TABLE 46.2
STEERING GEAR BOX (VARIABLE RATIO) AND COMPONENTS
GROUP 46

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		STEERING GEAR BOX (VARIABLE RATIO) AND COMPONENTS												
—	2093 4620 01 06	Assy Bracket	1											
—	2093 4660 01 04	Steering Gear Box Assy.	1											
—	2093 4610 80 02	Hex Screw (Strg Gear Box to Bracket)	1											
—	2093 4610 80 03	Hex Screw (Strg Gear Box to Bracket)	2											
1		Housing Steering Gear Box	1											Not Serviced
2	2153 4620 34 04	Bush	1											
—	2153 4620 01 24	Kit For Worm And Main Nut Assy.	1											
3		Worm	1											Not Serviced
—		Main Nut	1											Not Serviced
—		Transfer Tube	2											Not Serviced
6		Transfer Tube Retainer	1											Not Serviced
7		Tooth Lock Washer	3											Not Serviced
8		C.R.P Head Screw	3											Not Serviced
—		Steel Ball -9/32"	100											Not Serviced
10	2153 4620 79 12	Sector Shaft	1											
11		Cover Plate	1											Not Serviced
12	2153 4620 34 05	Bush	1											
13	2153 4620 32 03	Adjuster	1											
14	2153 4620 86 03	Spacer	1											

TABLE 46.2

STEERING GEAR BOX (VARIABLE RATIO) AND COMPONENTS

GROUP 46

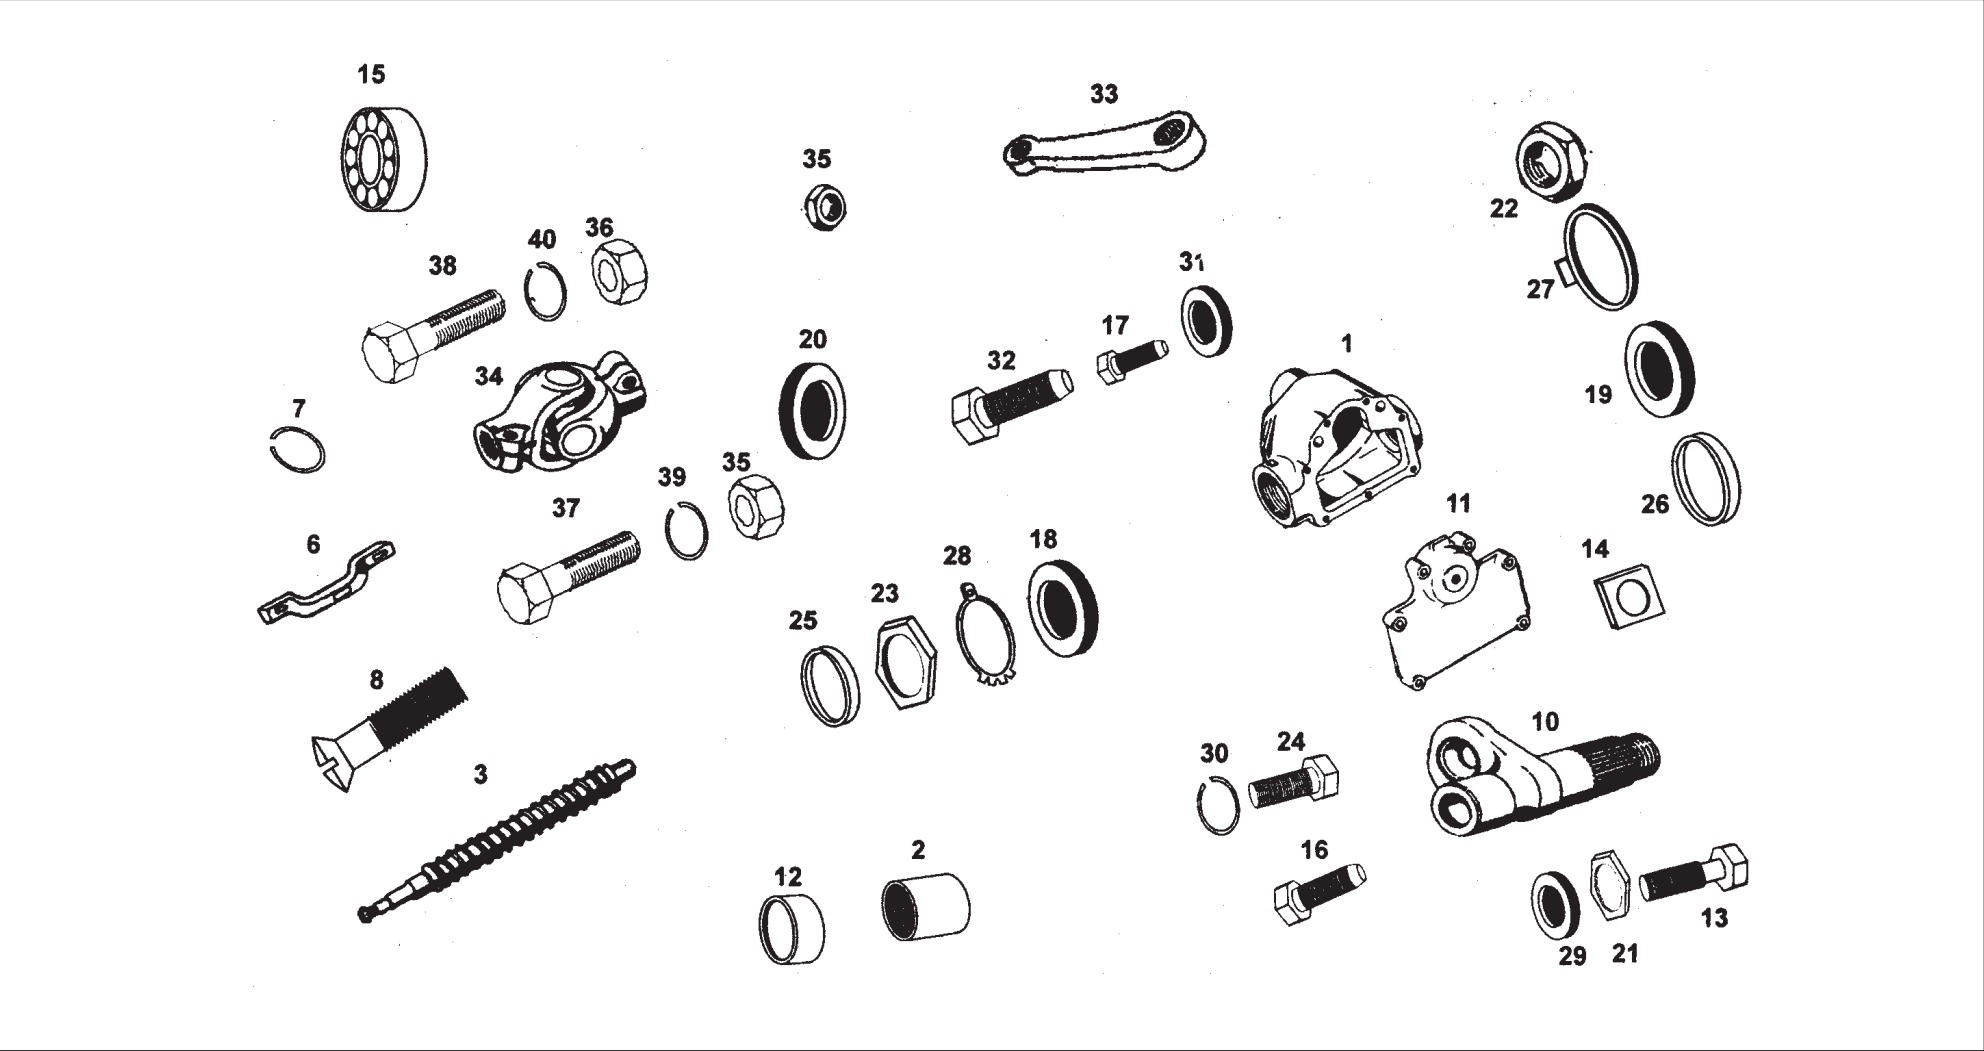


TABLE 46.2
STEERING GEAR BOX (VARIABLE RATIO) AND COMPONENTS
GROUP 46

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
15	2153 4620 31 01	Angular Contact Bearing	2											Not Serviced Not Serviced
16	2153 4620 72 02	Oil Plug (Drain)	1											
17	2153 4620 72 03	Oil Plug (Filler)	1											
18		Screw Plug	1											
19		Dust Cover	1											
20	2153 4620 47 04	Dust Cap	1											
21	2153 4620 65 08	Lock Nut (Adjuster)	1											
22	2153 4620 65 09	Lock Nut (Sector Shaft)	1											
23	2153 4620 65 10	Lock Nut (Screw Plug)	1											
24	2153 4620 32 04	Bolt (Cover Plate)	1											
25	2153 4620 78 03	Oil Seal (Worm)	1											
26	2153 4620 78 04	Oil Seal (Sector Shaft)	1											
27	2153 4620 92 04	Tab Washer (Sector Shaft)	1											
28	2153 4620 92 05	Tab Washer (Screw Plug)	1											
29	2153 4620 92 06	Washer (Adjuster)	1											
30	2153 4620 92 07	Spring Washer (Cover Plate)	1											
31	2153 4620 92 08	Washer (Oil Plug)	1											
32	2153 4620 72 05	Breather Plug	1											
33	2093 4630 60 03	Pitman Arm	1											
34	2093 4660 01 05	Universal Joint	1											

TABLE 46.2

STEERING GEAR BOX (VARIABLE RATIO) AND COMPONENTS

GROUP 46

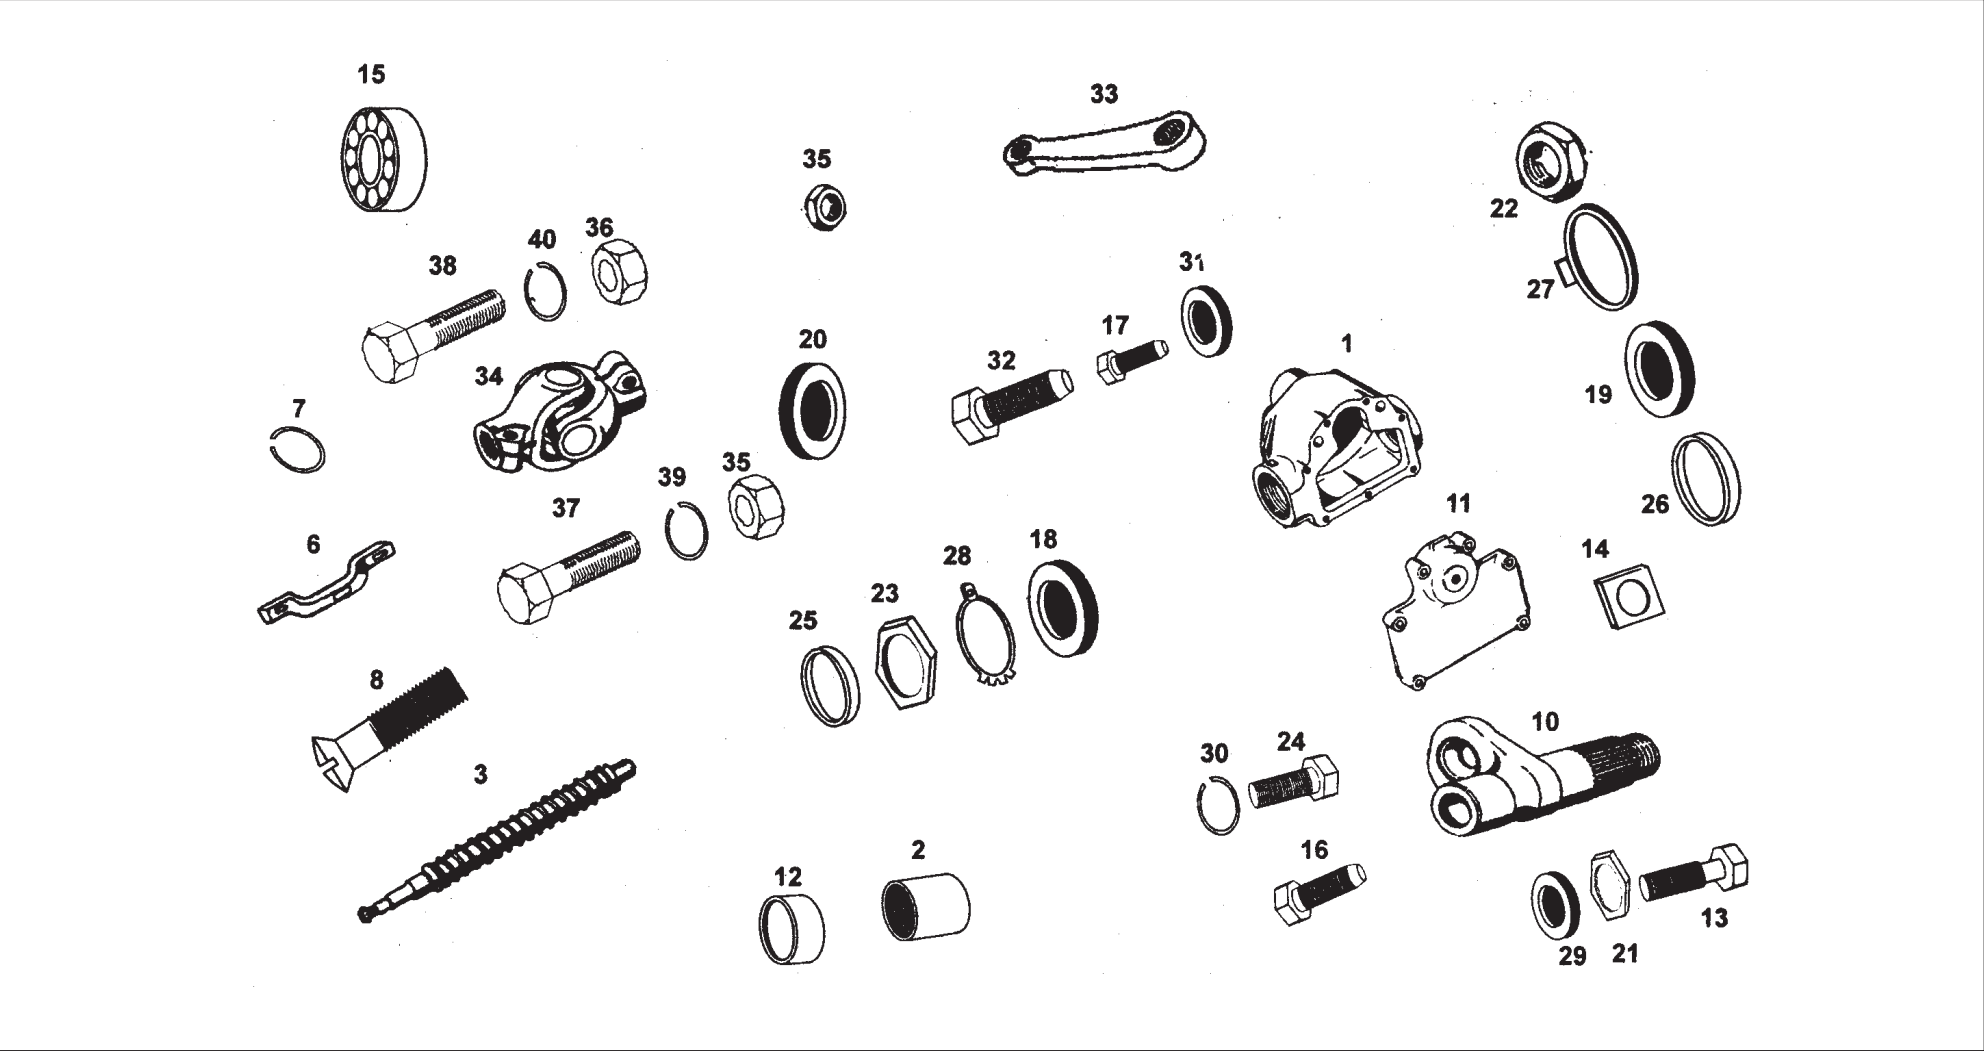


TABLE 46.2

STEERING GEAR BOX (VARIABLE RATIO) AND COMPONENTS

GROUP 46

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
35	2153 4620 92 09	Lock Nut	1											Not Serviced
36		Lock Nut	1											Not Serviced
37		Bolt	1											Not Serviced
38		Bolt	1											Not Serviced
39		Spring Washer	1											Not Serviced
40		Spring Washer	1											

TABLE 46.3

POWER STEERING COMPONENTS

GROUP 46

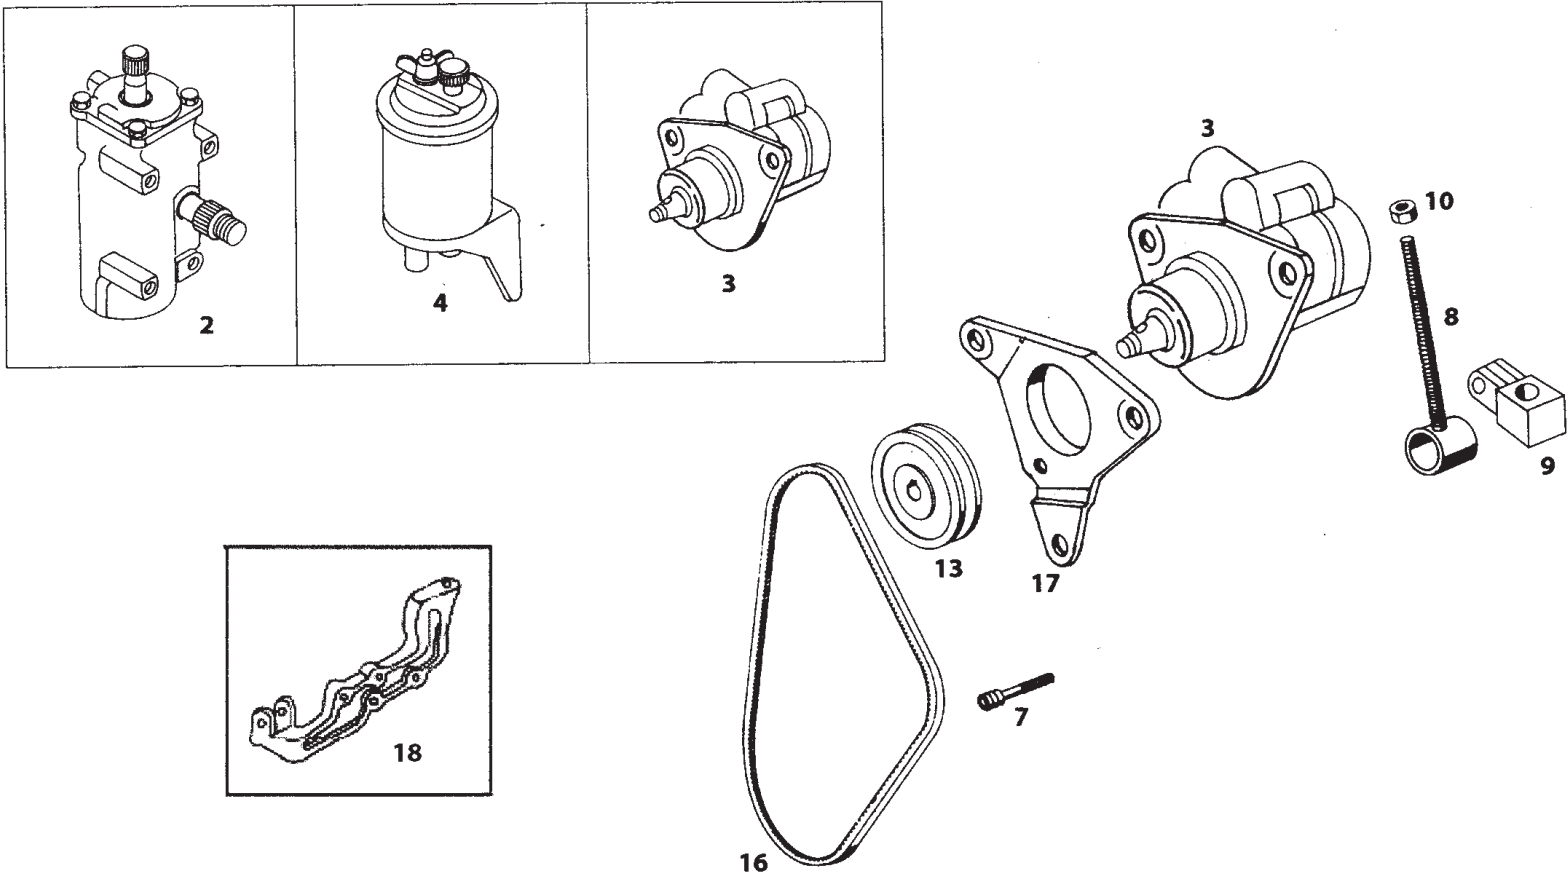


TABLE 46.3
POWER STEERING COMPONENTS
GROUP 46

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		POWER STEERING COMPONENTS												
2	2153 4620 01 01	Assy. Power Steering Gear Box							1	1			1	
3	2527 2311 01 03	Assy. Steering Pump							1	1			1	
—	2573 2310 01 02	Pump Seal Kit, ZF, Consisting of :							1	1			1	
—		Oil Seal							1	1			1	
—		'O' Ring							1	1			1	
—		Support Ring							1	1			1	
—		Protecting Sealing Ring							1	1			1	
4	2641 4680 01 38	Assy. Reservoir							1	1			1	
—	2573 4440 01 28	Assy. Filter (For Reservoir)							1	1			1	
7	2527 2311 67 01	Pivot Pin							1	1			1	
8	2527 2340 01 14	Assy. Clamping Rod							1	1			1	
9	2540 1540 42 01	Clamping Piece							1	1			1	
10	2524 1514 65 01	Clamping Nut							1	1			1	
13	2527 2340 70 07	Pulley (Cast)-ZF							1	1			1	
16	2534 2015 63 10	V Belt Cogged (925 Lg)							1	1			1	
17	2527 2340 37 05	Bracket (ZF P/Strg. Pump Mtg.)							1	1			1	
18	2525 2340 37 04	Bracket-Steering Pump (On Cyl. Head)							1	1			1	
—	2093 4620 01 03	Assy. Bracket (For ZF P/Strg Gear Box)							1	1			1	
—	2093 4610 80 01	Hex Screw (Strg Gear Box to Bracket)							4	4			4	

TABLE 46.4

POWER STEERING PIPE LINES

GROUP 46

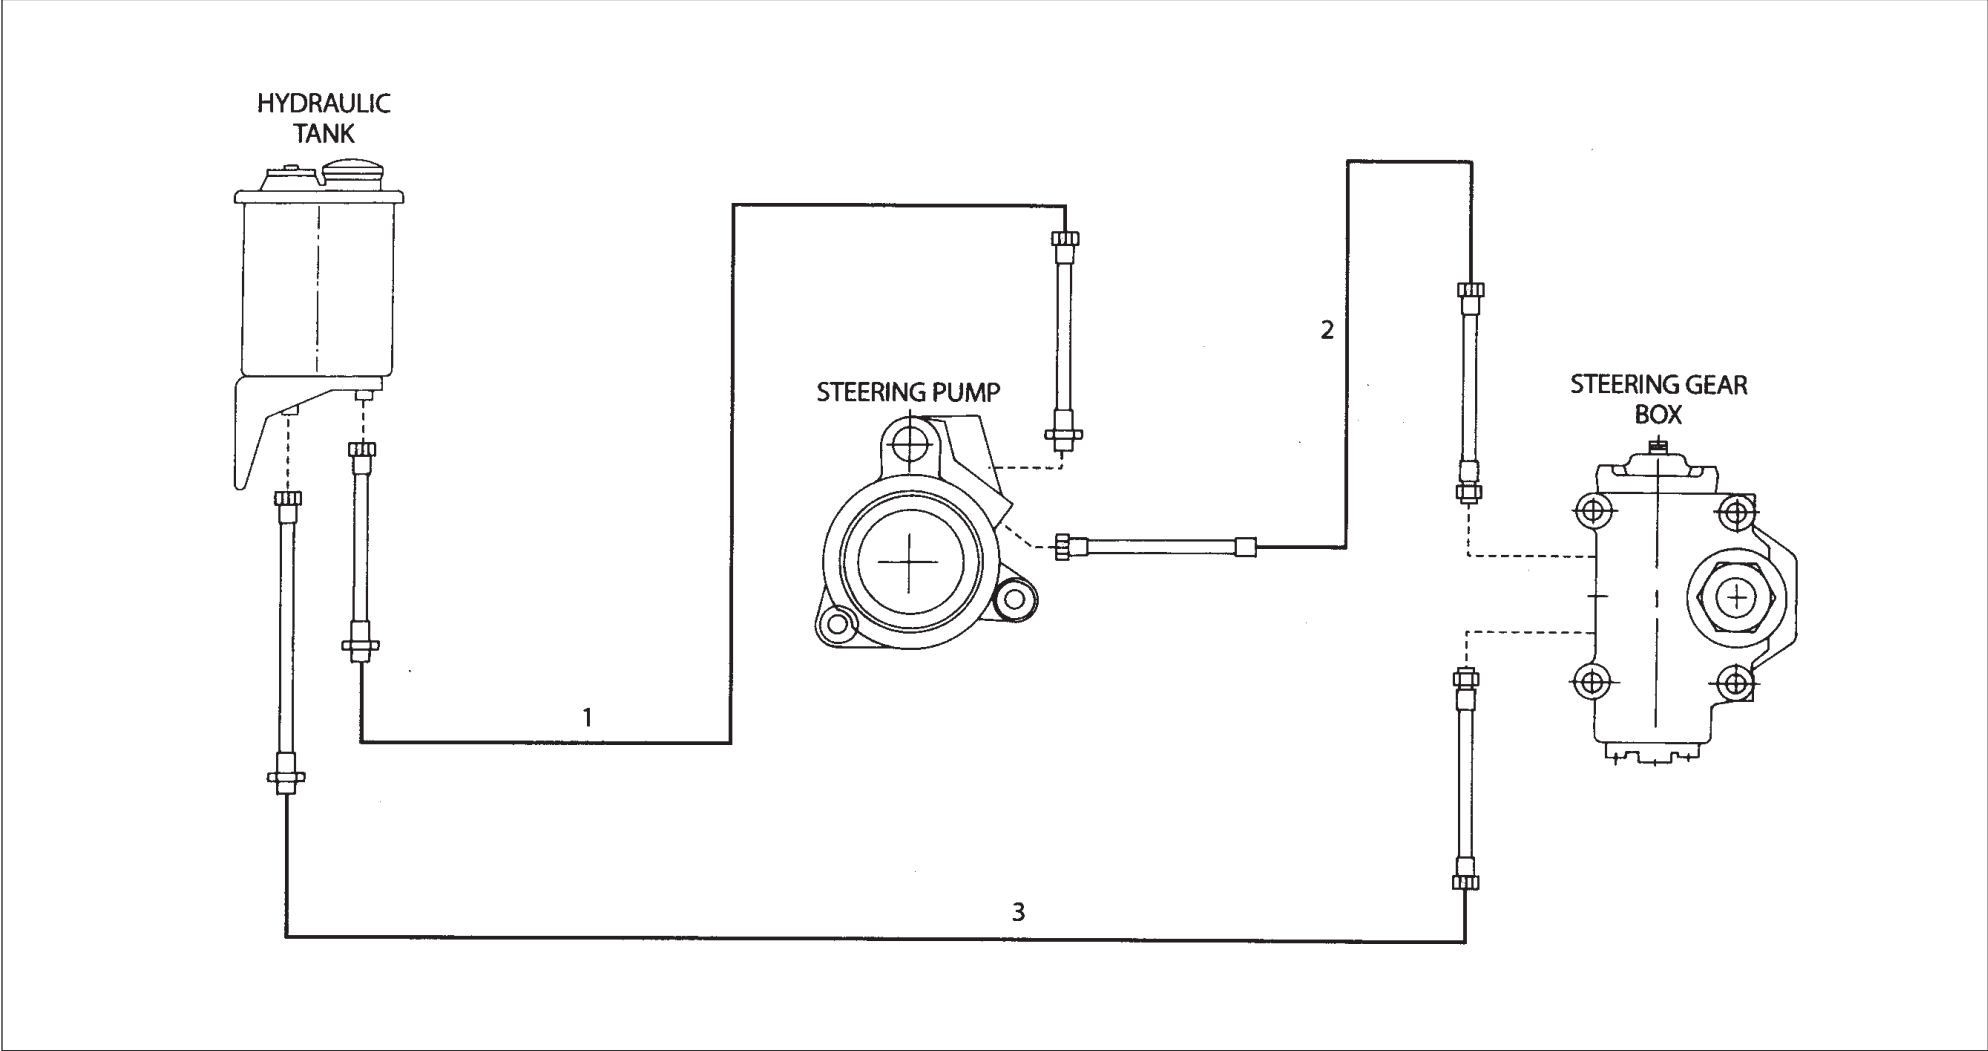


TABLE 46.4
POWER STEERING PIPE LINES
GROUP 46

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		POWER STEERING PIPE LINES												
1	2153 4680 01 02	Suction Line Hose Assy.							1	1			1	
2	2153 4680 01 03	Pressure Line Hose Assy.							1	1			1	
3	2153 4680 01 01	Return Line Hose Assy.							1	1			1	
—	2576 4680 68 03	Elbow (Hyd Tank Outlet To Strg Pump Inlet)							1	1			1	
—	2077 4680 01 60	Assy Male Adaptor (From Pump To Strg Gear Box Inlet)							1	1			1	
—	2077 4680 01 59	Assy Male Adaptor (From Pump To Strg Gear Box Inlet)							1	1			1	
—	2060 4410 68 03	Banjo Body (Strg Gear Box Outlet To Tank)							1	1			1	
—	2060 4410 68 07	Special Banjo (Strg Gear Box Outlet To Tank)							1	1			1	
—	2060 4410 01 79	Assy Plug							1	1			1	

FUEL SYSTEMS

[illegible]

TABLE 47.1
FUEL SYSTEMS
GROUP 47

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		FUEL SYSTEM												
1	2573 4710 01 61	Assy. Fuel Tank Complete (160 Lit Round)	1											
2	042 470 06 05J	Cap (Fuel Tank)	1											
9	2573 4710 01 08	Assy. Suction Tube	1											
13	2573 5420 01 50	Tank Unit	1											
16	2573 4750 01 05	Assy Support Complete	2											
17	012 470 04 40 J	Assy. Strap	2											
20	2574 4750 77 02	Rubber Packing	2											
21	2574 4750 77 04	Rubber Packing	2											
—	2576 4750 71 01	Reinforcement	2											
		Fuel Lines												
22	1622 051021 6	Sealing Washer 14X18		6	6	6	6			6	6	6	6	
23	1653 199904 9	Pipe Union Bolt 10 M 14X1.5		3	3	3	3	5	5	3	3	3	3	
22	2651 4710 77 10	Coated Aluminium Washer						10	10					
—		Assy. Fuel Suction Line (Fuel Tank to Hose)		1	1	1	1			1	1	1	1	Not Serviced
—	2153 4760 01 03	Assy. Hose (Suction Pipe to Feed Pump)		1	1	1	1			1	1	1	1	
—	2153 4760 01 05	Assy Pipe (Overflow Line on Engine to Fuel Tank)-Return		1	1	1	1			1	1	1	1	
24	2153 4760 01 10	Assy Fuel Line (Suction)-Tank to Water Separator						1	1					
26	2153 4760 01 11	Assy Fuel Line (Suction)- Water Separator to Feed Pump						1	1					
28	2153 4760 01 12	Assy. Fuel Line (Return)- (Overflow Line on Engine to Fuel Tank)						1	1					

TABLE 47.1

FUEL SYSTEMS

GROUP 47

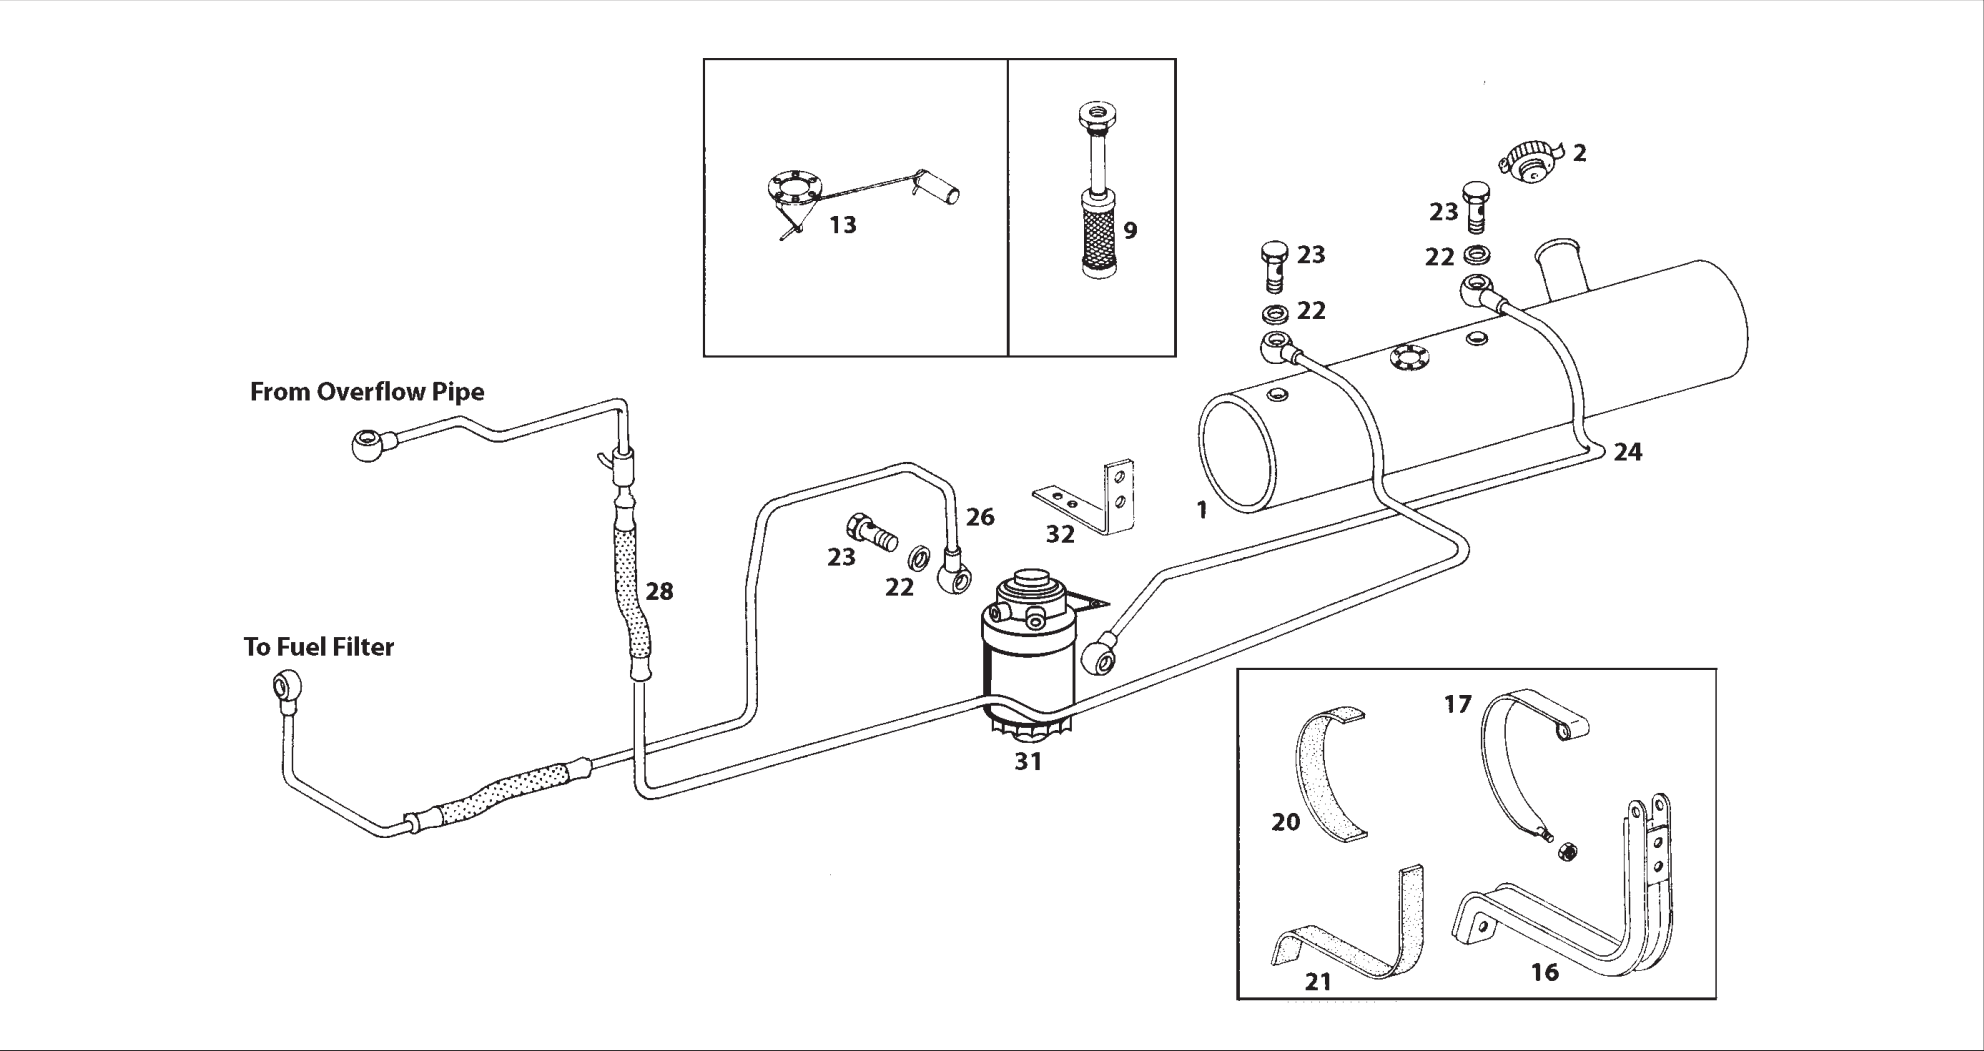


TABLE 47.1
FUEL SYSTEMS
GROUP 47

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
31	F 002 H20 134	Water Separator with Hand Primer						1	1					
—	F 002 H20 387	Cartridge, Water Seperator						1	1					
—	F 002 H20 392	Assy. Cover with Hand Primer						1	1					
32	2153 4760 01 09	Assy.Bracket (For Water Separator)						1	1					

TABLE 49.1

EXHAUST SYSTEM

GROUP 49

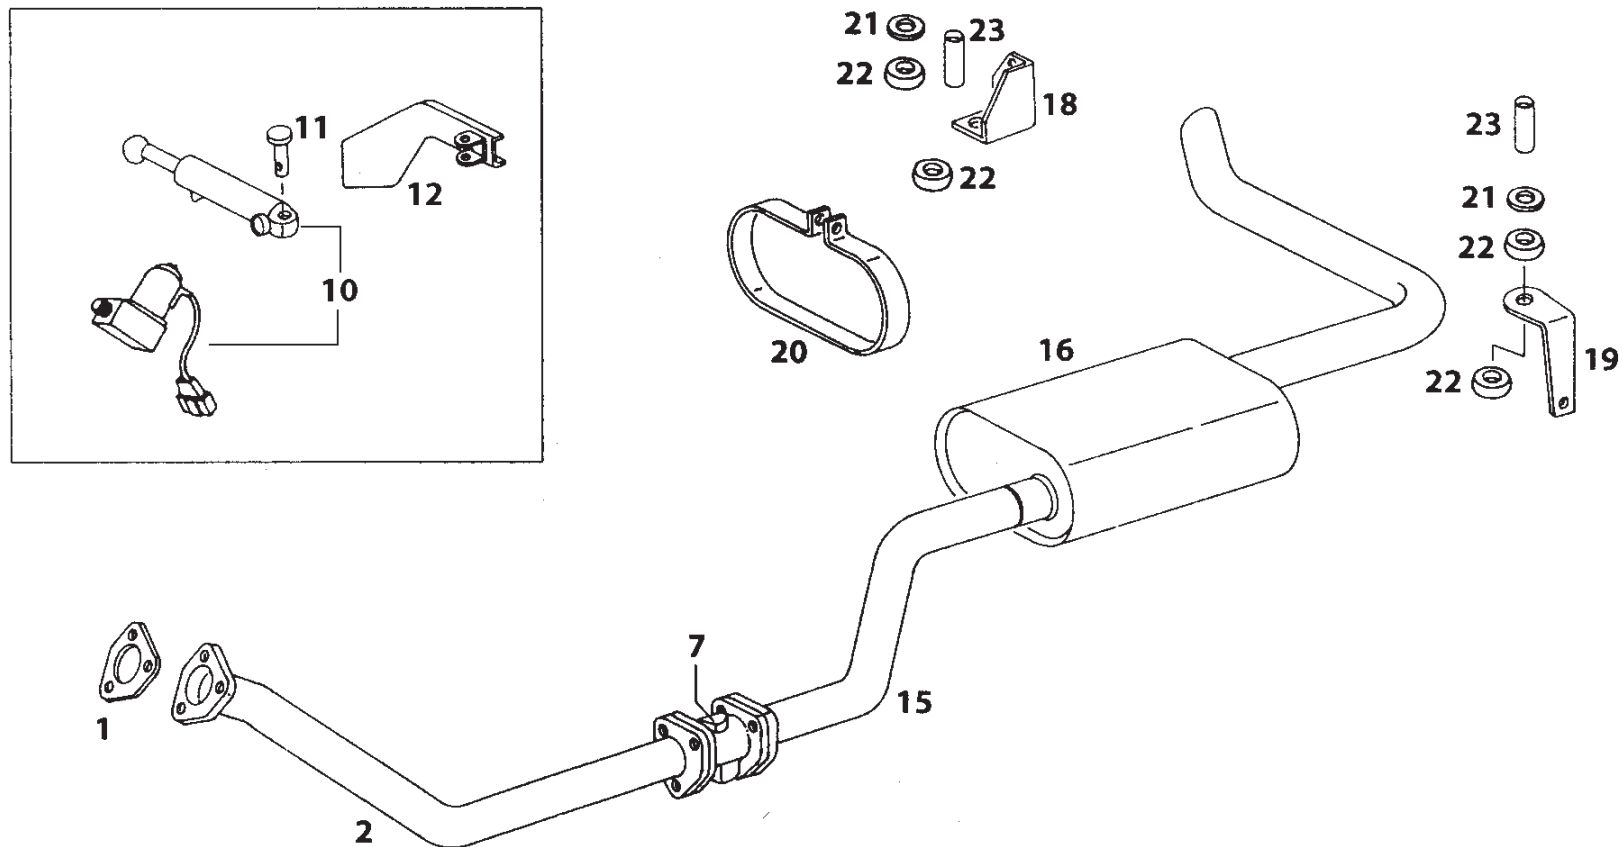


TABLE 49.1
EXHAUST SYSTEM
GROUP 49

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		EXHAUST SYSTEM (WITH EXHAUST BRAKE)												
1	312 492 10 80	Sealing Flange	1											
2	2153 4920 01 12	Assy.Front Pipe (For BS-II)	1											
—	2576 4920 53 02	Gasket	3											
7	2763 4920 01 23	Assy.Exhaust Brake Unit.	1											
10	2641 5420 99 37	Assy.Magnetic Valve with Din Ter.& Hsg.	1											For Selection
10	2641 5420 99 38	Assy.Magnetic Valve with MSSL Ter.& Hsg.	1											For Selection
11	2754 4920 67 01	Pin	1											
12	2089 4920 01 02	Assy. Bracket	1											
15	2190 4920 01 07	Assy Intermediate Pipe (42 WB)				1	1		1			1	1	
15	2190 4920 01 06	Assy Intermediate Pipe (36 WB)		1	1			1		1	1			
—	2190 4920 01 08	Assy Bracket (For Exhaust Mtg)	1											
16	2190 4910 01 01	Assy.Silencer	1											
18	2064 4920 01 07	Assy. Bracket (Front) RH	1											
19	2190 4920 82 06	Bracket	1											
20	2641 4920 42 03	Silencer Mounting Strap	2											
21	2576 4900 92 02	Washer	3											
22	2576 4900 75 02	Rubber Buffer	6											
23	2576 4900 69 02	Tube	3											

TABLE 49.1

EXHAUST SYSTEM

GROUP 49

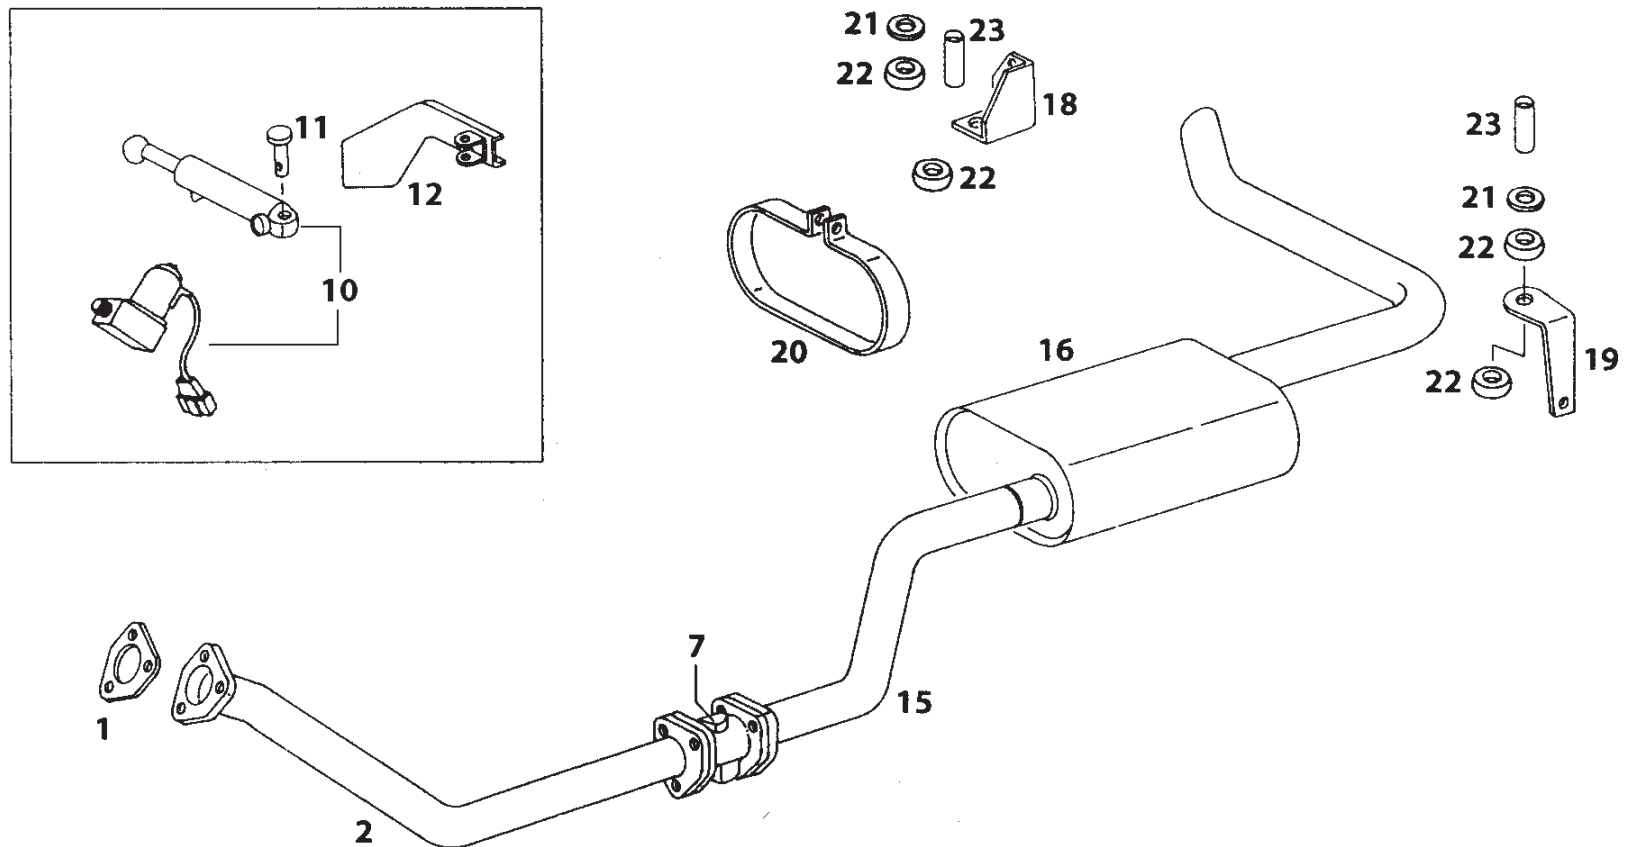


TABLE 49.1
EXHAUST SYSTEM
GROUP 49

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	2751 4920 42 02	Exhaust Clamp	1											
—	2190 4920 82 02	Bracket (For Silencer Mtg)	1											
—	2190 4920 82 03	Bracket (For Silencer Mtg)		1	1			1		1	1			
—	2190 4920 01 04	Assy Bracket (For Silencer Mtg-Rear)	1											
		(WITHOUT EXHAUST BRAKE)												
1	312 492 10 80	Sealing Flange		1	1	1	1			1	1	1	1	
2	2153 4920 01 03	Assy. Exhaust Pipe Front		1	1	1	1			1	1	1	1	
15	2153 4920 01 04	Assy. Exhaust Intermediate Pipe		1	1	1	1			1	1	1	1	
16	2641 4910 01 04	Assy.Silencer (w/o Tail Pipe)		1	1	1	1			1	1	1	1	
—	2153 4920 69 11	Exhaust Tail Pipe				1	1					1	1	
—	2153 4920 69 10	Exhaust Tail Pipe		1	1					1	1			
18	2064 4920 01 07	Assy. Bracket (Front) RH		1	1	1	1			1	1	1	1	
19	2641 4920 33 01	Bracket		3	3	3	3			3	3	3	3	
—	2574 4910 42 02	Pipe Clamp		2	2	2	2			2	2	2	2	
20	2641 4920 42 01	Clamp		1	1	1	1			1	1	1	1	
21	2576 4900 92 02	Washer		3	3	3	3			3	3	3	3	
22	2576 4900 75 02	Rubber Buffer		6	6	6	6			6	6	6	6	
23	2576 4900 69 02	Tube		3	3	3	3			3	3	3	3	
—	2574 4910 42 01	Pipe Clamp (Intermediate Pipe to Silencer)		1	1	1	1			1	1	1	1	
—	2641 4920 33 01	Bracket (Silencer to Long Member)		1	1	1	1			1	1	1	1	

TABLE 49.1

EXHAUST SYSTEM

GROUP 49

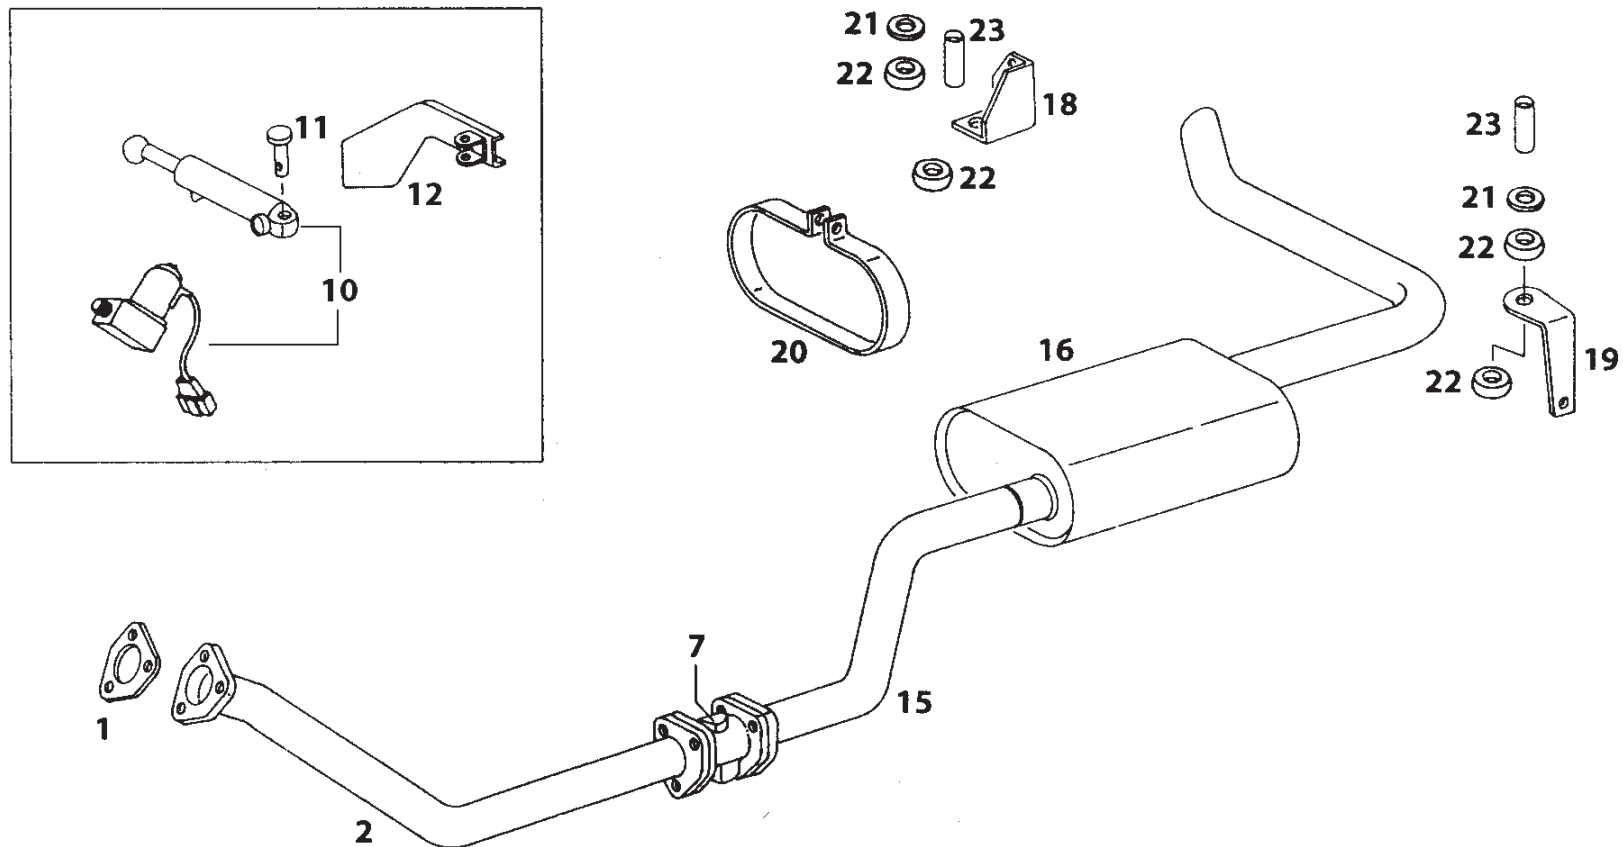


TABLE 49.1

EXHAUST SYSTEM

GROUP 49

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	2574 4910 42 01	Pipe Clamp (Tail Pipe to Long Member)		1	1	1	1			1	1	1	1	
—	2064 4920 82 06	Bracket RH Rear		2	2	2	2			2	2	2	2	

TABLE 50.1

RADIATOR

GROUP 50

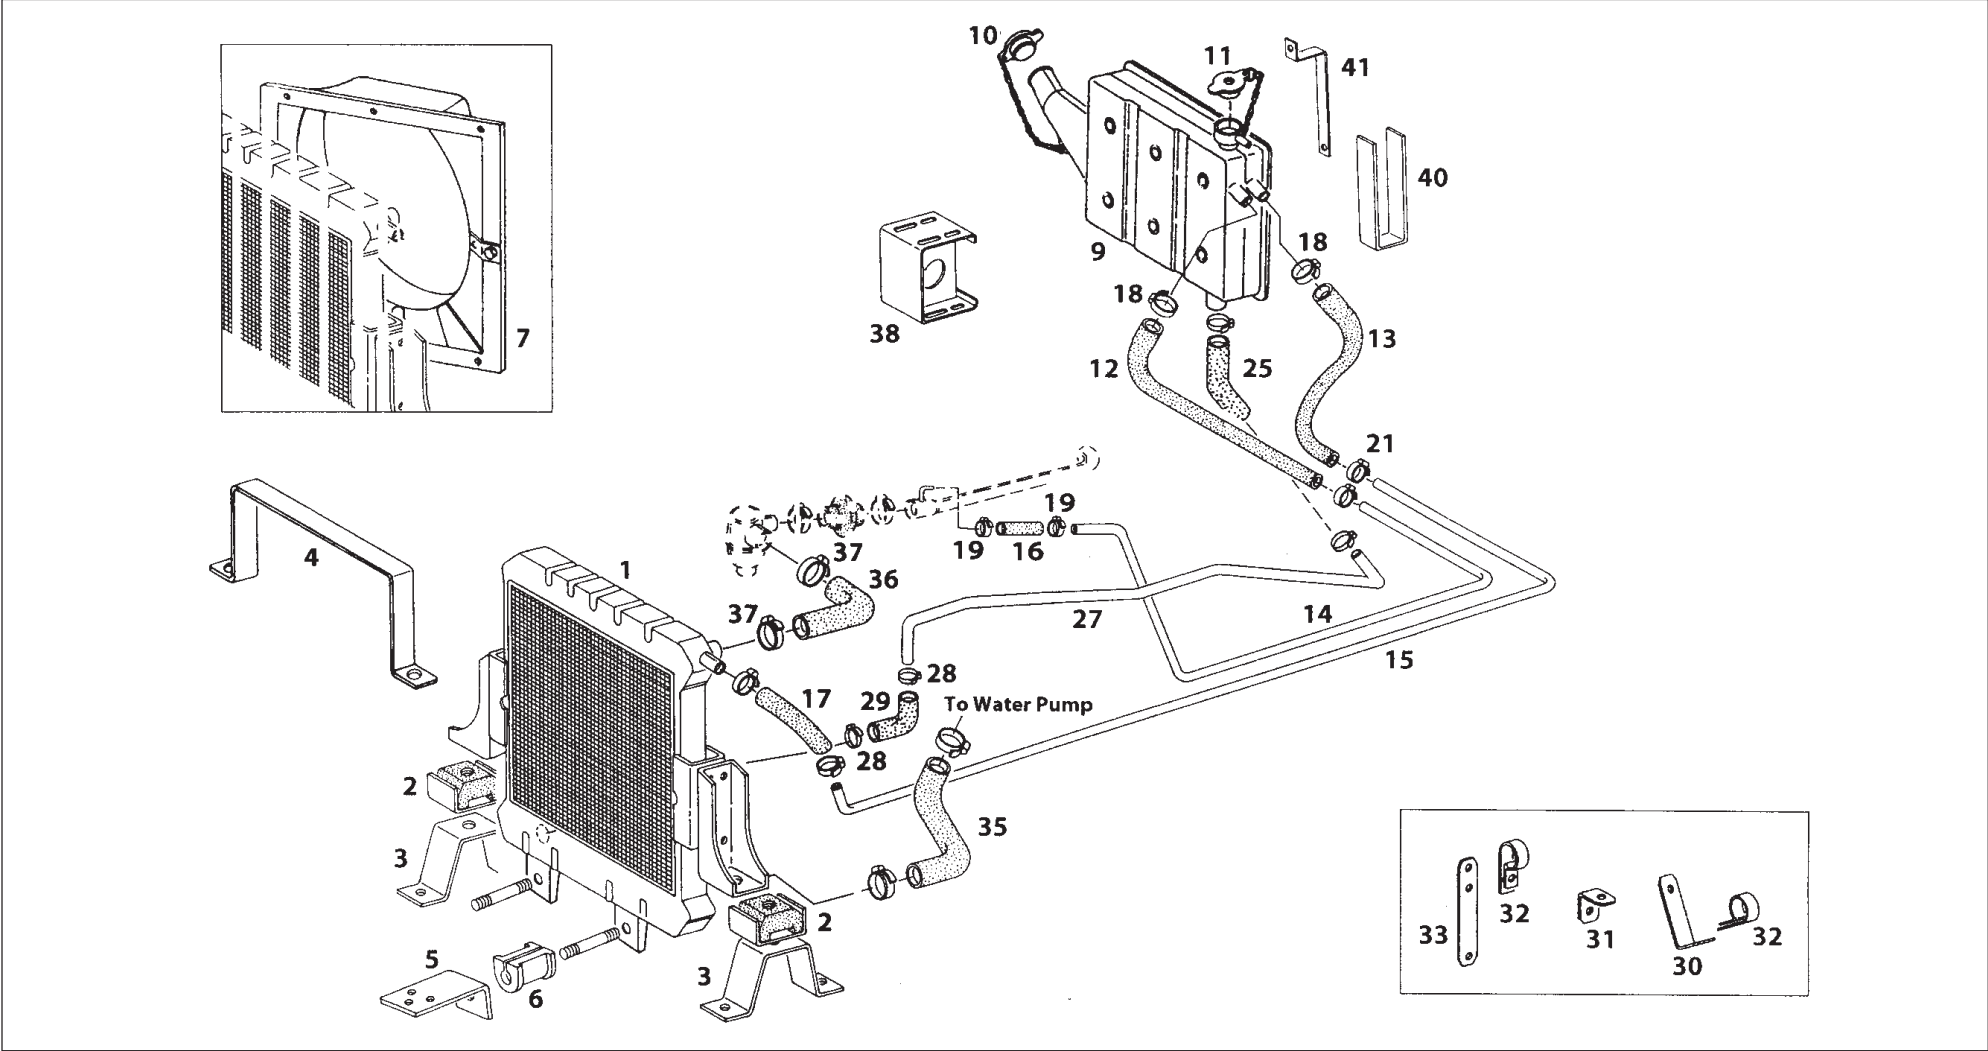


TABLE 50.1
RADIATOR
GROUP 50

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	2527 5010 03 04	RADIATOR Assy. Radiator with Fanshroud (Tata Toyo)		1	1	1	1			1	1	1	1	
1	2527 5010 02 82	Assy. Radiator Complete (Tata Toyo)		1	1	1	1			1	1	1	1	For Selection
1	2527 5010 02 58	Assy. Radiator Complete (Banco)		1	1	1	1			1	1	1	1	For Selection
1	2527 5010 03 40	Assy. Radiator Complete (Tata Toyo)						1	1					Upto April'07
1	2527 5010 03 63	Assy. Radiator (Tata Toyo)--For No Loss Tank						1	1					From Chassis No. 416 441 DSZ 718478(April'07)
—	2534 5010 02 48	Drain Cock		1	1	1	1			1	1	1	1	For Tata Toyo Radiator
—	2786 5010 99 08	Drain Cock (Tata Toyo)						1	1					Upto April'07
—	2527 5010 03 69	Drain Cock (Tata Toyo)						1	1					From Chassis No. 416 441 DSZ 718478(April'07)
2	2533 5000 01 16	Assy. Radiator Mtg. Pad-Bottom 50 mm	2											
3	2527 5000 82 24	Radiator Mtg. Bracket - LH		1	1	1	1			1	1	1	1	
3	2527 5000 82 29	Radiator Mtg. Bracket - LH						1	1					
3	2527 5000 82 23	Radiator Mtg. Bracket - RH		1	1	1	1			1	1	1	1	
3	2527 5000 82 32	Radiator Mtg. Bracket - RH						1	1					
4	2527 0117 01 32	Assy. Bridge / Frame								1	1	1	1	
4	2527 5000 01 06	Assy. Frame		1	1	1	1							
—	2527 5010 03 24	Assy Radiator Mounting Frame						1	1					Upto April'07

TABLE 50.1

RADIATOR

GROUP 50

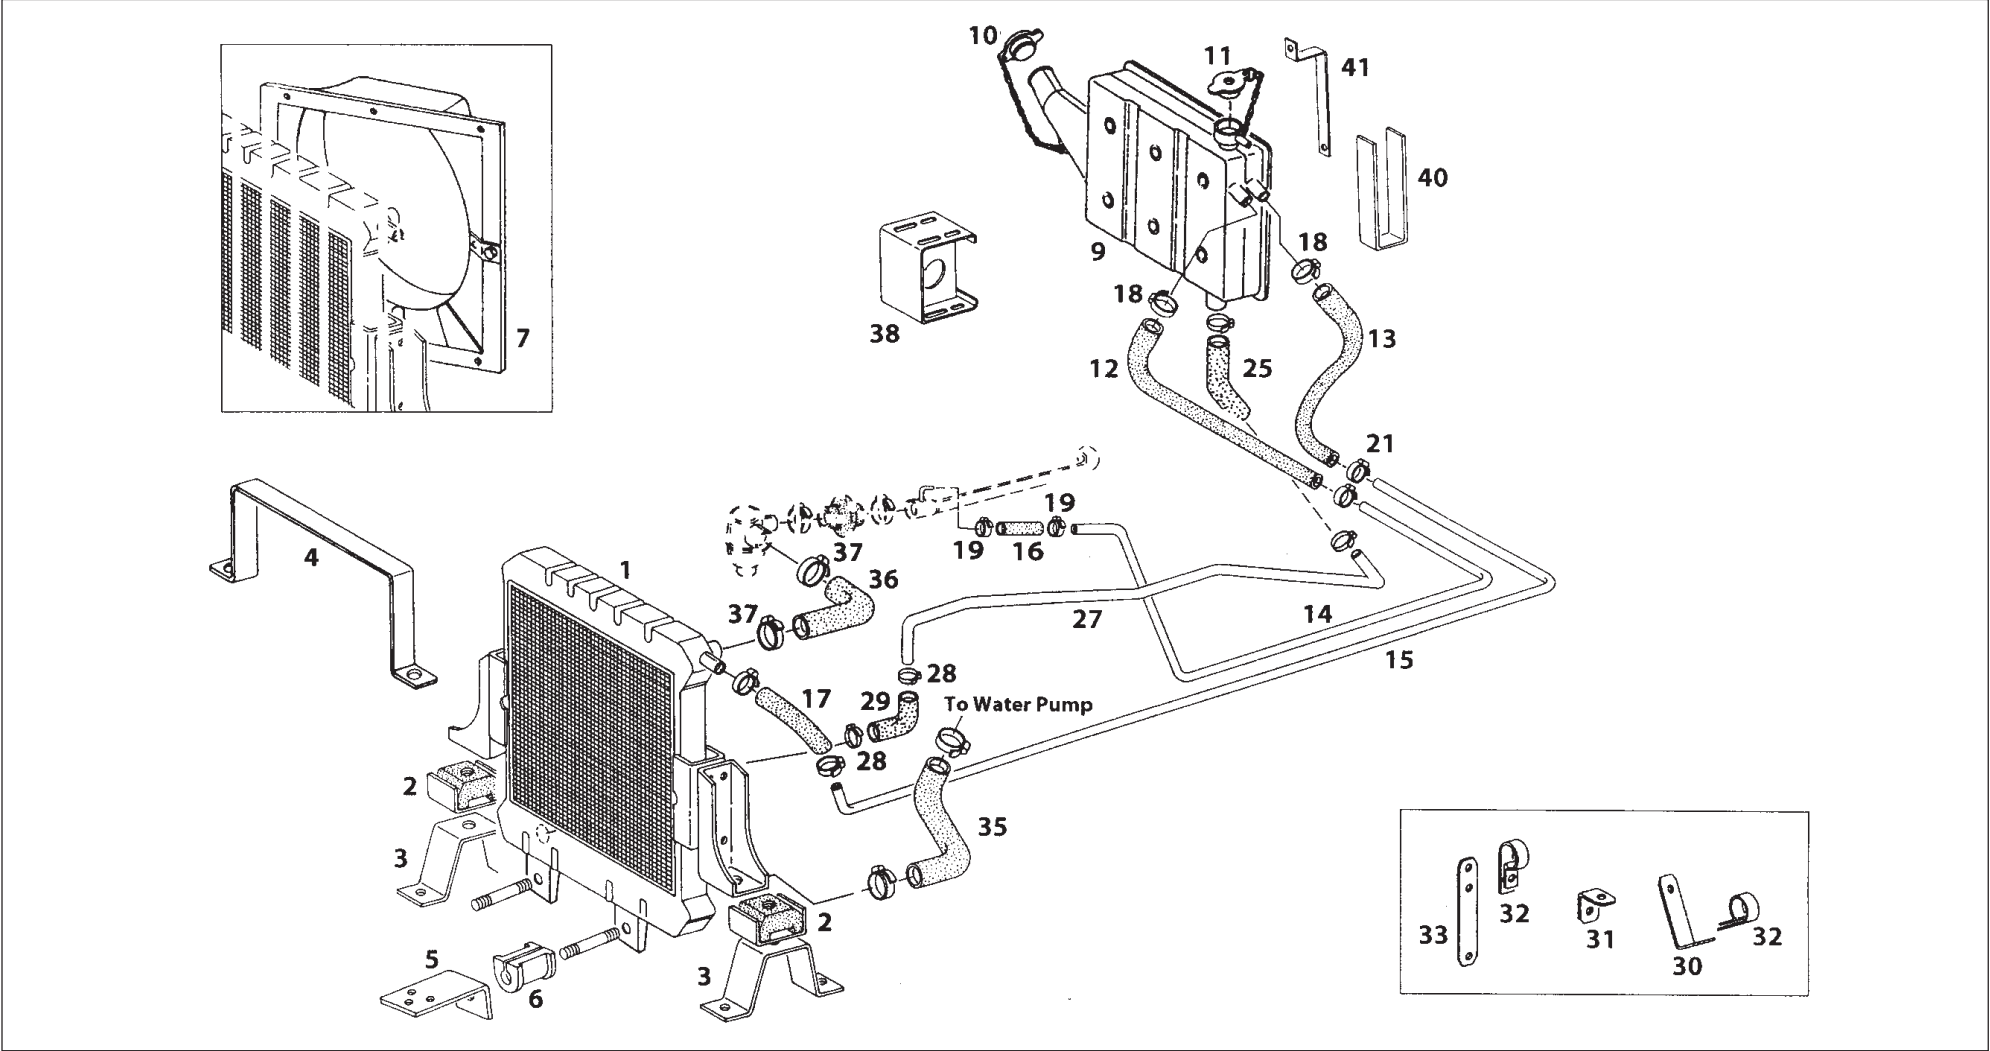


TABLE 50.1
RADIATOR
GROUP 50

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	2527 5010 03 87	Assy Radiator Mounting Frame	2					1	1					From Chassis No. 416 441 DSZ 718478(April'07)
5	2527 5000 01 35	Assy. Bracket (L.H.) Rad. Bottom Mounting		1	1	1	1			1	1	1	1	
5	2527 5000 01 36	Assy. Bracket (R.H.) Rad. Bottom Mounting		1	1	1	1			1	1	1	1	
5	2527 5000 01 41	Assy Bracket (Rad Mtg Bottom)						2	2					
6	2527 5000 01 09	Assy. Radiator Mtg. Pad Side												Optional
7	2527 5050 63 07	Fan Shroud		1	1	1	1			1	1	1	1	
7	2527 5050 63 03	Fan Shroud		1	1	1	1			1	1	1	1	
7	2527 5050 63 11	Fan Shroud (470 Dia Fan)						1	1					
9	2527 5010 02 50	Set - Assy. Aux. Tank & Clamps		1	1	1	1							Upto April'07
9	2527 5010 02 49	Set - Assy. Aux. Tank & Clamps								1	1	1	1	
9	2527 5010 02 49	Set - Assy. Aux. Tank & Clamps						1	1					
9	2527 5010 02 29	Assy. Aux. Water Tank		1	1	1	1							
9	2527 5010 02 28	Assy. Aux. Water Tank								1	1	1	1	Upto April'07
9	2527 5010 02 28	Assy. Aux. Water Tank						1	1					
—	2525 5010 63 06	Recovery Coolant Tank (No Loss Tank)						1	1					
—	2527 5010 82 59	Bracket Lower (No Loss Tank)						1	1					

TABLE 50.1

RADIATOR

GROUP 50

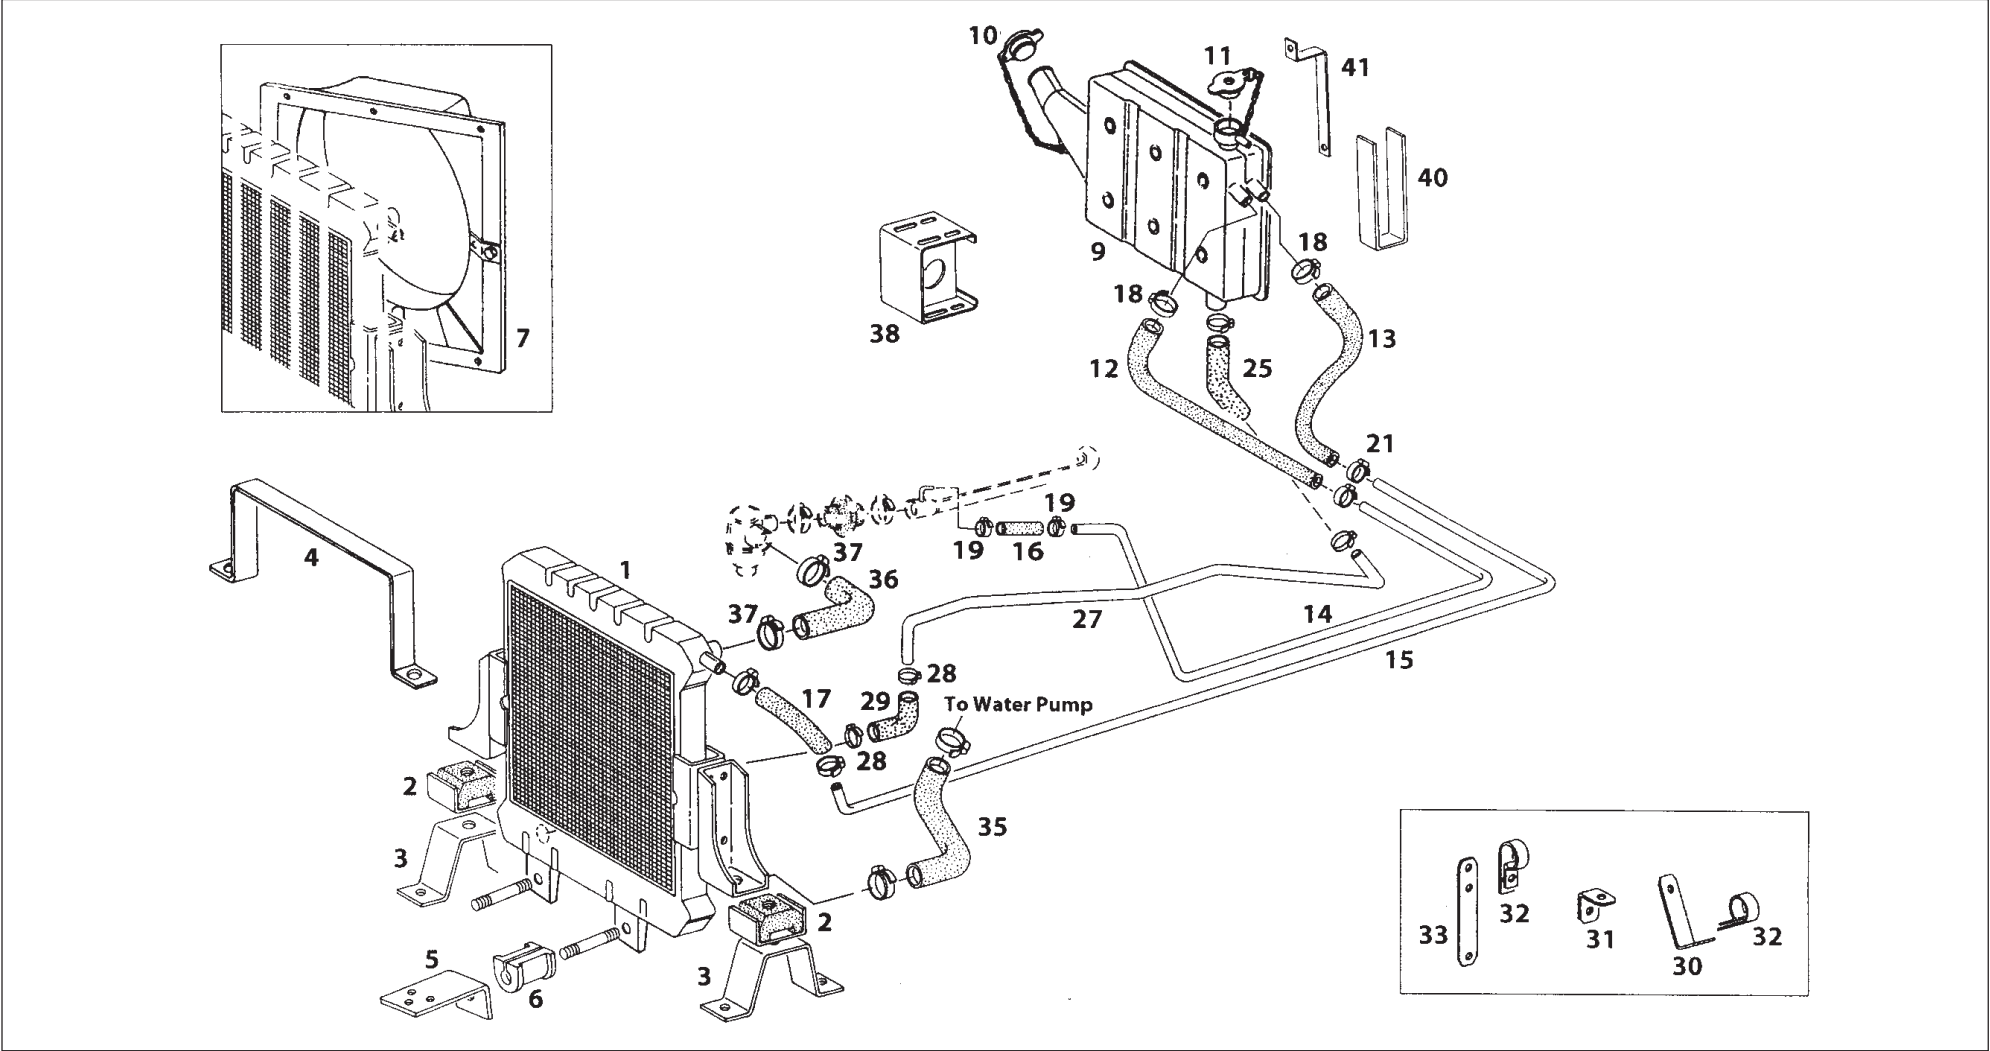


TABLE 50.1
RADIATOR
GROUP 50

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	2527 5010 82 60	Bracket Upper (No Loss Tank)						1	1					From Chassis No. 416 441 DSZ 718478(April'07)
10	2527 5010 82 42	Assy. Pressure Valve Cap (7 PSI)	1											
11	2527 5010 82 43	Assy. Pressure Valve Cap (14 PSI)	1											
—	2527 5000 58 05	Rubber Hose (Coolant Fill Pipe to Radiator)						1	1					From Chassis No. 416 441 DSZ 718478(April'07)
—	2547 0913 42 17	Hose Clamp (58 DIA.)						1	1					
—	2527 5000 58 03	Hose (No Loss Tank To Filler Pipe)						1	1					
—	2547 5010 42 25	Hose Clamp (16 DIA.)						2	2					From Chassis No. 416 441 DSZ 718478(April'07)
—	2527 5000 58 02	Hose (T.Vent To Coolant Filling Pipe)						1	1					
—	2527 5000 58 04	Hose (Coolant Filling Pipe To Rad Vent)						1	1					
—	2547 0117 42 12	Hose Clamp (18 DIA.)						4	4					From Chassis No. 416 441 DSZ 718478(April'07)
—	2527 5010 82 64	Support Plate For Coolant Filler Pipe						1	1					
														From Chassis No. 416 441 DSZ 718478(April'07)

TABLE 50.1

RADIATOR

GROUP 50

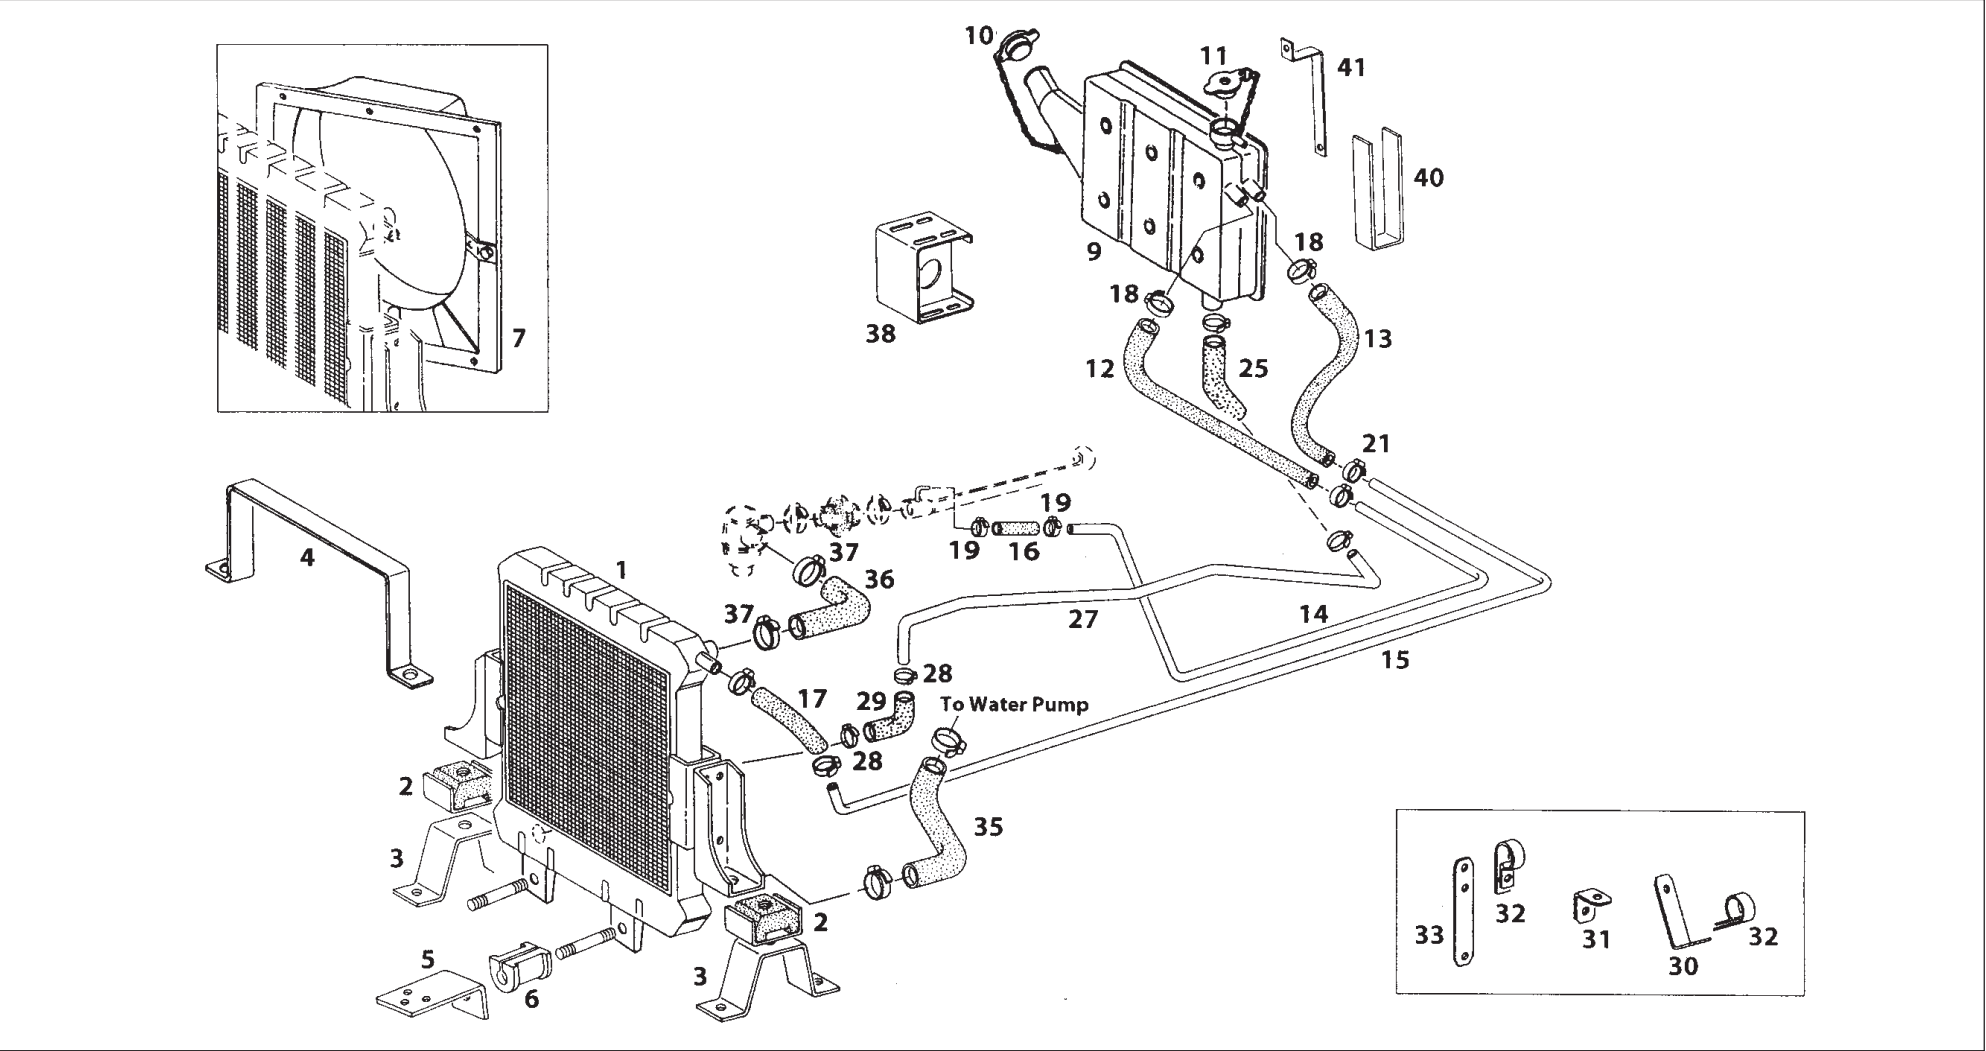


TABLE 50.1
RADIATOR
GROUP 50

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	2651 6260 82 35	Clamp						1	1					From Chassis No. 416 441 DSZ 718478(April'07)
12	2527 5010 58 51	Rubber Hose (L-420) Aux. Tank to Vent Tube		1	1	1	1							
13	2527 5010 58 52	Rubber Hose (L-470) Aux. Tank to Vent Tube		1	1	1	1							
—	2786 5010 58 90	Rubber Hose (for Venting on Aux. Water Tank)						2	2					Upto April'07
14	2527 5010 69 21	Vent Tube (Tube 10 O.D. x 0.7 Thk)		1	1	1	1							
15	2527 5010 69 22	Vent Tube (Tube 10 O.D. x 0.7 Thk)		1	1	1	1							
14	2527 5010 69 40	Vent Tube (Aux Tank To Upper Cooling Line)						1	1					Upto April'07
15	2527 5010 69 41	Vent Tube (Aux Tank To Radiator)						1	1					Upto April'07
—	2527 0115 01 60	Assy Support (Vent Tube-On Air Inlet Elbow)								1	1	1	1	
—	2527 0115 01 70	Assy Support (Vent Tube-On Air Inlet Elbow)						1	1					Upto April'07
—	2527 5010 58 56	Rubber Hose (L-1055) Aux. Tank to U. Cooline Line								1	1	1	1	
—	2527 5010 58 26	Rubber Hose (L-1390) Aux. Tank to Radiator								1	1	1	1	
—	2527 5010 03 44	Assy Clamp With Sleeve (For Vent Hose)						1	1					Upto April'07
16	2527 5010 58 53	Rubber Hose (L-435) Vent Tube to U. Cooling Line		1	1	1	1							
16	2527 5010 58 90	Rubber Hose (For Venting to U. Cooling Line)						1	1					Upto April'07
17	2527 5010 58 88	Rubber Hose (For Venting to Radiator)(L=425mm)						1	1					Upto April'07
17	2527 5010 58 68	Rubber Hose (L-645) (Vent Tube to Radiator)		1	1	1	1							
—	2527 5010 42 08	Hose Clamp (34 Dia.)	2											
18	2527 5010 42 09	Hose Clamp (27 Dia.)	2											

TABLE 50.1

RADIATOR

GROUP 50

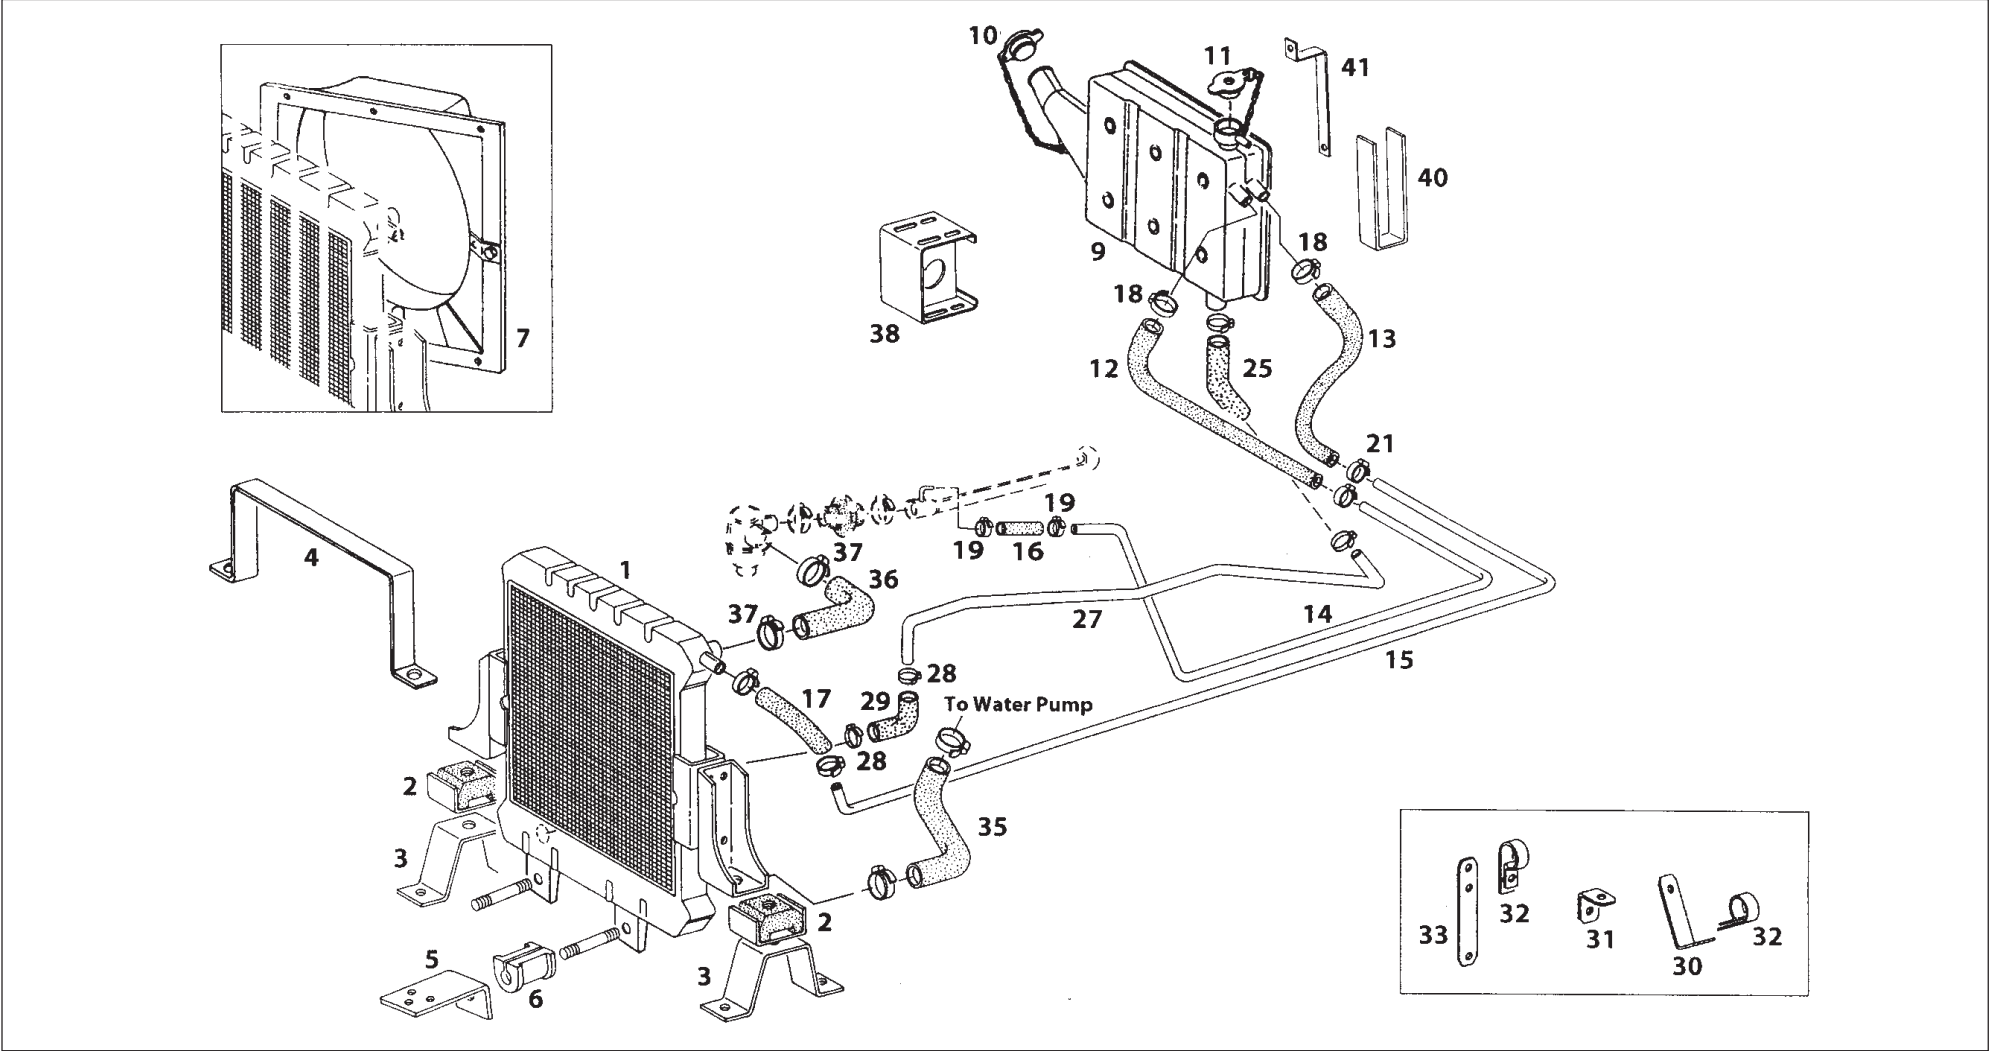


TABLE 50.1
RADIATOR
GROUP 50

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
19	2547 1513 42 02	Hose Clamp (23 Dia)	2											Upto April'07
21	2527 5010 01 91	Assy. Clamp With Sleeve (For Vent Hoses)	1											
25	2527 5010 58 58	Rubber Hose (L -180) Aux Tank to Tube							1	1	1	1		
25	2527 5010 58 58	Rubber Hose (L -180) Aux Tank to Tube						1	1					
25	2527 5010 58 64	Moulded Hose (Aux. Tank to Tube)		1	1	1	1							
27	2527 5010 69 19	Pipe (20 O.D. x 1.5 Thk.) Aux. Tank to Rad.		1	1	1	1							
27	2527 5010 69 20	Pipe (20 O.D. x 1.5 Thk.) Aux. Tank to Rad.								1	1	1	1	
27	2527 5010 69 39	Fill Pipe (20 ODx1.5Thk)						1	1					
27	2527 5010 03 71	Assy Coolant Fill Pipe W/Pr.Cap & Chain						1	1					
													From Chassis No. 416 441 DSZ 718478(April'07)	
28	2527 5010 42 07	Hose Clamp (42 Dia.)	2											Upto April'07
29	2527 5010 58 50	Hose (L-190) (Pipe 20 O. D. To Rad)								1	1	1	1	
29	2786 5010 58 69	Hose (Radiator Bottom Tank to Fill Pipe)						1	1					
29	2527 5010 58 67	Hose (L-115 mm)		1	1	1	1							
30	2527 5010 02 43	Assy Clamp		1	1	1	1							
31	2527 5010 82 35	Bracket						1	1	1	1	1	1	
32	2786 5040 42 01	Clamp	2											
33	2527 5010 82 41	Support								1	1	1	1	
35	2574 5010 58 01	Radiator Hose (Rad. To Water Pump)		1	1	1	1			1	1	1	1	
35	2527 5010 58 87	Hose (Radiator to Water Pump)						1	1					

TABLE 50.1

RADIATOR

GROUP 50

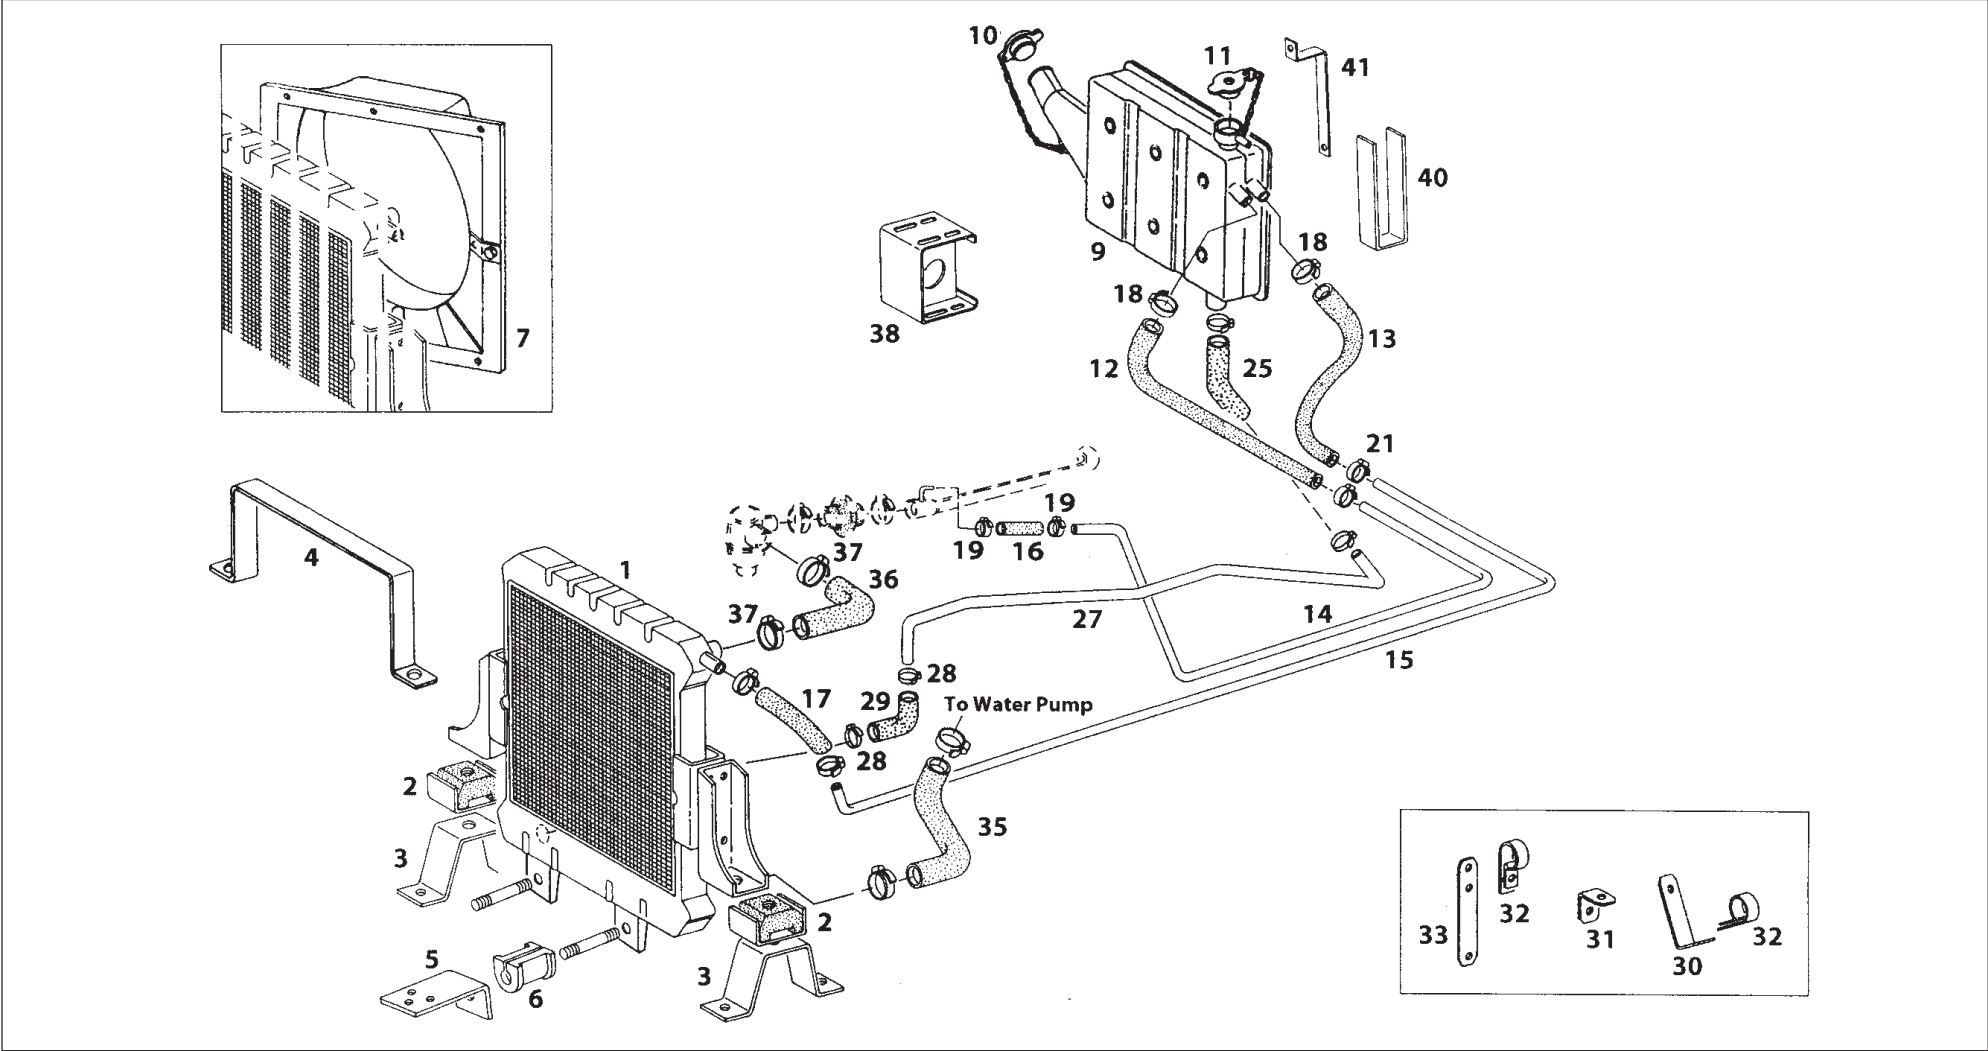


TABLE 50.1
RADIATOR
GROUP 50

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
36	2534 5010 58 15	Rubber Hose (Thermostat to Radiator)		1	1	1	1			1	1	1	1	
36	2527 5010 58 84	Hose (Thermostat to Radiator)						1	1					
37	2547 5010 42 22	Hose Clamp (50 Dia.)	2											
—	2547 5010 42 13	Hose Clamp (56 Dia.)						1	1	1	1	1	1	
—	2547 5010 42 21	Hose Clamp (53 Dia.)						1	1					
38	2527 5010 02 21	Assy Support		1	1	1	1							
38	2527 5010 02 38	Assy Support						1	1	1	1	1	1	
40	2527 5010 99 08	Rubber Strap (L-352)	4											
41	2527 5010 82 25	Clamp Rear (Aux. Tank)	2											
—	2547 0913 42 15	Hose Clamp (72 Dia.)						1	1					
—	2547 2012 42 14	Hose Clamp (32 Dia.)	1											
		(FOR 'NO LOSS TANK' FITMENT IN PLACE OF AUX WATER TANK)												
		(VALID FROM CHASSIS NO.416441 DSZ 718478-(APRIL-07)												
—	2527 2012 01 71	Assy. Thermostat 87 Deg.						1	1					
—	2527 2012 01 69	Assy. Upper Cooling Water Line						1	1					
—	2527 5010 03 63	Assy. Radiator (Tata Toyo)--For No Loss Tank						1	1					
—	2527 5010 03 69	Drain Cock (Tata Toyo)						1	1					
—	2527 5010 03 87	Assy Radiator Mounting Frame						1	1					
—	2525 5010 63 06	Recovery Coolant Tank (No Loss Tank)						1	1					
—	2527 5010 82 59	Bracket Lower (No Loss Tank)						1	1					

TABLE 50.1

RADIATOR

GROUP 50

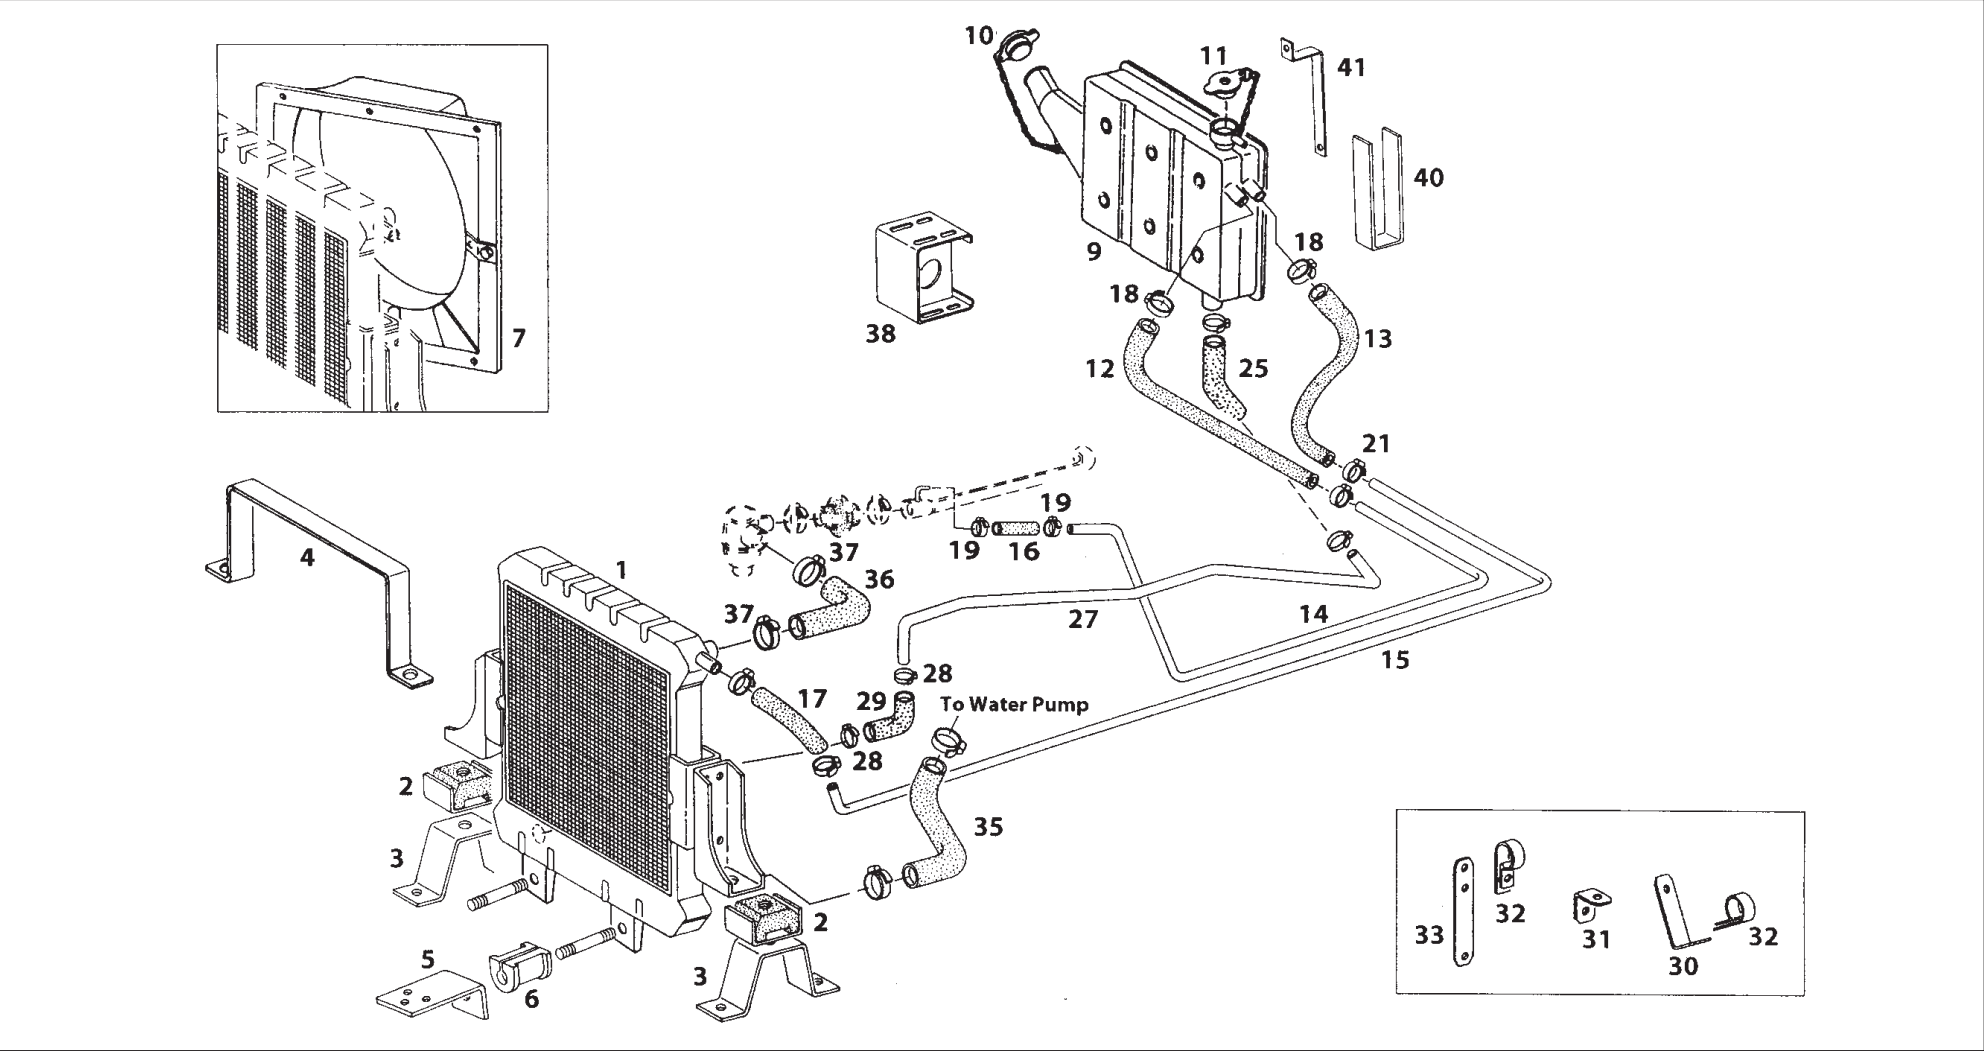


TABLE 50.1
RADIATOR
GROUP 50

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
—	2527 5010 82 60	Bracket Upper (No Loss Tank)						1	1					
—	2527 5000 58 05	Rubber Hose (Coolant Fill Pipe to Radiator)						1	1					
—	2547 0913 42 17	Hose Clamp (58 DIA.)						1	1					
—	2527 5000 58 03	Hose (No Loss Tank To Filler Pipe)						1	1					
—	2547 5010 42 25	Hose Clamp (16 DIA.)						2	2					
—	2527 5000 58 02	Hose (T.Vent To Coolant Filling Pipe)						1	1					
—	2527 5000 58 04	Hose (Coolant Filling Pipe To Rad Vent)						1	1					
—	2547 0117 42 12	Hose Clamp (18 DIA.)						4	4					
—	2527 5010 82 64	Support Plate For Coolant Filler Pipe						1	1					
—	2651 6260 82 35	Clamp						1	1					
—	2527 5010 03 71	Assy Coolant Fill Pipe W/Pr.Cap & Chain						1	1					

TABLE 54.1

LIGHT AND SIGNAL SYSTEM

GROUP 54

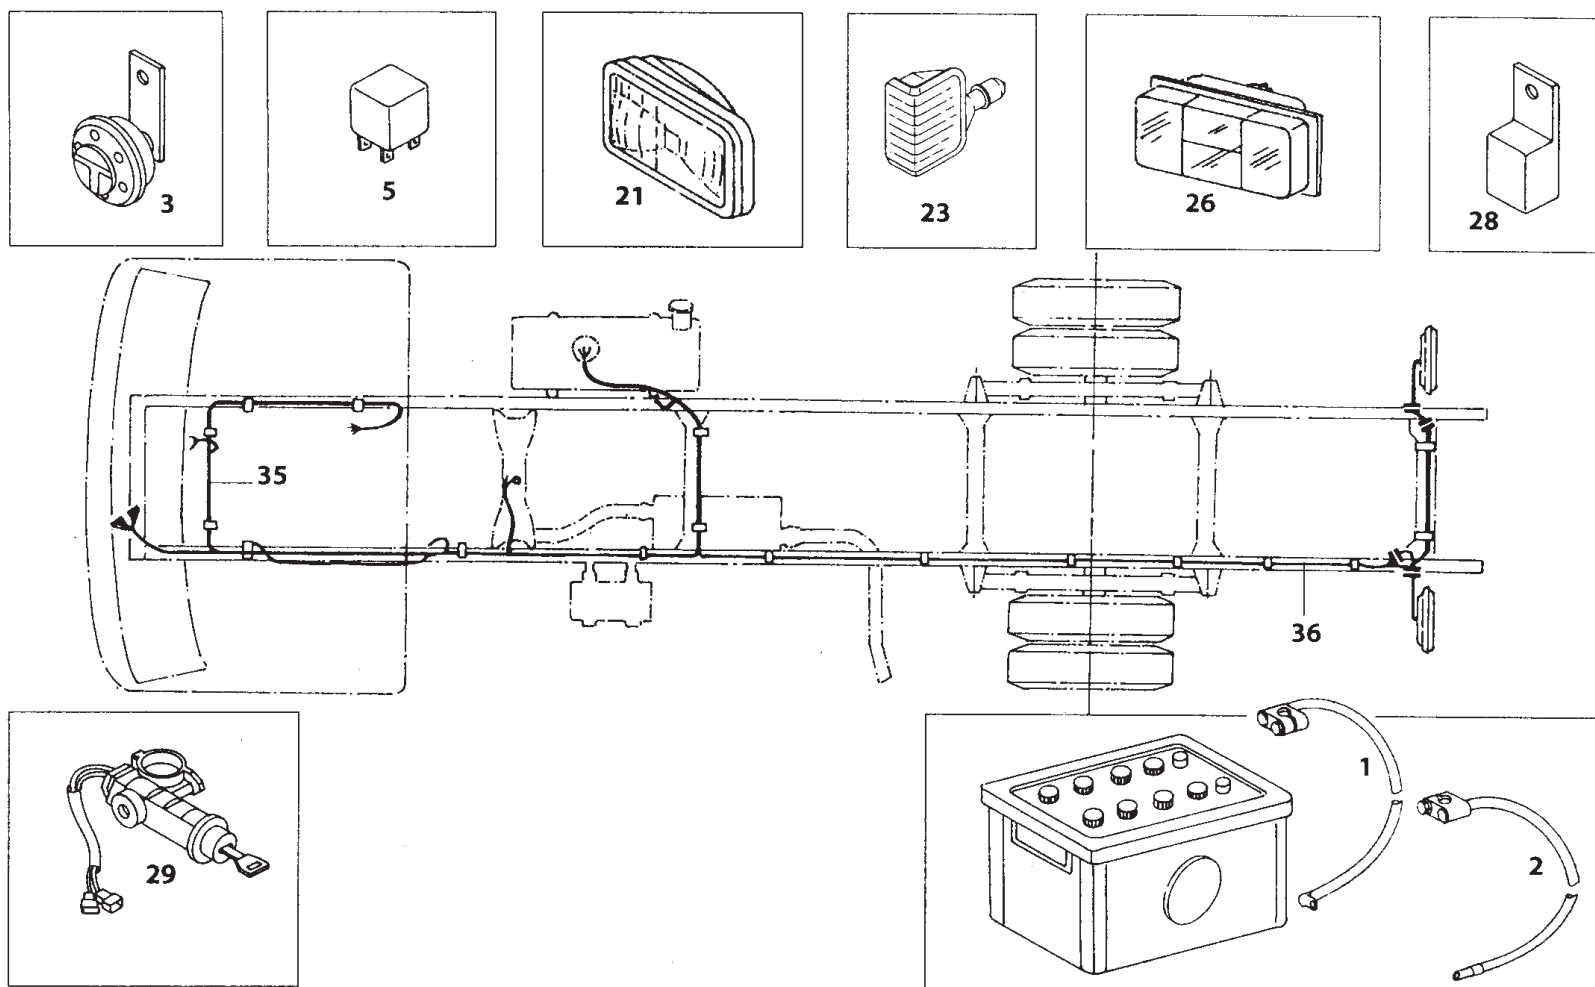


TABLE 54.1
LIGHT AND SIGNAL SYSTEM
GROUP 54

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		LIGHT AND SIGNAL SYSTEM												
1	2621 5410 01 07	Assy. Copper Battery Cable + VE			1	1	1	1	1	1		1	1	
1	2575 5410 01 15	Assy. Copper Battery Cable + VE		1							1			Cowl Version
2	2621 5410 01 08	Assy. Copper Battery Cable - VE			1	1	1	1	1	1		1	1	
2	2756 5410 01 02	Assy. Copper Battery Cable - VE		1							1			Cowl Version
—	3505 8905 63 01	Battery Tray	1											
—	2641 5410 82 05	Bracket (Batt Cable)	1											
—	2574 5410 82 05	Double Clamp	3											
—	312 546 10 20	Earth Strap		1	1			1	1	1	1	1	1	
—	2067 5461 01 01	Earth Strap With Cu Tube				1	1							
—	2640 5410 82 07	Channel (Battery Clamping)	2											
—	2157 5410 82 19	Clamping Stud 229 mm	2											
—	2157 5410 88 01	Bent Stud - 300 mm	2											
—	2641 5410 01 07	Assy. Support	2											
—	2161 5410 01 01	Assy.Batt.Cover - 120 AH	1											
3	2574 5420 99 87	Horn 12V	1											
—	2641 5420 01 01	Assy. Bracket	1											
5	2654 5420 49 13	Relay (With Resistor) 12 V		1	1			1	1	1	1	1	1	
5	2654 5420 49 01	Relay				3	3							
—	2641 5450 01 08	Assy. Bracket (For Relay Mtg.)	1											

TABLE 54.1

LIGHT AND SIGNAL SYSTEM

GROUP 54

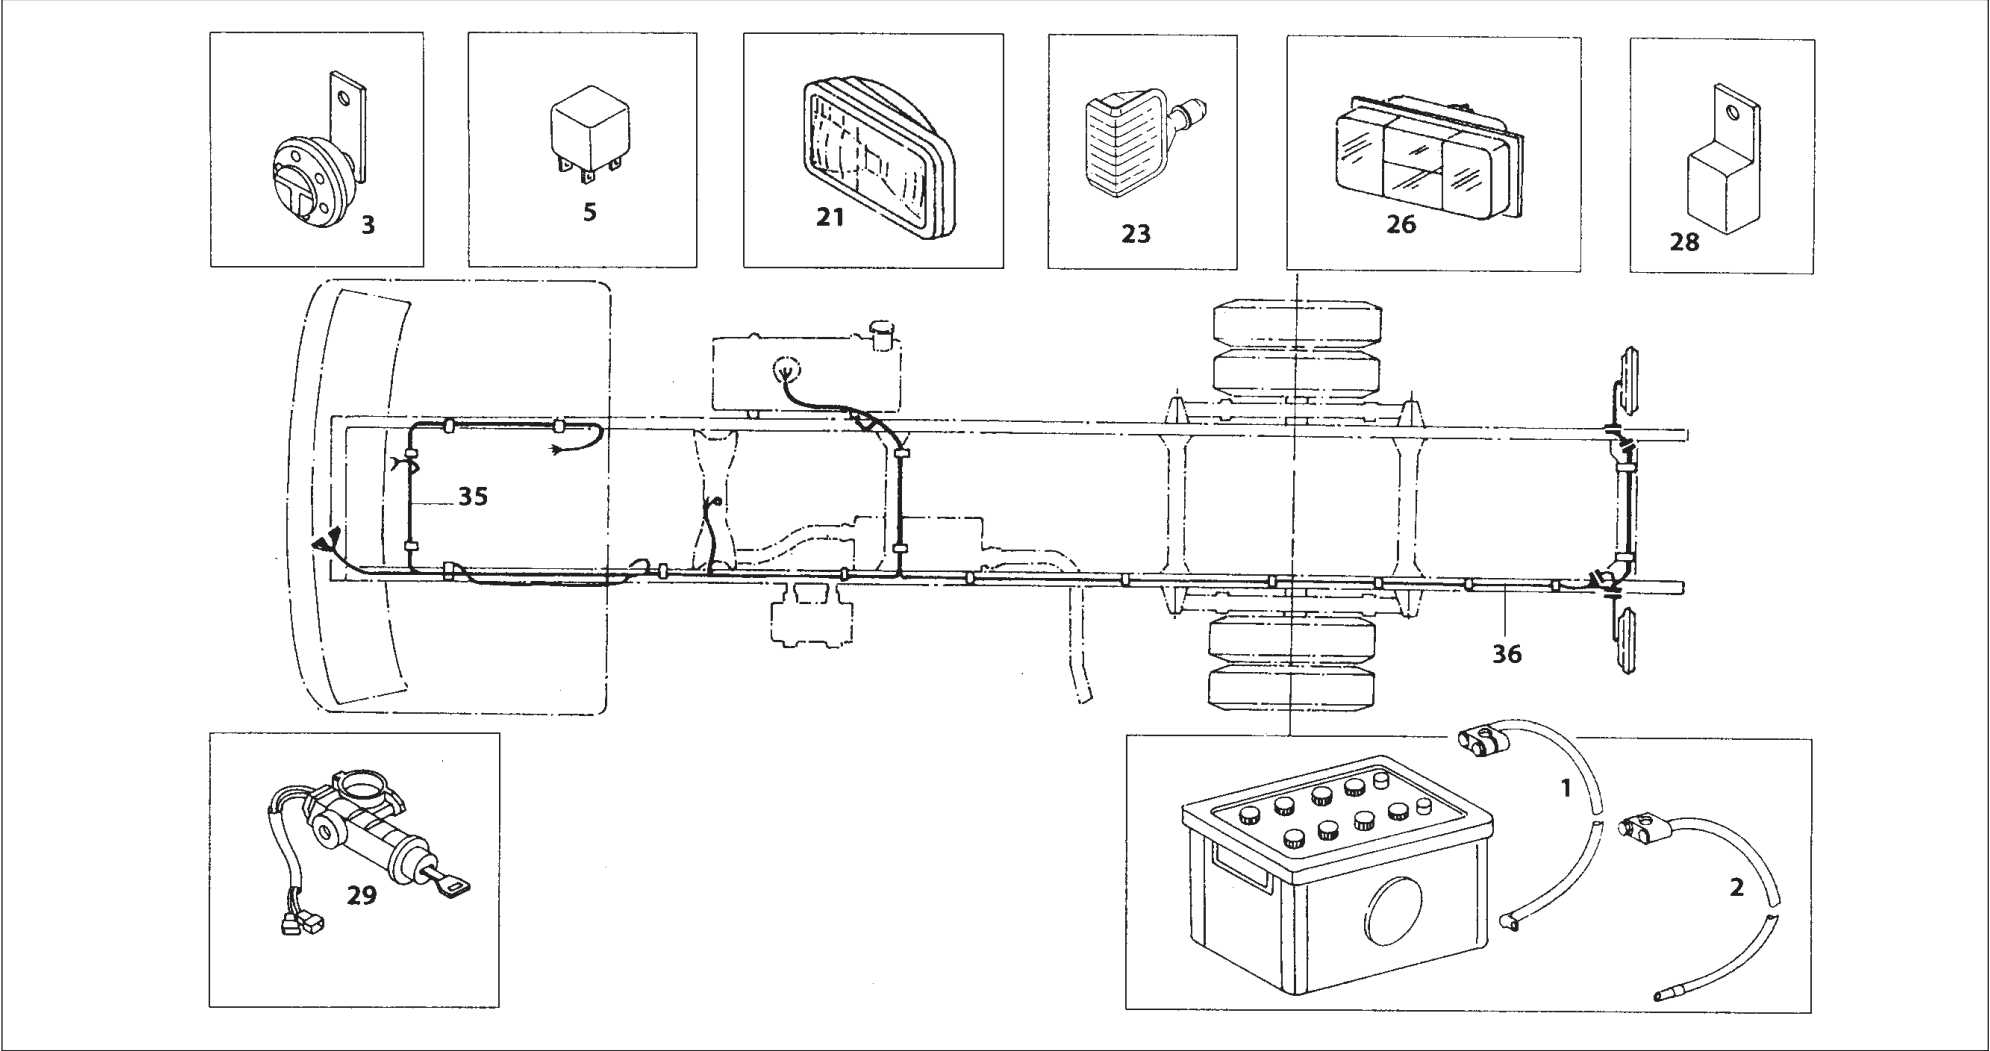


TABLE 54.1
LIGHT AND SIGNAL SYSTEM
GROUP 54

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	2574 5450 99 53	Mech Stop Light Switch	1											For W/O Face and TCIC Vehicle For W/O Face and TCIC Vehicle

TABLE 54.1

LIGHT AND SIGNAL SYSTEM

GROUP 54

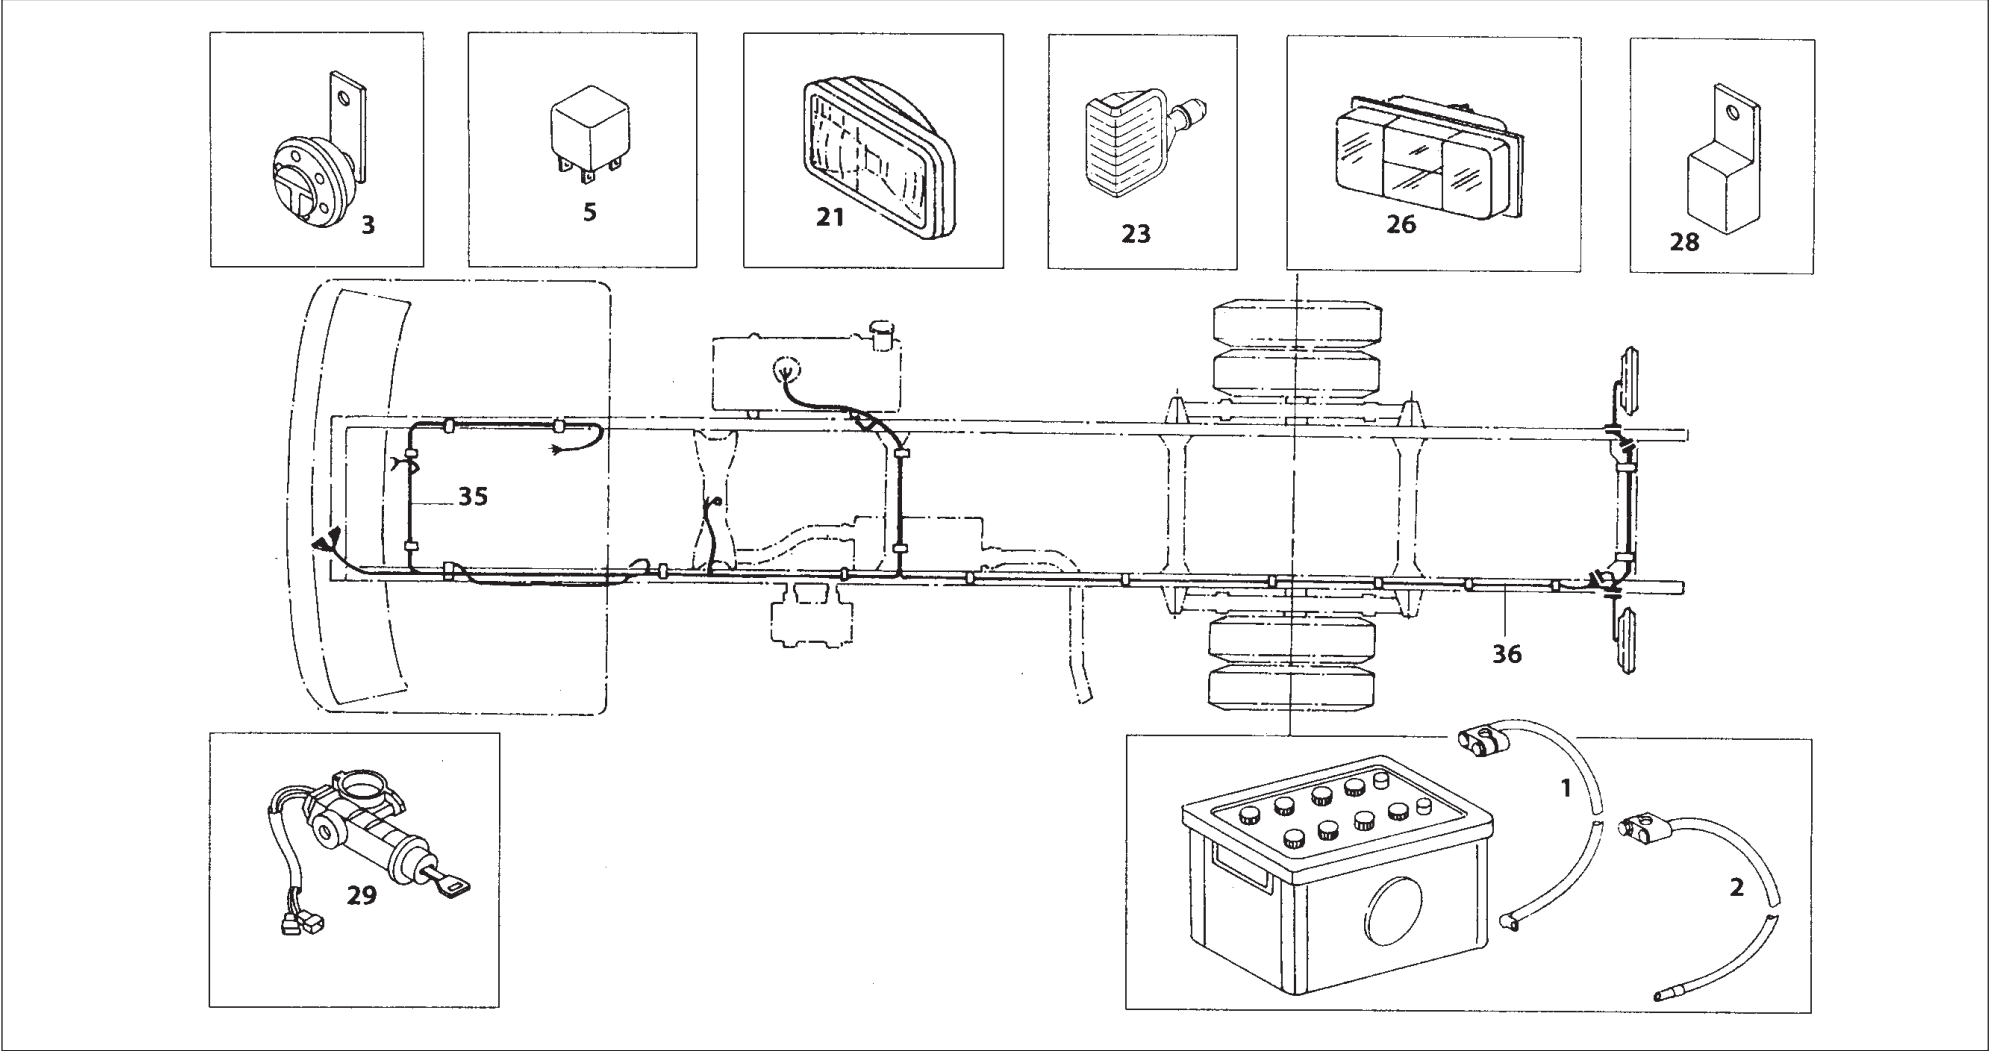


TABLE 54.1
LIGHT AND SIGNAL SYSTEM
GROUP 54

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
28	2651 5450 46 03	Flasher SQ. 12 V	1											For Cab Version For Cab Version
—	2647 5440 01 19	End Outline Marker Lamp	2											
—	2078 5440 01 06	Assy.Cab Lamp (with Bulb)	1											
29	2641 5450 01 06	Steering Lock Cum Ignition Switch	1											
—	2651 5462 01 18	Assy.Diode (MSSL Connector)		1	1			1		1	1			For Instrument Cluster For Motorised Head Lamp
—	2699 5420 99 28	Wiper Controller/Timer	1											
—	2573 5420 99 33	Beeper Alarm Unit		1		1				1		1		
35	2153 5482 01 21	Wiring Harness Main	1											
35	2153 5482 01 20	Wiring Harness Main			1		1	1	1					For Jsr Prodn.Vehicle-DIN Type For Pune prodn.Vehicle-MSSL Type
35	2153 5482 01 08	Wiring Harness Main		1		1				1	1	1	1	
36	2153 5482 01 09	Wiring Harness Tail		1	1			1		1	1			
36	2153 5482 01 11	Wiring Harness Tail				1	1		1			1	1	
36	2153 5462 01 04	Wiring Harness Tail		1	1			1		1	1			For Pune prodn.Vehicle-MSSL Type
36	2153 5462 01 05	Wiring Harness Tail				1	1		1			1	1	
—	2154 5482 01 12	Assy.Cable Set (For Cab Lamp)		1	1		1	1	1	1			1	
—	2064 5482 01 03	Assy. Cable Set (For Cab Lamp)				1						1		

TABLE 54.2

INSTRUMENTS

GROUP 54

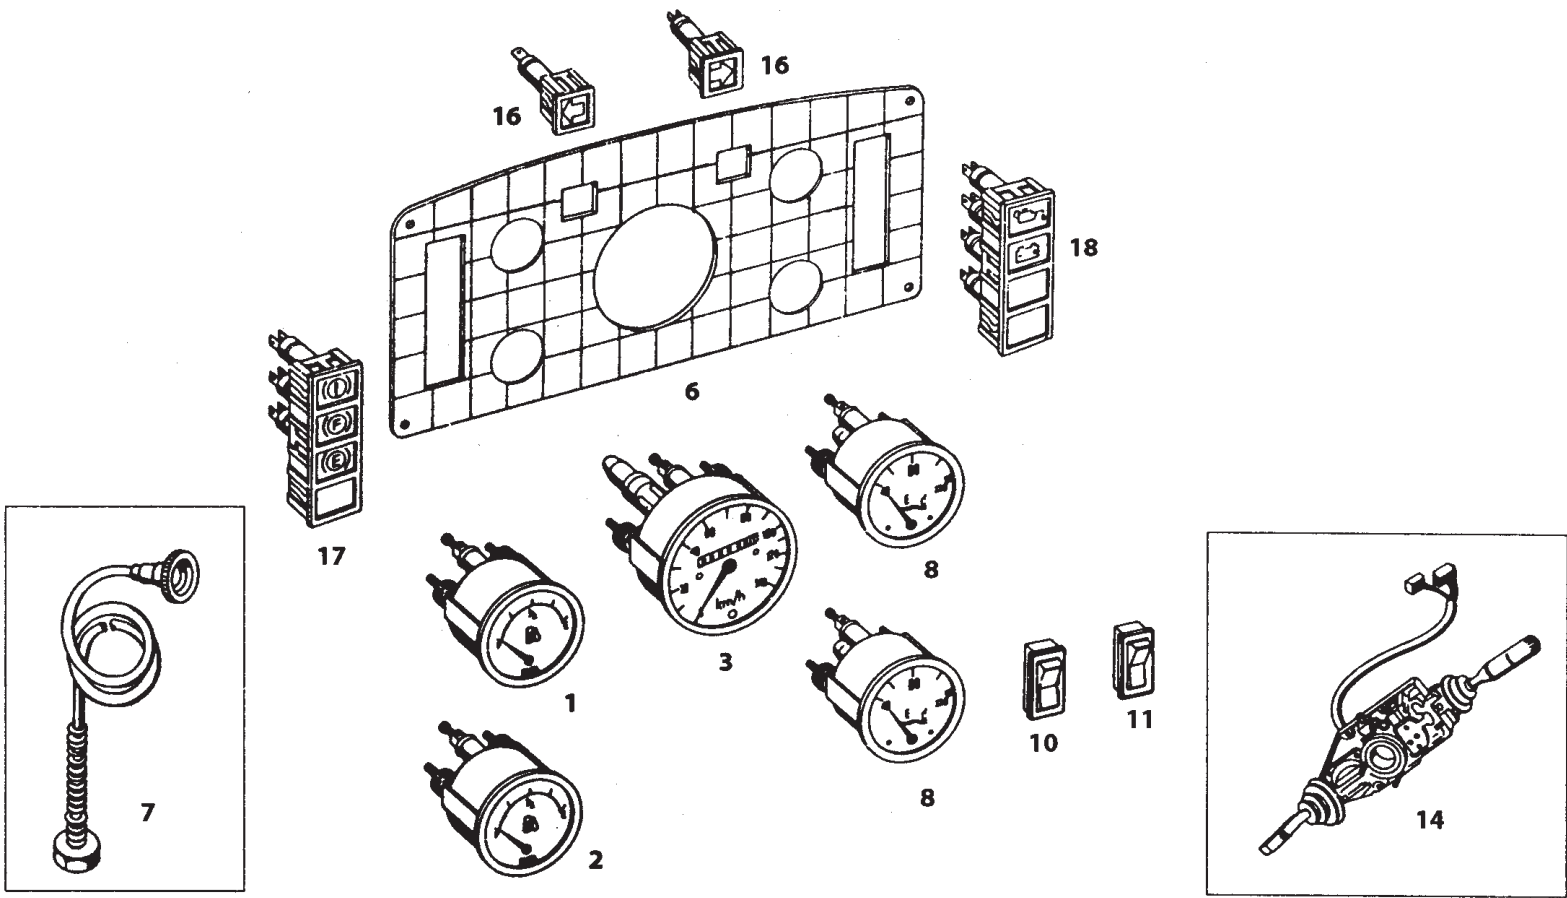


TABLE 54.2
INSTRUMENTS
GROUP 54

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		INSTRUMENTS												
1	2651 5420 99 32	Fuel Gauge	1											
2	2757 5420 99 04	Elect.Temp.Gauge 12V (Backlit)	1											
3	2651 5420 99 48	Speedometer [1:0.875] (6+1 Digit)	1											
6	2093 6890 82 01	Instrument Panel	1											
6	2673 6890 63 01	Instrument Panel			1	1	1							For w/o Face Veh.
7	2643 5420 99 21	Speedocable (JIS) 3300 LG						1		1	1	1	1	For Cab Version
7	2641 5420 99 14	Speedocable (JIS) 3000 LG		1							1			For Cowl Version
7	2641 5420 99 44	Speedocable (JIS) 3200 LG		1	1	1	1	1	1					For Cab & Cowl Version
8	2083 5420 99 03	Air Pressure Gauge	2											
10	2641 5450 69 01	Piano Switch [Exhaust Brake On]	1											
11	2641 5450 69 05	Piano Switch (Engine Lamp)	1											
11	2641 5450 69 10	Piano Key Switch (For PTO)								1	1	1	1	
14	2654 5451 01 19	Combi Switch	1											
16	2651 5440 01 82	Assy.Turn Indicator Lamp	2											
17	2093 5440 01 01	Assy Lamp (Warning Indicator)	1											
18	2093 5440 01 02	Assy Lamp (Warning Indicator)	1											

TABLE 54.3

INSTRUMENT CLUSTER

GROUP 54

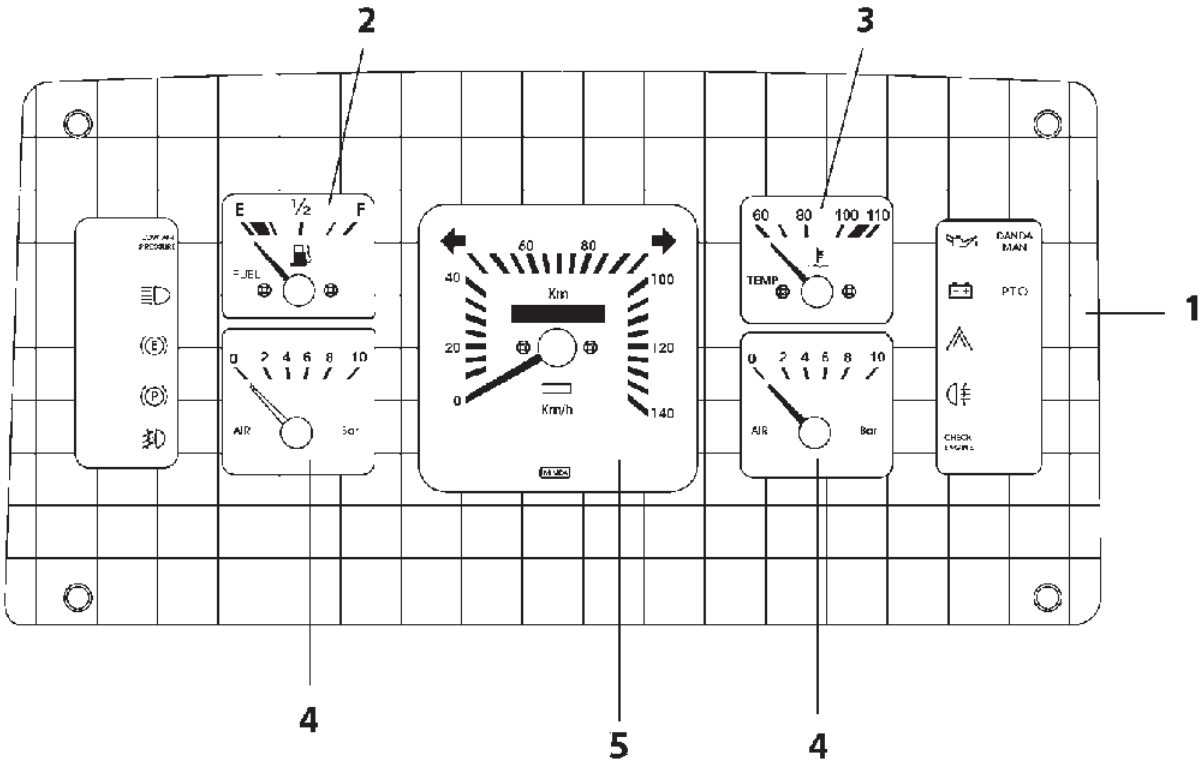


TABLE 54.3

INSTRUMENT CLUSTER

GROUP 54

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		INSTRUMENT CLUSTER												
1	2153 5420 99 01	Instrument Cluster (1:0.88)	1											For Selection
1	2641 5420 01 64	Instrument Cluster (1:0.78)	1											For Selection;Upto July 2005
2	2641 5420 99 70	Fuel Gauge	1											
3	2641 5420 99 71	Temperature Gauge	1											
4	2641 5420 99 72	Air Pressure Gauge	2											
5	2641 5420 99 73	Speedometer	1											

TABLE 60.1

CAB/COWL

GROUP 60

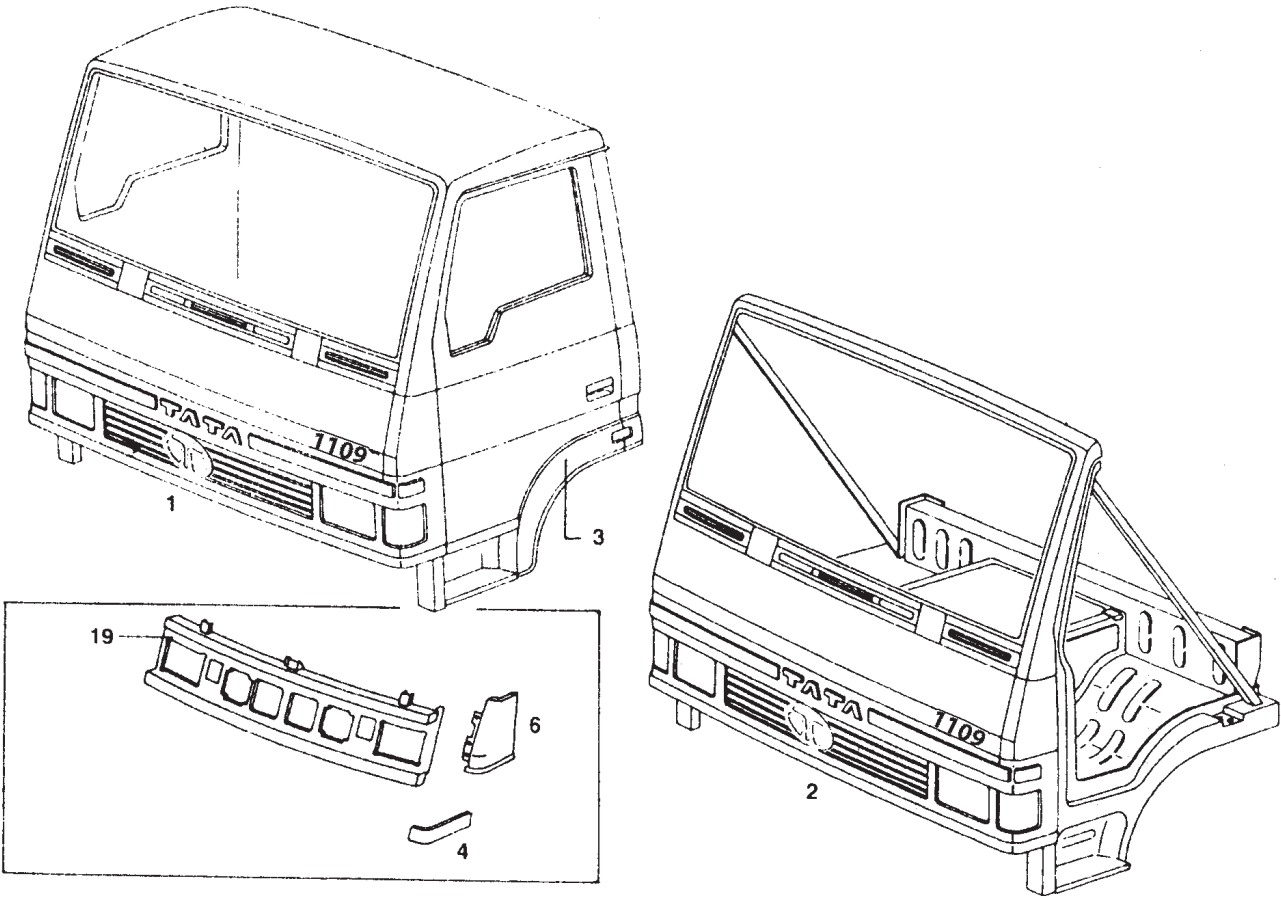


TABLE 60.1
CAB/COWL
GROUP 60

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		CAB/COWL												
—	2153 6000 01 18	Assy Cab Complete						1	1					For P/Strg.
—	2153 6000 01 11	Assy Cab Complete								1	1	1	1	
—	2153 6000 01 02	Assy Cab Complete								1				
1	2153 6000 01 19	Assy. Bare Cab						1	1					
1	2153 6000 01 08	Assy. Bare Cab								1	1	1	1	
2	2153 6000 01 16	Assy. Cowl Complete.						1	1					
2	2153 6000 01 04	Assy. Cowl Complete		1	1	1	1			1	1	1	1	For 8.25x20 Tyre Veh.
—	2153 6000 01 05	Assy. Bare Cowl	1											
—	2161 6000 01 04	Assy. Cowl Complete w/o Face			1		1							
—	2161 6000 01 02	Assy. Cowl Complete w/o Face				1	1							
—	2161 6000 01 06	Assy. Bare Cowl w/o Face			1		1							
—	2161 6000 01 03	Assy. Bare Cowl w/o Face				1	1							
3	2641 6310 82 53	Fender Outer LH						1	1	1	1	1	1	For Cab Version
3	2641 6310 01 31	Assy Fender Inner LH						1	1	1	1	1	1	For Cab Version
3	2641 6310 82 54	Fender Outer RH						1	1	1	1	1	1	For Cab Version
3	2641 6310 01 32	Assy Fender Inner RH						1	1	1	1	1	1	For Cab Version
3	2641 6310 01 27	Assy. Fender Complete LH		1	1	1	1	1	1					For Cowl Version
3	2641 6310 01 28	Assy. Fender Complete RH		1	1	1	1	1	1					For Cowl Version
4	2641 6010 01 04	Assy. Panel Corner Bottom LH	1											

TABLE 60.1

CAB/COWL

GROUP 60

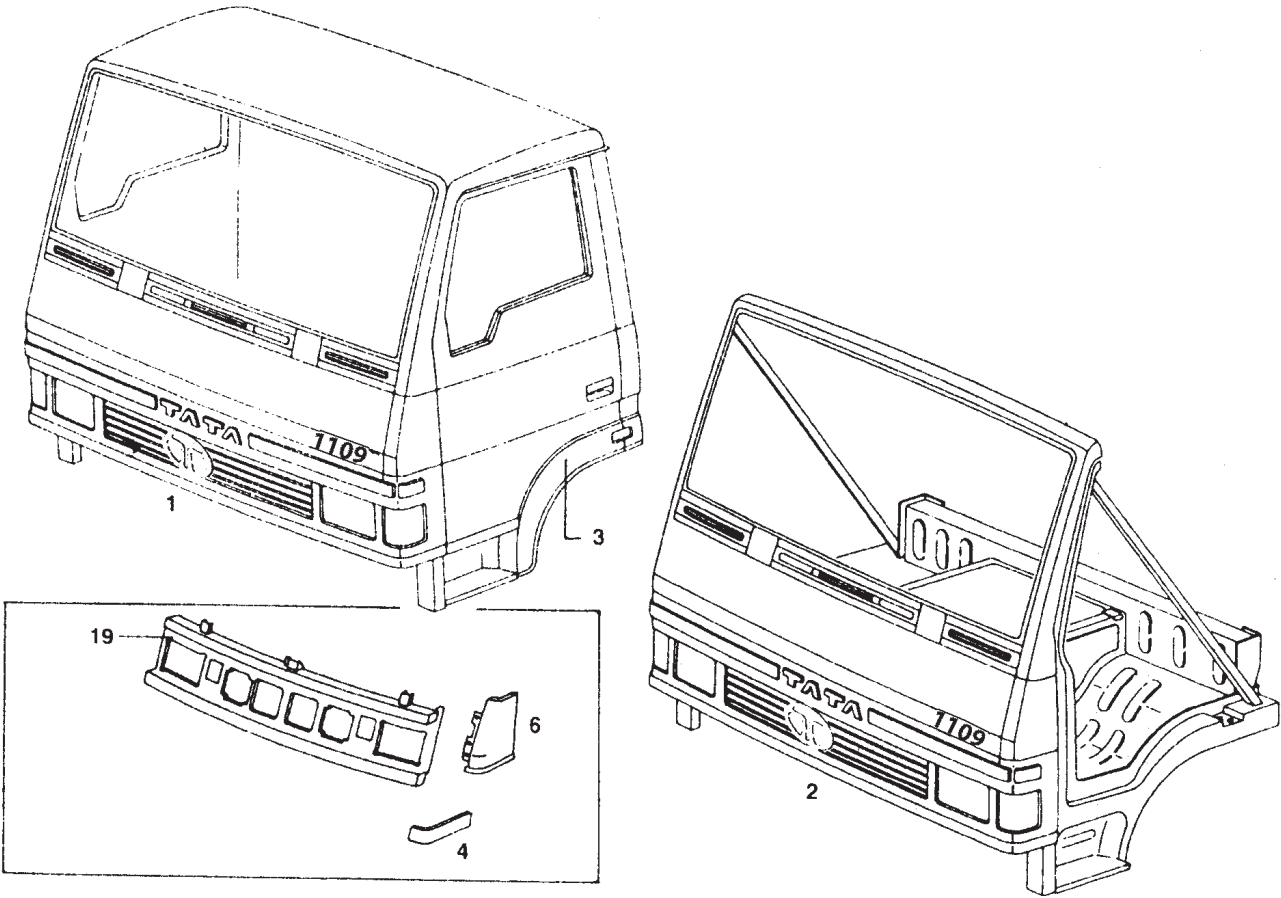


TABLE 60.1
CAB/COWL
GROUP 60

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
4	2641 6010 01 05	Assy. Panel Corner Bottom RH	1											
6	2747 6010 01 20	Assy. Outer Panel Corner Comp. (Front) LH						1	1	1	1	1	1	For Cab Version
6	2747 6010 01 21	Assy. Outer Panel Corner Comp. (Front) RH						1	1	1	1	1	1	For Cab Version
6	2641 6010 01 12	Assy. Outer Panel Corner Comp. (Front) LH		1	1	1	1	1	1					For Cowl Version
6	2641 6010 01 13	Assy. Outer Panel Corner Comp. (Front) RH		1	1	1	1	1	1					For Cowl Version
19	2673 6010 01 06	Assy. Support Front (Grill)	1											
—	2153 6010 82 01	Step Board						2	2	2	2	2	2	For Cab Version
—	2641 6010 82 17	Step Board		2	2	2	2	2	2					For Cowl Version
—	2153 8106 01 01	Assy. Step Additional.	2											

TABLE 67.1

WINDSHIELD GLASS

GROUP 67

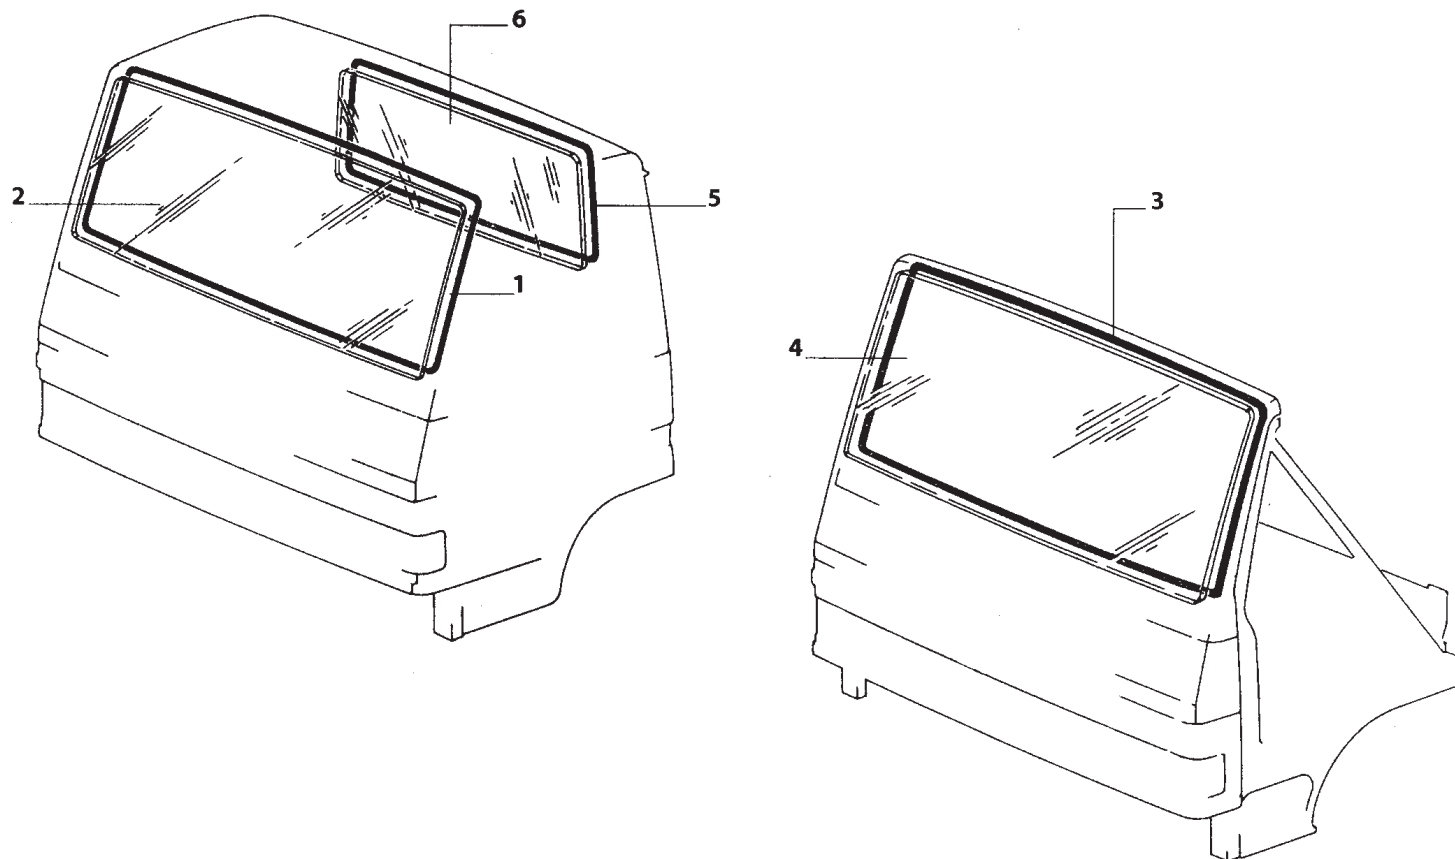


TABLE 67.1
WINDSHIELD GLASS
GROUP 67

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		WINDSHIELD GLASS												
1	2641 6710 63 05	Rubber Mould						1	1	1	1	1	1	For Cab Version
2	2747 6710 23 01	Windshield Glass						1	1	1	1	1	1	For Cab Version
3	2641 6710 63 04	Rubber Mould		1	1	1	1	1	1					For Cowl Version
4	2641 6710 23 05	Windshield Glass		1	1	1	1	1	1					For Cowl Version
—	2592 8690 67 03	Wind Shield Pane			1	1	1							For w/o Face vehicle
5	2651 6710 63 04	Rubber Mould (Rear Window)						1	1	1	1	1	1	For Cab Version
6	2651 6710 01 10	Assy.Rear Window Complete With Tinted Glass						1	1					For Cab Version
6	2651 6710 01 03	Assy.Rear Window Complete								1	1	1	1	For Cab Version

TABLE 68.1

DASHBOARD

GROUP 68

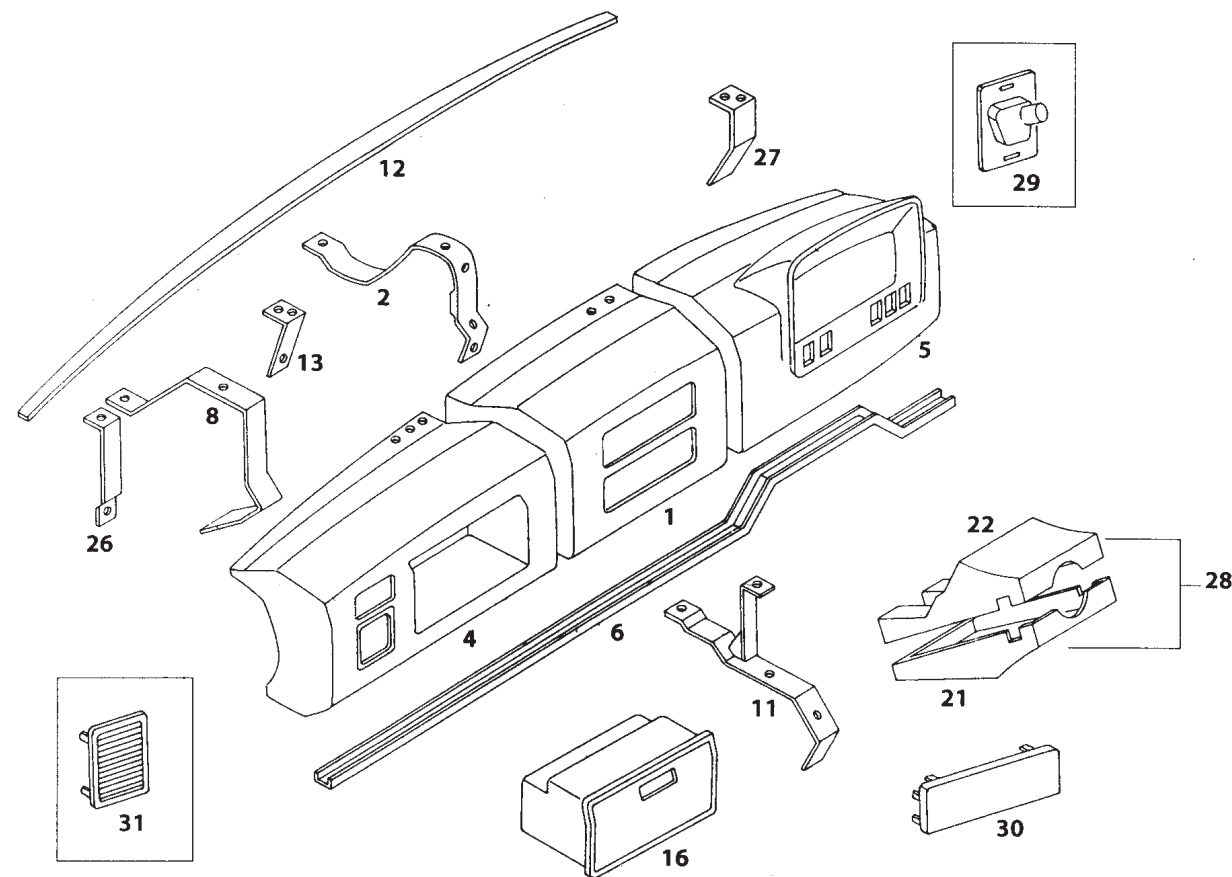


TABLE 68.1
DASHBOARD
GROUP 68

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		DASHBOARD												
1	2641 6890 63 54	Dashboard Centre(Grey Pigmented)		1	1	1	1	1	1					
1	2641 6890 63 22	Dashboard (Centre)								1	1	1	1	
2	2641 6890 01 28	Assy. Reinforcement Middle LH	1											
2	2641 6890 01 29	Assy. Reinforcement Middle RH	1											
4	2641 6890 63 55	Dashboard (Grey Pigmented)-LH		1	1	1	1	1	1					
5	2641 6890 63 56	Dashboard (Grey Pigmented)-RH		1	1	1	1	1	1					
4	2641 6890 63 18	Dashboard LH								1	1	1	1	
5	2641 6890 63 20	Dashboard RH								1	1	1	1	
6	2747 6890 82 05	Reinforcement (Front)		1	1	1	1	1	1					
6	2641 6890 82 11	Reinforcement (Front)								1	1	1	1	
—	2641 6890 01 31	Assy. Reinforcement Inside (Glove Box)	1											
8	2641 6890 01 32	Assy. Reinforcement Outside (Glove Box)	1											
—	2641 6890 01 33	Assy. Reinforcement Complete (Inside)	1											
11	2641 6890 01 34	Assy. Reinforcement (Outside)	1											
12	2641 6890 01 35	Assy. Reinforcement Top	1											
13	2641 6890 01 12	Assy. Bracket (Dashboard Mtg.)	2											
—	2641 6890 01 96	Assy. Bracket (Dashboard Mtg.) LH		1	1	1	1	1	1					
16	2641 6890 01 95	Assy. Glove Box Complete (Grey Pigmented)		1	1	1	1	1	1					
16	2641 6890 01 41	Assy. Glove Box Complete								1	1	1	1	

TABLE 68.1

DASHBOARD

GROUP 68

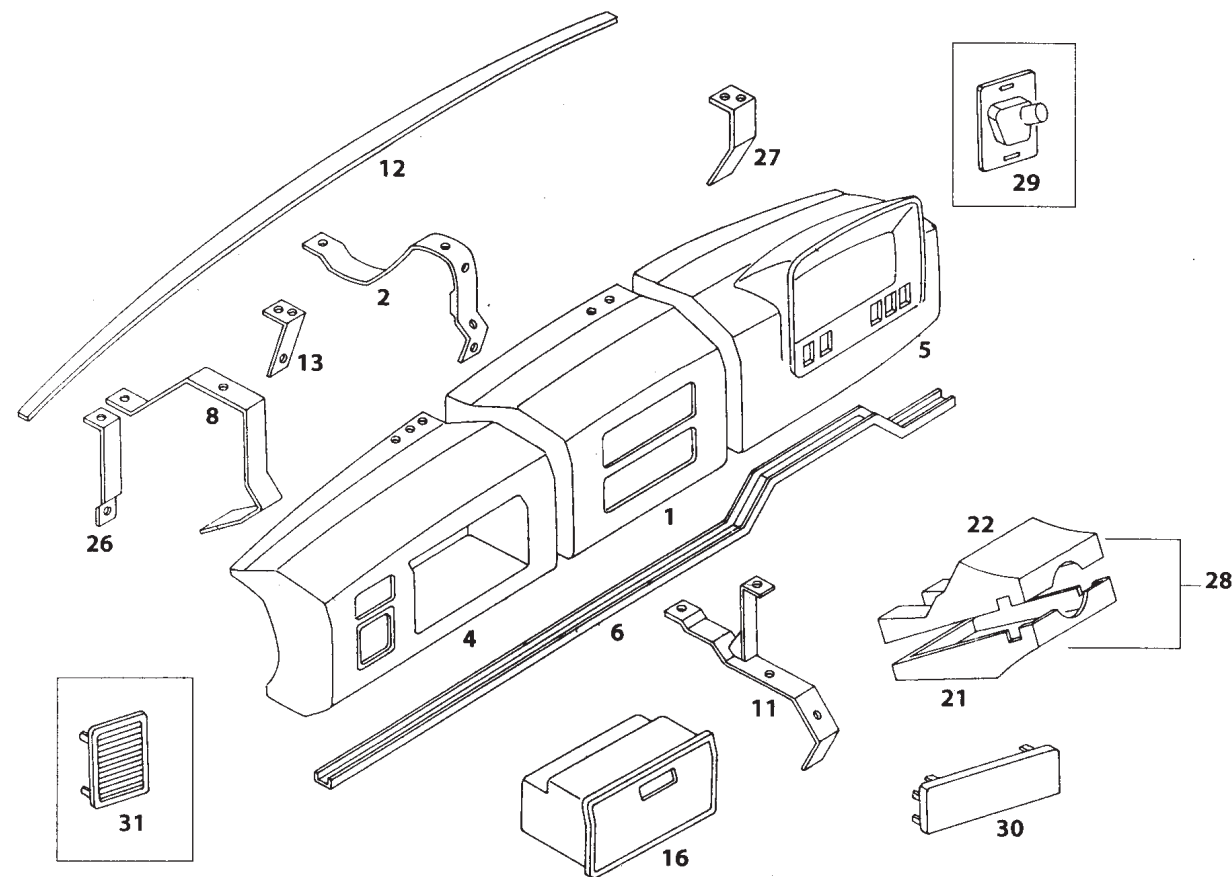


TABLE 68.1
DASHBOARD
GROUP 68

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	2654 6890 01 35	Assy. Glove Box Lock	1											
—	2651 7230 01 59	Assy. Key	3											
—	2641 6890 63 58	Cover Dash Mounting (Grey)		1	1	1	1	1	1					
—	2641 6890 63 26	Cover Dash Mounting								1	1	1	1	
26	2641 6890 01 13	Assy. Bracket LH	1											
27	2641 6890 01 14	Assy. Bracket RH	1											
28	2747 6890 01 01	Kit of Nacelle,Consists Off:		1	1	1	1	1	1					
21		Nacelle Front		1	1	1	1	1	1					
22		Nacelle Rear		1	1	1	1	1	1					
28	2698 6890 01 18	Kit of Nacelle,Consists Off:								1	1	1	1	
21		Nacelle Front								1	1	1	1	
22		Nacelle Rear								1	1	1	1	
—	2641 6890 01 51	Ventilation Nozzle Assy.	4											
—	2641 6890 63 14	Cover (T- Emblem) Dashboard	1											
29	2641 6890 63 31	Speaker Grill	1											
29	2154 6890 63 04	Speaker Grill	1											
30	2651 6891 63 44	Cover Centre for Dashboard (Grey)		1	1	1	1	1	1					
30	2641 6890 63 15	Cover Centre								1	1	1	1	
31	2641 6890 63 57	Cover Clutch Fluid Bottle(Grey)		1	1	1	1	1	1					
31	2641 6890 63 49	Cover Clutch Bottle								1	1	1	1	

TABLE 68.1

DASHBOARD

GROUP 68

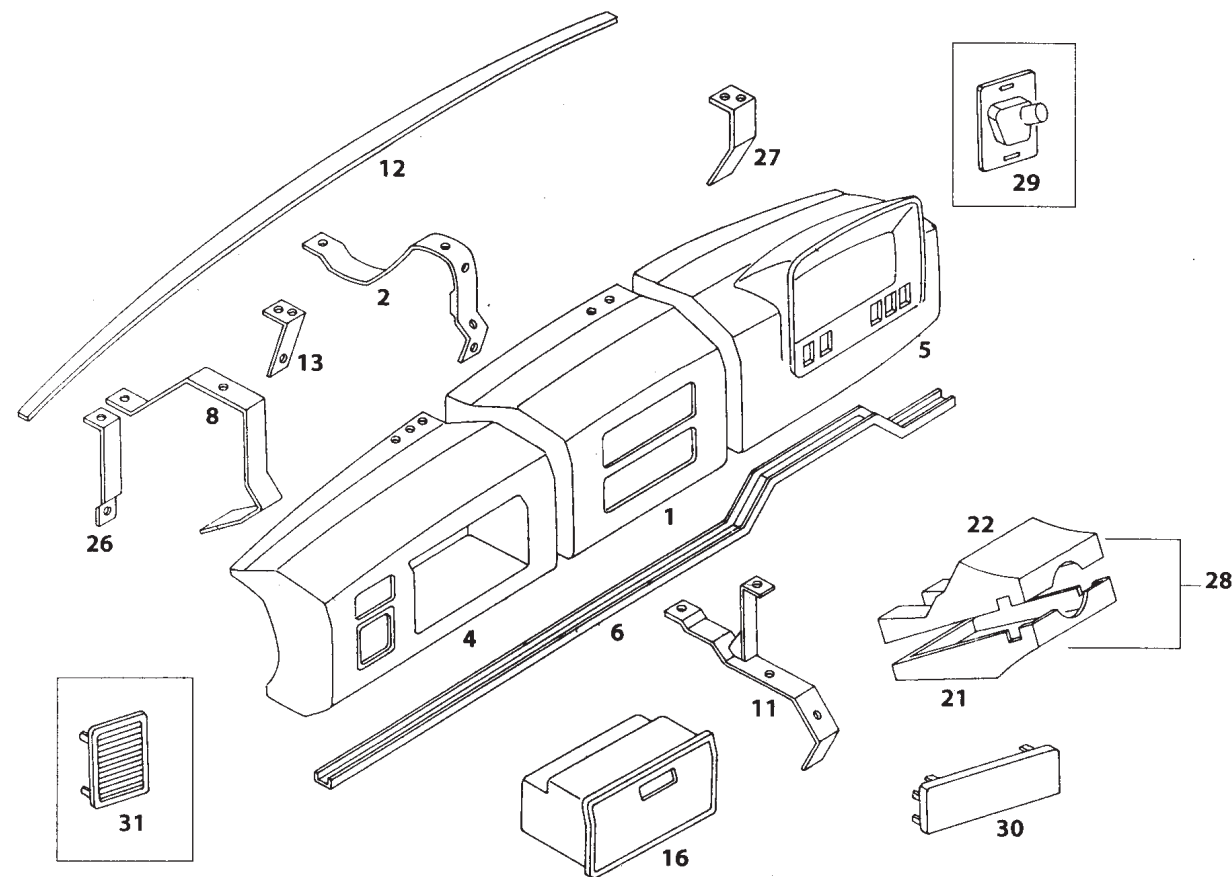


TABLE 68.1

DASHBOARD

GROUP 68

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	2651 6890 63 89	Garnish (for Side Defrost)	2											
—	2651 6890 63 88	Garnish (for Middle Defrost)	1											
—	2641 6890 63 34	Dash Board Cover-RHD		1	1	1	1	1	1					

TABLE 72.1

DOOR

GROUP 72

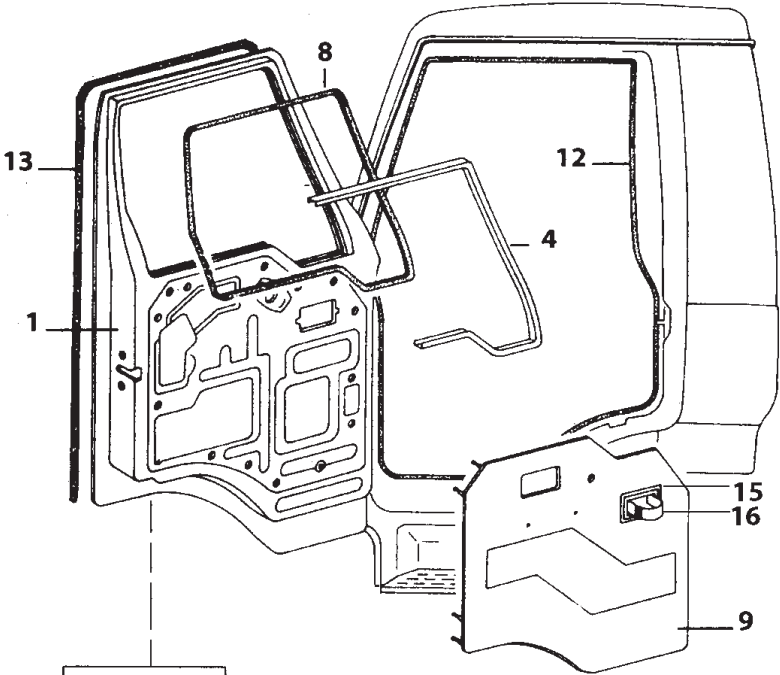
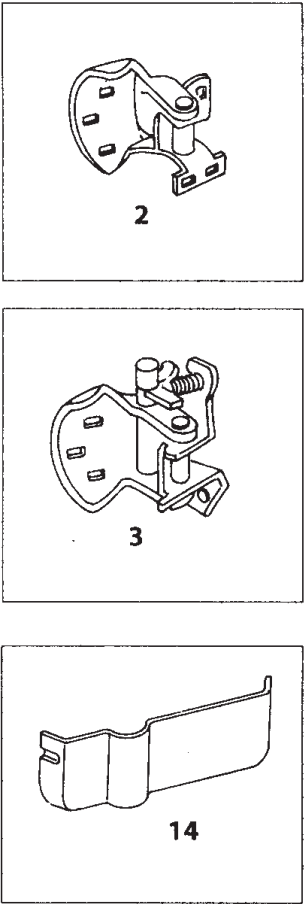


TABLE 72.1
DOOR
GROUP 72

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		DOOR												For Cab Version
1	2641 7220 01 35	Assy. Door Shell LH						1	1	1	1	1	1	
1	2641 7220 01 36	Assy. Door Shell RH						1	1	1	1	1	1	
2	2641 7230 01 11	Assy. Hinge Top LH (Door)						1	1	1	1	1	1	
2	2641 7230 01 12	Assy. Hinge Top RH (Door)						1	1	1	1	1	1	
3	2641 7230 01 18	Assy. Hinge Bottom LH (Door)						1	1	1	1	1	1	
3	2641 7230 01 19	Assy. Hinge Bottom RH (Door)						1	1	1	1	1	1	
4	2641 7220 01 13	Assy. Guide Channel LH						1	1	1	1	1	1	
4	2641 7220 01 14	Assy. Guide Channel RH						1	1	1	1	1	1	
5	2641 7230 01 24	Assy. Dovetail Bottom (Door)						2	2	2	2	2	2	
6	2641 7230 63 03	Dovetail Bottom (Body Side)						2	2	2	2	2	2	
8	2641 7250 25 01	Velvet Channel						2	2	2	2	2	2	
9	2153 7270 01 05	Assy. Padding Door LH								1	1	1	1	
9	2153 7270 01 02	Assy. Padding Door LH						1	1					
9	2153 7270 01 04	Assy. Padding Door RH								1	1	1	1	
9	2153 7270 01 01	Assy. Padding Door RH						1	1					
—	2641 7250 63 07	Weather Strip LH						2	2	2	2	2	2	
—	2641 7250 63 08	Weather Strip RH						2	2	2	2	2	2	
12	2641 7230 01 22	Assy. Sealing Mould LH (Outer)						1	1	1	1	1	1	
13	2641 7230 01 37	Assy. Sealing Inner LH						1	1	1	1	1	1	

TABLE 72.1

DOOR

GROUP 72

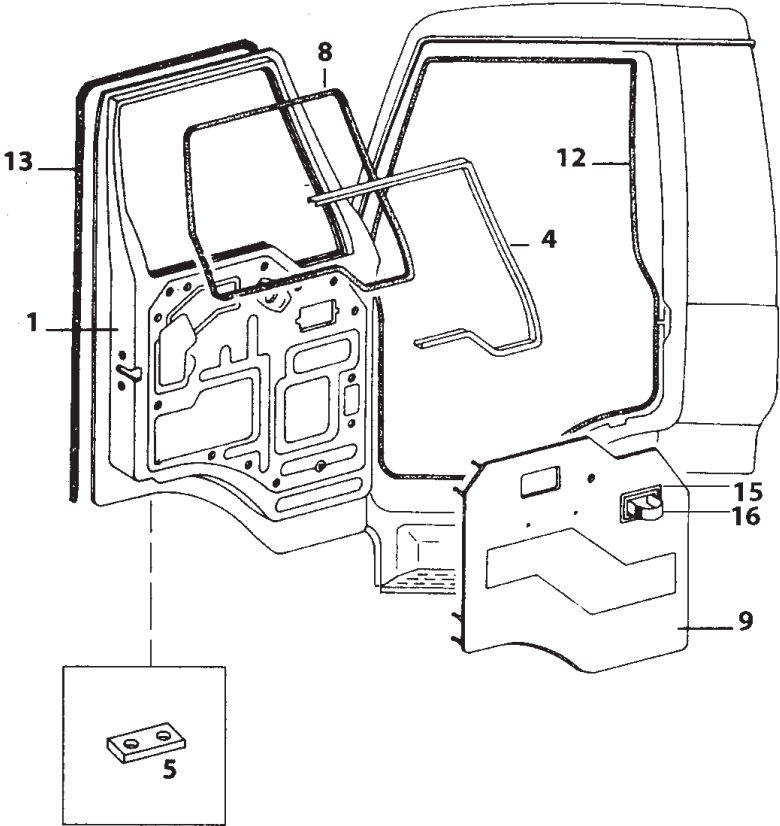
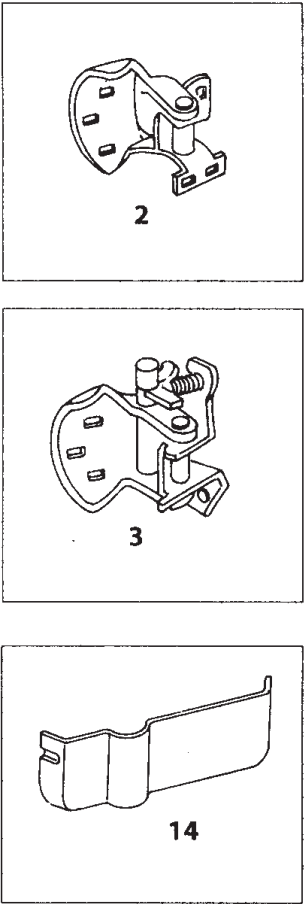


TABLE 72.1
DOOR
GROUP 72

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
13	2641 7230 01 38	Assy. Sealing Inner RH						1	1	1	1	1	1	
14	2654 7270 63 17	Magazine Pocket (Grey) LH						1	1	1	1	1	1	
14	2654 7270 63 18	Magazine Pocket (Grey) RH						1	1	1	1	1	1	
15	2651 7250 63 21	Housing (Ash Tray)						2	2					
16	2654 6890 01 89	Assy.Ash Tray (Black)						2	2					
—	2678 8110 63 05	Reflex Reflector (Front Door)						2	2	2	2	2	2	
—	2654 7270 01 03	Assy. Door Pad Clip						32	32	32	32	32	32	
—	2651 7250 63 16	Grab Handle (Door)						2	2	2	2	2	2	
—	2153 8110 69 01	Grab handle (Door Post) LH								1	1	1	1	
—	2153 8110 69 02	Grab handle (Door Post) RH								1	1	1	1	

TABLE 72.2

DOOR LOCK

GROUP 72

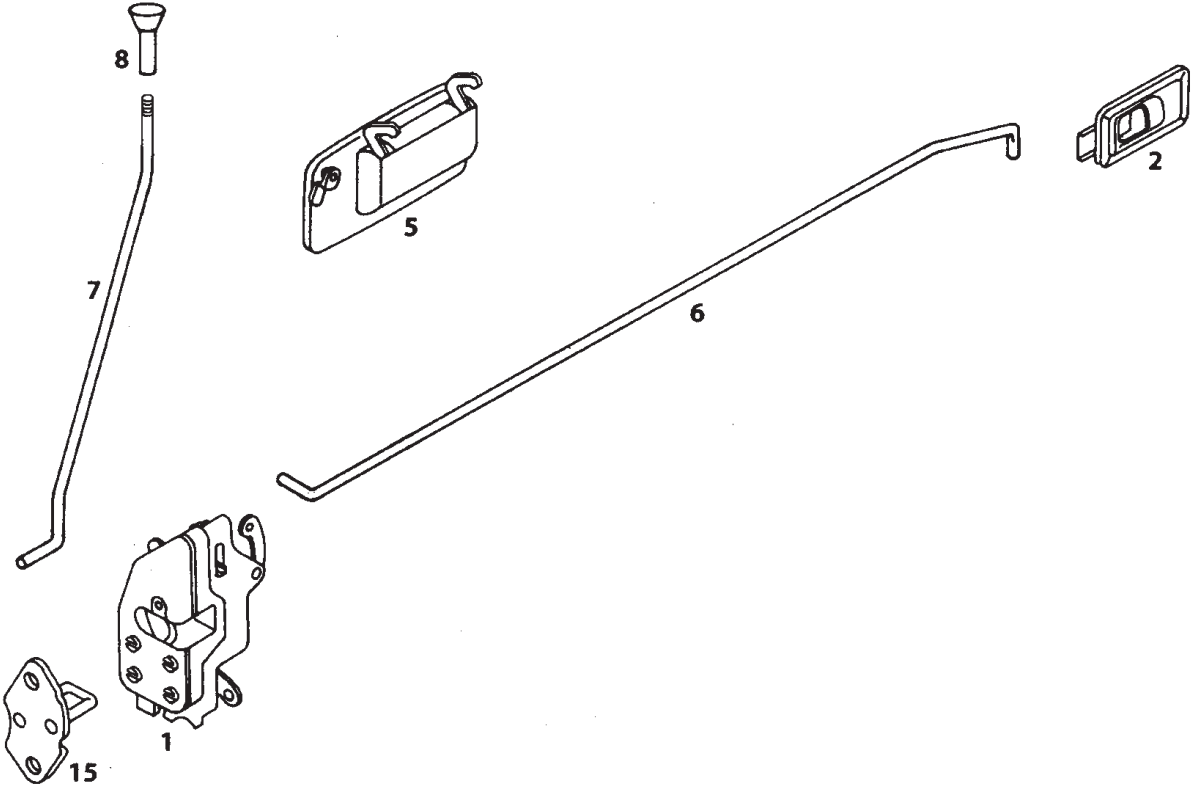


TABLE 72.2
DOOR LOCK
GROUP 72

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		DOOR LOCK												
1	2654 7231 01 20	Assy Door Lock Complete LH						1	1	1	1	1	1	
1	2654 7231 01 19	Assy Door Lock Complete RH						1	1	1	1	1	1	
—	2654 7230 63 23	Snap Connector LH						2	2	2	2	2	2	
—	2654 7230 63 35	Snap Connector RH						2	2	2	2	2	2	
2	2658 7230 01 27	Assy. Inner Handle						2	2	2	2	2	2	
5	2654 7230 01 24	Assy. Outer Handle LH						1	1	1	1	1	1	
5	2654 7230 01 25	Assy. Outer Handle RH						1	1	1	1	1	1	
6	2641 7230 60 04	Link LH (Inner Handle)						1	1	1	1	1	1	
6	2641 7230 60 05	Link RH (Inner Handle)						1	1	1	1	1	1	
—	2641 7230 60 03	Link (Outer Handle)						2	2	2	2	2	2	
—	2641 7230 60 01	Lever LH (Lock Cylinder to Latch)						1	1	1	1	1	1	
—	2641 7230 60 02	Lever RH (Lock Cylinder to Latch)						1	1	1	1	1	1	
7	2641 7230 60 06	Link (Pop-up Knob) LH						1	1	1	1	1	1	
7	2641 7230 60 07	Link (Pop-up Knob) RH						1	1	1	1	1	1	
8	2641 7230 63 02	Knob (Inner Lock)						2	2	2	2	2	2	
15	2654 7230 02 12	Assy. Striker (Door Lock)						2	2	2	2	2	2	
—	2641 7230 01 39	Kit for Locks-Cab Version- Consisting of :												
		Assy. Outer Door Handle LH						1	1	1	1	1	1	
		Assy. Outer Door Handle RH						1	1	1	1	1	1	

TABLE 72.2

DOOR LOCK

GROUP 72

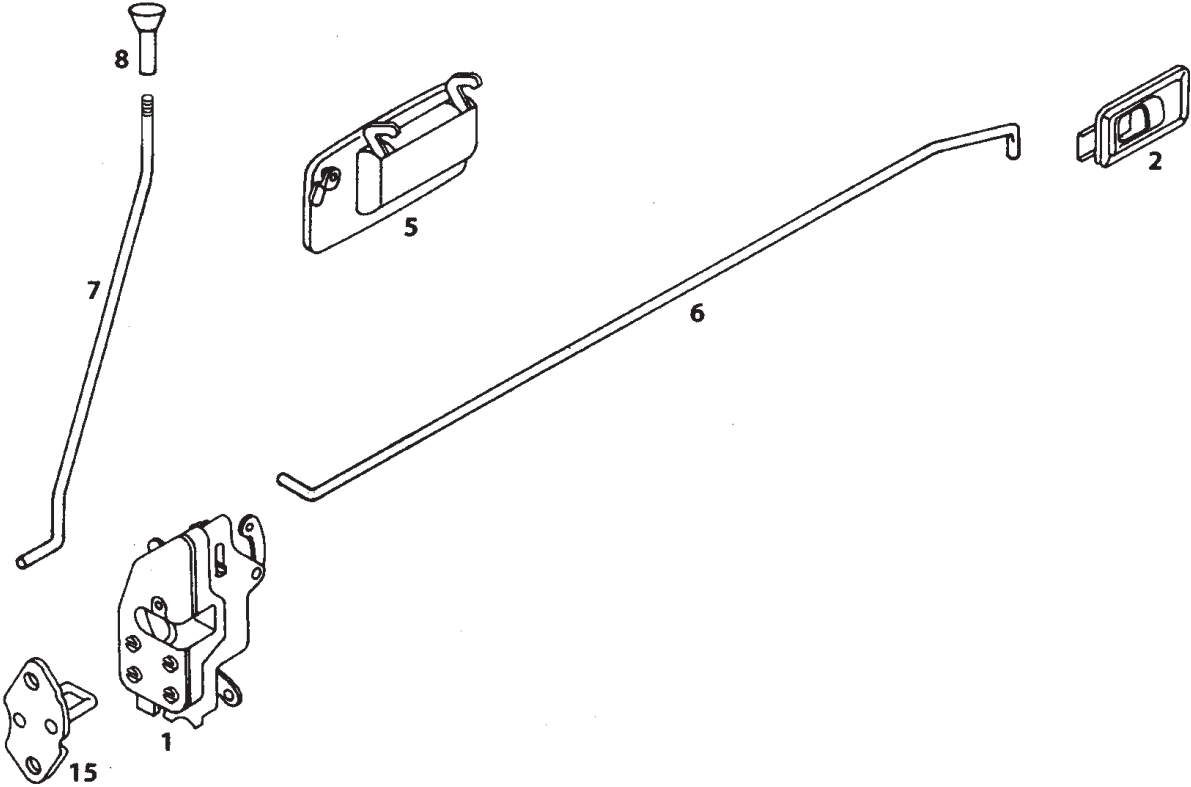


TABLE 72.2

DOOR LOCK

GROUP 72

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	2651 6890 01 85	Assy. Key						3	3	3	3	3	3	
		Assy. Glove Box Lock						1	1	1	1	1	1	
		Steering Lock Cum Ignition Switch						1	1	1	1	1	1	
		Kit for Locks-Cowl Version- Consisting of :												
		Glove Box Lock						1	1	1	1	1	1	
		Assy. Key						3	3	3	3	3	3	

TABLE 72.3

WINDING REGULATOR AND GLASS

GROUP 72

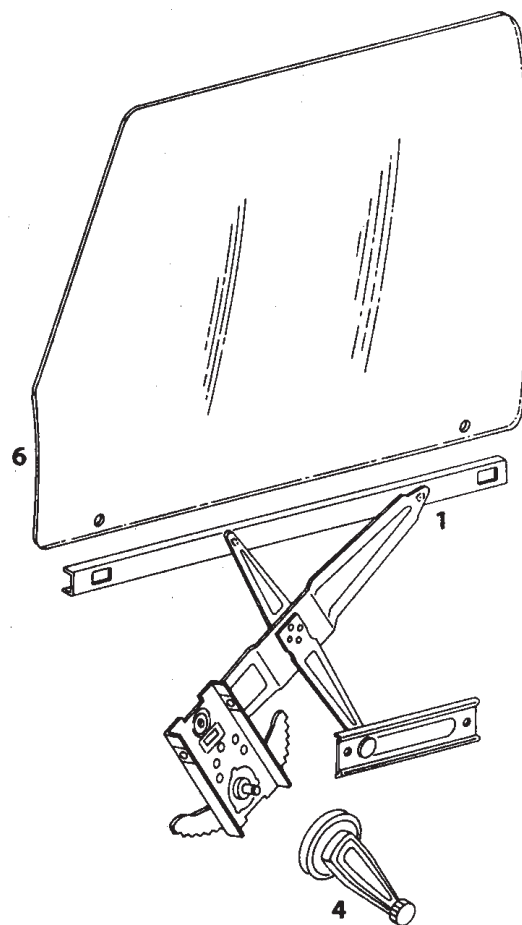


TABLE 72.3

WINDING REGULATOR AND GLASS

GROUP 72

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		WINDING REGULATOR AND GLASS												Cab Version
1	2641 7250 01 01	Assy. Winding Regulator LH						1	1	1	1	1	1	
1	2641 7250 01 02	Assy. Winding Regulator RH						1	1	1	1	1	1	
—	2641 7250 63 03	Holder (Regulating Glass)						4	4	4	4	4	4	
—	2641 7250 63 01	Spacer (Regulating Handle)						2	2	2	2	2	2	
4	2654 7230 01 27	Assy. Handle (Winding Regulator)						2	2	2	2	2	2	
6	2747 7250 23 01	Regulator Glass LH						1	1					
6	2641 7250 23 01	Regulator Glass LH								1	1	1	1	
6	2747 7250 23 02	Regulator Glass RH						1	1					
6	2641 7250 23 02	Regulator Glass RH								1	1	1	1	

TABLE 75.1

CENTRE FLAP

GROUP 75

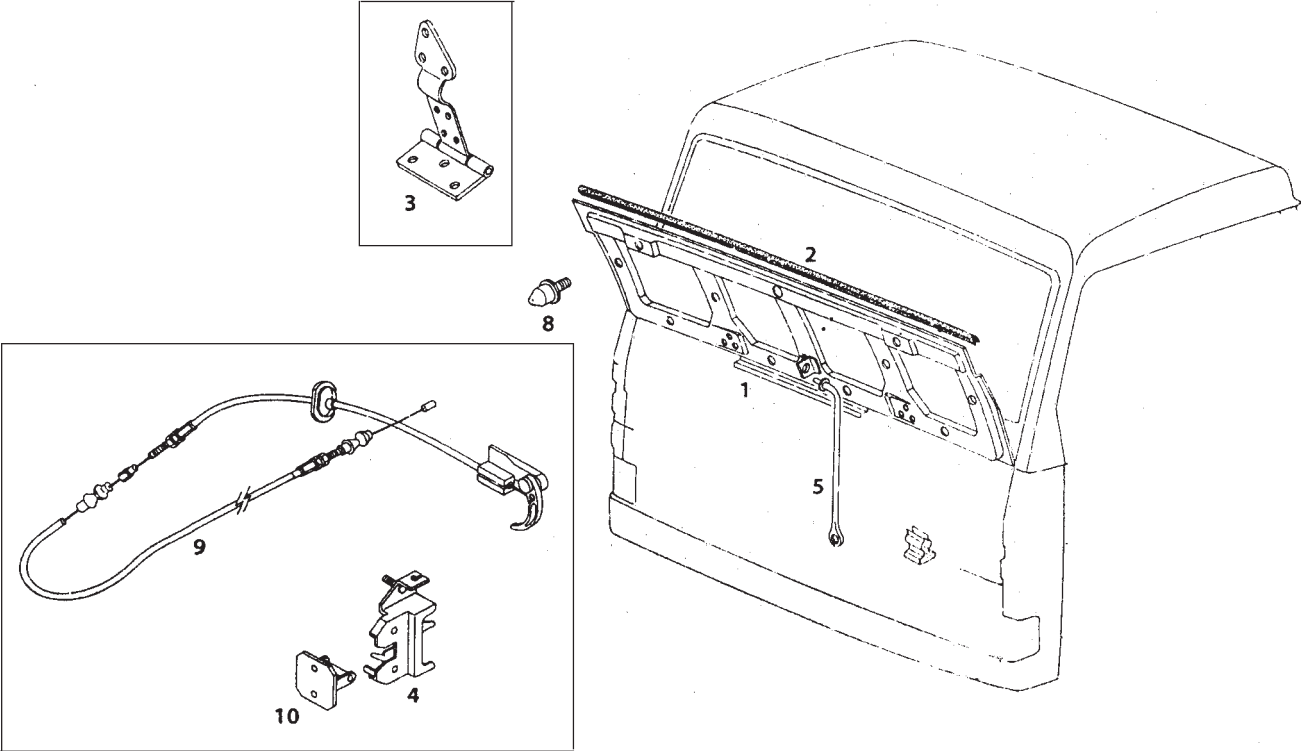


TABLE 75.1

CENTRE FLAP

GROUP 75

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		CENTRE FLAP												
1	2673 7510 01 01	Assy. Centre Flap	1											
2	2641 8880 63 01	Beading (Front Panel)	1											
3	2641 7520 01 16	Assy. Hinge (Centre Flap)	2											
4	2641 7520 01 07	Assy. Lock (Centre Flap)	2											
5	2641 7520 01 19	Assy. Stay Rod	1											
8	2651 8870 01 13	Assy. Rubber Buffer	2											
9	2641 7520 01 12	Assy. Release Cable Complt. (Centre Flap)	1											
10	2641 7520 01 22	Assy. Striker (Centre Flap)	2											
—	2651 8870 42 02	Spring Clamp	6											
—	2641 8110 63 23	Bottom Beading (Centre Flap)	1											

TABLE 81.1

INTERNAL AND EXTERNAL FITMENTS

GROUP 81

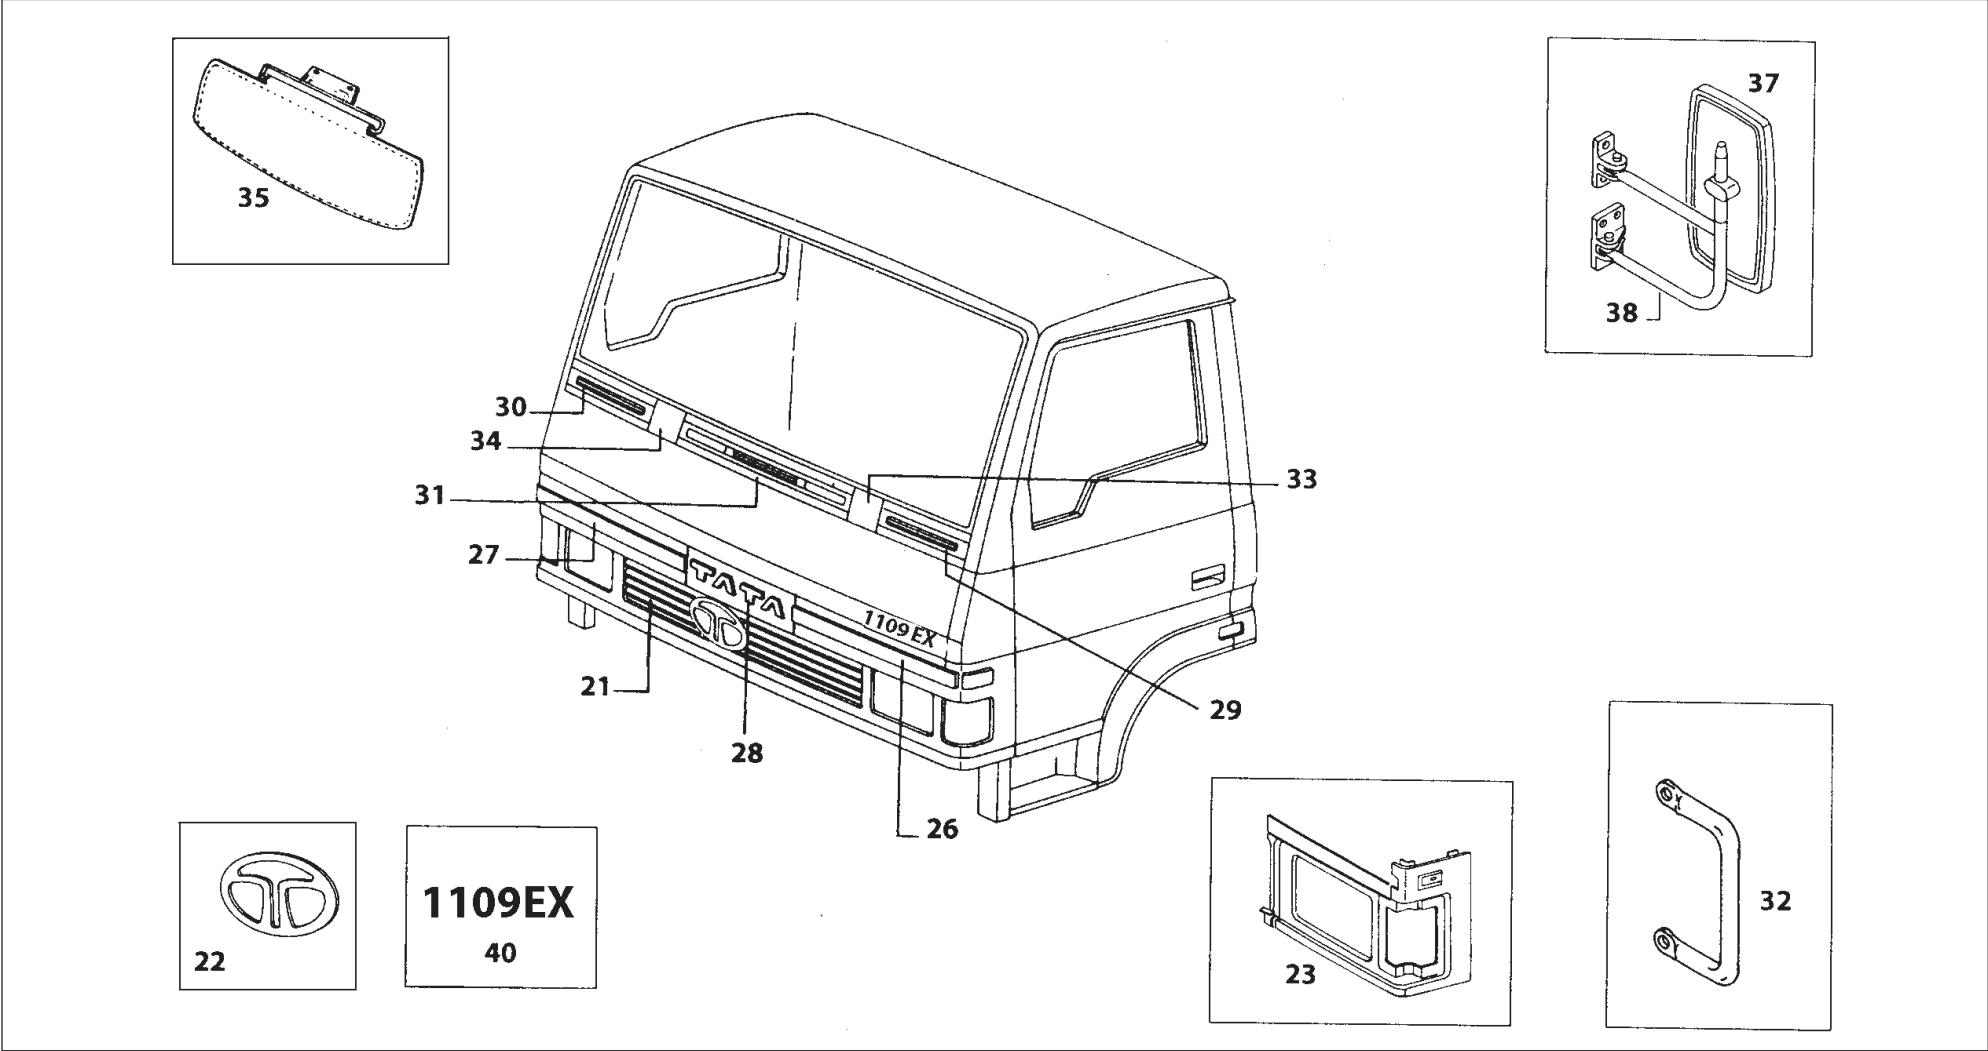


TABLE 81.1
INTERNAL AND EXTERNAL FITMENTS
GROUP 81

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		INTERNAL AND EXTERNAL FITMENTS												
21	2641 8190 63 02	Centre Grill (Front)	1											
22	2641 8190 01 27	'T' Emblem Oval Stylised	1											
23	2641 8190 01 01	Assy. Bazzle RH	1											
23	2641 8190 01 02	Assy. Bazzle LH	1											
—	2641 8190 01 14	Assy. Cover (Bazzle) LH	1											
—	2641 8190 01 15	Assy. Cover (Bazzle) RH	1											
—	2641 8190 33 01	Mounting Bracket (Bazzle)	1											
—	2641 8190 33 02	Mounting Bracket (Bazzle)	1											
26	2641 8190 01 11	Assy. Cover Side LH	1											
27	2641 8190 01 12	Assy. Cover Side RH	1											
28	2641 8190 01 13	Assy. Cover Centre	1											
29	2641 8190 63 06	Grill LH	1											
30	2641 8190 63 08	Grill RH	1											
31	2641 8190 63 09	Grill Middle	1											
32	2747 8150 69 01	Grab Handle	2					2	2	2	2	2	2	For Cab Version
32	2576 8150 01 07	Assy Grab Handle (Front Face)		2	2	2	2	2	2					For Cowl version
32	2747 8110 01 07	Assy Grab Handle (Rear Inside Cab)						2	2	2	2	2	2	For Cab Version
32	2651 8110 01 11	Assy. Grab Handle		2	2	2	2	2	2					For Cowl version
—	2576 8150 63 02	Rubber Pad (Grab Handle)		4	4	4	4	4	4					For Cowl version

TABLE 81.1

INTERNAL AND EXTERNAL FITMENTS

GROUP 81

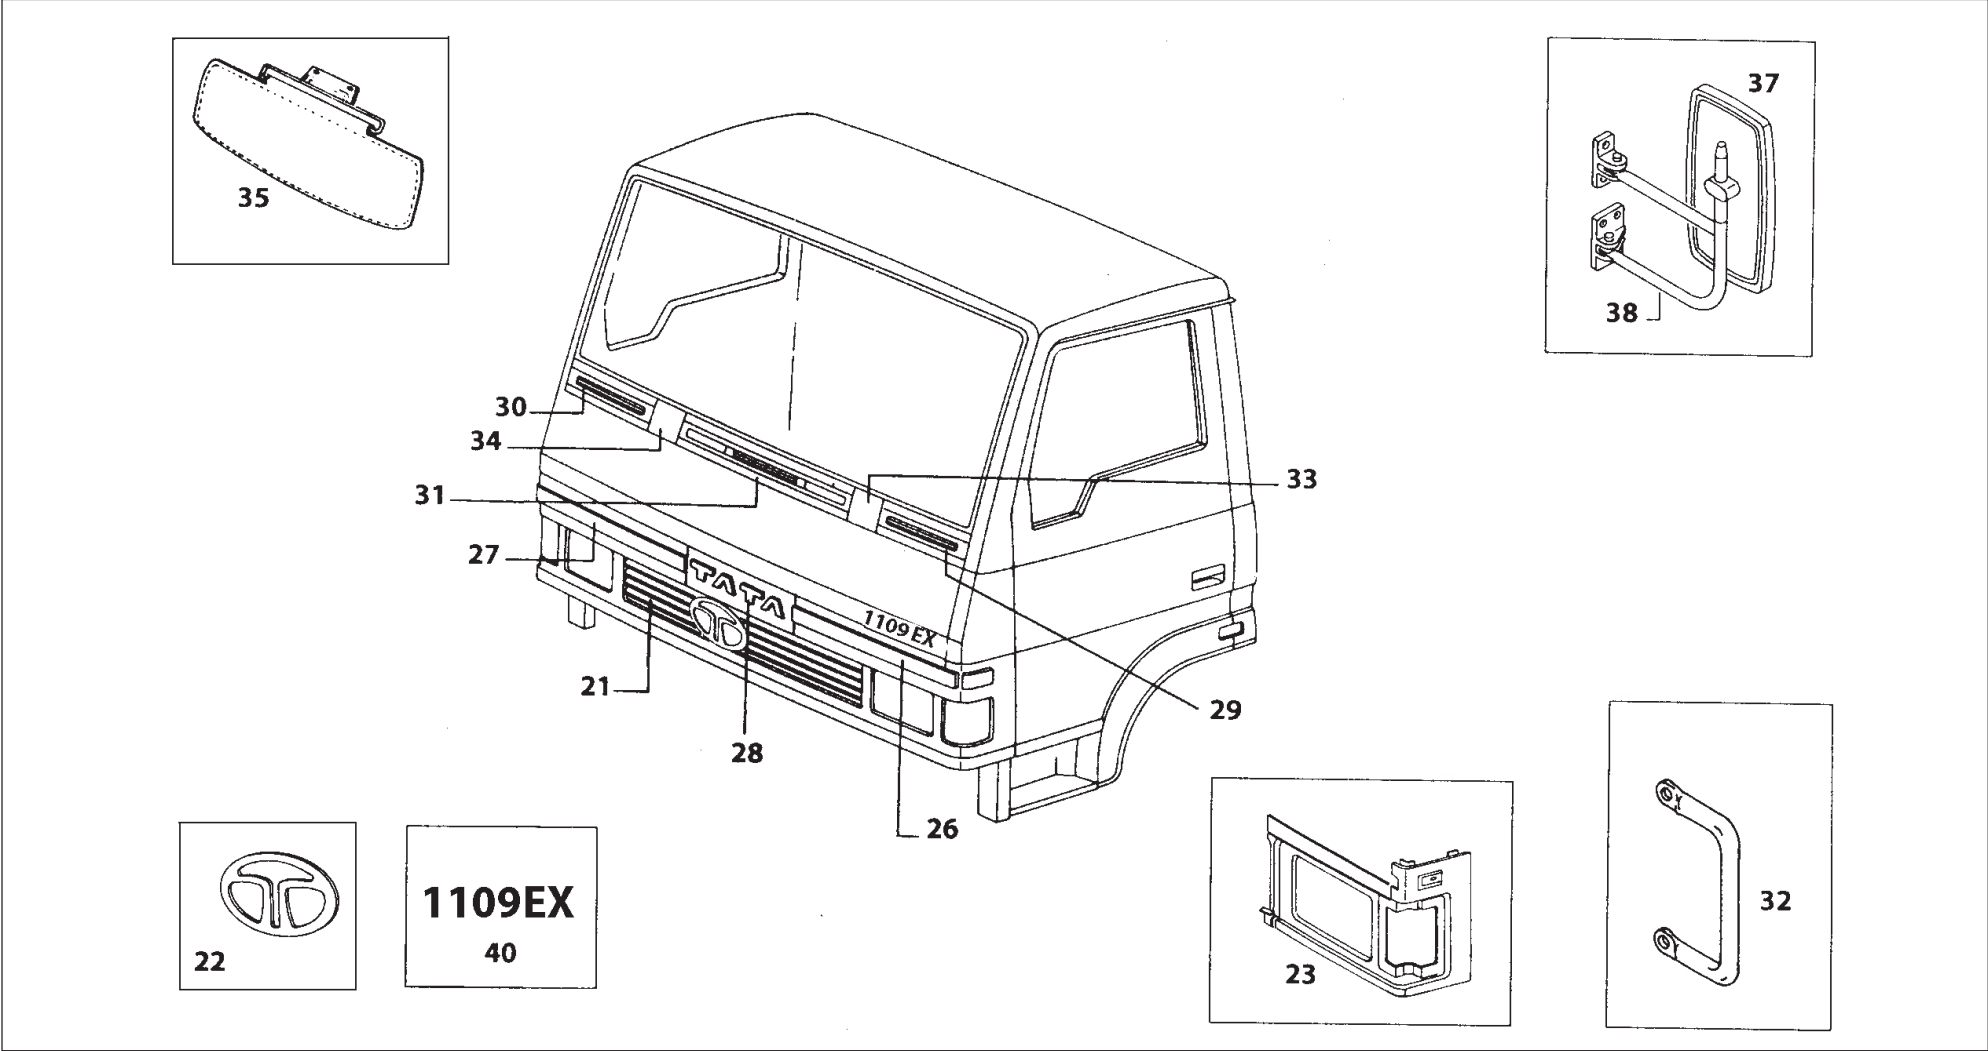


TABLE 81.1
INTERNAL AND EXTERNAL FITMENTS
GROUP 81

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
33	2641 8110 01 04	Assy. Cover LH (Centre Flap Hinge)						1	1	1	1	1	1	For Cab Version
33	2641 8110 01 44	Assy. Cover LH (Centre Flap Hinge)		1	1	1	1	1	1					For Cowl version
34	2641 8110 01 05	Assy. Cover RH (Centre Flap Hinge)						1	1	1	1	1	1	For Cab Version
34	2641 8110 01 45	Assy. Cover RH (Centre Flap Hinge)		1	1	1	1	1	1					For Cowl version
35	2641 8110 01 11	Assy. Sunvisor RH						1	1	1	1	1	1	For Cab Version
35	2641 8110 01 12	Assy. Sunvisor LH						1	1	1	1	1	1	For Cab Version
37	2576 8110 01 53	Rear View Mirror Outside LH	1											
37	2576 8110 01 52	Rear View Mirror Outside RH	1											
37	2592 8110 01 20	Rear View Mirror Outside RH				1	1	1						For w/o Face Vehicle
38	2153 8110 01 99	Assy. Frame Complete RVM	1											
—	2641 8110 63 20	Cap For Rear View Mirror	2											
—	2641 8110 77 03	Rubber Washer (RVM)	4											
—	2641 8110 63 30	Rubber Pad (Bracket Top RVM)	2											
—	2641 8110 63 31	Rubber Pad (Bracket Bottom RVM)	2											
—	2641 8110 63 32	Sleeve (For Frame RVM)	2											
—	2641 8110 38 01	Bracket Top LH	1											
—	2641 8110 38 02	Bracket Top RH	1											
—	2641 8110 38 03	Bracket Bottom LH	1											
—	2641 8110 38 04	Bracket Bottom RH	1											
—	2658 8110 01 19	Assy. Inner Handle (Front w/o Hanger)						1	1	1	1	1	1	For Cab Version

TABLE 81.1

INTERNAL AND EXTERNAL FITMENTS

GROUP 81

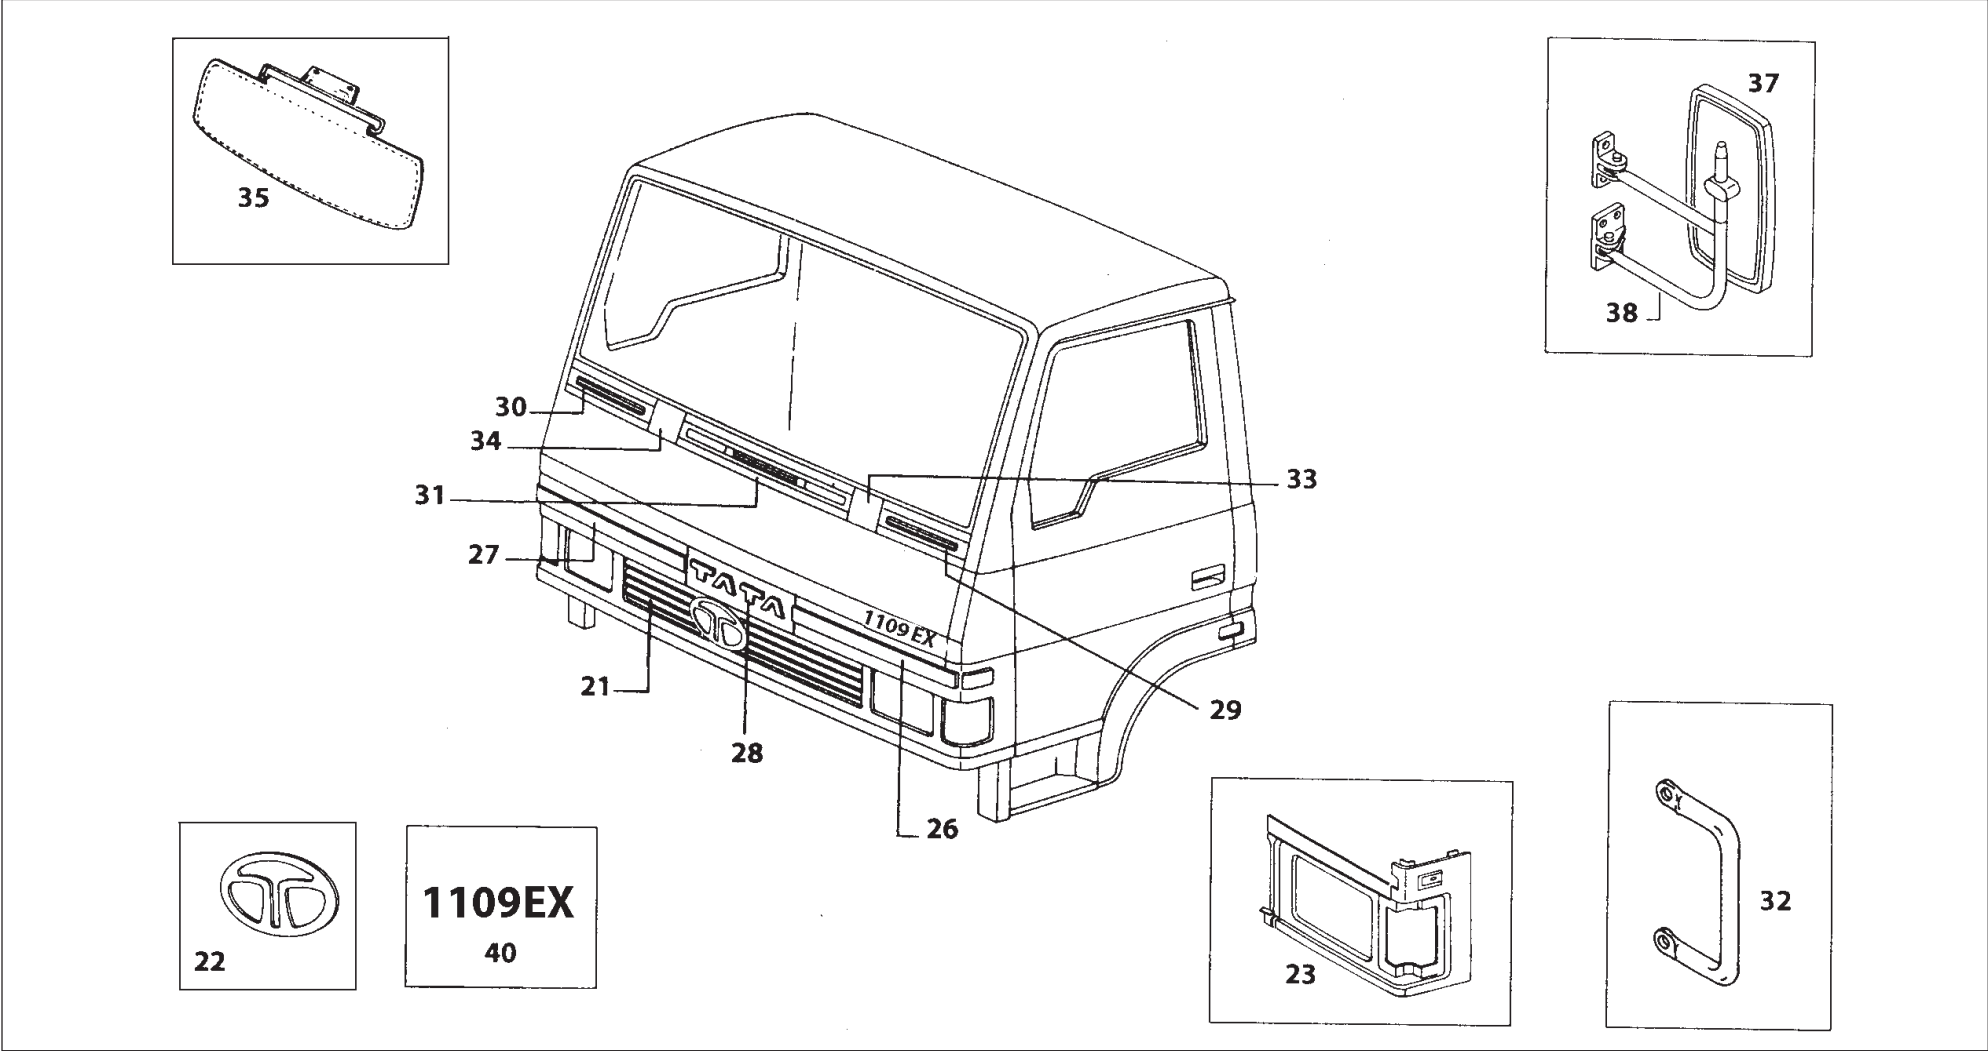


TABLE 81.1
INTERNAL AND EXTERNAL FITMENTS
GROUP 81

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	2641 8110 01 08	Assy. Lid (Fuel Priming)						1	1	1	1	1	1	For Cab Version
—	2673 8110 01 05	Assy. Lid		1	1	1	1	1	1					For Cowl Version
—	2651 8870 01 23	Assy. Toggle Clamp (Engine Hood)		4	4	4	4	4	4					For Cowl Version
—	2641 8110 20 01	Insulation (Lid)						1	1	1	1	1	1	For Cab Version
—	2641 8110 63 04	Sealing (Lid)						1	1	1	1	1	1	For Cab Version
—	2641 8110 53 04	Packing (Lid)						1	1	1	1	1	1	For Cab Version
—	2673 8110 53 01	Insulation (Lid)		1	1	1	1	1	1					For Cowl Version
—	2673 8110 63 01	Sealing (Lid)		1	1	1	1	1	1					For Cowl Version
—	2673 8110 53 03	Packing (Lid)		1	1	1	1	1	1					For Cowl Version
—	2651 6640 01 05	Assy. Knob						1	1	1	1	1	1	For Cab Version
—	2153 8180 01 01	Assy. Mascot ' 1109'		1	1	1	1			1	1	1	1	
40	2153 8180 01 03	Assy. ' 1109 EX TURBO' Mascot						1	1					
—	2659 8180 01 05	Assy. Turbo Mascot	1											
—	2698 8180 01 30	Sticker. 'TURBO INTERCOOLER'						2	2					
—	2698 8111 63 26	Sticker. 'Bharat Stage II'						2	2					
—	2641 8110 01 78	Assy. Head Lamp Dome RH	1											
—	2641 8110 01 81	Assy. Head Lamp Dome LH	1											

TABLE 82.1

WIPER MOTOR AND LINKAGES

GROUP 82

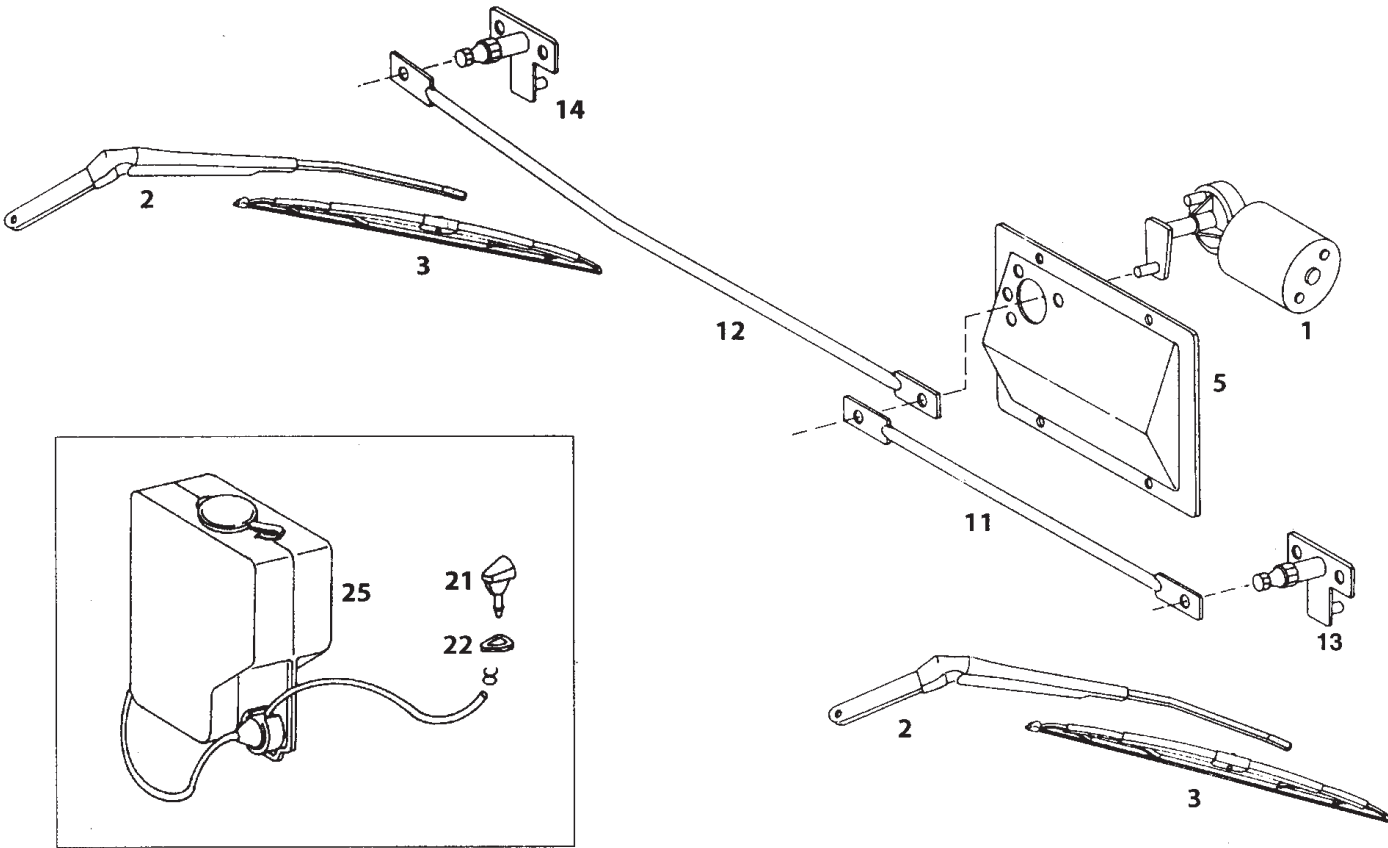


TABLE 82.1
WIPER MOTOR AND LINKAGES
GROUP 82

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		WIPER MOTOR AND LINKAGES												
1	2641 8240 99 17	17W-Hi- Power Wiper Motor	1											
2	2641 8240 01 09	Assy.Wiper Arm	2											
3	2641 8240 99 04	Assy.Wiper Blade	2											
—	2641 8240 99 06	Hex. Screw	2											
5	2641 8240 01 23	Assy.Bracket (Wiper Motor Mtg.)	1											
—	2641 8240 75 01	Gasket (Bracket to Fire Wall)	1											
—	2641 8240 01 24	Repair Kit for Accesories Wiper Consisting of :	1											
11		Link II	1											
12		Assy. Link I	1											
13		Spindle Unit II	1											
—		Wiper Motor Connector	1											
—		Captive Screw	4											
—		Cap Nut 13 A/F	1											
—		Nut (24 A/F)	2											
14		Spindle Unit I	1											
—	2651 8240 01 69	Kit for Elec.Wind Screen Washer Unit	1											
		Consisting of :												
—		Assy.Twin Self Nozzle	1											
21		Twin Set Nozzle	1											

TABLE 82.1

WIPER MOTOR AND LINKAGES

GROUP 82

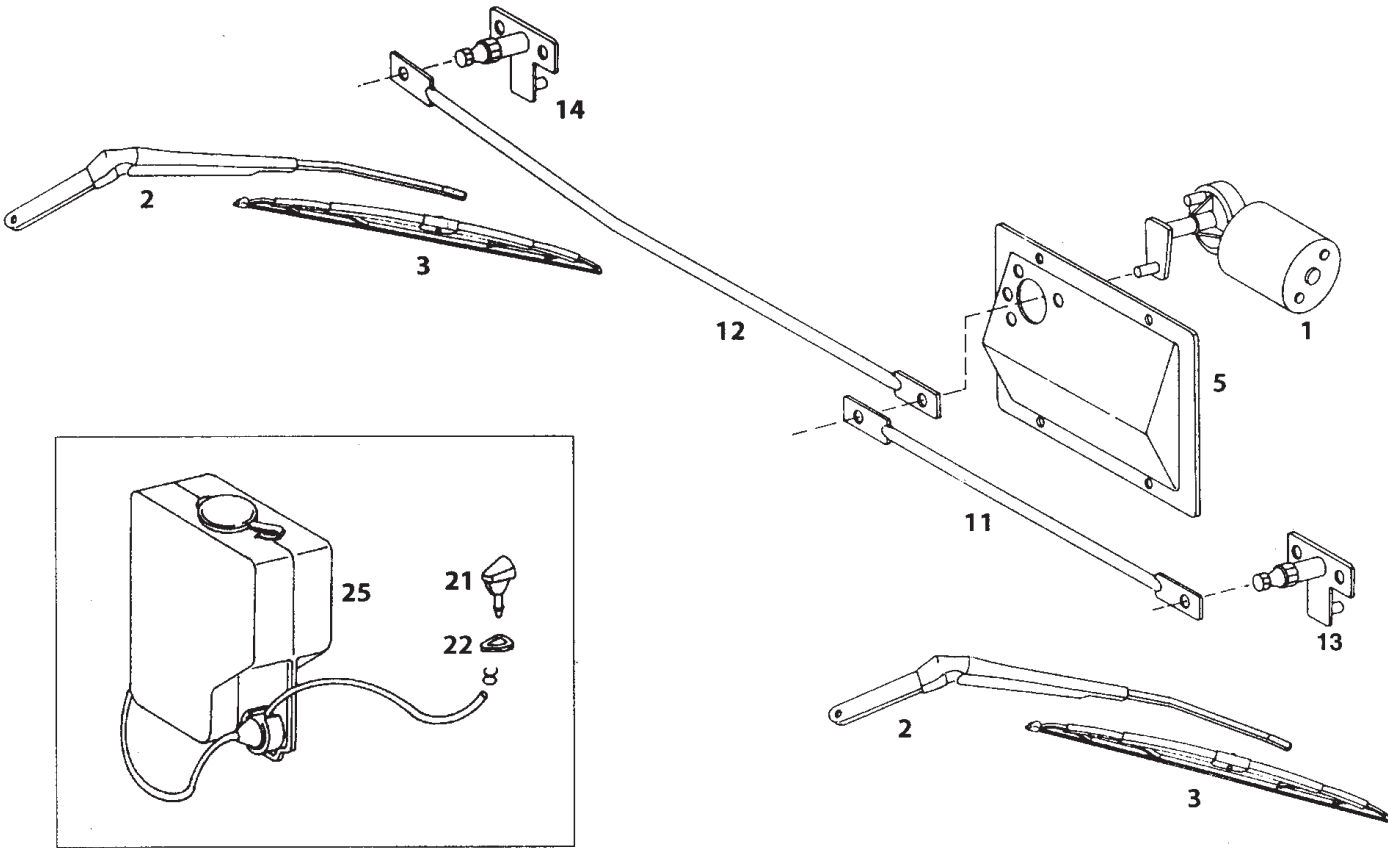


TABLE 82.1

WIPER MOTOR AND LINKAGES

GROUP 82

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
22		Nozzle Adaptor	1											
—		Clip	1											
—		Tube (1600 mm Long)	1											
25		Tank	1											
—		Omega Clip	1											
—		Pump	1											

TABLE 83.1

VENTILATION

GROUP 83

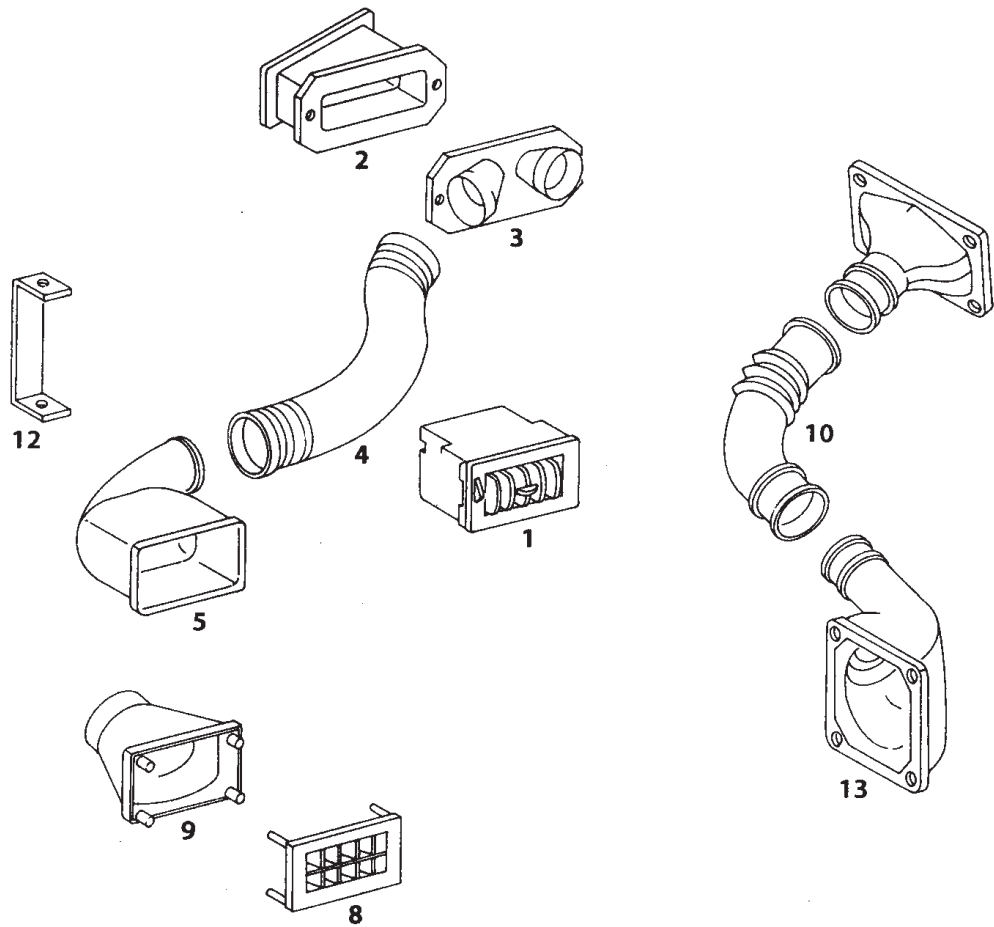


TABLE 83.1
VENTILATION
GROUP 83

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		VENTILATION												
1	2641 6890 01 51	Assy.Ventilation Nozzle	4											
2	2641 8310 01 03	Assy.Duct Outer LH	1											
2	2641 8310 01 04	Assy.Duct Outer RH	1											
3	2641 8310 63 08	Duct Inner (Wind Shield Bottom)	2											
4	2641 8310 63 11	Hose (Ventilation)	8											
5	2641 8310 63 20	Elbow Duct LH	2											
5	2641 8310 63 21	Elbow Duct RH	2											
8	2641 8310 01 06	Assy.Ventilation Grill (Leg Room)	2											
9	2641 8310 63 23	Top Duct (Leg Room Ventilation)	2											
10	2641 8310 63 19	Bellow (Leg Room Ventilation)	2											
12	2641 8310 01 28	Assy.Bracket (Elbow Duct Mtg.)	4											
13	2641 8310 63 03	Bottom Duct (Leg Room Ventilation)	2											

TABLE 88.1

BUMPER

GROUP 88

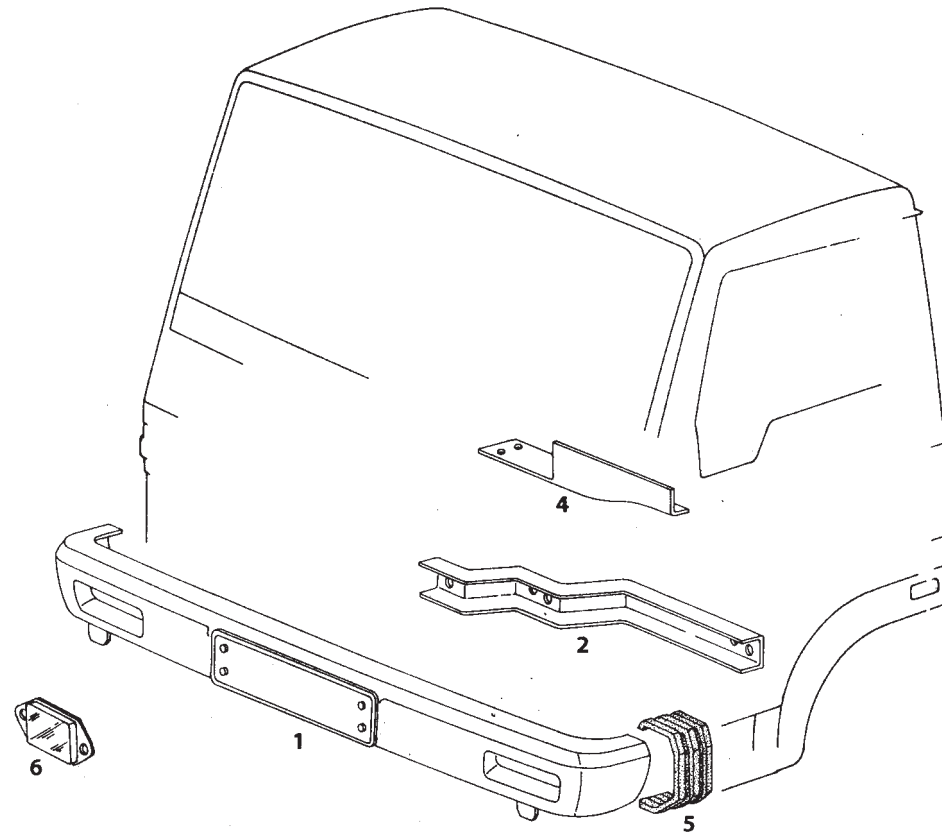


TABLE 88.1
BUMPER
GROUP 88

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		BUMPER												
1	2093 8850 01 03	Assy. Bumper Complete			1	1	1	1	1	1	1	1	1	For Cab Version & w/o Face Vehicle
1	2641 8850 01 08	Assy. Bumper Complete		1	1	1	1	1	1					For Cowl Version
2	2064 8850 01 02	Assy. Support LH (Bumper Mtg)			1	1	1	1	1	1	1	1	1	For Cab Version & w/o Face Vehicle
2	2641 8850 01 01	Assy. Support LH (Bumper Mtg.)		1	1	1	1	1	1					For Cowl Version
2	2064 8850 01 03	Assy. Support RH (Bumper Mtg.)			1	1	1	1	1	1	1	1	1	For Cab Version & w/o Face Vehicle
2	2641 8850 01 02	Assy. Support RH (Bumper Mtg.)		1	1	1	1	1	1					For Cowl Version
4	2641 8850 01 10	Assy Bracket LH [Bumper Mtg] R/Pwr Stg		1	1	1	1	1	1					For Cowl Version
4	2641 8850 01 11	Assy Bracket RH [Bumper Mtg]R/Pwr Stg		1	1	1	1	1	1					For Cowl Version
5	2641 8850 01 04	Assy. End Cover LH		1	1	1	1	1	1					Optional;Cowl version
5	2641 8850 01 18	Assy. End Cover LH		1	1	1	1	1	1					Optional;Cowl version
5	2641 8850 01 05	Assy. End Cover RH		1	1	1	1	1	1					Optional;Cowl version
5	2641 8850 01 19	Assy. End Cover RH		1	1	1	1	1	1					Optional;Cowl version
6	2573 5441 01 37	Assy. Reflex Reflector						2	2	2	2	2	2	For Cab Version & w/o Face Vehicle
—	2161 8820 01 04	Assy.Bracket Head Lamp & Blinker Mtg. L.H.			1	1	1							For w/o Face vehicle
—	2161 8820 01 05	Assy.Bracket Head Lamp & Blinker Mtg. R.H.			1	1	1							For w/o Face vehicle

TABLE 89.1

CAB MOUNTING (FRONT)

GROUP 89

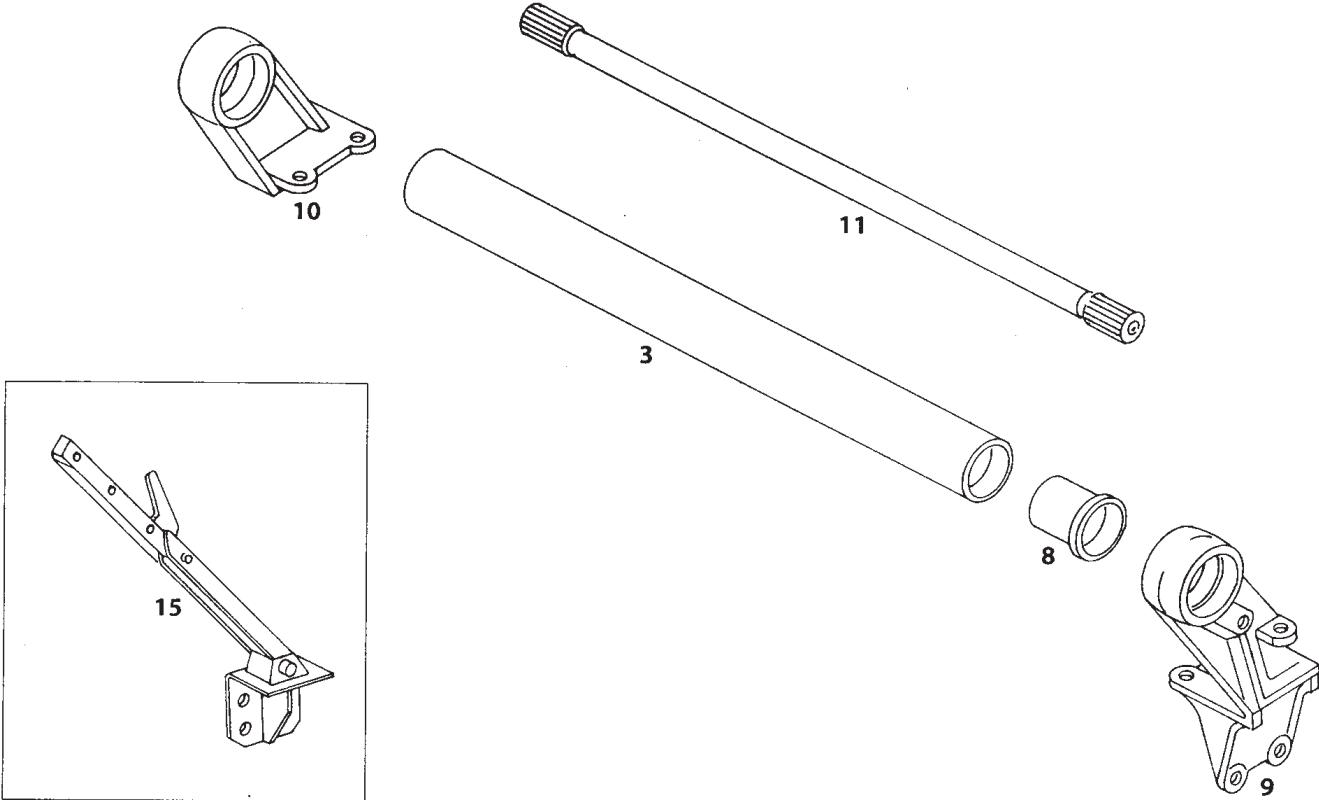


TABLE 89.1
CAB MOUNTING (FRONT)
GROUP 89

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		CAB MOUNING (FRONT)												For Cab Version
3	2064 8910 01 18	Assy. Cross Tube (Torsion Bar) With Mtg.Bracket LH & RH						1	1	1	1	1	1	
—	2641 8910 34 03	Serrated Bush RH (Cross Tube)						1	1	1	1	1	1	
—	2641 8910 34 04	Spacer Bush						2	2	2	2	2	2	
8	2641 8910 01 54	Assy. Rubber Bush (Front Mtg.)						2	2	2	2	2	2	
9	2153 8910 01 01	Mounting Bracket Bottom LH						1	1	1	1	1	1	
10	2158 8910 01 08	Assy Mounting Bracket Bottom RH Front(Cab)						1	1	1	1	1	1	
10	2064 8910 01 06	Mounting Bracket Bottom RH								1				
11	2641 8910 79 03	Torsion Bar						1	1	1	1	1	1	
—	2641 8910 37 03	Adjuster RH (Torsion Bar)						1	1	1	1	1	1	
—	2641 8910 80 04	Special Bolt (For Adjuster)						1	1	1	1	1	1	
—	2641 8910 01 55	Assy.Nut Plate (Front Mtg.)						2	2	2	2	2	2	
15	2064 8910 01 09	Assy. Stay Complete						1	1	1	1	1	1	For P/Strg BS-I Veh.

TABLE 89.2

CAB MOUNTING (REAR)

GROUP 89

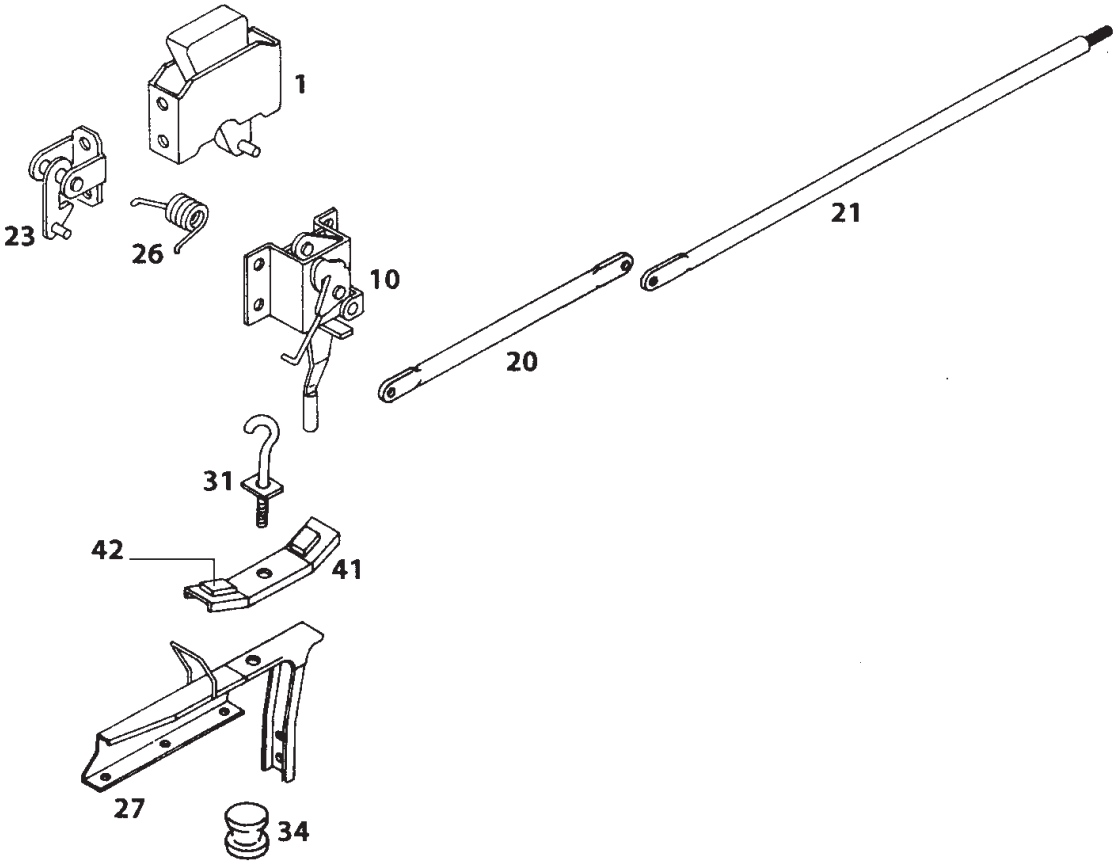


TABLE 89.2
CAB MOUNTING (REAR)
GROUP 89

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109										REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I		LPT 42 BS II
		CAB MOUNING (REAR)												For Cab Version
1	2641 8910 01 50	Assy. Cab Mounting Mechanism RH						1	1	1	1	1	1	
1	2641 8910 01 49	Assy. Cab Mounting Mechanism LH						1	1	1	1	1	1	
—	2641 8910 67 05	Pin (Lock Mechanism)						2	2	2	2	2	2	
—	2641 8910 67 06	Pin (Intermediate Link)						2	2	2	2	2	2	
10	2064 8910 01 30	Assy. Handle Mounting (Cab Locking Mechanism)						1	1	1	1	1	1	
20	2641 8910 01 34	Assy. Connecting Link LH						1	1	1	1	1	1	
21	2641 8910 01 35	Assy. Connecting Link RH						1	1	1	1	1	1	
23	2154 8910 01 16	Assy. Secondary Lock (Locking Mechanism)						1	1	1	1	1	1	
27	2158 8910 01 10	Assy. Mounting Bracket LH (Chassis Side)						1	1	1	1	1	1	
27	2064 8910 01 27	Assy. Mounting Bracket LH (Chassis Side)								1				For P/Strg BS-I Veh.
27	2158 8910 01 11	Assy. Mounting Bracket RH (Chassis Side)						1	1	1	1	1	1	
27	2064 8910 01 28	Assy. Mounting Bracket RH (Chassis Side)								1				For P/Strg BS-I Veh.
—	2641 8910 01 73	Assy. Tie Member (Rear Mounting)						1	1	1	1	1	1	
31	2641 8910 01 85	Assy. Mounting Hook (Cab Locking Mechanism)						2	2	2	2	2	2	
—	2641 8910 82 72	Plate (Cab Locking Mechanism)						4	4	4	4	4	4	
—	2641 8910 82 70	Mounting Cup (Cab Locking Mechanism)						6	6	6	6	6	6	
—	2641 8910 63 14	Rubber Mounting (Upper) (Cab Locking Mechanism)						2	2	2	2	2	2	
34	2641 8910 01 15	Assy. Rubber Mounting (Lower)-Cab Locking Mechanism						2	2	2	2	2	2	
—	2641 8910 69 13	Spacer (Rear Mounting)						2	2	2	2	2	2	

TABLE 89.2

CAB MOUNTING (REAR)

GROUP 89

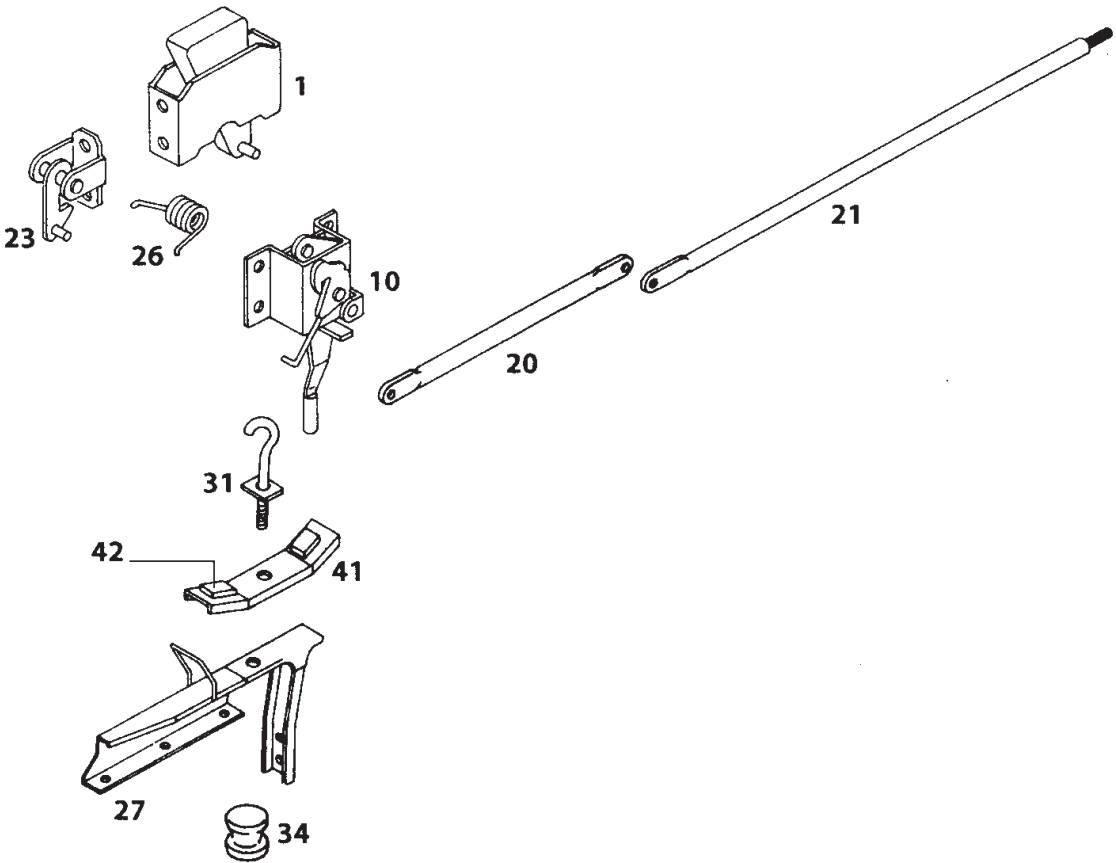


TABLE 89.2

CAB MOUNTING (REAR)

GROUP 89

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
41	2641 8910 01 82	Assy. Bracket Upper (Chassis Side)						2	2	2	2	2	2	
42	2641 8910 01 84	Assy. Mounting Pad (Cab Locking Mechanism)						4	4	4	4	4	4	

TABLE 89.3

COWL MOUNTING

GROUP 89

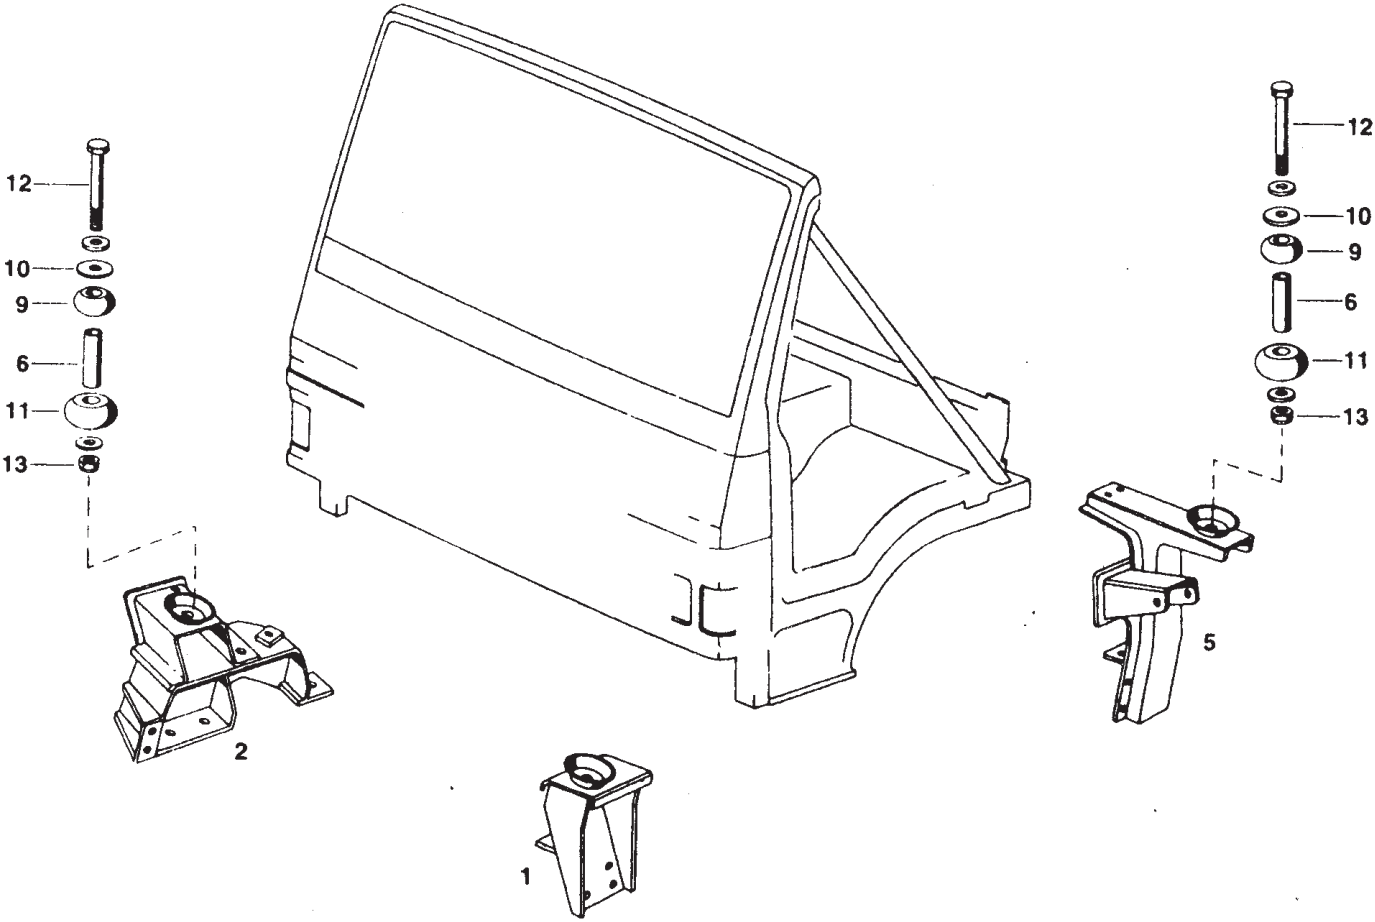


TABLE 89.3
COWL MOUNTING
GROUP 89

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		COWL MOUNTING												Cowl Version
1	2064 8910 01 12	Assy. Mtg. Bracket LH		1	1	1	1	1	1					
2	2064 8910 01 13	Assy. Mtg. Bracket RH		1	1	1	1	1	1					
5	2064 8910 01 14	Assy. Mounting Bracket Rear (Chassis Side)		2	2	2	2	2	2					
—	2641 8910 01 73	Assy. Tie Member Rear Mtg.		1	1	1	1	1	1					
6	2641 8910 69 10	Spacer Tube		4	4	4	4	4	4					
—	2641 8910 82 66	Protection Cap		4	4	4	4	4	4					
—	042 891 04 13 J	Plate		4	4	4	4	4	4					
9	000 891 05 97 J	Rubber Mounting (Upper)		4	4	4	4	4	4					
10	1265 060130 9	Washer A 13		6	6	6	6	6	6					
11	000 891 02 01 J	Rubber Mounting		4	4	4	4	4	4					
12	1106 381268 3	Hex. Bolt M 12x100		2	2	2	2	2	2					
13	1214 050120 2	Nyloc Nut M 12		2	2	2	2	2	2					
—	2641 8910 80 06	Stud		2	2	2	2	2	2					

TABLE 89.4

MUDGUARD AND MUDFLAP

GROUP 89

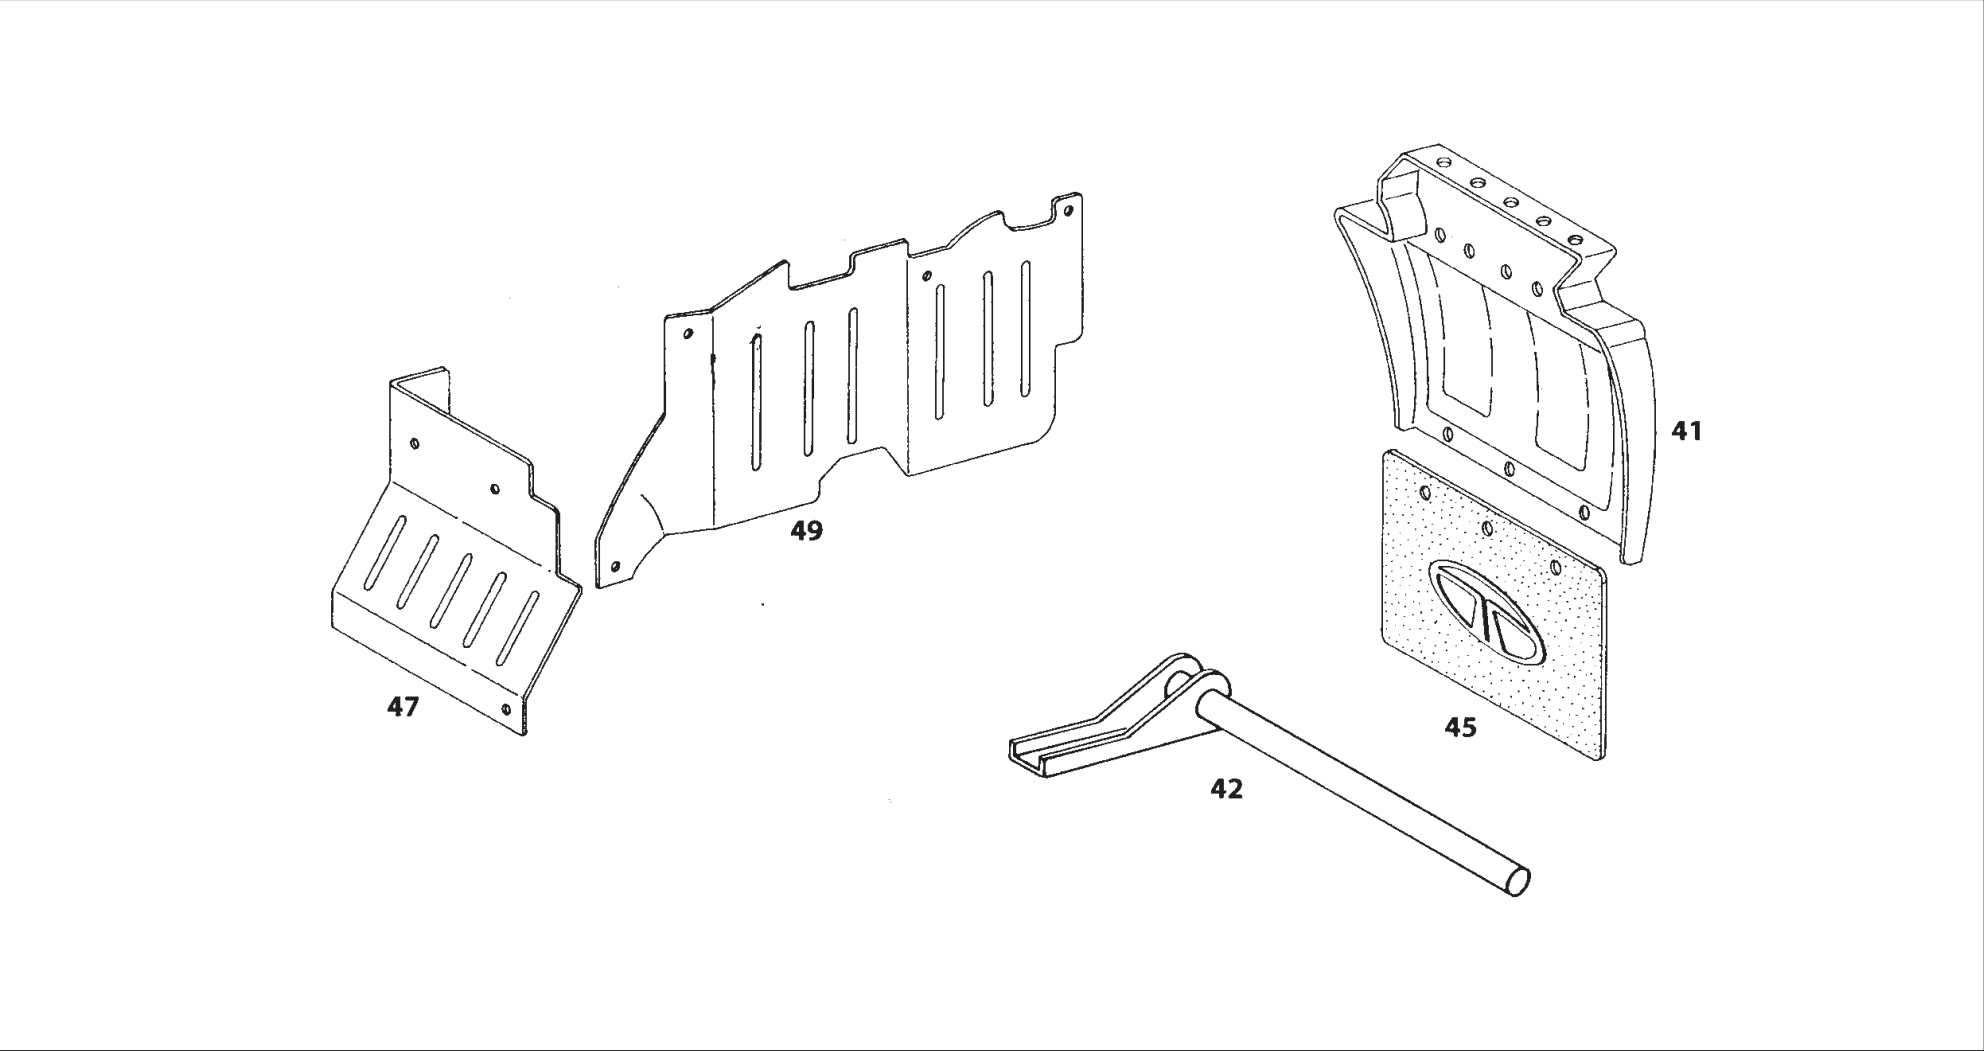


TABLE 89.4
MUDGUARD AND MUDFLAP
GROUP 89

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		MUDGUARD AND MUDFLAP												
41	2153 8910 63 03	Mudguard LH.						1	1					
41	2158 8910 63 01	Mudguard LH.								1	1	1	1	For P/Strg BS-I Veh.
41	2064 8910 63 07	Mudguard LH.								1				
41	2153 8910 63 04	Mudguard RH.						1	1					
41	2158 8910 63 02	Mudguard RH.								1	1	1	1	For P/Strg BS-I Veh.
41	2064 8910 63 08	Mudguard RH.								1				
42	2158 8910 01 04	Assy.Support Bottom LH. (Mudguard)						1	1	1	1	1	1	
42	2158 8910 01 05	Assy.Support Bottom RH. (Mudguard)						1	1	1	1	1	1	
—	2641 8910 82 57	Clamp (Rear Mudguard Mtg.)						6	6	6	6	6	6	
45	2158 8110 01 01	Assy.Mud Flap Rear								2	2	2	2	For P/Strg BS-I Veh.
45	2640 8110 01 02	Assy.Mud Flap Rear								2				
47	2153 8910 63 05	Mud Flap Front						2	2					
47	2158 8910 63 03	Mud Flap Front Inner LH		1	1	1	1			1	1	1	1	
47	2158 8910 63 04	Mud Flap Front Inner RH		1	1	1	1			1	1	1	1	
49	2153 8910 01 10	Assy.Mudflap Front Outer LH	1											
49	2153 8910 01 11	Assy.Mudflap Front Outer RH	1											
—	2641 6110 01 23	Assy.Bracket Bottom LH (Mud Flap Mtg.)						1	1	1	1	1	1	
—	2641 6110 01 25	Assy.Bracket Bottom RH (Mud Flap Mtg.)						1	1	1	1	1	1	
—	2641 8910 63 07	Sealing (Rear Mudguard)						4	4	4	4	4	4	

TABLE 89.4

MUDGUARD AND MUDFLAP

GROUP 89

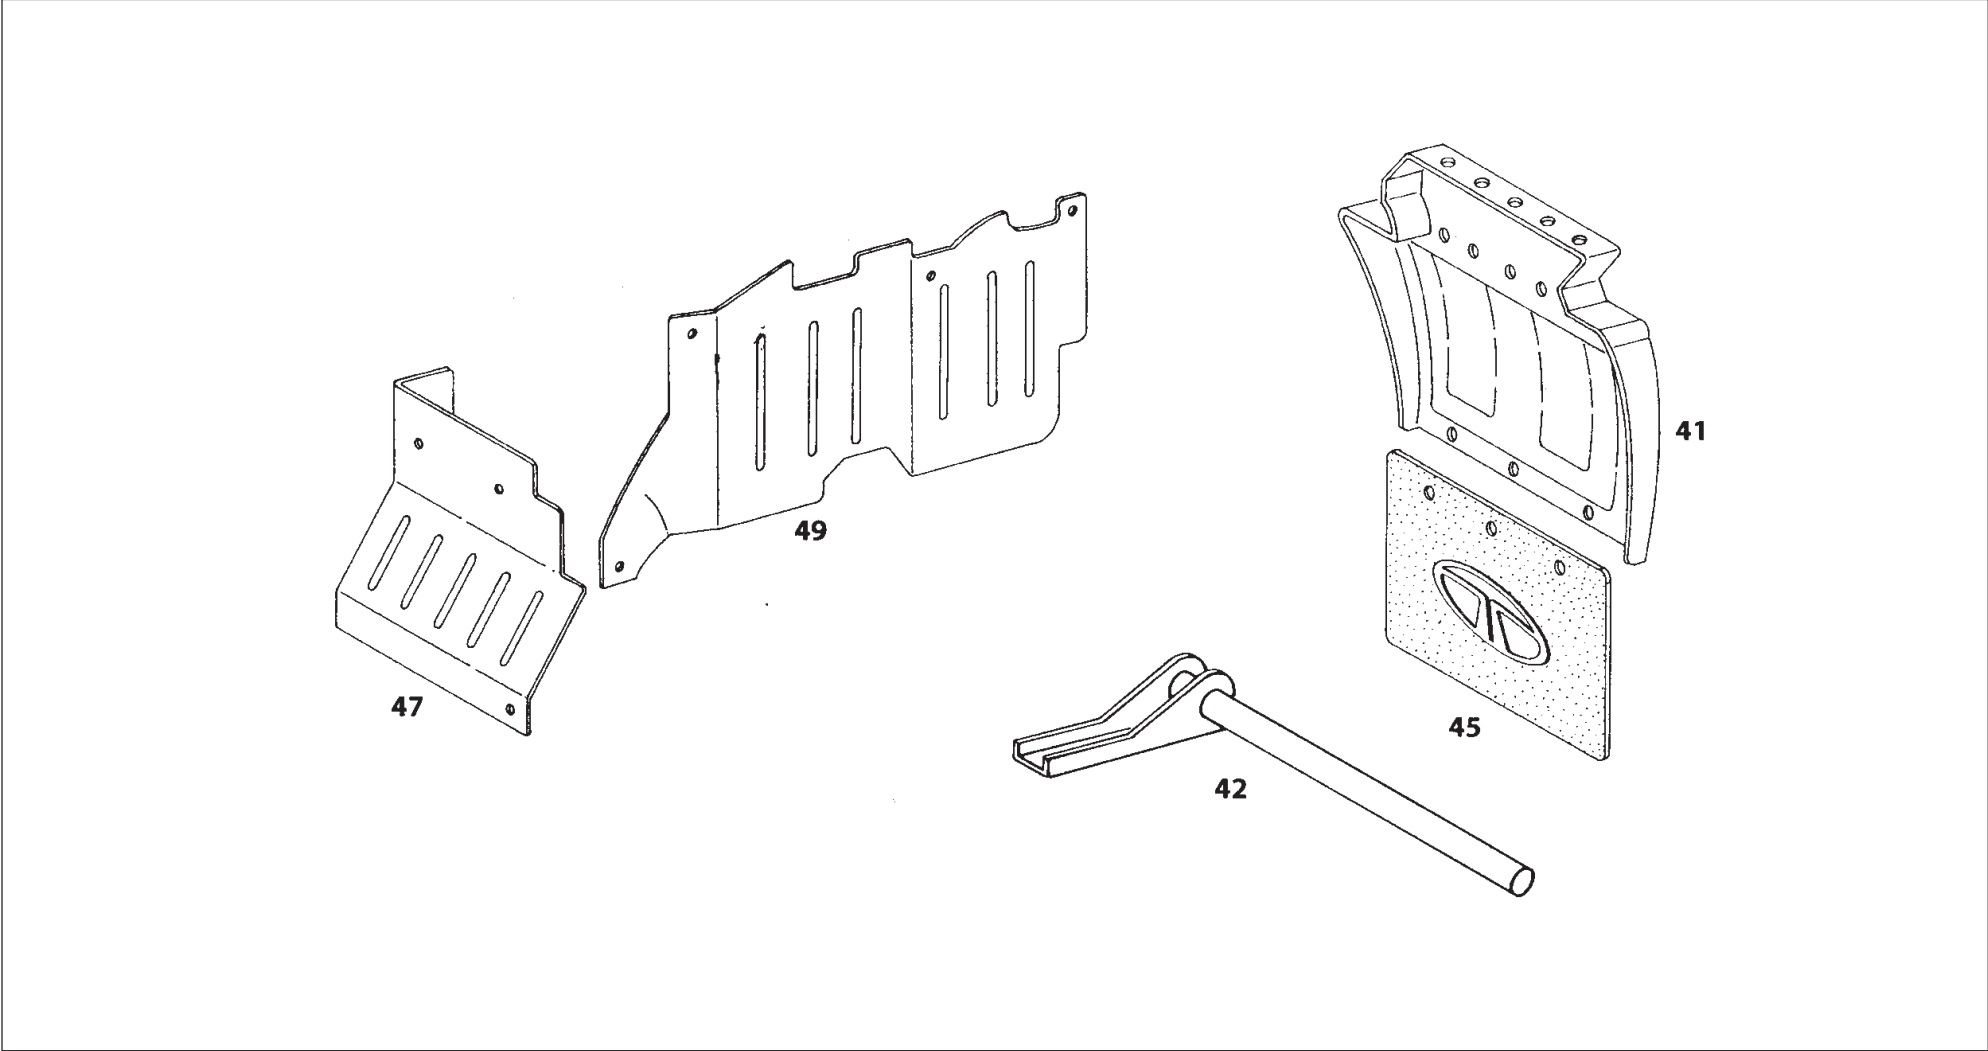


TABLE 89.4
MUDGUARD AND MUDFLAP
GROUP 89

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
—	2153 8910 01 02	Assy.Support Stay Rear(For Floor).		2	2	2	2	2	2					For Cowl Version
—	2153 8910 01 03	Assy.Support Stay Rear(For Aux.Tank).		1	1	1	1	1	1					For Cowl Version
—	2153 8910 01 06	Assy.Engine Shielding LH						1	1					
—	2153 8910 01 07	Assy.Engine Shielding RH						1	1					

TABLE 91.1

SEAT AND SEAT BELT

GROUP 91

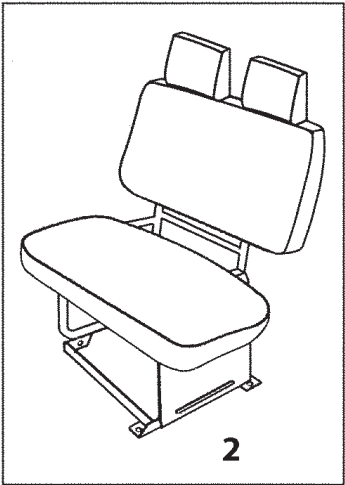
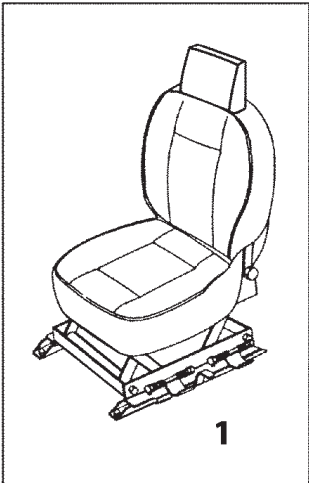
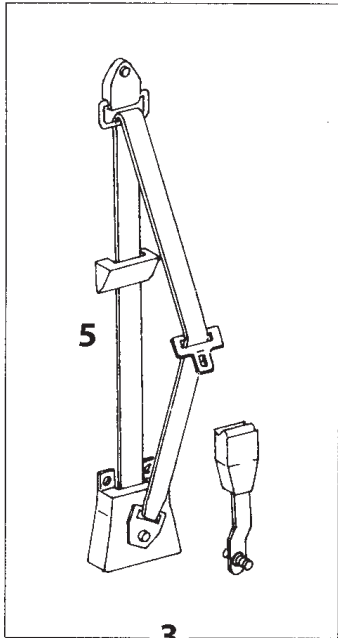


TABLE 91.1
SEAT AND SEAT BELT
GROUP 91

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II	
		SEAT AND SEAT BELT												
1	2641 9100 01 08	Assy.Driver Seat With Head Rest						1	1					
—	2641 9100 01 02	Assy. Driver's Seat								1	1	1	1	
—	2641 9110 01 10	Assy Seat Box Complete (Driver Seat)						1	1					
—	2154 9110 01 03	Assy Seat Box Complete (Driver Seat)								1	1	1	1	
2	2153 9400 01 04	Assy.Co-Driver Seat With Head Rest						1	1					
—	2153 9400 01 01	Assy. Co-Driver's Seat								1	1	1	1	
3	2641 9150 01 86	Assy. Seat Belt Kit Complete,Consisting of :	1					1	1	1	1	1	1	
5		Seat Belt (Driver)	1					1	1	1	1	1	1	
—		Seat Belt Middle (Passenger)	1					1	1	1	1	1	1	
—		Seat Belt (Co - Driver)	1					1	1	1	1	1	1	

TABLE 70.1

LOAD BODY

GROUP 70

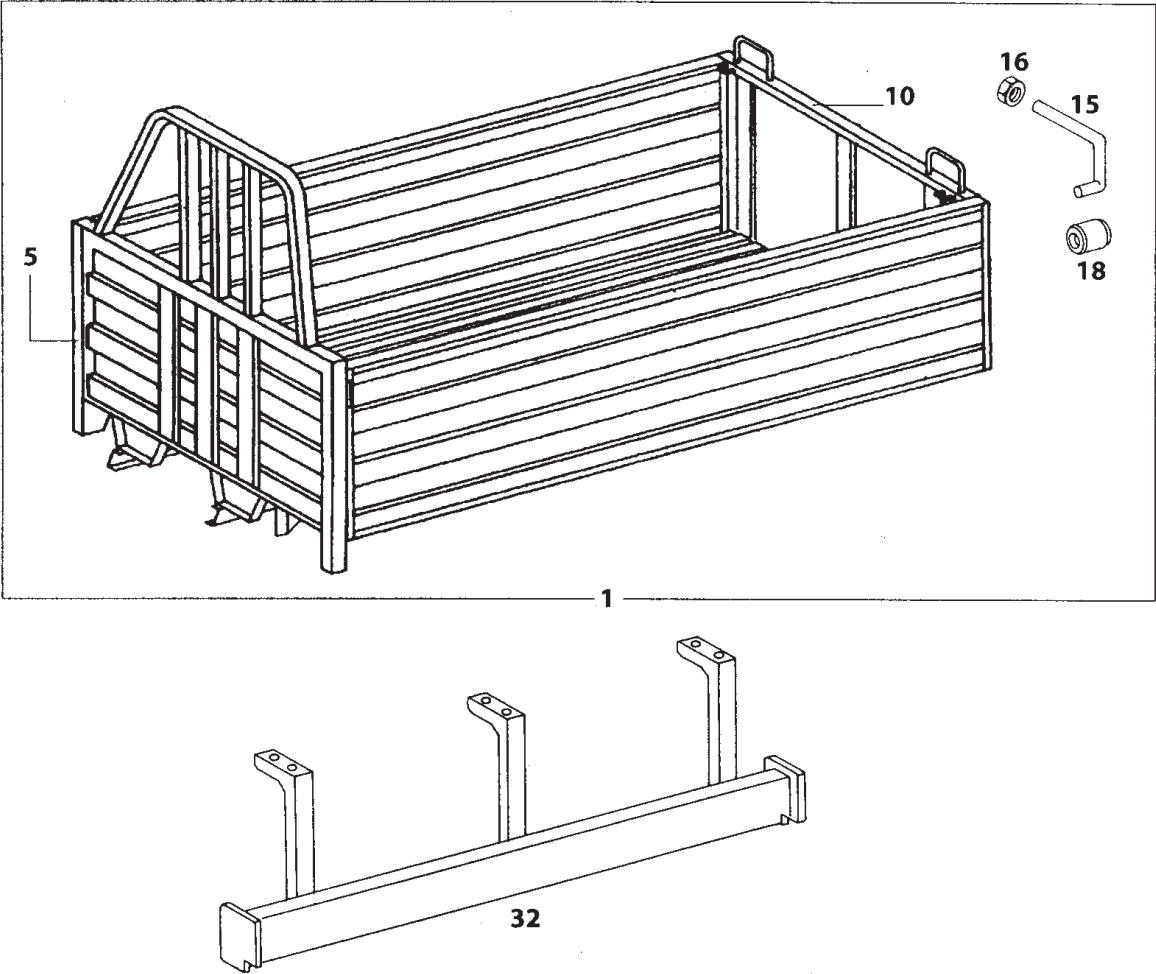


TABLE 70.1
LOAD BODY
GROUP 70

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II		
		LOAD BODY													Low Deck
—	2158 7000 01 02	Kit Assy. Loadbody Complete							1				1	1	
—	2093 7000 01 03	Kit Assy. Loadbody Complete						1		1	1				Not Serviced
1	2158 7000 01 01	Assy. Load Body Complete (Bolted Side Panel)							1				1	1	
1	2093 7000 01 01	Assy. Load Body Complete (Bolted Side Panel)						1		1	1				
5		Assy. Front Panel Compl. with Loadguard						1	1	1	1	1	1		
10	2093 7040 01 01	Assy. Tail Gate						1	1	1	1	1	1		
15	2651 7090 56 01	Handle LH						1	1	1	1	1	1		
15	2651 7090 56 05	Handle RH						1	1	1	1	1	1		
16	1205 159601 1	Hex. Nut M12						2	2	2	2	2	2		
18	2651 7090 01 05	Assy. Stopper (Side And Rear)						2	2	2	2	2	2		
—	2640 7040 01 07	Assy. Chain						2	2	2	2	2	2		
32	2153 7010 01 33	Kit Assy. SUPD							1				1	1	
32	2153 7010 01 19	Assy. Side Guard LH (SUPD)						1		1	1				
32	2153 7010 01 29	Assy. Side Guard RH (SUPD)						1		1	1				
—	2153 7010 01 22	Assy. Mounting Bracket (SUPD)						8	8	8	8	8	8		
—	2153 5482 01 12	Wiring Harness - Side Marker Lamp - RH						1		1	1				
—	2153 5482 01 13	Wiring Harness - Side Market Lamp - LH						1		1	1				
—	2153 5482 01 14	Wiring Harness - Side Marker Lamp - RH							1				1	1	
—	2153 5482 01 15	Wiring Harness - Side Marker Lamp - LH							1				1	1	

TABLE 70.2

LOAD BODY (HIGH DECK)

GROUP 70

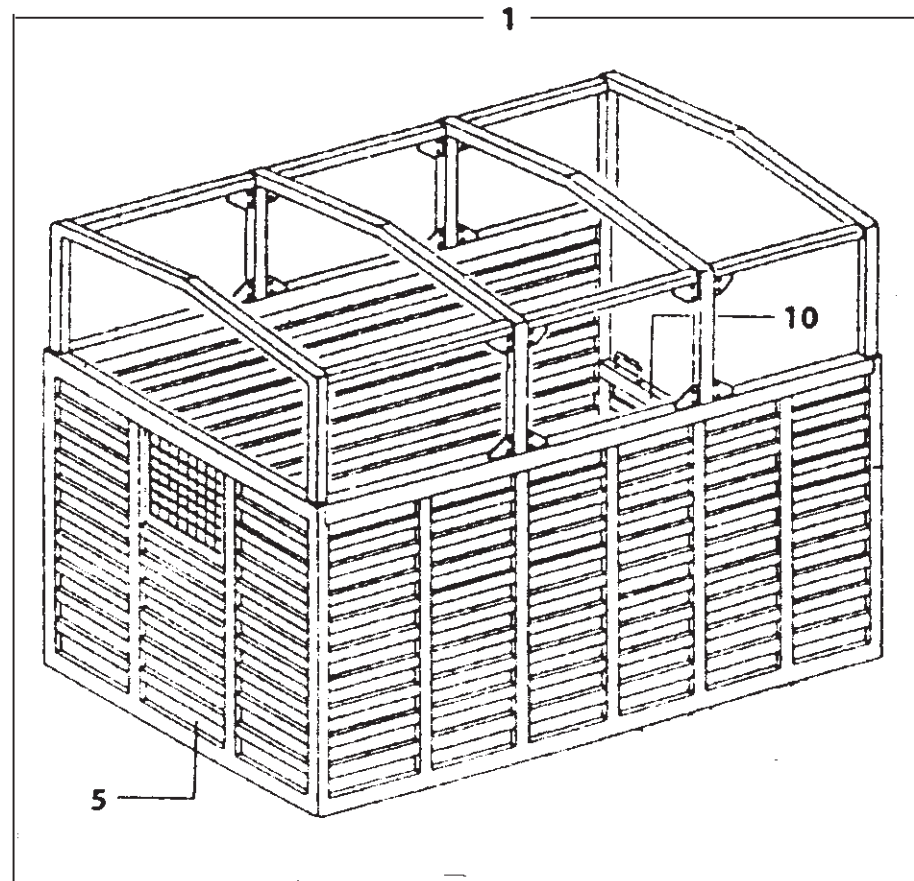


TABLE 70.2
LOAD BODY (HIGH DECK)
GROUP 70

FIG. NO.	PART NUMBER	DESCRIPTION	QTY FOR LP/LPT 1109											REMARKS	
			ALL	LP 36 BS I	LP 36 BS II	LP 42 BS I	LP 42 BS II	LPT 36 TCIC BS II	LPT 42 TCIC BS II	LPT 36 BS I	LPT 36 BS II	LPT 42 BS I	LPT 42 BS II		
		LOAD BODY (HIGH DECK)													High Deck
—	2093 7000 01 05	Kit Assy. Loadbody Complete						1		1	1				
—	2153 7000 01 02	Kit Assy. Loadbody Complete							1			1	1		
1	2093 7000 01 04	Assy. Loadbody Complete - HighDeck						1		1	1				
1	2153 7000 01 01	Assy. Loadbody Complete - High Deck							1			1	1		
5	2093 7020 01 04	Assy. Front Panel						1	1	1	1	1	1		
10	2093 7040 01 03	Assy. Tail Gate						1	1	1	1	1	1		
—	2651 7090 56 01	Handle LH						1	1	1	1	1	1		
—	2651 7090 56 05	Handle RH						1	1	1	1	1	1		
—	2651 7090 01 05	Assy. Stopper (Side And Rear)						2	2	2	2	2	2		
—	2153 7010 01 33	Kit Assy. SUPD							1			1	1		
—	2153 7010 01 34	Kit Assy. SUPD						1		1	1				
—	2153 7010 01 22	Assy. Mounting Bracket (SUPD)						8	8	8	8	8	8		
—	2153 5482 01 12	Wiring Harness - Side Marker Lamp - RH						1		1	1				
—	2153 5482 01 13	Wiring Harness - Side Market Lamp - LH						1		1	1				
—	2153 5482 01 14	Wiring Harness - Side Marker Lamp - RH							1			1	1		
—	2153 5482 01 15	Wiring Harness - Side Marker Lamp - LH							1			1	1		



TATA MOTORS

LP/LPT 1109

PART NUMBER INDEX

TATA PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
000 330 00 03 J	165	042 330 00 80 J	165	312 181 03 08	73	312 411 12 05	187	312 994 02 32	27
000 338 26 29	165	042 330 01 80 J	167	312 186 00 80	73	312 413 12 31	187	312 994 03 10	15
000 338 34 29	165	042 330 02 80 J	167	312 188 11 35	13	312 421 10 68	95	312 994 03 30	83
000 401 05 06 J	181	042 330 03 80 J	169	312 188 15 79	79	312 492 10 80	251	312 994 03 32	105
000 401 05 07 J	181	042 353 01 72 J	179	312 254 10 13	95	312 492 10 80	253	312 994 12 01	173
000 891 02 01 J	325	042 411 00 72 J	185	312 262 11 72	109	312 546 10 20	69	312 994 12 09	153
000 891 05 97 J	325	042 470 06 05 J	247	312 264 10 71	123	312 546 10 20	271	312 994 12 09	155
000 981 12 01	109	042 891 04 13 J	325	312 264 11 79	125	312 990 00 04	33	312 994 13 01	69
000 991 05 22	135	042 990 00 37 J	149	312 264 14 10	123	312 990 02 51	35	312 995 24 20	15
000 991 05 22	137	153 264 00 55	115	312 265 10 36	105	312 990 02 51	57	312 995 24 20	17
000 997 00 06 J	99	186 991 00 55	13	312 283 10 52	101	312 990 03 01	27	312 997 08 40	39
000 997 22 47	187	302 991 00 15	95	312 283 11 52	101	312 991 02 60	13	312 997 08 40	43
000 997 34 46	163	312 010 03 33	15	312 283 12 52	101	312 993 00 05	35	312 997 61 82	61
003 997 77 46	125	312 016 00 61	21	312 283 17 52	101	312 993 00 25	35	314 180 02 60	75
012 470 04 40 J	247	312 031 05 33	25	312 283 21 52	101	312 993 07 01	35	314 184 01 17	75
042 251 00 04 J	95	312 053 01 27	37	312 323 15 76	151	312 993 10 01	105	314 184 01 79	77
042 312 00 76 J	143	312 055 00 50	35	312 323 15 76	157	312 993 17 01	109	314 990 03 63	75
042 312 00 76 J	143	312 055 01 71	35	312 353 11 73	173	312 993 26 01	79	315 038 00 72	21
042 312 16 52 J	141	312 055 05 53	35	312 411 11 11	185	312 993 28 01	71	315 990 00 51	173
042 322 04 01 J	139	312 055 06 53	35	312 411 11 11	189	312 993 42 01	103	321 130 04 16	57
042 323 00 63 J	151	312 155 01 74	69	312 411 12 05	185	312 993 47 01	35	321 131 01 71	57

TATA PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
321 181 00 42	73	321 265 02 08	107	321 356 00 51	171	322 353 00 73	179	322 353 20 52	179
321 260 08 46	103	321 265 08 05	105	321 356 00 82	171	322 353 01 52	177	322 353 21 52	179
321 261 00 31	101	321 265 12 02	105	321 356 01 73	171	322 353 02 52	177	322 356 00 53	173
321 261 03 33	101	321 265 13 01	105	321 990 19 01	139	322 353 02 73	175	322 990 00 19	23
321 262 00 73	109	321 265 18 05	105	321 990 19 01	143	322 353 03 52	177	322 990 05 05	21
321 262 03 74	111	321 265 19 05	105	321 992 00 25	13	322 353 04 52	177	322 990 11 01	175
321 262 04 62	111	321 325 00 41	143	321 993 06 01	103	322 353 05 52	177	322 993 03 10	137
321 262 05 62	111	321 332 02 49	161	321 993 12 01	109	322 353 06 52	177	322 994 01 37	175
321 262 06 62	111	321 332 03 62	163	321 997 01 03	103	322 353 07 52	177	326 993 04 01	73
321 262 07 23	115	321 332 04 62	163	322 053 04 20	37	322 353 08 52	177	327 332 00 06	161
321 262 07 62	111	321 334 00 51	163	322 260 06 44	113	322 353 09 52	177	327 332 00 29	161
321 262 08 23	113	321 334 01 15	163	322 262 00 45	115	322 353 10 52	177	327 332 03 52	163
321 262 08 23	113	321 334 02 15	163	322 262 00 72	115	322 353 11 52	177	327 332 04 52	163
321 262 17 62	111	321 353 00 25	173	322 262 01 12	113	322 353 12 52	177	327 332 16 62	161
321 262 20 62	111	321 353 00 62	175	322 262 04 35	113	322 353 13 52	177	327 990 01 37	161
321 262 25 62	111	321 353 01 62	175	322 262 40 50	113	322 353 14 52	177	327 997 00 26	153
321 262 26 62	111	321 353 02 20	173	322 262 41 50	113	322 353 15 52	177	327 997 01 45	161
321 262 27 62	113	321 353 02 62	175	322 263 03 33	113	322 353 16 52	177	328 410 00 80	189
321 262 28 62	111	321 353 03 62	175	322 265 01 23	105	322 353 17 52	177	337 261 01 20	101
321 262 29 62	111	321 353 06 62	175	322 265 03 05	105	322 353 18 52	179	340 262 01 34	113
321 262 30 62	111	321 356 00 26	171	322 353 00 51	177	322 353 19 52	179	340 324 03 35	153

TATA PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
342 322 00 84	149	352 075 10 25	33						
352 011 01 71	13	352 077 03 14	33						
352 011 03 35	13	352 131 16 02	57						
352 015 02 01	15	352 181 04 01	73						
352 015 05 20	15	352 184 00 32	75						
352 018 03 80	19	352 184 01 71	75						
352 032 11 05	25	352 184 03 29	73						
352 050 06 34	35	352 200 02 05	83						
352 050 10 33	35	352 242 04 09	93						
352 051 00 62	33	352 250 02 43	97						
352 052 00 03	25	352 254 00 40	97						
352 052 02 01	33	352 254 00 97	97						
352 052 07 62	33	352 254 00 97	119						
352 054 02 05	33	352 261 07 80	101						
352 055 04 10	35	352 320 00 63	149						
352 055 05 10	35	352 322 00 50	149						
352 055 06 10	35	352 322 05 30	149						
352 070 16 45	33	352 331 00 44	149						
352 075 00 35	33	352 990 01 63	77						
352 075 00 71	33	352 990 20 40	37						
352 075 03 74	33	352 993 07 01	33						

TATA PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
2060 3202 34 01	149	2064 3120 01 06	139	2064 8910 01 06	319	2093 3010 01 01	135	2093 3120 71 21	141
2060 3310 53 01	149	2064 3120 82 01	139	2064 8910 01 09	319	2093 3010 01 04	135	2093 3120 71 22	141
2060 3320 72 01	161	2064 3120 82 10	139	2064 8910 01 12	325	2093 3010 01 05	135	2093 3120 71 23	141
2060 3501 30 01	177	2064 3120 82 11	139	2064 8910 01 13	325	2093 3010 01 06	135	2093 4111 01 01	185
2060 3510 53 01	153	2064 3120 82 12	141	2064 8910 01 14	325	2093 3010 01 07	135	2093 4210 92 03	191
2060 3531 83 06	175	2064 3140 67 01	139	2064 8910 01 18	319	2093 3010 33 02	137	2093 4210 92 03	195
2060 3531 83 07	175	2064 4111 82 01	187	2064 8910 01 27	321	2093 3020 01 01	135	2093 4210 92 04	191
2060 3531 83 08	175	2064 4210 37 01	163	2064 8910 01 28	321	2093 3120 01 03	151	2093 4210 92 04	195
2060 3531 83 09	175	2064 4210 37 01	173	2064 8910 01 30	321	2093 3120 01 04	151	2093 4230 01 12	199
2060 3531 83 10	175	2064 4211 82 01	193	2064 8910 63 07	327	2093 3120 01 05	141	2093 4230 01 12	219
2060 3571 77 01	171	2064 4211 82 02	193	2064 8910 63 08	327	2093 3120 01 06	141	2093 4230 37 01	195
2060 4111 87 02	185	2064 4231 82 01	197	2067 5461 01 01	271	2093 3120 01 07	141	2093 4230 86 01	195
2060 4111 87 03	185	2064 4231 82 02	197	2077 4680 01 59	245	2093 3120 01 08	141	2093 4290 01 24	203
2060 4111 87 04	185	2064 4270 01 14	203	2077 4680 01 60	245	2093 3120 01 09	141	2093 4320 71 01	201
2060 4111 87 05	185	2064 4920 01 07	251	2078 4310 01 33	127	2093 3120 01 12	139	2093 4610 80 01	243
2060 4410 01 79	245	2064 4920 01 07	253	2078 5440 01 06	275	2093 3120 71 05	143	2093 4610 80 02	237
2060 4410 68 03	245	2064 4920 82 06	255	2083 5420 99 03	277	2093 3120 71 06	143	2093 4610 80 03	237
2060 4410 68 07	245	2064 5482 01 03	275	2085 4680 01 01	203	2093 3120 71 07	143	2093 4620 01 03	243
2064 3120 01 04	139	2064 8850 01 02	317	2089 4920 01 02	251	2093 3120 71 08	143	2093 4620 01 06	237
2064 3120 01 05	139	2064 8850 01 03	317	2093 2930 01 01	129	2093 3120 71 20	141	2093 4630 60 02	235

TATA PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
2093 4630 60 03	235	2150 3120 71 16	143	2153 3170 01 02	145	2153 3170 71 15	147	2153 3340 83 04	163
2093 4630 60 03	239	2150 3120 71 17	143	2153 3170 01 03	145	2153 3170 71 16	147	2153 3340 83 05	163
2093 4640 01 02	233	2150 3120 71 25	143	2153 3170 01 08	145	2153 3170 82 07	147	2153 3340 83 06	163
2093 4660 01 02	235	2150 3120 71 26	143	2153 3170 01 09	145	2153 3170 82 08	147	2153 3340 86 01	163
2093 4660 01 04	237	2150 3120 71 27	143	2153 3170 01 10	139	2153 3170 82 10	145	2153 3510 32 01	153
2093 4660 01 05	235	2150 3120 71 28	143	2153 3170 01 11	139	2153 3170 82 17	145	2153 4030 01 06	183
2093 4660 01 05	239	2150 3510 32 01	155	2153 3170 01 16	139	2153 3210 01 02	149	2153 4030 71 01	183
2093 5440 01 01	277	2153 2910 01 03	131	2153 3170 01 20	145	2153 3210 01 09	149	2153 4030 71 02	183
2093 5440 01 02	277	2153 2910 01 03	131	2153 3170 01 21	145	2153 3210 01 11	149	2153 4030 71 03	183
2093 6890 82 01	277	2153 2910 01 04	129	2153 3170 01 22	145	2153 3230 01 01	151	2153 4110 01 03	185
2093 7000 01 01	333	2153 2910 01 05	131	2153 3170 01 24	147	2153 3230 01 02	151	2153 4110 01 06	187
2093 7000 01 03	333	2153 3100 01 02	139	2153 3170 01 34	145	2153 3240 01 03	153	2153 4111 82 02	187
2093 7000 01 04	335	2153 3100 01 03	139	2153 3170 01 35	147	2153 3240 01 05	153	2153 4210 01 01	199
2093 7000 01 05	335	2153 3120 01 01	141	2153 3170 01 36	145	2153 3240 32 02	153	2153 4210 01 01	217
2093 7020 01 04	335	2153 3120 01 02	141	2153 3170 01 37	147	2153 3240 32 03	153	2153 4210 01 09	191
2093 7040 01 01	333	2153 3120 71 01	141	2153 3170 01 38	147	2153 3300 01 01	161	2153 4210 01 12	191
2093 7040 01 03	335	2153 3120 71 02	141	2153 3170 01 39	147	2153 3320 01 01	161	2153 4210 01 22	191
2093 8850 01 03	317	2153 3120 71 03	141	2153 3170 01 42	147	2153 3340 83 01	163	2153 4210 01 23	191
2099 4320 01 01	201	2153 3120 71 04	141	2153 3170 01 43	145	2153 3340 83 02	163	2153 4210 01 24	191
2099 4320 01 02	201	2153 3170 01 01	145	2153 3170 01 44	145	2153 3340 83 03	163	2153 4210 01 24	195

TATA PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
2153 4210 01 25	191	2153 4290 01 12	203	2153 4620 47 04	239	2153 4680 01 03	245	2153 5482 01 12	335
2153 4210 01 25	195	2153 4290 01 41	203	2153 4620 65 08	239	2153 4760 01 03	247	2153 5482 01 13	333
2153 4210 01 26	191	2153 4290 01 42	203	2153 4620 65 09	239	2153 4760 01 05	247	2153 5482 01 13	335
2153 4210 01 26	195	2153 4290 01 43	205	2153 4620 65 10	239	2153 4760 01 09	49	2153 5482 01 14	333
2153 4210 01 27	193	2153 4290 01 55	203	2153 4620 72 02	239	2153 4760 01 09	249	2153 5482 01 14	335
2153 4210 01 27	195	2153 4290 01 60	205	2153 4620 72 03	239	2153 4760 01 10	247	2153 5482 01 15	333
2153 4210 37 01	191	2153 4290 01 81	203	2153 4620 72 05	239	2153 4760 01 11	247	2153 5482 01 15	335
2153 4210 37 02	191	2153 4291 01 25	203	2153 4620 78 03	239	2153 4760 01 12	247	2153 5482 01 20	275
2153 4230 01 01	195	2153 4291 01 56	203	2153 4620 78 04	239	2153 4920 01 03	253	2153 5482 01 21	275
2153 4230 01 03	195	2153 4291 01 57	203	2153 4620 79 12	237	2153 4920 01 04	253	2153 6000 01 02	281
2153 4230 01 05	199	2153 4291 01 58	203	2153 4620 86 03	237	2153 4920 01 12	251	2153 6000 01 04	281
2153 4230 01 06	199	2153 4291 01 59	205	2153 4620 92 04	239	2153 4920 69 10	253	2153 6000 01 05	281
2153 4230 01 30	199	2153 4320 01 07	199	2153 4620 92 05	239	2153 4920 69 11	253	2153 6000 01 08	281
2153 4230 01 30	219	2153 4620 01 01	243	2153 4620 92 06	239	2153 5420 99 01	279	2153 6000 01 11	281
2153 4230 01 31	199	2153 4620 01 24	237	2153 4620 92 07	239	2153 5462 01 04	275	2153 6000 01 16	281
2153 4230 01 31	219	2153 4620 31 01	239	2153 4620 92 08	239	2153 5462 01 05	275	2153 6000 01 18	281
2153 4240 01 02	203	2153 4620 32 03	237	2153 4620 92 09	241	2153 5482 01 08	275	2153 6000 01 19	281
2153 4240 01 03	203	2153 4620 32 04	239	2153 4660 01 01	235	2153 5482 01 09	275	2153 6010 82 01	283
2153 4240 71 02	201	2153 4620 34 04	237	2153 4680 01 01	245	2153 5482 01 11	275	2153 7000 01 01	335
2153 4290 01 11	61	2153 4620 34 05	237	2153 4680 01 02	245	2153 5482 01 12	333	2153 7000 01 02	335

TATA PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
2153 7010 01 19	333	2153 8910 01 06	329	2158 3310 32 01	149	2177 4110 01 13	189	2505 2620 31 23	113
2153 7010 01 22	333	2153 8910 01 07	329	2158 7000 01 01	333	2187 4110 82 01	189	2505 2620 31 24	113
2153 7010 01 22	335	2153 8910 01 10	327	2158 7000 01 02	333	2190 4910 01 01	251	2505 2620 31 24	113
2153 7010 01 29	333	2153 8910 01 11	327	2158 8110 01 01	327	2190 4920 01 04	253	2505 2620 31 29	109
2153 7010 01 33	333	2153 8910 63 03	327	2158 8910 01 04	327	2190 4920 01 06	251	2505 2620 37 05	101
2153 7010 01 33	335	2153 8910 63 04	327	2158 8910 01 05	327	2190 4920 01 07	251	2505 2620 38 02	113
2153 7010 01 34	335	2153 8910 63 05	327	2158 8910 01 08	319	2190 4920 01 08	251	2505 2620 38 02	113
2153 7270 01 01	293	2153 9400 01 01	331	2158 8910 01 10	321	2190 4920 82 02	253	2505 2620 38 02	113
2153 7270 01 02	293	2153 9400 01 04	331	2158 8910 01 11	321	2190 4920 82 03	253	2505 2620 43 02	109
2153 7270 01 04	293	2154 2910 01 01	129	2158 8910 63 01	327	2190 4920 82 06	251	2505 2620 43 03	109
2153 7270 01 05	293	2154 2910 01 01	129	2158 8910 63 02	327	2505 2600 01 01	107	2505 2620 43 04	109
2153 8106 01 01	283	2154 3120 71 01	139	2158 8910 63 03	327	2505 2604 01 29	99	2505 2620 43 05	109
2153 8110 01 99	307	2154 5482 01 12	275	2158 8910 63 04	327	2505 2604 01 87	99	2505 2620 43 06	109
2153 8110 69 01	295	2154 6890 63 04	289	2161 5410 01 01	271	2505 2610 37 23	99	2505 2620 43 07	109
2153 8110 69 02	295	2154 8910 01 16	321	2161 6000 01 02	281	2505 2620 01 18	113	2505 2620 78 03	101
2153 8180 01 01	309	2154 9110 01 03	331	2161 6000 01 03	281	2505 2620 01 35	113	2505 2620 79 02	115
2153 8180 01 03	309	2157 5410 82 19	271	2161 6000 01 04	281	2505 2620 01 58	115	2505 2620 79 03	109
2153 8910 01 01	319	2157 5410 88 01	271	2161 6000 01 06	281	2505 2620 01 76	115	2505 2620 86 08	111
2153 8910 01 02	329	2157 5440 01 14	273	2161 8820 01 04	317	2505 2620 30 01	115	2505 2620 86 09	111
2153 8910 01 03	329	2157 5440 01 15	273	2161 8820 01 05	317	2505 2620 31 06	109	2505 2620 86 10	111

TATA PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
2505 2620 86 11	111	2505 2630 54 11	117	2505 2640 86 01	123	2505 2671 87 02	103	2505 3015 34 01	115
2505 2620 86 12	111	2505 2630 54 12	115	2505 2640 86 12	125	2505 2671 87 03	103	2505 3015 34 02	115
2505 2620 86 13	111	2505 2630 54 15	117	2505 2640 86 14	125	2505 3010 67 01	107	2505 3015 34 03	115
2505 2620 86 14	111	2505 2630 79 01	115	2505 2651 51 01	105	2505 3011 67 01	103	2505 3015 34 04	115
2505 2620 86 15	111	2505 2635 01 02	117	2505 2651 51 02	105	2505 3012 88 01	103	2505 3015 34 05	115
2505 2625 31 18	109	2505 2640 01 37	123	2505 2651 59 01	107	2505 3012 92 01	103	2505 3015 34 06	115
2505 2625 37 01	99	2505 2640 01 40	123	2505 2670 51 04	105	2505 3013 86 01	99	2505 3015 34 07	115
2505 2625 53 01	99	2505 2640 31 03	123	2505 2670 51 05	103	2505 3013 86 02	99	2505 3015 34 08	115
2505 2625 79 18	109	2505 2640 31 07	123	2505 2670 60 09	107	2505 3013 86 03	99	2505 3015 54 01	115
2505 2625 82 01	99	2505 2640 37 05	123	2505 2670 79 08	105	2505 3013 86 04	99	2505 3015 54 03	113
2505 2625 82 01	109	2505 2640 37 10	125	2505 2671 02 59	103	2505 3013 86 05	101	2505 3017 79 01	117
2505 2625 86 01	99	2505 2640 47 01	123	2505 2671 34 03	105	2505 3013 86 06	101	2505 3020 61 01	105
2505 2625 86 02	99	2505 2640 51 01	123	2505 2671 34 07	103	2505 3013 86 07	101	2506 2620 78 04	101
2505 2625 86 03	99	2505 2640 53 01	123	2505 2671 34 09	103	2505 3013 86 08	101	2506 2671 53 01	107
2505 2625 86 04	101	2505 2640 54 02	123	2505 2671 34 10	103	2505 3014 47 01	99	2507 2625 78 02	99
2505 2625 86 05	101	2505 2640 61 01	189	2505 2671 37 52	103	2505 3014 53 01	99	2507 2625 86 01	109
2505 2625 86 06	101	2505 2640 79 02	123	2505 2671 37 56	105	2505 3014 54 01	117	2507 2670 01 52	121
2505 2625 86 09	101	2505 2640 79 07	123	2505 2671 67 01	103	2505 3014 54 02	117	2507 2671 31 05	105
2505 2630 31 04	117	2505 2640 79 08	123	2505 2671 77 01	107	2505 3014 79 01	115	2507 2671 78 03	107
2505 2630 54 01	117	2505 2640 84 01	123	2505 2671 82 22	107	2505 3015 01 05	113	2520 1813 77 01	75

TATA PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
2520 1813 87 01	75	2523 1310 53 02	57	2525 0515 51 02	37	2525 2099 01 07	87	2527 0114 01 17	15
2521 1817 37 03	79	2523 1810 54 09	73	2525 0712 37 01	39	2525 2340 37 04	243	2527 0114 01 29	15
2521 1817 53 01	79	2523 1810 54 10	73	2525 0712 37 02	43	2525 5010 63 06	259	2527 0114 37 03	15
2521 1817 53 02	79	2523 1810 79 01	73	2525 1314 01 01	57	2525 5010 63 06	267	2527 0114 37 06	15
2523 0110 72 01	13	2523 1815 01 06	73	2525 1314 01 21	57	2527 0100 02 33	3	2527 0114 53 03	17
2523 0113 01 14	19	2523 2014 01 04	83	2525 1817 72 01	79	2527 0100 02 42	3	2527 0114 53 05	17
2523 0113 37 02	17	2523 2510 67 01	95	2525 2010 01 16	83	2527 0100 02 52	3	2527 0115 01 39	21
2523 0113 37 03	19	2523 2510 82 03	95	2525 2010 01 18	89	2527 0100 02 77	3	2527 0115 01 60	263
2523 0114 01 19	17	2524 1411 53 04	63	2525 2010 01 19	89	2527 0100 02 78	3	2527 0115 01 68	21
2523 0117 01 22	17	2524 1514 01 09	69	2525 2010 01 21	83	2527 0100 02 79	3	2527 0115 01 69	21
2523 0117 01 55	17	2524 1514 32 01	69	2525 2010 01 24	83	2527 0100 03 25	3	2527 0115 01 70	263
2523 0117 58 09	17	2524 1514 65 01	69	2525 2010 01 25	83	2527 0100 03 33	3	2527 0115 38 25	23
2523 0117 85 01	19	2524 1514 65 01	243	2525 2010 37 01	83	2527 0110 01 27	13	2527 0115 38 36	23
2523 0313 32 02	25	2525 0110 37 02	13	2525 2010 37 04	83	2527 0110 01 45	13	2527 0115 53 02	23
2523 0313 86 03	25	2525 0114 37 02	15	2525 2010 51 02	83	2527 0110 01 73	13	2527 0115 53 10	21
2523 0510 59 01	33	2525 0114 53 02	15	2525 2014 70 11	83	2527 0110 37 27	13	2527 0115 99 04	23
2523 0514 67 01	35	2525 0115 99 04	23	2525 2015 63 05	71	2527 0113 01 19	19	2527 0117 01 15	17
2523 0710 54 01	39	2525 0313 82 01	25	2525 2015 63 05	85	2527 0113 01 25	17	2527 0117 01 16	15
2523 0711 80 01	33	2525 0315 01 07	27	2525 2015 63 06	71	2527 0113 01 41	19	2527 0117 01 19	13
2523 0911 01 03	41	2525 0315 32 04	27	2525 2015 63 06	85	2527 0114 01 02	17	2527 0117 01 32	257

TATA PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
2527 0117 01 40	17	2527 0511 54 03	33	2527 0911 32 01	45	2527 0913 02 56	53	2527 1310 53 12	57
2527 0117 01 71	15	2527 0514 01 01	35	2527 0911 37 04	51	2527 0913 02 72	53	2527 1313 01 05	61
2527 0117 42 05	15	2527 0514 79 02	35	2527 0911 80 01	41	2527 0913 02 73	55	2527 1313 01 06	61
2527 0117 58 08	17	2527 0712 01 03	43	2527 0911 80 01	45	2527 0913 02 74	43	2527 1313 42 02	61
2527 0117 82 09	15	2527 0712 53 01	43	2527 0912 01 14	39	2527 0913 02 81	53	2527 1411 01 04	63
2527 0199 01 01	7	2527 0712 53 02	43	2527 0912 01 24	41	2527 0913 02 91	53	2527 1411 01 19	63
2527 0199 01 02	9	2527 0712 53 04	39	2527 0912 01 33	41	2527 0913 02 92	55	2527 1411 01 26	63
2527 0199 01 33	5	2527 0713 54 01	33	2527 0912 01 36	39	2527 0913 02 93	55	2527 1411 01 27	63
2527 0199 01 34	5	2527 0713 54 02	43	2527 0912 01 57	45	2527 0913 02 94	55	2527 1411 37 13	63
2527 0199 01 46	5	2527 0714 01 02	39	2527 0912 01 71	45	2527 0913 02 95	55	2527 1411 37 17	63
2527 0199 01 48	5	2527 0714 01 02	43	2527 0912 58 04	45	2527 0913 03 03	53	2527 1411 53 03	63
2527 0199 01 60	5	2527 0714 01 35	39	2527 0912 58 05	41	2527 0913 03 04	53	2527 1411 53 06	63
2527 0199 01 62	5	2527 0714 01 35	43	2527 0913 01 92	39	2527 0913 33 20	53	2527 1411 53 13	63
2527 0310 79 33	25	2527 0714 01 49	39	2527 0913 02 03	55	2527 0913 33 21	53	2527 1413 01 09	63
2527 0311 01 18	25	2527 0714 01 57	43	2527 0913 02 36	53	2527 0913 58 57	55	2527 1413 01 10	63
2527 0311 01 25	25	2527 0714 75 01	39	2527 0913 02 40	53	2527 0913 58 58	53	2527 1451 01 07	63
2527 0313 01 04	25	2527 0714 75 01	43	2527 0913 02 46	53	2527 0913 58 59	53	2527 1451 01 11	63
2527 0313 70 06	25	2527 0714 82 01	39	2527 0913 02 48	53	2527 0913 63 01	55	2527 1451 01 24	63
2527 0313 86 03	25	2527 0714 82 01	43	2527 0913 02 49	53	2527 0913 69 38	43	2527 1451 01 27	63
2527 0510 01 08	33	2527 0911 32 01	41	2527 0913 02 55	53	2527 1310 01 09	57	2527 1460 01 14	67

TATA PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
2527 1460 01 40	67	2527 1817 58 03	79	2527 2212 51 07	93	2527 5000 58 05	261	2527 5010 03 63	257
2527 1460 01 41	67	2527 1817 58 08	79	2527 2212 51 08	93	2527 5000 58 05	269	2527 5010 03 63	267
2527 1460 01 43	67	2527 1817 58 16	79	2527 2311 01 03	243	2527 5000 82 23	257	2527 5010 03 69	257
2527 1460 33 02	67	2527 1817 58 17	81	2527 2311 67 01	243	2527 5000 82 24	257	2527 5010 03 69	267
2527 1460 33 05	67	2527 1817 58 18	81	2527 2340 01 14	243	2527 5000 82 29	257	2527 5010 03 71	265
2527 1460 58 08	67	2527 1817 72 01	63	2527 2340 37 05	243	2527 5000 82 32	257	2527 5010 03 71	269
2527 1460 58 13	67	2527 1817 99 03	81	2527 2340 70 07	243	2527 5010 01 91	265	2527 5010 03 87	259
2527 1510 86 01	69	2527 2012 01 14	85	2527 2510 37 16	95	2527 5010 02 21	267	2527 5010 03 87	267
2527 1514 01 17	69	2527 2012 01 31	85	2527 2510 82 05	95	2527 5010 02 28	259	2527 5010 42 07	265
2527 1514 01 19	69	2527 2012 01 34	85	2527 5000 01 06	257	2527 5010 02 29	259	2527 5010 42 08	85
2527 1514 01 21	69	2527 2012 01 40	85	2527 5000 01 09	259	2527 5010 02 38	267	2527 5010 42 08	87
2527 1810 01 10	73	2527 2012 01 67	85	2527 5000 01 35	259	2527 5010 02 43	265	2527 5010 42 08	263
2527 1810 72 01	73	2527 2012 01 69	85	2527 5000 01 36	259	2527 5010 02 49	259	2527 5010 42 09	263
2527 1810 79 01	73	2527 2012 01 69	267	2527 5000 01 41	259	2527 5010 02 50	259	2527 5010 58 26	263
2527 1813 01 05	75	2527 2012 01 71	85	2527 5000 58 02	261	2527 5010 02 58	257	2527 5010 58 50	265
2527 1813 01 27	75	2527 2012 01 71	267	2527 5000 58 02	269	2527 5010 02 82	257	2527 5010 58 51	263
2527 1813 01 32	75	2527 2012 53 01	85	2527 5000 58 03	261	2527 5010 03 04	257	2527 5010 58 52	263
2527 1817 01 04	79	2527 2014 38 05	83	2527 5000 58 03	269	2527 5010 03 24	257	2527 5010 58 53	263
2527 1817 01 05	79	2527 2014 70 04	83	2527 5000 58 04	261	2527 5010 03 40	257	2527 5010 58 56	263
2527 1817 01 16	79	2527 2014 70 13	83	2527 5000 58 04	269	2527 5010 03 44	263	2527 5010 58 58	265

TATA PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
2527 5010 58 58	265	2527 5010 82 41	265	2534 0115 01 17	21	2534 1813 53 01	75	2547 0913 42 15	267
2527 5010 58 64	265	2527 5010 82 42	261	2534 0115 01 84	21	2534 1813 72 01	75	2547 0913 42 17	261
2527 5010 58 67	265	2527 5010 82 43	261	2534 0115 53 01	21	2534 1813 77 04	75	2547 0913 42 17	269
2527 5010 58 68	263	2527 5010 82 59	259	2534 0310 31 02	25	2534 1817 01 28	79	2547 0913 99 18	55
2527 5010 58 82	87	2527 5010 82 59	267	2534 0310 78 01	15	2534 1817 53 05	79	2547 1513 42 02	61
2527 5010 58 83	85	2527 5010 82 60	261	2534 0510 67 01	33	2534 1817 99 06	81	2547 1513 42 02	265
2527 5010 58 84	85	2527 5010 82 60	269	2534 0513 99 02	33	2534 2012 58 06	85	2547 2012 42 14	79
2527 5010 58 84	267	2527 5010 82 64	261	2534 0515 34 02	21	2534 2015 63 10	243	2547 2012 42 14	267
2527 5010 58 87	265	2527 5010 82 64	269	2534 0515 34 15	21	2534 5000 58 01	87	2547 5010 42 13	267
2527 5010 58 88	263	2527 5010 99 08	267	2534 0515 99 09	21	2534 5010 02 48	257	2547 5010 42 21	267
2527 5010 58 90	263	2527 5050 63 03	259	2534 0515 99 10	21	2534 5010 58 15	85	2547 5010 42 22	85
2527 5010 69 19	265	2527 5050 63 07	259	2534 0599 01 03	37	2534 5010 58 15	267	2547 5010 42 22	267
2527 5010 69 20	265	2527 5050 63 11	259	2534 0913 58 27	65	2534 5010 58 24	85	2547 5010 42 25	261
2527 5010 69 21	263	2527 5010 02 28	259	2534 0913 58 35	53	2540 1540 42 01	69	2547 5010 42 25	269
2527 5010 69 22	263	2527 5010 02 49	259	2534 0913 99 02	53	2540 1540 42 01	243	2571 3120 01 01	145
2527 5010 69 39	265	2529 0117 58 01	17	2534 1499 01 02	65	2547 0115 53 25	23	2571 3120 71 06	143
2527 5010 69 40	263	2533 0115 53 02	23	2534 1813 01 17	75	2547 0117 42 12	261	2573 1510 01 08	69
2527 5010 69 41	263	2533 1514 42 04	69	2534 1813 01 18	75	2547 0117 42 12	269	2573 2310 01 02	243
2527 5010 82 25	267	2533 5000 01 16	257	2534 1813 01 20	77	2547 0710 01 14	45	2573 2910 01 54	129
2527 5010 82 35	265	2534 0113 01 11	17	2534 1813 01 35	75	2547 0714 42 01	45	2573 2910 01 61	133

TATA PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
2573 3120 71 01	141	2573 4010 71 01	183	2573 4295 01 77	203	2574 3530 54 01	175	2575 2560 01 09	97
2573 3120 82 12	143	2573 4030 01 04	183	2573 4320 01 35	201	2574 3530 54 02	175	2575 2560 31 06	95
2573 3120 82 16	141	2573 4030 01 11	183	2573 4370 01 53	203	2574 3530 83 01	177	2575 2640 67 02	127
2573 3120 82 16	141	2573 4030 01 13	183	2573 4370 01 53	231	2574 3530 92 01	175	2575 2640 86 01	127
2573 3121 71 10	145	2573 4030 63 01	183	2573 4370 01 57	201	2574 4130 31 01	187	2575 3210 63 01	149
2573 3210 01 07	149	2573 4112 01 09	187	2573 4370 01 57	213	2574 4295 51 01	131	2575 3210 67 01	149
2573 3210 01 07	153	2573 4112 01 81	187	2573 4440 01 28	243	2574 4750 77 02	247	2575 3511 32 01	173
2573 3210 01 07	155	2573 4130 01 14	185	2573 4710 01 08	247	2574 4750 77 04	247	2575 4520 01 01	127
2573 3230 82 01	151	2573 4130 01 15	187	2573 4710 01 61	247	2574 4910 42 01	253	2575 5410 01 15	271
2573 3240 33 01	143	2573 4130 01 18	187	2573 4750 01 05	247	2574 4910 42 01	255	2576 2420 82 01	93
2573 3260 37 03	157	2573 4130 33 07	187	2573 5420 01 50	247	2574 4910 42 02	253	2576 3120 82 11	139
2573 3260 37 04	157	2573 4130 42 02	187	2573 5420 99 33	275	2574 5010 58 01	265	2576 3120 82 12	139
2573 3260 86 01	157	2573 4130 75 05	187	2573 5440 82 03	273	2574 5410 82 05	271	2576 3220 77 01	153
2573 3340 37 01	165	2573 4130 82 09	185	2573 5441 01 37	317	2574 5420 99 87	271	2576 3220 77 01	155
2573 3511 01 06	173	2573 4130 82 16	187	2574 2540 01 04	95	2574 5441 01 70	273	2576 3260 80 02	157
2573 3530 31 09	175	2573 4130 82 17	187	2574 3120 71 14	143	2574 5441 01 72	273	2576 3260 80 05	157
2573 3530 77 05	179	2573 4210 75 01	193	2574 3120 71 15	143	2574 5442 01 24	273	2576 4030 71 08	183
2573 3560 31 11	173	2573 4210 75 01	197	2574 3230 86 02	151	2574 5450 99 53	273	2576 4030 71 09	183
2573 3560 31 11	175	2573 4290 68 21	131	2574 3235 01 09	151	2575 2420 01 01	93	2576 4111 32 01	189
2573 3560 86 02	171	2573 4295 01 76	203	2574 3530 01 02	173	2575 2420 01 02	93	2576 4320 01 18	201

TATA PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
2576 4320 67 02	201	2592 8110 01 20	307	2604 3310 32 01	149	2618 4230 01 34	231	2640 4620 31 02	233
2576 4320 86 02	201	2592 8690 67 03	285	2604 3310 51 05	161	2618 4370 01 08	201	2640 5410 82 07	271
2576 4350 92 01	201	2594 4411 67 02	127	2604 3340 01 02	163	2621 3380 51 02	165	2640 7040 01 07	333
2576 4374 01 16	213	2594 4411 86 02	127	2604 3340 31 01	163	2621 3380 51 03	165	2640 8110 01 02	327
2576 4379 01 59	201	2596 3280 69 01	159	2604 3380 51 02	165	2621 5410 01 07	271	2641 1520 01 12	41
2576 4680 68 03	245	2596 3280 77 01	159	2604 3560 01 05	171	2621 5410 01 08	271	2641 1520 01 13	41
2576 4750 71 01	247	2604 3240 01 04	145	2604 4030 01 02	181	2630 2670 01 02	121	2641 2410 01 09	93
2576 4900 69 02	251	2604 3240 32 01	155	2610 2410 92 01	93	2632 1510 01 03	69	2641 2410 01 10	93
2576 4900 69 02	253	2604 3240 37 01	143	2610 3120 71 18	145	2632 1540 01 02	69	2641 2410 82 11	93
2576 4900 75 02	251	2604 3250 01 01	153	2610 3240 01 08	155	2632 4290 01 01	203	2641 2560 01 03	95
2576 4900 75 02	253	2604 3250 01 01	155	2610 3380 01 03	165	2632 4290 01 09	201	2641 2560 51 01	95
2576 4900 92 02	251	2604 3250 67 01	153	2618 2910 01 07	129	2632 4291 01 65	203	2641 2680 01 88	121
2576 4900 92 02	253	2604 3250 67 01	155	2618 2910 01 09	131	2632 4291 01 65	229	2641 2680 01 97	119
2576 4920 53 02	251	2604 3280 01 01	159	2618 2910 01 10	133	2632 4291 01 89	229	2641 2680 02 04	119
2576 5440 01 37	273	2604 3280 01 03	159	2618 3260 01 10	157	2632 4370 01 16	217	2641 2680 02 08	119
2576 5440 01 38	273	2604 3280 37 01	159	2618 3320 31 01	161	2632 5420 99 03	87	2641 2680 02 12	121
2576 8110 01 52	307	2604 3280 38 01	159	2618 3560 31 03	171	2632 5440 01 69	273	2641 2680 02 24	121
2576 8110 01 53	307	2604 3280 42 01	159	2618 4010 01 02	181	2636 4320 01 01	201	2641 2680 02 25	121
2576 8150 01 07	305	2604 3280 71 03	159	2618 4010 67 01	163	2640 1540 01 06	69	2641 2680 02 26	119
2576 8150 63 02	305	2604 3280 77 04	159	2618 4020 67 01	171	2640 1540 01 07	69	2641 2680 02 34	121

TATA PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
2641 2680 34 09	119	2641 2910 01 89	131	2641 4210 01 68	221	2641 4210 87 05	197	2641 4370 01 13	207
2641 2680 34 12	119	2641 2910 63 01	129	2641 4210 01 69	221	2641 4210 87 06	193	2641 4370 01 23	207
2641 2680 63 04	121	2641 2910 67 02	129	2641 4210 34 04	191	2641 4210 87 06	197	2641 4370 01 24	209
2641 2680 65 03	121	2641 2910 67 03	131	2641 4210 34 04	195	2641 4210 99 06	193	2641 4370 01 26	215
2641 2680 77 15	121	2641 2910 86 02	129	2641 4210 34 05	193	2641 4210 99 06	197	2641 4370 01 27	223
2641 2680 77 17	121	2641 2910 86 02	131	2641 4210 34 05	197	2641 4230 01 29	219	2641 4610 63 01	235
2641 2680 77 19	121	2641 2910 87 01	129	2641 4210 43 01	191	2641 4230 01 64	199	2641 4610 82 01	235
2641 2680 82 34	119	2641 2910 87 01	131	2641 4210 43 01	195	2641 4230 01 64	221	2641 4620 01 02	233
2641 2680 82 38	119	2641 2910 99 02	131	2641 4210 51 04	191	2641 4230 01 65	199	2641 4620 01 89	233
2641 2680 86 10	119	2641 3010 01 26	135	2641 4210 51 05	191	2641 4230 01 65	221	2641 4620 63 01	235
2641 2680 86 11	119	2641 3010 01 27	135	2641 4210 67 04	193	2641 4230 01 91	195	2641 4620 79 20	233
2641 2680 86 12	119	2641 3010 01 35	135	2641 4210 67 04	197	2641 4230 51 06	195	2641 4620 79 30	233
2641 2680 86 13	119	2641 3010 60 04	135	2641 4210 77 03	191	2641 4230 51 07	195	2641 4621 01 20	233
2641 2680 86 14	119	2641 3010 77 01	135	2641 4210 77 03	195	2641 4230 86 03	195	2641 4680 01 38	243
2641 2680 86 15	119	2641 3010 99 02	135	2641 4210 83 04	191	2641 4280 58 04	129	2641 4910 01 04	253
2641 2680 86 16	119	2641 3340 31 03	163	2641 4210 83 04	195	2641 4280 68 02	129	2641 4920 33 01	253
2641 2680 87 02	119	2641 4210 01 32	199	2641 4210 83 05	191	2641 4370 01 02	131	2641 4920 33 01	253
2641 2681 01 04	119	2641 4210 01 32	221	2641 4210 83 05	195	2641 4370 01 02	215	2641 4920 42 01	253
2641 2910 01 73	129	2641 4210 01 39	199	2641 4210 86 02	191	2641 4370 01 05	201	2641 4920 42 03	251
2641 2910 01 86	131	2641 4210 01 39	221	2641 4210 87 05	193	2641 4370 01 05	207	2641 5410 01 07	271

TATA PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
2641 5410 82 05	271	2641 5450 01 12	273	2641 6710 63 05	285	2641 6890 63 22	287	2641 7230 01 24	293
2641 5420 01 01	271	2641 5450 69 01	277	2641 6890 01 12	287	2641 6890 63 26	289	2641 7230 01 37	293
2641 5420 01 64	279	2641 5450 69 05	277	2641 6890 01 13	289	2641 6890 63 31	289	2641 7230 01 38	295
2641 5420 99 14	277	2641 5450 69 10	277	2641 6890 01 14	289	2641 6890 63 34	291	2641 7230 01 39	297
2641 5420 99 37	251	2641 5450 99 08	87	2641 6890 01 28	287	2641 6890 63 49	289	2641 7230 60 01	297
2641 5420 99 38	251	2641 6010 01 04	281	2641 6890 01 29	287	2641 6890 63 54	287	2641 7230 60 02	297
2641 5420 99 44	277	2641 6010 01 05	283	2641 6890 01 31	287	2641 6890 63 55	287	2641 7230 60 03	297
2641 5420 99 48	127	2641 6010 01 12	283	2641 6890 01 32	287	2641 6890 63 56	287	2641 7230 60 04	297
2641 5420 99 70	279	2641 6010 01 13	283	2641 6890 01 33	287	2641 6890 63 57	289	2641 7230 60 05	297
2641 5420 99 71	279	2641 6010 82 17	283	2641 6890 01 34	287	2641 6890 63 58	289	2641 7230 60 06	297
2641 5420 99 72	279	2641 6110 01 23	327	2641 6890 01 35	287	2641 6890 82 11	287	2641 7230 60 07	297
2641 5420 99 73	279	2641 6110 01 25	327	2641 6890 01 41	287	2641 7220 01 13	293	2641 7230 63 02	297
2641 5440 01 03	273	2641 6310 01 27	281	2641 6890 01 51	289	2641 7220 01 14	293	2641 7230 63 03	293
2641 5440 01 04	273	2641 6310 01 28	281	2641 6890 01 51	315	2641 7220 01 35	293	2641 7250 01 01	301
2641 5440 01 16	273	2641 6310 01 31	281	2641 6890 01 95	287	2641 7220 01 36	293	2641 7250 01 02	301
2641 5440 01 58	273	2641 6310 01 32	281	2641 6890 01 96	287	2641 7230 01 11	293	2641 7250 23 01	301
2641 5440 01 59	273	2641 6310 82 53	281	2641 6890 63 14	289	2641 7230 01 12	293	2641 7250 23 02	301
2641 5442 01 33	273	2641 6310 82 54	281	2641 6890 63 15	289	2641 7230 01 18	293	2641 7250 25 01	293
2641 5450 01 06	275	2641 6710 23 05	285	2641 6890 63 18	287	2641 7230 01 19	293	2641 7250 63 01	301
2641 5450 01 08	271	2641 6710 63 04	285	2641 6890 63 20	287	2641 7230 01 22	293	2641 7250 63 03	301

TATA PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
2641 7250 63 07	293	2641 8110 38 04	307	2641 8190 63 06	305	2641 8310 63 23	315	2641 8910 01 82	323
2641 7250 63 08	293	2641 8110 53 04	309	2641 8190 63 08	305	2641 8850 01 01	317	2641 8910 01 84	323
2641 7520 01 07	303	2641 8110 63 04	309	2641 8190 63 09	305	2641 8850 01 02	317	2641 8910 01 85	321
2641 7520 01 12	303	2641 8110 63 20	307	2641 8240 01 09	311	2641 8850 01 04	317	2641 8910 34 03	319
2641 7520 01 16	303	2641 8110 63 23	303	2641 8240 01 23	311	2641 8850 01 05	317	2641 8910 34 04	319
2641 7520 01 19	303	2641 8110 63 30	307	2641 8240 01 24	311	2641 8850 01 08	317	2641 8910 37 03	319
2641 7520 01 22	303	2641 8110 63 31	307	2641 8240 75 01	311	2641 8850 01 10	317	2641 8910 63 07	327
2641 8110 01 04	307	2641 8110 63 32	307	2641 8240 99 04	311	2641 8850 01 11	317	2641 8910 63 14	321
2641 8110 01 05	307	2641 8110 77 03	307	2641 8240 99 06	311	2641 8850 01 18	317	2641 8910 67 05	321
2641 8110 01 08	309	2641 8190 01 01	305	2641 8240 99 17	311	2641 8850 01 19	317	2641 8910 67 06	321
2641 8110 01 11	307	2641 8190 01 02	305	2641 8310 01 03	315	2641 8880 63 01	303	2641 8910 69 10	325
2641 8110 01 12	307	2641 8190 01 11	305	2641 8310 01 04	315	2641 8910 01 15	321	2641 8910 69 13	321
2641 8110 01 44	307	2641 8190 01 12	305	2641 8310 01 06	315	2641 8910 01 34	321	2641 8910 79 03	319
2641 8110 01 45	307	2641 8190 01 13	305	2641 8310 01 28	315	2641 8910 01 35	321	2641 8910 80 04	319
2641 8110 01 78	309	2641 8190 01 14	305	2641 8310 63 03	315	2641 8910 01 49	321	2641 8910 80 06	325
2641 8110 01 81	309	2641 8190 01 15	305	2641 8310 63 08	315	2641 8910 01 50	321	2641 8910 82 57	327
2641 8110 20 01	309	2641 8190 01 27	305	2641 8310 63 11	315	2641 8910 01 54	319	2641 8910 82 66	325
2641 8110 38 01	307	2641 8190 33 01	305	2641 8310 63 19	315	2641 8910 01 55	319	2641 8910 82 70	321
2641 8110 38 02	307	2641 8190 33 02	305	2641 8310 63 20	315	2641 8910 01 73	321	2641 8910 82 72	321
2641 8110 38 03	307	2641 8190 63 02	305	2641 8310 63 21	315	2641 8910 01 73	325	2641 9100 01 02	331

TATA PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
2641 9100 01 08	331	2651 2910 34 01	129	2651 6710 63 04	285	2654 4270 01 44	135	2654 7270 01 03	295
2641 9110 01 10	331	2651 2910 34 01	131	2651 6890 01 85	299	2654 4620 82 78	233	2654 7270 63 17	295
2641 9150 01 86	331	2651 2910 77 03	129	2651 6890 63 88	291	2654 4620 87 11	233	2654 7270 63 18	295
2643 2640 01 08	127	2651 2910 77 03	131	2651 6890 63 89	291	2654 4620 99 15	233	2658 7230 01 27	297
2643 2640 01 09	127	2651 3140 67 02	139	2651 6891 63 44	289	2654 4640 63 12	233	2658 8110 01 19	307
2643 2910 01 01	129	2651 3340 31 29	125	2651 7090 01 05	333	2654 5420 49 01	271	2659 8180 01 05	309
2643 2910 01 04	129	2651 4660 01 02	233	2651 7090 01 05	335	2654 5420 49 13	271	2663 3510 72 07	99
2643 2910 01 05	129	2651 4660 01 02	235	2651 7090 56 01	333	2654 5450 01 34	103	2663 3510 72 07	173
2643 2930 01 02	129	2651 4660 32 01	235	2651 7090 56 01	335	2654 5450 99 13	81	2668 3510 88 01	171
2643 4210 83 01	199	2651 4710 77 10	247	2651 7090 56 05	333	2654 5451 01 19	277	2668 3515 01 02	103
2643 4210 86 01	199	2651 5420 99 32	277	2651 7090 56 05	335	2654 6890 01 35	289	2668 3515 01 02	173
2643 4370 01 04	201	2651 5420 99 48	277	2651 7230 01 59	289	2654 6890 01 89	295	2668 3530 01 07	175
2643 4370 01 04	227	2651 5440 01 82	277	2651 7250 63 16	295	2654 7230 01 24	297	2668 3530 65 01	179
2643 4620 01 04	233	2651 5450 46 03	275	2651 7250 63 21	295	2654 7230 01 25	297	2668 3530 82 01	179
2643 5420 99 21	277	2651 5462 01 18	275	2651 8110 01 11	305	2654 7230 01 27	301	2668 3530 86 01	179
2647 5440 01 19	275	2651 6260 82 35	263	2651 8240 01 69	311	2654 7230 02 12	297	2673 6010 01 06	283
2651 1510 01 22	69	2651 6260 82 35	269	2651 8870 01 13	303	2654 7230 63 23	297	2673 6890 63 01	277
2651 1510 01 30	69	2651 6640 01 05	309	2651 8870 01 23	309	2654 7230 63 35	297	2673 7510 01 01	303
2651 2410 92 01	93	2651 6710 01 03	285	2651 8870 42 02	303	2654 7231 01 19	297	2673 8110 01 05	309
2651 2910 01 25	131	2651 6710 01 10	285	2654 3340 31 05	123	2654 7231 01 20	297	2673 8110 53 01	309

TATA PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
2673 8110 53 03	309	2730 3510 86 01	171	2755 2671 01 01	121	2790 0115 99 05	21	8854 0350 25 27	31
2673 8110 63 01	309	2730 3511 53 01	179	2756 5410 01 02	271	2821 4640 01 02	233	8854 0352 25 34	27
2678 8110 63 05	295	2730 3530 01 08	173	2757 5420 99 04	277	2876 4210 82 01	199	8854 0353 25 27	31
2684 2671 34 03	119	2730 3530 01 30	179	2763 2680 79 01	121	2876 4210 82 02	199	8854 0374 25 34	31
2690 2620 86 01	109	2730 3560 47 01	173	2763 4920 01 23	251	2876 4230 01 06	199	8854 0376 25 25	29
2698 4640 01 03	233	2730 3560 53 01	173	2768 4370 01 02	201	2876 4230 01 06	221	8854 0377 25 25	31
2698 5440 01 07	273	2730 3570 79 01	173	2770 4230 82 01	199	2876 4230 01 07	199	8854 0378 25 25	31
2698 5440 01 08	273	2732 3530 77 01	179	2770 4230 82 02	199	2876 4230 01 07	221	8854 0502 25 25	37
2698 5450 01 11	273	2747 6010 01 20	283	2782 4370 01 59	131	3505 8905 63 01	271	8854 0503 25 34	37
2698 6890 01 18	289	2747 6010 01 21	283	2782 4370 01 59	215	8854 0308 25 25	25	8854 1306 25 34	59
2698 8111 63 26	309	2747 6710 23 01	285	2782 4370 01 63	201	8854 0340 25 27	29	8854 1310 25 34	57
2698 8180 01 30	309	2747 6890 01 01	289	2782 4370 01 63	223	8854 0342 25 27	29	8854 1801 25 23	73
2699 2910 01 69	131	2747 6890 82 05	287	2782 4370 01 70	227	8854 0343 25 27	29	8854 2604 16 12	117
2699 5420 99 28	275	2747 7250 23 01	301	2783 4620 01 04	233	8854 0343 25 34	27	8854 4101 12 10	185
2705 2680 80 01	121	2747 7250 23 02	301	2783 4620 01 05	233	8854 0344 25 27	29	8854 4101 12 10	187
2705 3010 01 11	135	2747 8110 01 07	305	2786 0913 99 21	55	8854 0345 25 27	29		
2724 2520 01 01	95	2747 8150 69 01	305	2786 5010 58 69	265	8854 0345 25 34	27		
2730 3500 01 18	171	2751 4920 42 02	253	2786 5010 58 90	263	8854 0346 25 34	27		
2730 3500 01 26	171	2754 4920 67 01	251	2786 5010 99 08	257	8854 0347 25 34	27		
2730 3510 01 05	171	2755 2510 82 01	97	2786 5040 42 01	265	8854 0348 25 34	27		

STANDARD PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
1106 381268 3	325	1132 419605 8	57	1208 099602 9	233	1305 050816 6	13	1428 059824 1	67
1106 381272 4	95	1134 229603 5	85	1210 120080 7	105	1305 050816 6	15	1428 059830 6	55
1106 391440 3	93	1134 251450 4	173	1210 220200 5	157	1305 090716 8	173	1428 059831 4	67
1106 399611 6	151	1143 089901 7	185	1210 220200 5	157	1305 090920 9	99	1428 059836 5	55
1106 399621 3	151	1143 320610 1	35	1210 229601 8	159	1305 091030 4	13	1428 059836 5	67
1106 399907 7	161	1163 140830 5	95	1210 229903 3	125	1305 091030 4	171	1428 059843 8	55
1106 401263 2	35	1163 249601 1	15	1210 229906 8	161	1312 051040 6	107	1428 059844 6	55
1106 409608 9	23	1163 260940 1	171	1214 050100 8	159	1312 051240 9	107	1428 059929 9	53
1106 409610 1	79	1163 260955 0	171	1214 050120 2	325	1315 060936 9	157	1428 059929 9	55
1106 419905 8	93	1163 260964 9	171	1246 050150 2	159	1315 061156 8	161	1445 060100 5	135
1106 419911 2	93	1205 150080 4	161	1252 069601 4	93	1360 059901 6	125	1445 060100 5	135
1108 411275 7	155	1205 159601 1	333	1252 069601 4	95	1365 050505 5	73	1445 060100 5	137
1132 399602 6	97	1205 169605 9	149	1252 069801 7	17	1365 051009 1	25	1455 060200 9	233
1132 399610 7	95	1205 169902 3	161	1252 069801 7	95	1427 020110 6	45	1455 060350 1	175
1132 399619 1	179	1205 229605 4	153	1252 069802 5	19	1427 020250 1	17	1455 069905 3	117
1132 399804 5	15	1205 229605 4	155	1252 069802 5	57	1427 020250 1	107	1458 060420 1	161
1132 399806 1	17	1205 239601 6	189	1252 069802 5	97	1428 050035 7	17	1458 061200 9	173
1132 399806 1	95	1205 239602 4	153	1252 069802 5	161	1428 050070 5	65	1595 010110 2	105
1132 419602 3	79	1205 239602 4	155	1252 069802 5	179	1428 050070 5	189	1595 352013 1	103
1132 419603 1	19	1208 090180 0	121	1265 060130 9	325	1428 050080 2	189	1608 100160 3	13

STANDARD PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
1608 100220 1	201	1705 050010 1	15						
1608 180240 1	21	1705 050117 5	201						
1608 180300 9	21	1706 160251 8	107						
1608 250240 1	103	1707 100140 7	35						
1622 051006 2	41	1717 060100 9	149						
1622 051006 2	45	1717 060100 9	153						
1622 051021 6	41	1717 060100 9	155						
1622 051021 6	45	1717 060100 9	161						
1622 051021 6	247	1717 200100 9	185						
1622 051043 7	75	1727 120100 1	135						
1622 061010 5	79								
1622 071012 6	23								
1622 071028 2	13								
1622 071028 2	17								
1622 071034 7	79								
1622 071038 0	75								
1642 080150 9	61								
1650 080220 4	61								
1653 199904 9	41								
1653 199904 9	247								

MICO PART NUMBER INDEX FOR LP/LPT 1109 CATALOGUE

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
0 460 424 232	43						
0 460 424 364	43						
9 440 030 030	39						
9 450 030 118	51						
9 451 037 405	51						
9 451 037 407	51						
F 002 A0Z 178	39						
F 002 C40 504	47						
F 002 C40 531	47						
F 002 C8Z 205	47						
F 002 C8Z 852	47						
F 002 H20 134	49						
F 002 H20 134	249						
F 002 H20 136	51						
F 002 H20 306	51						
F 002 H20 387	49						
F 002 H20 387	249						
F 002 H20 392	49						
F 002 H20 392	249						